LANCOM GS-2328P Quick Reference Guide








Please observe the following when setting up the device

- > Mount the device into a 19" unit in a server cabinet
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads
- > Do not rest any objects on top of the device




> Ensure that the ventilation slots remain

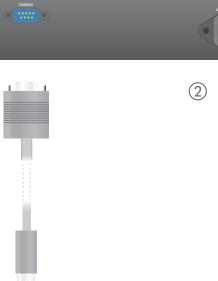



unobstructed

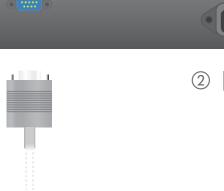




LANCOM GS-2328P



Serial connector Connect the serial interface (CONSOLE) via the included serial configuration cable

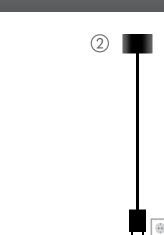

2



Power connector

Supply power to the device via the power connector on the back. Please use the IEC to the serial interface of the power cable supplied. device you want to use for configuring/monitoring the



Connect one of the TP Ethernet cable to your end device or another

LAN switch.


TP Ethernet ports Ethernet ports 1-24 via an

Insert a suitable SFP module (e.g. 10GBase-SX, 1000Base-SX, or 1000Base-LX) into the SFP port. Choose a cable compatible with the SFP module and connect it as described in the module's documentation.

SFP/SFP+ ports

4



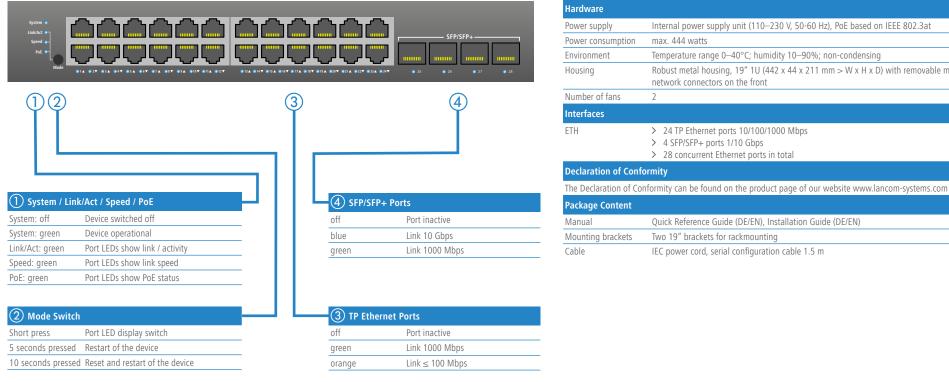

Power supply	Internal power supply unit (110–230 V, 50-60 Hz), PoE based on IEEE 802.3at
Power consumption	max. 444 watts
Environment	Temperature range 0–40°C; humidity 10–90%; non-condensing
Housing	Robust metal housing, 19" 1U ($442 \times 44 \times 211 \text{ mm} > W \times H \times D$) with removable mounting brackets network connectors on the front
Number of fans	2
Interfaces	
ETH	> 24 TP Ethernet ports 10/100/1000 Mbps > 4 SFP/SFP+ ports 1/10 Gbps > 28 concurrent Ethernet ports in total

Quick Reference Guide (DE/EN), Installation Guide (DE/EN)

IEC power cord, serial configuration cable 1.5 m

Two 19" brackets for rackmounting