



LANCOM 7100+ VPN LANCOM 9100+ VPN

Quick Reference Guide




Please observe the following when setting up the device

- Mount the device into a 19" unit in a server cabinet.
- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device




- Ensure that the ventilation slots at the back remain unobstructed

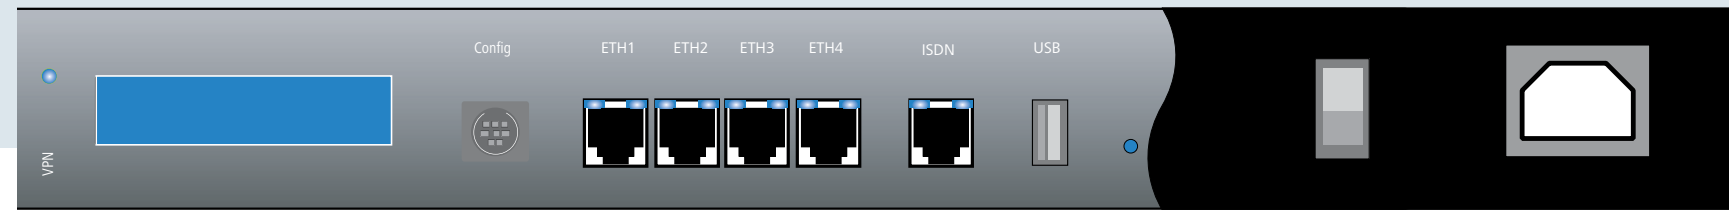


LCD display (in two lines, rotating)

- Device name
- Firmware version
- Device temperature
- Date and time
- CPU load
- Memory usage
- Number of VPN tunnels
- Data transfer in reception direction
- Data transfer in transmission direction

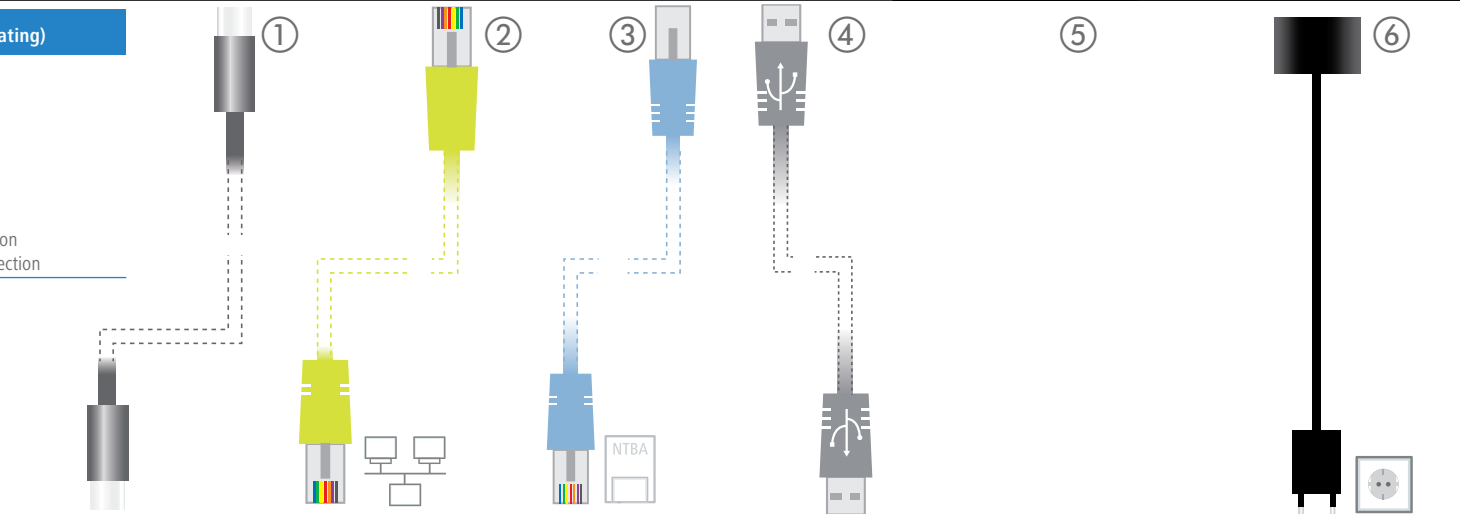

- Serial configuration cable**
You can connect the device to a PC with a configuration cable.
- LAN**
Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH1 to ETH4 to your PC or a LAN switch.
- ISDN cable***
Use the ISDN cable with the light-blue connectors to connect the ISDN interface to the NTBA if you wish to use ISDN in addition.
- Optional: USB**
You can use the USB interface to connect a USB printer or a USB flash drive for device configuration.
- On/off switch**
Use this switch to turn the device on or off.
- Power connector**
Supply power to the device. Please use the IEC power cable supplied.

! Unplug the power plug from the power socket to ensure that the device is completely separated from the power supply!

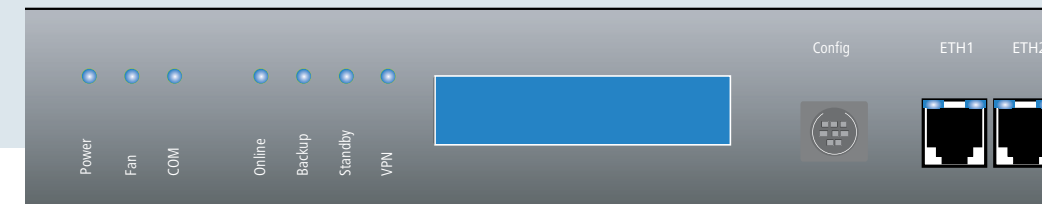

1 Power	8 ETH (one green and one yellow LED each)
Off Green on (permanently) Blinking green/orange Blinking red	Green off Green on (permanently) Flickering green Yellow off Yellow on (permanently)
Device switched off Device operational Configuration password not set. Without a password the configuration data in the device is unprotected. Charge or time limit reached	No networking device attached Connection to network device operational, no data traffic Data transmission 1000 Mbps 10/100 Mbps
2 Fan	7 VPN
Green on (permanently) Orange on (permanently) Blinking red	Off Green on (permanently) Blinking green
CPU temperature OK CPU temperature > 55° Hardware failure of the fan or CPU temperature > 60°; additional acoustic signal	No VPN connection active VPN connection active Establishing VPN connections
3 COM	6 Standby
Off Green on (permanently) Flickering orange	Off Green on (permanently) Red on (permanently)
No session logged on for the serial configuration interface Serial configuration session logged on Data transmission during the configuration session	No VRRP activated or VRRP activated and a predefined virtual router is set as Master All defined virtual routers are on standby All virtual routers are deactivated
4 Online	5 Backup
Red on (permanently) Green on (permanently) Blinking red	Off Green on (permanently)
The LANCOM WLAN controller is not yet operational; one of the following elements is missing: - Root certificate - Device certificate - Current time - Random number for the DTLs encryption At least one active access point connected and authenticated. The device is operational but not connected to an active access point.	Backup is deactivated for all of the WAN connections and virtual routers. Backup is activated for at least one WAN connection or virtual router

Hardware	
Power supply	Internal power supply unit (110-230 V, 50-60 Hz)
Power consumption	30 W
Environment	Internal power supply unit (110-230 V, 50-60 Hz)
Housing	Internal power supply unit (110-230 V, 50-60 Hz)
Number of fans	1
Interfaces	
ETH	4 individual 10/100/1000-Mbps Fast Ethernet ports; up to 3 ports can be switched as additional WAN ports with load balancing
USB	USB 2.0 full-speed host port for connecting USB printers (USB print server) or serial devices (COM port server); bi-directional data exchange is possible (max. 12 Mbps).
Config (Com)	Serial configuration interface / COM port (8 pin Mini-DIN): 9,600 - 115,000 baud, suitable for optional connection of analog/GPRS modems
ISDN*	ISDN S0 Bus
WAN protocols	
Ethernet	PPPoE, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and plain Ethernet (with or without DHCP), RIP-1, RIP-2, VLAN, IP
ISDN*	1TR6, DSS1 (Euro-ISDN), PPP, X75, HDLC, ML-PPP, V.110/GSM/HSCSD, CAPI 2.0 over LANCAPI, Stac data compression
Declaration of conformity	
CE	EN 55022, EN 55024, EN 60950
FCC	FCC Class A Part 15
Package content	
Manual	Quick Reference Guide (DE, EN) and Quick Installation Guide (DE/EN/FR/ES/IT/PT/NL), FCC Documentation (only US-Version)
CD/DVD	CD with firmware, management software (LANconfig, LANmonitor, LANCAPI) and documentation
Cable	Serial configuration cable, 1.5m
Cable	2 Ethernet cables, 3m
Cable*	ISDN cable, 3m
Cable	IEC power cord

* ISDN is not available in US version