 


LANCOM R&S® UF-100 / UF-200

Quick Reference Guide

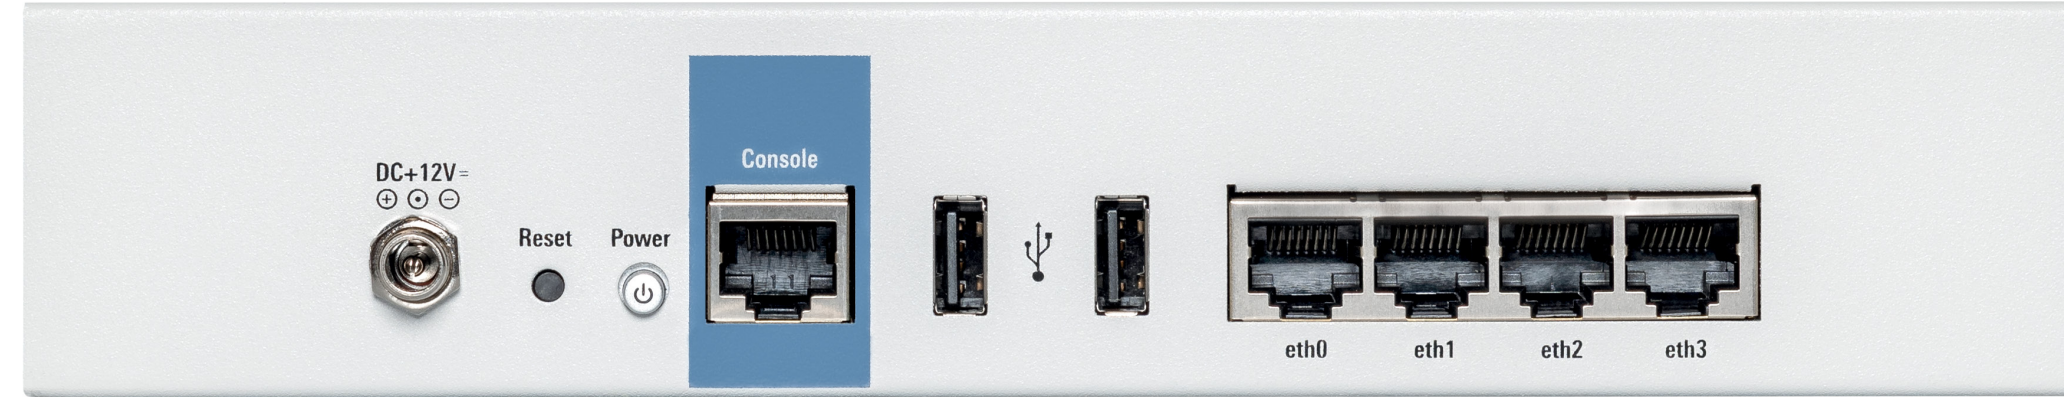

 
- ① **Power connector**
After connecting the power supply cable to the device, turn the screwcap clockwise to prevent the jack from accidental unplugging. Use only the supplied power adapter.
- ② **Power button**
Press the power button to start up the device.
- ③ **Serial configuration interface RJ45 (Console)**
Maintenance interface for expert configuration
Not needed for initial setup
- ④ **USB 2.0 interfaces**
Interfaces for device software re-installation
Not needed for initial setup
- ⑤ **TP Ethernet interfaces eth0 - eth3**
Connect the eth0 - eth3 TP Ethernet interfaces with the enclosed Ethernet cable to your configuration PC or other networking components. Initial setup advice can be found in the supplied quick install guide.



Please observe the following when setting up the device

- > The mains plug of the device must be freely accessible.
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads.
- > Do not rest any objects on top of the device and do not stack multiple devices.
- > Keep all ventilation slots of the device clear of obstruction.

MOUNTING AND CONNECTING THE DEVICE

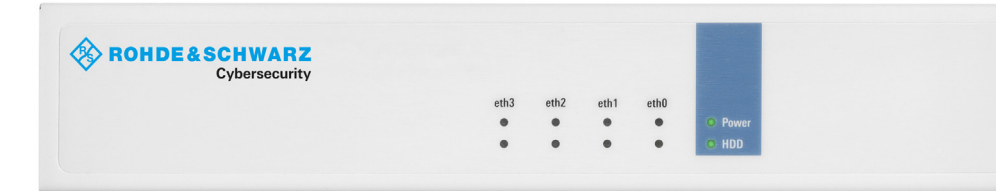

① LEDs eth0 - eth3 - TP Ethernet	
Both off	No networking device attached
Upper orange, permanently	Data transfer 1000 Mbps
Lower orange, flickering	
Upper green, permanently	Data transfer 100 Mbps
Lower orange, flickering	
Upper off	Data transfer 10 Mbps
Lower orange, flickering	

② LEDs Power / HDD	
Power off	Device switched off
Power green	Device operational
HDD off	no HDD read-/write access
HDD orange, flickering	HDD read-/write access

Hardware	
Power supply	12 V DC, external power supply
Power consumption	36 W
Environment	Temperature range 0–40 °C; humidity 5–90 %; non-condensing
Housing	Robust metal housing, network connectors on the front
Dimensions (mm)	220 x 44 x 176 (W x H x D)
Interfaces	
ETH	4x 10 / 100 / 1000 Mbps Gigabit Ethernet ports
USB	2x USB 2.0 ports
Console	RJ45 configuration interface
Declaration of conformity	
Hereby, LANCOM Systems declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, and 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/	
Package content	
Documentation	Quick Reference Guide (DE, EN), Quick Install Guide (DE/EN), Service & Support Guide (DE/EN)
Accessories	1 Ethernet cable; 1 power supply unit with IEC power cable; 1 serial configuration cable; 1 set adhesive rubber pads