 



# LANCOM Wall Mount (LN) Mounting Instructions

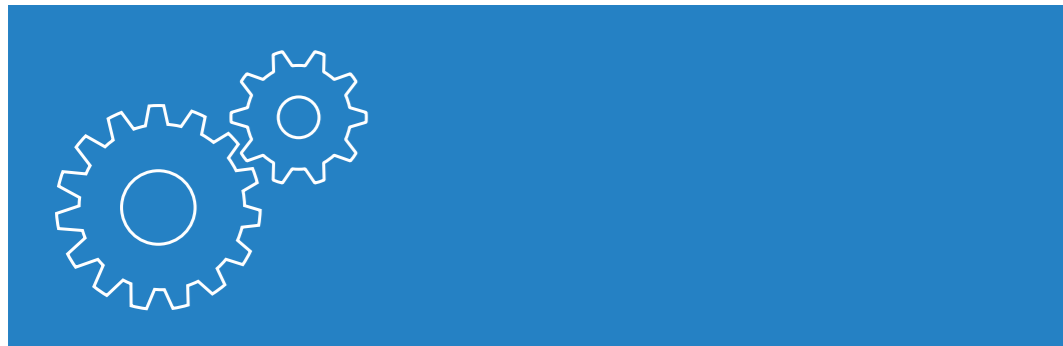

### Mounting the Wall Mount (LN)


Use the Wall Mount (LN) as a drilling template for positioning the drill holes.

 When aligning the Wall Mount (LN), route the cables upwards out of the housing (recommended installation).

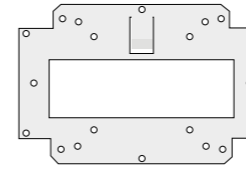

### Mounting the access point

 
Slide the access point onto the Wall Mount (LN) as illustrated until it comes to a stop. Then push the access point downwards until you hear the latch click.

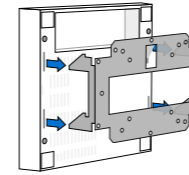

### Securing the access point

Protect the access point from theft by means of the supplied locking mechanism and the padlock.

As the illustration shows, insert the locking device in its opened position into one of the locking holes. Then connect the housing and the Wall Mount (LN) by pressing the two parts of the locking mechanism together. Ensure that the two holes of the locking mechanism are in line.

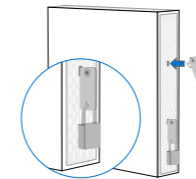 


Finally, secure the locking mechanism with the supplied padlock.

### Demounting the access point

 To remove the device from the Wall Mount (LN), please first undo the padlock and the locking mechanism. To do this, perform the previous steps in reverse order.

Release the latch with the aid of a tool such as a screwdriver. Lever the tool towards the wall and hold it in that position. Release the connection to the Wall Mount (LN) by first sliding the access point upwards and then pulling it forward.

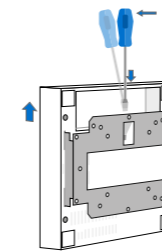

### Package contents

Wall Mount (LN)	Mounting plate for LANCOM access points of the LN- and LX series
Anti-theft protection	Locking mechanism and padlock
Mounting material	4x S6 dowels, 4x round head screws 4.5 x 40
Documentation	Mounting instructions Wall Mount (LN)