 
 



## Mounting & connecting

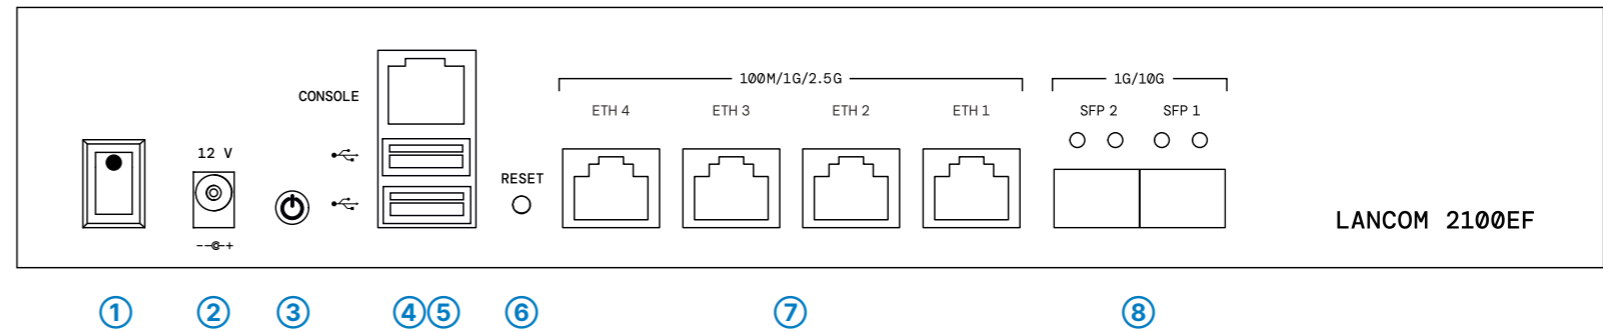


## Hardware Quick Reference LANCOM 2100EF

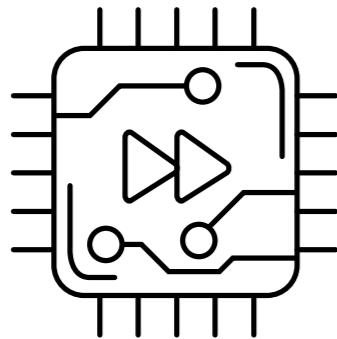

 - ① **Power**  
After you have supplied the device with power via the power supply connection socket on the rear panel, set the power switch to the ● position.
- ② **Power supply connection socket**  
Use only the supplied power adapter!
- ③ **On/off button**  
To switch the appliance on, briefly press the on/off button. To switch the appliance off, press the on/off button for approx. 5 seconds.
- ④ **Serial configuration interface RJ45 (CONSOLE)**  
Maintenance interface for expert configuration. Not necessary for initial commissioning.
- ⑤ **USB 3.0 interfaces**  
Connect USB storage media or USB printers to the USB interfaces.

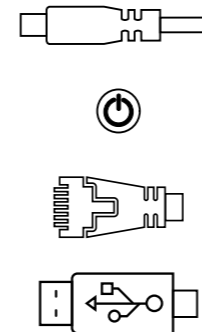

- ⑥ **Reset button**  
Pressed up to 5 seconds: device restart  
  
Pressed and held until the ETH and status LEDs light up orange for the first time: Reset the configuration and restart the device
- ⑦ **TP Ethernet interfaces**  
Connect the ETH 1 - ETH 4 TP Ethernet interfaces to other network components using suitable Ethernet cables.
- ⑧ **SFP+ interfaces**  
Connect the SFP+ interfaces SFP 1 and SFP 2 to other network components using suitable SFP(+) modules.

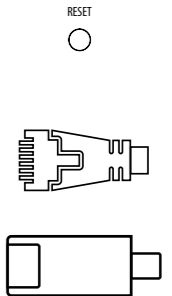 

**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!**

**Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.**

**The power plug of the device must be freely accessible.**

**Please note that support for third-party accessories is not provided.**



**Please observe the following when setting up the device**

- When setting up on the table, use the enclosed self-adhesive rubber pads, if applicable.
- Do not rest any objects on top of the device and do not stack multiple devices.
- Keep all ventilation slots of the device clear of obstruction.
- Rack installation with the included LANCOM [Rack Mount 2100](#)



 
 
**LANCOM**  
SYSTEMS



Cloud-ready

## LED description & technical details

# Hardware Quick Reference LANCOM 2100EF

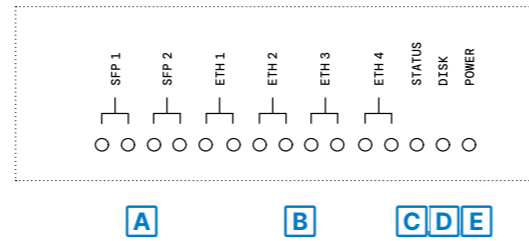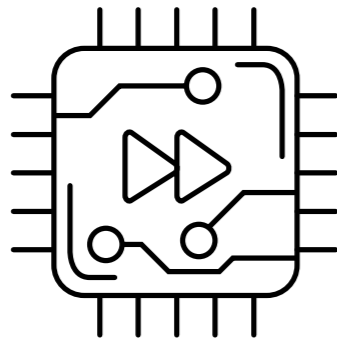

### A SFP 1 - SFP 2

#### LEDs left - link activity

|                    |                                 |
|--------------------|---------------------------------|
| Off                | No link detected                |
| Green, permanently | Link detected, no port activity |
| Green, blinking    | Link detected, port activity    |

#### LEDs right - link speed

|                    |                                       |
|--------------------|---------------------------------------|
| Off                | No link detected or link speed 1 Gbps |
| Green, permanently | Link speed 10 Gbps                    |

### B ETH 1 - ETH 4

#### LEDs left - link activity

 
|                    |   |
|--------------------|---|
| Aus                | No network device connected                               |
| Green, permanently | Connection to network device operational, no data traffic |
| Green, flickering  | Data traffic  |

#### LEDs right - link speed

|                     |                         |
|---------------------|-------------------------|
| Green, permanently  | Link speed 1 / 2.5 Gbps |
| Orange, permanently | Link speed 100 Mbps     |

### C STATUS

|                           |  |
|---------------------------|--|
| Green, permanently*       | Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible |
| Green/orange blinking     | No password set. Without a password the configuration data in the device is unprotected.       |
| Orange blinking           | Charge or time limit reached   |
| 1x green invers blinking* | Connection to the LMC active, pairing OK, device not claimed                                   |
| 2x green invers blinking* | Pairing error, resp. LMC activation code not available   |
| 3x green invers blinking* | LMC not accessible, resp. communication error  |

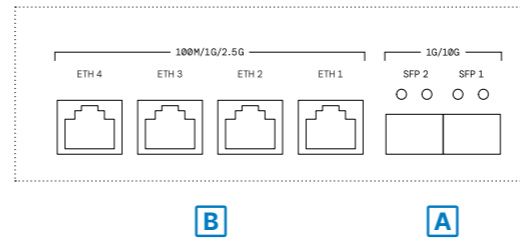

### D DISK

|                  |                                  |
|------------------|----------------------------------|
| Off              | No read/write access to the disk |
| Orange, blinking | Read/write access to the disk    |

### E POWER

|                    |                     |
|--------------------|---------------------|
| Off                | Device switched off |
| Green, permanently | Device switched on  |

## Hardware

|              |  |
|--------------|--|
| Power supply | 12 V DC, external power adapter<br>For an overview of the power supplies compatible with your device, see <a href="http://www.lancom-systems.com/kb/power-supplies">www.lancom-systems.com/kb/power-supplies</a> . |
|--------------|--|

|             |   |
|-------------|---|
| Environment | Temperature range 0 – 40 °C; humidity 0 – 85 %; non-condensing;<br>When using LANCOM SFP-CO10-MG:<br>Temperature range 0 – 30 °C; humidity 0 – 85 %; non-condensing |
|-------------|---|

|         |  |
|---------|--|
| Housing | Robust metal housing, rear connectors; (W x H x D) 270 × 44 × 152 mm |
|---------|--|

|     |             |
|-----|-------------|
| Fan | 1 quiet fan |
|-----|-------------|

## Interfaces

|     |   |
|-----|---|
| ETH | 4 TP Ethernet interfaces 100 / 1,000 / 2,500 Mbps |
|-----|---|

|      |                               |
|------|-------------------------------|
| SFP+ | 2 SFP+ interfaces 1 / 10 Gbps |
|------|-------------------------------|

|     |                      |
|-----|----------------------|
| USB | 2 USB 3.0 interfaces |
|-----|----------------------|

|                                   |                                       |
|-----------------------------------|---------------------------------------|
| Configuration interface (CONSOLE) | 1 serial RJ45 configuration interface |
|-----------------------------------|---------------------------------------|

## Package content

|       |                      |
|-------|----------------------|
| Cable | 1 Ethernet cable, 3m |
|-------|----------------------|

|              |   |
|--------------|---|
| Power supply | External power supply unit with IEC power cable |
|--------------|---|

|             |   |
|-------------|---|
| Accessories | 1 set of rubber feet, 1 rack mounting kit |
|-------------|---|

\*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)



LANCOM  
SYSTEMS



Cloud-ready