

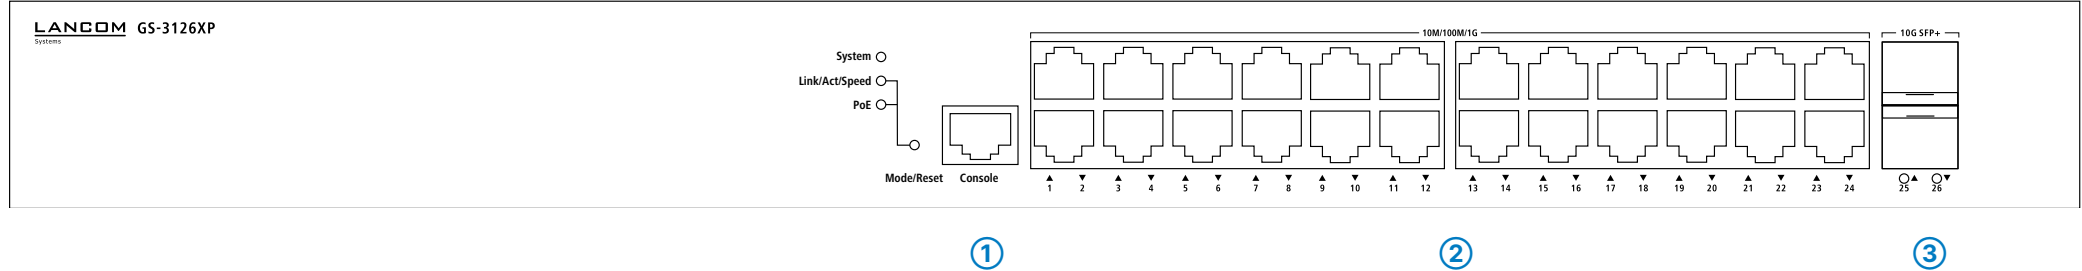


Hardware Quick Reference


LANCOM GS-3126XP

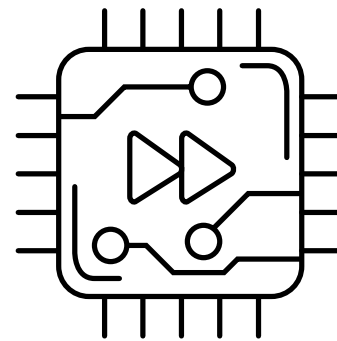

- 1 Configuration interface (Console)  
Connect the configuration interface via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch.
- 2 TP Ethernet interfaces  
Use Ethernet cables to connect the interfaces 1 to 24 to your PC or a LAN switch.

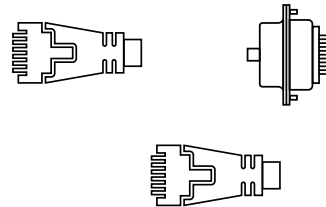

- 3 SFP+ interfaces  
Insert suitable LANCOM SFP modules into the SFP+ interfaces 25 to 26. Choose cables which are compatible with the SFP modules and connect them as described in the module's documentation.
- 4 Power connector (device back side)  
Supply power to the device via the power connector. Please use the IEC power cable supplied or a country-specific LANCOM Power Cord.

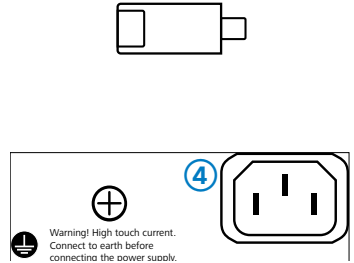

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!


Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.



Please observe the following when setting up the device

- The mains plug of the device must be freely accessible.
- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device and do not stack multiple devices
- Keep all ventilation slots of the device clear of obstruction
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.
- Please note that support service for third-party accessories is excluded.

Mounting & connecting

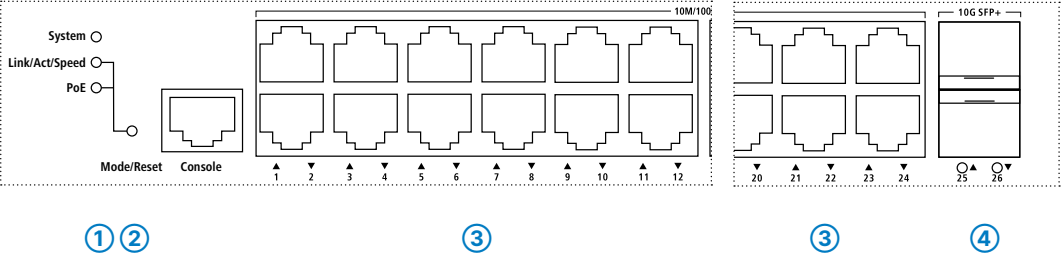

1 System / Link/Act/Speed / PoE LED	3 TP Ethernet ports
System: off	Off
System: green	Green
System: red	Green, blinking
Link/Act/Speed: green	Orange
PoE: green	Orange, blinking
2 Mode/Reset button	4 10 G SFP+ ports
Short press	Off
Pressed until all port LEDs are off	Blue
Pressed until all port LEDs glow permanently	Blue, blinking
	Green
	Green, blinking

Hardware	
Power supply	Internal power supply unit (110–240 V, 50–60 Hz), PoE based on IEEE 802.3af and IEEE 802.3at
Power consumption	Max. 235 W
Environment	Temperature range 0–40° C; short term temperature conditions 0–50°C; humidity 10–90%; non-condensing
Housing	Robust metal housing, 1 HU with removable mounting brackets for 19" installation, network connectors on the front, 442 × 44 × 211 mm (W x H x D)
Number of fans	1
Interfaces	
ETH	24 TP Ethernet ports 10 / 100 / 1000 Mbps
SFP+	2 SFP+ ports 1 / 10 Gbps 26 concurrent ports in total
Package Content	
Mounting brackets	Two 19" brackets for rack mounting
Cable	IEC power cord 230 V, serial configuration cable 1.5 m

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc/](http://www.lancom-systems.com/doc/)