
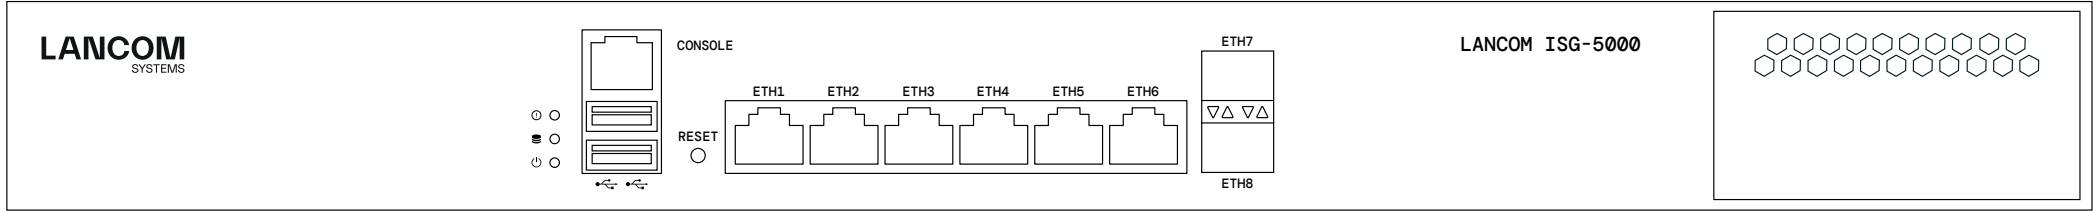


Hardware Quick Reference

LANCOM ISG-5000

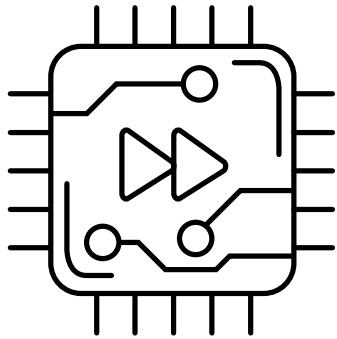

① ②

③

④

⑤


- ① **Serial configuration interface RJ45 (CONSOLE)**
Maintenance interface for expert configuration.
Not necessary for initial commissioning.

- ② **USB 3.0 interfaces**
Connect a USB storage medium or a USB printer to the USB interfaces.

- ③ **RESET button**
Pressed up to 5 seconds: device restart

Pressed until first flashing up of all LEDs:
configuration reset and device restart


- ④ **TP Ethernet interfaces ETH1 - ETH6**
Connect the ETH1 - ETH6 TP Ethernet interfaces to additional network components using suitable Ethernet cables.

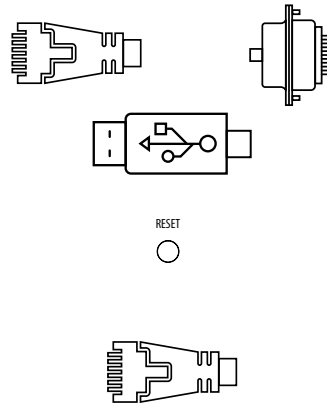

- ⑤ **SFP+ interfaces ETH7 - ETH8**
Connect the ETH7 - ETH8 SFP+ interfaces to other network components using suitable SFP(+) modules.

- ⑥ **Connection socket for power supply (rear panel)**
Supply the device with power via the mains connection on the rear of the device. Use only the supplied power cord for this purpose.

- ⑦ **Power switch (rear panel)**
After supplying power to the unit via the power connector on the rear panel, set the power switch to the 'I' position.

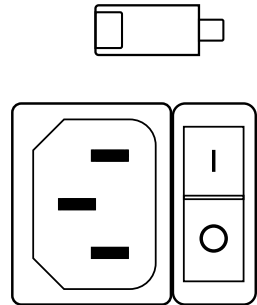

⑥

⑦

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

The power plug of the device must be freely accessible.

Please note that support for third-party accessories is not provided.





Please observe the following when setting up the device

- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device and do not stack multiple devices
- Keep all ventilation slots of the device clear of obstruction
- Mount the device into a 19" unit in a server cabinet using the provided screws and mounting brackets.

LED description & technical details

Hardware Quick Reference

LANCOM ISG-5000

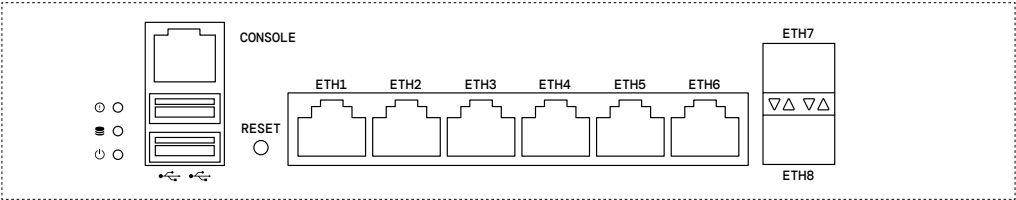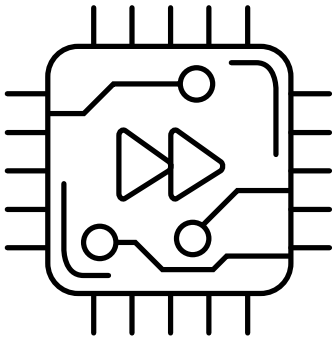

A B C

A LEDs Status / HDD / Power		C LEDs ETH7 - ETH8 - SFP+	
Status: green, permanently*	Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible	LEDs left - Link activity	
Status: green / red, blinking	No password set. Without a password the configuration data in the device is unprotected.	Off	No link detected
Status: red, blinking	Charge or time limit reached	Green, permanently	Link detected, no port activity
Status: 1x green, inverse blinking*	Connection to the LMC active, pairing OK, device not claimed	Green, blinking	Link detected, port activity
Status: 2x green, inverse blinking*	Pairing error, resp. LMC activation code not available	LEDs right - Link speed	
Status: 3x green, inverse blinking*	LMC not accessible, resp. communication error	Off	No link detected
HDD off	No HDD read / write access	Green, permanently	Link speed 10 Gbps
HDD green	HDD read / write access		
POWER off	Device switched off		
POWER green	Device ready and accessible		
B LEDs ETH1 - ETH6 - TP Ethernet			
Both LEDs off	No networking device attached		
Green, permanently	Connection to network device operational, no data traffic		
Green, flickering	Data transmission		
Orange off	1000 Mbps		
Orange, permanently	100 Mbps		

Hardware	
Power supply	Internal power supply unit (100–240 V, 50–60 Hz)
Power consumption	Max. 60 W
Environment	Temperature range 0–40 °C; humidity 10–85 %, non-condensing
Housing	Robust metal housing 1 HU, with mounting brackets for 19" mounting; Network connections on the front side
Fans	2
Dimensions (mm)	440 × 44 × 269.2 (W x H x D)
Interfaces	
ETH	6 10 / 100 / 1000 Mbps Gigabit Ethernet ports
SFP+	2 SFP+ ports
USB	2 USB 3.0 ports
Console	1 RJ45 configuration interface
Package contents	
Accessories	1 IEC power cable 230 V; 2 19" mounting brackets; 1 set adhesive rubber pads

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/53/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc