

Mounting Instructions LANCOM Wall Mount LX-6500(E)

General notes

The LANCOM Wall Mount LX-6500(E) is intended exclusively for mounting a LANCOM LX-6500(E) access point in a vertical wall or horizontal ceiling installation.

The bracket must be mounted on a solid, non-bendable / non-stretchable surface.

Mounting on (roof) slopes or corrugated roofs, as well as installation in other mounting directions or angles, is not permitted or recommended without additional securing of the access point to the bracket.

The bracket is fastened using 4 screws 2 in the corners of the bracket or 2 screws 3 on the sides of the bracket.

Preparing the Wall Mount LX-6500(E) for wall mounting

 
For wall mounting, the bracket must be aligned so that the latching spring 1 is at the top.

 



Preparing the Wall Mount LX-6500(E) for ceiling mounting

 
Basically, it is mandatory to secure the access point in ceiling mounting with at least one separately available Kensington lock and/or LANCOM Lock and a padlock.

When mounting on a flat ceiling, use only the four outer holes (2) for fastening.





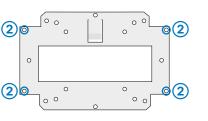




Mounting instructions LANCOM Wall Mount LX-6500(E)

Mounting the Wall Mount LX-6500(E)

Use the Wall Mount LX-6500(E) as a drilling template.

 Select the appropriate mounting holes 2 or 3 depending on the mounting type and location.




Attaching the access point

When positioning the access point, guide the cables upwards out of the access point housing.

As shown in the illustration, push the access point onto the Wall Mount LX-6500(E) as far as it will go.

Then press the access point down until it audibly clicks into

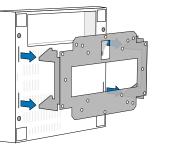


Securing the access point

Secure the access point using the separately available LANCOM Lock and padlock.

Mounting Instructions LANCOM Wall Mount LX-6500(E)

As shown in the illustration, insert the locking device into one of the holes provided when open. Connect the housing and Wall Mount LX-6500(E) by pressing both halves of the LANCOM Lock together. Make sure that both holes of the lock are aligned.


Finally, secure the LANCOM Lock with the enclosed padlock.

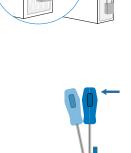

Removing the access point

To detach the device from the Wall Mount LX-6500(E), please remove the padlock and LANCOM Lock first. To do this, carry out the previous steps in reverse order.

Release the lock using a tool (e.g. screwdriver). Push the tool in the direction of the wall and hold it in this position. Disconnect the Wall Mount LX-6500(E) by first pushing the access point upwards and then pulling it off towards the

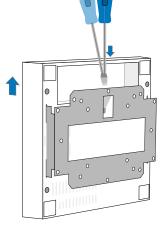

LANCOM

SYSTEMS www.lancom-systems.com

LANCOM Systems GmbH Adenauerstr. 20/B2 52146 Wuerselen | Germany

Mounting Instructions LANCOM Wall Mount LX-6500(E)

ves the right to change these without notice. No liability for technical errors and/or omissions. 111410 04/23