

LANCOM Antenna AirLancer ON-T60ag




LANCOM
Systems

SECURE. NETWORKS.

MOUNTING INSTRUCTIONS

Preparation for wall mounting

Use the antenna as a drilling template to mark out the drill holes for the wall mounting. The horizontal and vertical separation of the adjacent holes is 173.7 mm.

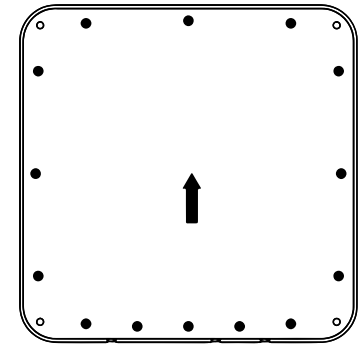


Size of the drill holes

Using the markings as a guide, drill the holes and insert dowels if appropriate. Depending on the underground the size of the holes may vary.

Mounting the antenna

Line-up the antenna with the holes and make sure that the connectors are pointing downwards. Then attach the antenna with the supplied screws. Mounting the antenna with a free orientation can be achieved with the AirLancer Mount (ON) which is available optionally.

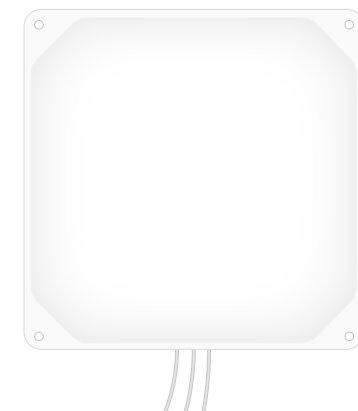

MOUNTING INSTRUCTIONS

Important

Working responsibly with high frequencies

For compliance with protection requirements of the EU directive 2014/53 and EN 62479 in relation to the basic limits for human safety in electromagnetic fields and the "FCC Policy on Human Exposure to Radiofrequency Electromagnetic Fields", it is essential to configure the accurate antenna gain value in the Wi-Fi router or Wi-Fi access point.

Important

Electrical and electronic equipment law

In the interests of recycling, please do not dispose of electrical and electronic waste in your household garbage. Ensure that your electrical and electronic waste is disposed of in accordance with the regulations in your country.

Important

Proper handling of antenna cables

Antenna cables are sensitive RF cables. During installation it is important that the cables are not creased, and bent as little as possible, otherwise the antenna will suffer a loss in performance. Do not coil the antenna cable in tight loops.

MOUNTING INSTRUCTIONS

Important

Antenna gain and terminating unused antenna connectors on the access point

It is essential for unused antenna connectors on the access point to be terminated with the supplied rod antenna. The terminating resistor supplied with the adapter AirLancer AN-RPSMA-NJ is suitable for use with indoor access points. In addition, you must disable the unused antenna connectors in LCOS (changing the antenna grouping of the respective Wi-Fi module), and configure the antenna gain of the antenna. The settings can be found in LANconfig at: Configuration > Wireless LAN > General > Physical WLAN settings > Radio

Operating mode


3x3 MIMO

In the 3x3 MIMO operating mode, all three antenna connectors are connected to the same Wi-Fi module of the access point.

Operating mode

2x2 MIMO & 1x1 MIMO

Apart from its standard operation as a 3x3 MIMO antenna, this antenna can also be used by two different Wi-Fi modules. For this purpose the connectors marked with -45° and +45° are connected with the first Wi-Fi module, and the middle connector is connected to the second Wi-Fi module. The two Wi-Fi modules should not be operated in the same frequency band. Please note that in this operating mode at least one antenna connector of the access point will be unused and has to be terminated.

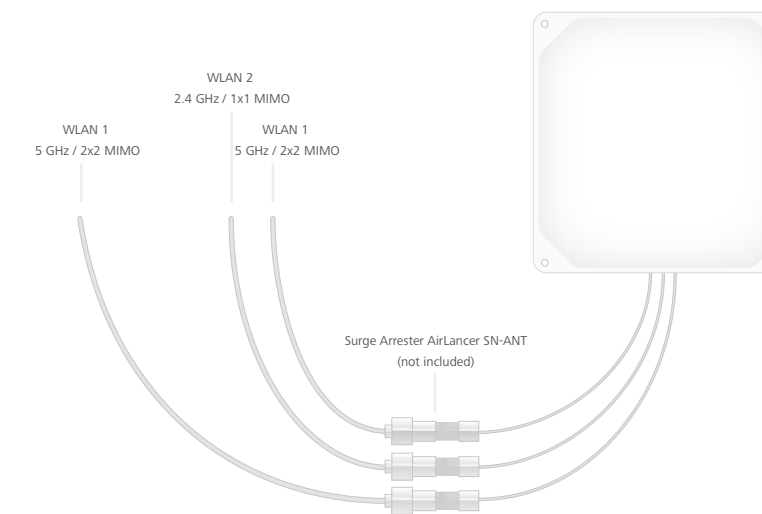

Technical details

Frequency range 2400 - 2500 MHz, 4900 - 5900 MHz

Antenna characteristics

Radiation characteristics	horizontal (2.4 GHz)	70°
	vertical (2.4 GHz)	70°
	horizontal (5 GHz)	60°
	vertical (5 GHz)	55°

Recommended use Point-to-multipoint, sector

VSWR 1.5:1 typ. / 2.0:1 max.

Gain
2.4 GHz 8 dbi max.
5 GHz 8 dbi max.

Mechanical details

Size 200 x 200 x 34 mm (length x width x height)

Weight 450 g (antenna without mounting kit)

Temperature range -40°C bis 70°C

Color Light grey

Material UV-resistant plastic

Mounting options
Wall mounting, fixed
Wall, and pole mounting, adjustable (with optionally available AirLancer Mount (ON))

Cables, connectors 3 x 81.2 cm UV-resistant RG316 cable with N-plug connector


Item

Warranty 2 years for AirLancer and accessories

Item number 61243

Package content Antenna, fastening screws, dowels, Mounting instructions

2.4 & 5 GHz h-plane

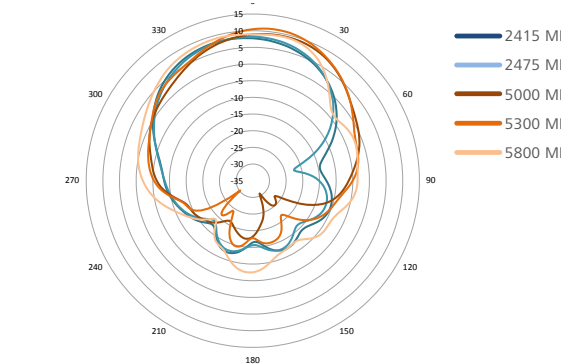

2.4 & 5 GHz e-plane

