


# LANCOM Firewall Rack Mount UF-60

## Montageanleitung | Mounting instructions

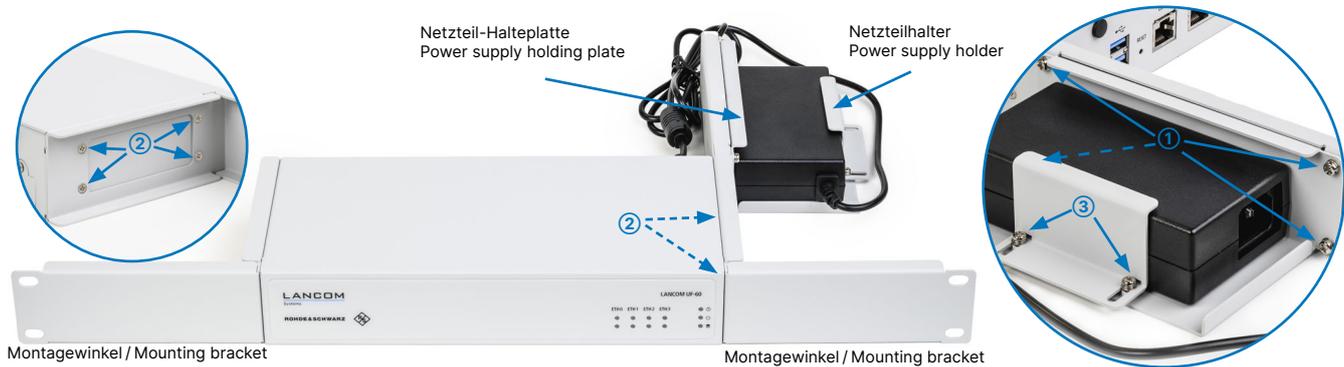

Beginnen Sie mit der Montage der Netzteil-Halteplatte, indem Sie diese mit 4 der 6 mitgelieferten Schrauben mit Unterlegscheiben ① mit dem rechten Montagewinkel verschrauben.

Entfernen Sie dann die 4 Gehäuseschrauben auf der rechten Geräteseite und richten Sie den Montagewinkel mit angeschraubter Netzteil-Halteplatte rechtsseitig am Gerätegehäuse so aus, dass Sie diesen mit 4 der 8 mitgelieferten längeren Senkkopf-Schrauben ② am Gerät befestigen können.

Als nächstes montieren Sie den zweiten Montagewinkel an der linken Seite des Gerätes, nachdem Sie die Original-Schrauben entfernt haben. Benutzen Sie dazu die restlichen 4 längeren Senkkopf-Schrauben ②.

Platzieren Sie dann, so wie auf dem Foto gezeigt, das Netzteil auf seiner Halteplatte.

Richten Sie den Netzteilhalter wie abgebildet auf dem Befestigungsbereich der Halteplatte aus, sodass beide Befestigungsbohrungen fluchten und schrauben Sie ihn mit den beiden restlichen mitgelieferten Schrauben mit Unterlegscheiben ③ an der Netzteil-Halteplatte handfest an, so dass sich der Netzteilhalter noch verschieben lässt.

Schieben Sie den Netzteilhalter in Richtung Netzteil und ziehen Sie die Schrauben ③ fest.

Begin mounting the power supply holding plate by screwing it to the right mounting bracket using 4 of the 6 screws with washers ① provided.

Then remove the 4 housing screws on the right side of the device and align the mounting bracket with the screwed-on power supply mounting plate on the right side of the device housing so that you can fasten it to the device with 4 of the 8 longer counter-sunk screws ② supplied.

Next, attach the mounting bracket to the left side of the unit after removing the original screws. Use the remaining 4 longer countersunk screws ② for this purpose.

Then, as shown in the photo, place the power supply on its mounting plate. Place the power supply holder with the mounting area of the retaining plate as shown, so that both mounting holes are aligned, and hand-tighten it to the power supply retaining plate using the two remaining screws with washers ③ provided, so that the power supply holder can still be moved.

Slide the power supply holder towards the power supply and tighten the screws ③.

LANCOM Systems GmbH | A Rohde & Schwarz Company | Adenauerstr. 20/B2 | 52146 Wuersele | Germany | [info@lancom.de](mailto:info@lancom.de) | [www.lancom-systems.com](http://www.lancom-systems.com)

© 2025 LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration sind eingetragene Marken. Alle anderen verwendeten Namen und Bezeichnungen können Marken oder eingetragene Marken ihrer jeweiligen Eigentümer sein. Dieses Dokument enthält zukunftsbezogene Aussagen zu Produkten und Produkteigenschaften. LANCOM Systems behält sich vor, diese jederzeit ohne Angaben von Gründen zu ändern. Keine Gewähr für technische Ungenauigkeiten und / oder Auslassungen. © 2025 LANCOM Systems GmbH, Wuersele (Germany). All rights reserved. LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and / or omissions. 111988 03/2025



**LANCOM**  
SYSTEMS