

■ connecting your business



Menu Reference

LCOS 8.84

Contents

1 Introduction.....	16
1.1 About this documentation.....	16
Components of the documentation.....	16
LCOS, the operating system of LANCOM devices.....	17
Validity.....	17
This documentation was created by.....	17
1.2 Configuration with Telnet	17
Open Telnet session.....	17
Changing the console language.....	18
Close the Telnet session.....	18
Structure of the command-line interface.....	18
1.3 Command-line commands.....	18
Parameter overview for the ping command.....	21
Parameter overview for the trace command.....	23
Overview of IPv6-specific show commands.....	25
Functions for editing commands.....	27
Function keys for the command line.....	28
Character set for sending SMS.....	30
1.4 Configuration with WEBconfig	31
2 Setup.....	33
2.1 Name.....	33
2.2 WAN.....	33
2.2.2 Dialup peers.....	33
2.2.3 RoundRobin.....	35
2.2.4 Layer.....	36
2.2.5 PPP.....	37
2.2.6 Incoming calling numbers.....	40
2.2.8 Scripts.....	40
2.2.9 Protect.....	41
2.2.10 Callback attempts.....	41
2.2.11 Router interface.....	41
2.2.13 Manual dialing.....	43
2.2.18 Backup delay seconds.....	43
2.2.19 DSL broadband peers.....	43
2.2.20 IP list.....	46
2.2.21 PPTP peers.....	48
2.2.22 RADIUS.....	49
2.2.23 Polling table.....	52
2.2.24 Backup peers.....	54
2.2.25 Action table.....	55

2.2.26 MTU list.....	58
2.2.30 Additional PPTP gateways.....	58
2.2.31 PPTP-Source-Check.....	72
2.2.45 X.25 bridge.....	73
2.3 Charges.....	79
2.3.1 Budget units.....	79
2.3.2 Days per period.....	79
2.3.3 Spare units.....	79
2.3.4 Router units.....	79
2.3.5 Table budget.....	79
2.3.6 Total units.....	80
2.3.7 Time table.....	80
2.3.8 DSL broadband minutes budget.....	81
2.3.9 Spare DSL broadband minutes.....	81
2.3.10 Router DSL broadband budget.....	81
2.3.11 Additional DSL broadband budget.....	81
2.3.12 Reset budgets.....	81
2.3.13 Dialup minutes budget.....	82
2.3.14 Spare dialup minutes.....	82
2.3.15 Router ISDN serial minutes active.....	82
2.3.16 Activate additional budget.....	82
2.3.17 Volume budgets.....	82
2.3.18 Free networks.....	84
2.3.19 Budget control.....	85
2.3.20 Charging e-mail.....	86
2.4 LAN.....	86
2.4.2 MAC-Address.....	87
2.4.3 Spare heap.....	87
2.4.8 Trace MAC.....	87
2.4.9 Trace level.....	87
2.4.10 IEEE802.1x.....	88
2.4.11 Linkup-Report-Delay-ms.....	89
2.4.12 HNAT.....	89
2.5 Bridge.....	89
2.5.1 Operating.....	89
2.5.2 Peer.....	90
2.5.3 Bridge table.....	90
2.5.4 Aging minutes.....	91
2.5.5 LAN configuration.....	91
2.5.6 WAN configuration.....	93
2.5.7 LAN interface.....	95
2.5.8 VLAN-ID.....	95
2.7 TCP-IP.....	95
2.7.1 Operating.....	96

2.7.6 Access list.....	96
2.7.7 DNS default.....	96
2.7.8 DNS backup.....	96
2.7.9 NBNS default.....	97
2.7.10 NBNS backup.....	97
2.7.11 ARP aging minutes.....	97
2.7.16 ARP table.....	97
2.7.17 Loopback list.....	98
2.7.20 Non-local ARP replies.....	99
2.7.21 Alive test.....	99
2.7.22 ICMP on ARP timeout.....	101
2.7.30 Network list.....	101
2.8 IP-Router.....	104
2.8.1 Operating.....	104
2.8.2 IP routing table.....	104
2.8.5 Proxy-ARP.....	106
2.8.6 Send-ICMP-Redirect.....	106
2.8.7 Routing method.....	107
2.8.8 RIP.....	108
2.8.9 1-N-NAT.....	121
2.8.10 Firewall.....	126
2.8.11 Start-WAN-Pool.....	148
2.8.12 End WAN pool.....	148
2.8.13 Default time list.....	149
2.8.14 Usage default timetable.....	150
2.8.19 N-N-NAT.....	150
2.8.20 Load balancer.....	151
2.8.21 VRRP.....	152
2.8.22 WAN-Tag-Creation.....	155
2.8.23 Tag-Table.....	155
2.9 SNMP.....	158
2.9.1 Send traps.....	158
2.9.2 IP-Traps.....	158
2.9.3 Administrator.....	159
2.9.4 Location.....	159
2.9.5 Register monitor.....	159
2.9.6 Delete monitor.....	159
2.9.7 Monitor table.....	160
2.9.10 Password required for SNMP read access.....	161
2.9.11 Comment-1.....	161
2.9.12 Comment-2.....	161
2.9.13 Comment-3.....	162
2.9.14 Comment-4.....	162
2.9.15 Read-Only-Community.....	162

2.9.16 Comment-5.....	162
2.9.17 Comment-6.....	163
2.9.17 Comment-7.....	163
2.9.17 Comment-8.....	163
2.9.20 Full host MIB.....	163
2.9.22 Read-Only-Communities.....	163
2.10 DHCP.....	164
2.10.6 Max.-Lease-Time-Minutes.....	164
2.10.7 Default-Lease-Time-Minutes.....	164
2.10.8 DHCP table.....	165
2.10.9 Hosts.....	166
2.10.10 Alias list.....	167
2.10.18 Ports.....	168
2.10.19 User class identifier.....	168
2.10.20 Network list.....	168
2.10.21 Additional options.....	173
2.10.22 Vendor-Class-Identifier.....	175
2.11 Config.....	175
2.11.3 Password required for SNMP read access.....	175
2.11.4 Maximum connections.....	175
2.11.5 Config aging minutes.....	176
2.11.6 Language.....	176
2.11.7 Login errors.....	176
2.11.8 Lock minutes.....	176
2.11.9 Administrator EAZ-MSN.....	176
2.11.10 Display contrast.....	177
2.11.12 WLAN authentication pages only.....	177
2.11.13 TFTP client.....	177
2.11.15 Access table.....	179
2.11.16 Screen height.....	181
2.11.17 Prompt.....	181
2.11.18 LED test.....	181
2.11.20 Cron table.....	181
2.11.21 Admins.....	184
2.11.23 Telnet port.....	186
2.11.24 Telnet SSL port.....	186
2.11.25 SSH port.....	186
2.11.26 SSH authentication methods.....	187
2.11.27 Predefined Admins.....	187
2.11.28 SSH.....	188
2.11.31 Anti-Theft-Protection.....	192
2.11.32 Reset button.....	194
2.11.33 Outband aging minutes.....	195
2.11.35 Monitor trace.....	195

2.11.39 License expiry e-mail.....	195
2.11.40 Crash message.....	196
2.11.41 Admin gender.....	196
2.11.42 Assert action.....	196
2.11.43 Function keys.....	196
2.11.45 Configuration date.....	197
2.11.50 LL2M.....	197
2.11.60 CPU-load interval.....	198
2.11.70 Firmware-Check	198
2.11.71 Save bootlog.....	199
2.11.72 Save event log.....	199
2.11.80 Authentication.....	199
2.11.81 Radius.....	200
2.12 WLAN.....	204
2.12.3 Spare heap.....	204
2.12.7 Access list.....	205
2.12.8 Access mode.....	206
2.12.12 IAPP protocol.....	207
2.12.13 IAPP announce interval.....	207
2.12.14 IAPP handover timeout.....	207
2.12.26 Inter-SSID traffic.....	207
2.12.27 Supervise stations.....	208
2.12.29 RADIUS access check.....	208
2.12.36 Country.....	211
2.12.38 ARP handling.....	212
2.12.41 Mail address.....	212
2.12.44 Allow illegal association without authentication.....	212
2.12.45 RADIUS accounting.....	212
2.12.46 Indoor only operation.....	215
2.12.47 Idle timeout.....	216
2.12.48 Use full channel set.....	216
2.12.50 Signal averaging.....	216
2.12.51 Rate-Adaption.....	217
2.12.60 IAPP-IP network.....	219
2.12.70 VLAN group key mapping.....	219
2.12.80 Dual roaming.....	220
2.12.85 PMK-Caching.....	221
2.12.86 Packet-Capture.....	221
2.12.87 Client steering.....	222
2.12.100 Card reinitialize cycle.....	224
2.12.101 Noise calibration cycle.....	224
2.12.103 Trace MAC.....	224
2.12.105 Thermal recalibration cycle.....	224
2.12.107 Radar pattern thresholds.....	225

2.12.108 Radar load threshold.....	226
2.12.109 Noise offsets.....	226
2.12.110 Trace level.....	227
2.12.111 Noise immunity level.....	227
2.12.114 Aggregate retry limit.....	229
2.12.115 Omit global crypto sequence check.....	229
2.12.116 Trace packets.....	230
2.12.117 WPA-Handshake-Delay-ms.....	230
2.12.118WPA-Handshake-Timeout-Override-ms.....	230
2.12.119 Trace-Beacons.....	230
2.12.120 Rx-Aggregate-Flush-Timeout-ms.....	231
2.12.121 HT-Fairness.....	231
2.12.122 DFS-Testmode.....	231
2.13 LANCAPI.....	232
2.13.1 Access list.....	232
2.13.3 UDP port.....	233
2.13.6 Interface list.....	233
2.13.7 Priority list.....	234
2.14 Time.....	234
2.14.1 Fetch method.....	234
2.14.2 Current time.....	235
2.14.3 Time call number.....	235
2.14.5 Call attempts.....	235
2.14.7 UTC in seconds.....	235
2.14.10 Timezone.....	235
2.14.11 Daylight saving time.....	236
2.14.12 DST clock changes.....	236
2.14.13 Get time.....	237
2.14.15 Holidays.....	237
2.14.16 Timeframe.....	238
2.15 LCR.....	239
2.15.1 Router usage.....	239
2.15.2 Lancapi usage.....	239
2.15.4 Time list.....	239
2.16 NetBIOS.....	241
2.16.1 Operating.....	241
2.16.2 Scope ID.....	241
2.16.4 Peers.....	241
2.16.5 Group list.....	242
2.16.6 Host List.....	243
2.16.7 Server list.....	244
2.16.8 Watchdogs.....	246
2.16.9 Update.....	246
2.16.10 WAN update minutes.....	246

2.16.11 Lease time.....	246
2.16.12 Networks.....	246
2.16.13 Browser list.....	247
2.16.14 Support browsing.....	249
2.17 DNS.....	250
2.17.1 Operating.....	250
2.17.2 Domain.....	250
2.17.3 DHCP usage.....	250
2.17.4 NetBIOS usage.....	250
2.17.5 DNS list.....	251
2.17.6 Filter list.....	252
2.17.7 Lease time.....	253
2.17.8 Dynamic DNS list.....	253
2.17.9 DNS destinations.....	254
2.17.10 Service location list.....	255
2.17.11 Dynamic SRV list.....	256
2.17.12 Resolve domain.....	257
2.17.13 Sub domains.....	257
2.17.14 Forwarder.....	257
2.17.15 Tag-Configuration.....	258
2.18 Accounting.....	260
2.18.1 Operating.....	260
2.18.2 Save to flashrom.....	260
2.18.3 Sort by.....	261
2.18.4 Current user.....	261
2.18.5 Accounting list.....	261
2.18.6 Delete accounting list.....	262
2.18.8 Time snapshot.....	262
2.18.9 Last snapshot.....	264
2.18.10 Discriminator.....	264
2.19 VPN.....	265
2.19.3 Isakmp.....	265
2.19.4 Proposals.....	268
2.19.5 Certificate keys.....	275
2.19.7 Layer.....	277
2.19.8 Operating.....	278
2.19.9 VPN peers.....	279
2.19.10 Aggressive mode proposal list default.....	282
2.19.11 Aggressive mode IKE group default.....	283
2.19.12 Additional gateways.....	283
2.19.13 Main mode proposal list default.....	295
2.19.14 Main mode IKE group default.....	295
2.19.16 NAT-T operating.....	295
2.19.17 Simple cert. RAS operating.....	296

2.19.19 Quick mode proposal list default.....	296
2.19.20 Quick mode PFS group default.....	296
2.19.21 Quick mode shorthold time default.....	296
2.19.22 Allow remote network selection.....	297
2.19.23 Establish SAs collectively.....	297
2.19.24 Max concurrent connections.....	297
2.19.25 Flexible ID comparison.....	297
2.19.26 NAT-T port for rekeying.....	298
2.19.27 SSL encapsulation allowed.....	298
2.19.28 myVPN.....	298
2.19.30 Anti-replay window size.....	304
2.19.64 OCSP-Client.....	304
2.20 LAN bridge.....	304
2.20.1 Protocol version.....	304
2.20.2 Bridge priority.....	305
2.20.4 Encapsulation table.....	305
2.20.5 Maximum age.....	306
2.20.6 Hello time:.....	306
2.20.7 Forward delay.....	306
2.20.8 Isolated mode.....	306
2.20.10 Protocol table.....	306
2.20.11 Port.....	310
2.20.12 Aging time.....	311
2.20.13 Priority mapping.....	311
2.20.20 Spanning tree.....	312
2.20.30 IGMP snooping.....	315
2.21 HTTP.....	321
2.21.1 Document root.....	321
2.21.2 Page headers.....	321
2.21.3 Font family.....	321
2.21.5 Page headers.....	321
2.21.6 Error-page style.....	322
2.21.7 Port.....	322
2.21.8 SSL port.....	322
2.21.9 Maximum tunnel connections.....	322
2.21.10 Tunnel idle timeout.....	322
2.21.11 Session timeout.....	323
2.21.13 Standard design.....	323
2.21.14 Show device information.....	323
2.21.15 HTTP compression.....	324
2.21.16 Keep server ports open.....	324
2.21.17 Use-User-Provided-Certificate.....	325
2.21.18 SSL versions.....	325
2.21.20 Rollout Wizard.....	325

2.21.21 Max-HTTP-Job-Count.....	327
2.21.30 File server.....	328
2.22 SYSLOG.....	328
2.22.1 Operating.....	328
2.22.2 SYSLOG table.....	329
2.22.3 Facility mapper.....	330
2.22.4 Port.....	331
2.22.5 Message table order.....	331
2.22.6 Backup interval.....	331
2.22.7 Backup active.....	331
2.22.8 Log CLI changes.....	331
2.22.9 Max. message age, hours.....	332
2.22.10 Remove old messages.....	332
2.22.11 Message age unit.....	332
2.23 Interfaces.....	333
2.23.1 S0.....	333
2.23.4 DSL.....	334
2.23.6 ADSL interface.....	337
2.23.7 Modem mobile.....	338
2.23.20 WLAN.....	340
2.23.21 LAN interfaces.....	386
2.23.30 Ethernet ports.....	388
2.23.40 Modem.....	391
2.23.41 Mobile telephony.....	393
2.24 Public-Spot-Module.....	398
2.24.1 Authentication mode.....	398
2.24.2 User table.....	399
2.24.3 Provider table.....	400
2.24.5 Traffic limit bytes.....	403
2.24.6 Server subdir.....	403
2.24.7 Accounting cycle.....	403
2.24.8 Page table.....	403
2.24.9 Roaming secret.....	405
2.24.12 Communication port.....	405
2.24.14 Idle timeout.....	405
2.24.15 Port table.....	405
2.24.16 Auto-cleanup user table.....	406
2.24.17 Provide server database.....	406
2.24.18 Disallow multiple logins.....	406
2.24.19 Add user wizard.....	407
2.24.20 VLAN table.....	413
2.24.21 Login page type.....	414
2.24.22 Device hostname.....	414
2.24.23 MAC-Address-Table.....	414

2.24.24	MAC-Address-Check-Provider.....	415
2.24.25	MAC-Address-Check-Provider.....	415
2.24.26	Station table limit.....	416
2.24.30	Free server.....	416
2.24.31	Free networks.....	416
2.24.32	Free hosts minimum TTL.....	417
2.24.33	Login-Text.....	418
2.24.34	WAN connection.....	418
2.24.35	Print logo and header image.....	418
2.24.36	User must accept GTC.....	419
2.24.37	Print logout link.....	419
2.24.40	XML interface.....	420
2.24.41	Authentication modules.....	421
2.24.42	WISPr.....	440
2.24.50	Automatic re-login.....	443
2.24.60	Login text.....	444
2.25	RADIUS.....	445
2.25.4	Authentication timeout.....	445
2.25.5	Authentication retry.....	446
2.25.9	Backup query strategy.....	446
2.25.10	Server.....	446
2.26	NTP.....	463
2.26.2	Operating.....	463
2.26.3	BC mode.....	463
2.26.4	BC interval.....	463
2.26.7	RQ interval.....	464
2.26.11	RQ address.....	464
2.26.12	RQ tries.....	465
2.27	Mail.....	465
2.27.1	SMTP server.....	465
2.27.2	SMTP port.....	465
2.27.3	POP3 server.....	466
2.27.4	POP3 port.....	466
2.27.5	User name.....	466
2.27.6	Password.....	466
2.27.7	E-mail sender.....	466
2.27.8	Send again (min).....	467
2.27.9	Hold time (hrs).....	467
2.27.10	Buffers.....	467
2.27.11	Loopback address.....	467
2.27.12	SMTP-use-TLS.....	468
2.27.13	SMTP authentication.....	468
2.30	IEEE802.1x.....	469
2.30.3	Radius server.....	469

2.30.4 Ports.....	470
2.31 PPPoE.....	473
2.31.1 Operating.....	473
2.31.2 Name list.....	473
2.31.3 Service.....	474
2.31.4 Session-Limit.....	474
2.31.5 Ports.....	474
2.32 VLAN.....	475
2.32.1 Networks.....	475
2.32.2 Port table.....	476
2.32.4 Operating.....	477
2.32.5 Tag value.....	478
2.33 Voice-Call-Manager.....	478
2.33.1 Operating.....	478
2.33.2 General.....	478
2.33.3 Users.....	483
2.33.4 Lines.....	493
2.33.5 Call router.....	510
2.33.7 Groups.....	514
2.33.8 Logging.....	516
2.34 Printer.....	517
2.34.1 Printer.....	517
2.34.2 Access list.....	518
2.35 ECHO server.....	519
2.35.1 Operating.....	519
2.35.2 Access table.....	519
2.35.3 TCP timeout.....	520
2.36 Performance monitoring.....	521
2.36.2 RttMonAdmin.....	521
2.36.3 RttMonEchoAdmin.....	521
2.36.4 RttMonStatistics.....	522
2.37 WLAN-Management.....	525
2.37.1 AP configuration.....	525
2.37.5 CAPWAP port.....	582
2.37.6 Autoaccept AP.....	582
2.37.7 Accept AP.....	583
2.37.8 Provide default configuration.....	583
2.37.9 Disconnect AP.....	583
2.37.10 Notification.....	584
2.37.19 Start automatic radio field optimization.....	585
2.37.20 Access list.....	586
2.37.27 Central firmware management.....	587
2.37.30 Synch. WTP password.....	590
2.37.31 Interval for status table cleanup.....	590

2.37.32 License count.....	591
2.37.33 License limit.....	591
2.37.34 WLC cluster.....	591
2.37.35 RADIUS server profiles.....	593
2.38 LLDP.....	596
2.38.1 Message TX interval.....	597
2.38.2 Message TX hold multiplier.....	597
2.38.3 Reinit delay.....	597
2.38.4 Tx delay.....	598
2.38.5 Notification interval.....	598
2.38.6 Ports.....	598
2.38.7 Management addresses.....	602
2.38.8 Protocol.....	602
2.38.9 Immediate delete.....	603
2.38.10 Operating.....	604
2.39 Certificates.....	604
2.39.1 SCEP client.....	604
2.39.2 SCEP-CA.....	611
2.39.3 CRLs.....	618
2.39.6 OCSP client.....	620
2.40 GPS.....	623
2.40.1 Operating.....	623
2.41 UTM.....	624
2.41.2 Content filter.....	624
2.42 ADSL.....	655
2.42.1 Trace mode.....	655
2.42.3 Line failures.....	655
2.42.4 Monitoring time (h).....	656
2.52 COM-Ports.....	656
2.52.1 Devices.....	656
2.52.2 COM-port server.....	657
2.52.3 WAN.....	664
2.53 Temperature monitor.....	664
2.53.1 Upper-limit degrees.....	664
2.53.2 Lower-limit degrees.....	665
2.54 TACACS.....	665
2.54.2 Authorization.....	665
2.54.3 Accounting.....	665
2.54.6 Shared secret.....	665
2.54.7 Encryption.....	666
2.54.9 Server.....	666
2.54.10 Fallback to local users.....	667
2.54.11 SNMP-GET requests authorization.....	667
2.54.12 SNMP-GET requests accounting.....	667

2.54.13 Bypass-Tacacs-for-CRON/Scripts/Action-table.....	668
2.54.14 Include value into authorization request.....	668
2.56 Autoload.....	668
2.56.1 Firmware and loader.....	668
2.56.2 Configuration and script.....	669
2.59 WLAN management.....	669
2.59.1 Static WLC configuration.....	669
2.59.120 Log entries.....	670
2.60 Autoload.....	670
2.60.1 Network.....	671
2.60.3 License.....	673
2.60.56 USB.....	675
2.63 Packet capture.....	676
2.63.1 LCOSCap operating.....	676
2.63.2 LCOSCap port.....	677
2.63.11 RPCap-Operating.....	677
2.63.12 RPCap-Port.....	677
2.64 PMS interface.....	678
2.64.1 Operating.....	678
2.64.2 PMS type.....	678
2.64.3 PMS server IP address.....	679
2.64.4 Loopback address.....	679
2.64.5 PMS port.....	679
2.64.6 Separator.....	680
2.64.7 Character set.....	680
2.64.8 Currency.....	680
2.64.9 Rate.....	681
2.64.10 Accounting.....	682
2.64.11 Login form.....	683
2.64.12 Guest name case sensitive.....	686
2.64.13 Multi-login.....	687
2.70 IPv6.....	687
2.70.1 Tunnel.....	687
2.70.2 Router advertisement.....	698
2.70.3 DHCPv6.....	710
2.70.4 Network.....	729
2.70.5 Firewall.....	733
2.70.6 LAN interfaces.....	759
2.70.7 WAN interfaces.....	763
2.70.10 Operating.....	767
2.70.11 Forwarding.....	767
2.70.12 Router.....	768
2.70.13 ICMPv6.....	770
2.71 IEEE802.11u.....	771

2.71.1 ANQP profiles.....	772
2.71.3 Venue name.....	774
2.71.4 Cellular network information list.....	776
2.71.5 Network authentication type.....	777
2.71.6 ANQP general.....	778
2.71.7 Hotspot2.0.....	782
2.71.8 Authentication parameter.....	786
2.71.9 NAI realms.....	788
2.83 SMS.....	789
2.83.1 SMSC address.....	790
2.83.2 Inbox size.....	790
2.83.3 Outbox size.....	790
2.83.4 Outbox preservation.....	791
2.83.5 Mail-Forward-Addr.....	791
2.83.8 Syslog.....	791
2.200 SIP ALG.....	792
2.200.1 Operating.....	792
2.200.2 Firewall-Overrule.....	792
3 Firmware.....	794
3.1 Version table.....	794
3.1.1 Interface.....	794
3.1.2 Module.....	794
3.1.3 Version.....	794
3.1.4 Serial number.....	794
3.2 Table Firmsafe.....	794
3.2.1 Position.....	794
3.2.2 Status.....	795
3.2.3 Version.....	795
3.2.4 Date.....	795
3.2.5 Size.....	795
3.2.6 Index.....	795
3.3 Firmsafe mode.....	795
3.4 Firmsafe timeout.....	796
3.7 Feature word.....	796
4 Other.....	797
4.1 Manual dialing.....	797
4.1.1 Connect.....	797
4.1.2 Disconnect.....	797
4.1.4 Test call.....	797
4.2 System boot.....	797
4.5 Cold boot.....	797
4.6 Voice Call Manager.....	798
4.6.1 Lines.....	798
4.6.2 Groups.....	798

1 Introduction

1.1 About this documentation

Components of the documentation

The documentation of your device consists of the following parts:

- Installation Guide

The Quickstart user guide answers the following questions:

- Which software has to be installed to carry out a configuration?
- How is the device connected up?
- How can the device be contacted with LANconfig, WEBconfig or via the serial interface?
- How do I start the Setup Wizard (e.g. to set up Internet access)?
- How do I reset the device?
- Where can I find information and support?

- User Manual or Quick Reference Guide

The User Manual or the Quick Reference contains all of the information required to setup your device quickly. It also contains all of the important technical specifications.

- Manual on PBX functions (only for models with VoIP support)

The PBX Functions manual gives you detailed step-by-step instructions on commissioning a LANCOM VoIP router as a PBX (private branch exchange) for a single location. Also described are the main operating instructions for users, and how to connect terminal equipment.

- Reference manual

The Reference Manual goes into detail on topics that apply to a variety of models.

The descriptions in the Reference Manual are based predominantly to the configuration with LANconfig. Also given for each LANconfig dialog is the corresponding path to find the parameters when working with WEBconfig, for example:

LANconfig: Wireless LAN / 802.11i/WEP / WPA or Private WEP settings

WEBconfig: LCOS Menu Tree / Setup / Interfaces / WLAN / Encryption

The paths for configuration via CLI/Telnet can be derived from this and are therefore not explicitly listed. The Telnet path to the encryption setting is, for example:

```
cd /Setup/Interfaces/WLAN/Encryption
```

- Menu Reference Guide

The Menu Reference Guide comprehensively describes all of the parameters in LCOS, the operating system used by LANCOM devices. This guide is an aid to users during the configuration of devices by means of WEBconfig or the telnet console.

The parameters are listed in the alphabetical order of the paths as they appear when carrying out a configuration with WEBconfig. Each parameter is described briefly and the possible values for input are listed, as are the default values.

 All documents for your product which are not shipped in printed form are available as an Acrobat document (PDF file) from www.lancom.eu/download or on the data medium supplied with your product.

LCOS, the operating system of LANCOM devices

All routers, gateways, controllers and access points from LANCOM Systems work with the same operating system: LCOS. A proprietary development of LANCOM Systems, this operating system is highly resistant to external attack and provides a high level of security. The consistent use of LCOS also ensures that operating LANCOM products is easy and uniform between products. The extensive feature set with all LANCOM products is immediately available. Free, regular software updates are constantly under development.

This manual works with the following definitions of software, hardware and manufacturer:

- LCOS refers to the operating system used by various LANCOM devices
- LANCOM is a generic term for any LANCOM router or LANCOM router access point
- LANCOM Systems is short for the manufacturer, LANCOM Systems GmbH

Validity

This Menu Reference Guide applies to all LANCOM devices with firmware version 8.82 or later.

The functions and settings described in this Menu Reference Guide are not all supported by all models or all firmware versions.

This documentation was created by...

...several members of our staff from a variety of departments in order to ensure you the best possible support when using your LANCOM product.

If you should find any mistakes, have a criticism, or wish to suggest any improvements, please do not hesitate to send an e-mail directly to:

info@lancom.de

 If you have any questions on the content in this manual, or if you require any further support, our Internet server www.lancom.eu is available to you around the clock. The 'Support' section will help you with many answers to frequently asked questions (FAQs). Furthermore, the knowledgebase offers you a large reserve of information. The latest drivers, firmware, utilities and documentation are constantly available for download. You can also refer to LANCOMSupport. For telephone numbers and contact addresses for LANCOM Support, please refer to the enclosed leaflet or the LANCOM Web site.

1.2 Configuration with Telnet

Open Telnet session

To commence the configuration, start Telnet from the Windows command line with command::

- `C:\>telnet 10.0.0.1`

Telnet establishes a connection to the device with the IP address entered.

After entering the password (assuming one has been set to protect the configuration) all of the configuration commands are available to you.

! Linux and Unix additionally support Telnet sessions via SSL-encrypted connections. Depending on the distribution it may be necessary to replace the standard Telnet application with an SSL-capable version. Start the encrypted Telnet connection with the following command:

- `C:\>telnet -z ssl 10.0.0.1 telnets`

Changing the console language

Terminal mode is available in English or German. LANCOM devices are set with English as the standard console language. If necessary, change the console language with the following commands:

WEBconfig: LCOS menu tree / Setup / Config-Module / Language


Close the Telnet session

To close the Telnet session, enter the command `exit` at the command prompt:

- `C:\>exit`

Structure of the command-line interface

The LANCOM command-line interface is always structured as follows:

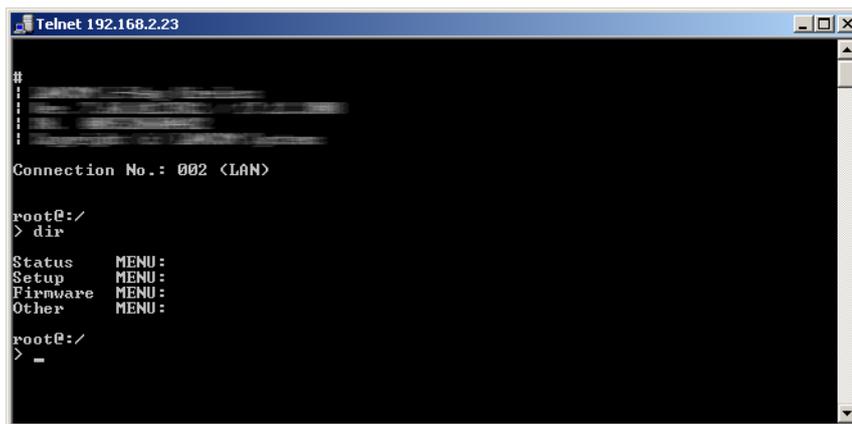

- **Status**
 - Contains the status and statistics of all internal modules in the device
- **Setup**
 - Contains all adjustable parameters of all internal modules in the device
- **Firmware**
 - Contains the firmware management
- **Sonstiges**
 - Contains actions for establishing and terminating connections, reset, reboot and upload

1.3 Command-line commands

The LANCOM command-line interface can be operated with the following DOS- or UNIX-style commands. The LCOS menu commands that are available to you can be displayed at any time by entering `HELP` at the command line.

 Supervisor rights are necessary to execute some commands.

Command	Description
beginscript	Resets the console session to script mode. In this state, commands entered are not transferred directly to the LANCOM's configuration RAM but initially to the device's script memory.
cd [PATH]	Switch to the current directory. Various abbreviations can be used, such as replacing " cd ../.." with "cd ...", etc.
default [-r] [PATH]	Resets individual parameters, tables or entire menu trees back to their default configuration. If <code>PATH</code> indicates a branch of the menu tree, then the option <code>-r</code> (recursive) must be entered.
del [PATH]*	Deletes the table in the branch of the menu tree defined with <code>Path</code> .
deletebootlog	Clears the contents of the persistent boot log memory.
dir [PATH] list [PATH] ls [PATH] ll [PATH]	Displays the current directory content. The suffix parameter "-a" lists the SNMP IDs associated with the content of the query. The output begins with the SNMP ID of the device followed by the SNMP ID of the current menu. The SNMP IDs of the subordinate items can be read from the individual entries.
do [PATH] [<Parameter>]	Executes the action [PATH] in the current directory. Other parameters can be entered in addition.
echo <ARG>...	Display argument on console
exit/quit/x	Ends the command line session
feature <code>	Activation of a software feature with the feature code as entered
flash Yes/No	Changes to the configuration using commands in the command line are written directly to the boot-resistant Flash memory of the devices as standard (flash yes). If updating the configuration is suppressed in Flash (flash no), changes are only stored in RAM (deleted on booting).
getenv <NAME>	Display environment variable (no line feed)
history	Displays a list of recently executed commands. Command <code>! #</code> can be used to directly call the list commands using their number (<code>#</code>): For example, <code>! 3</code> runs the third list command.
killscript	Deletes the script session contents yet to be processed. The script session is selected by its name.
loadconfig	Load configuration into device via TFTP client
loadfirmware	Load firmware into device via TFTP client
loadscript	Load script into device via TFTP client
passwd	Change password
passwd -n new [old]	Change password (no prompt)
ping [IP address or name]	Sends an ICMP echo request to the IP address specified. For more information about the command and the specifics of pinging IPv6 addresses, see the section Parameter overview for the ping command on page 21.
ping -6 [IPv6 address] %[Scope]	
printenv	Display the entire environment
readconfig	Display of the entire configuration in the device syntax
readmib	Display of the SNMP Management Information Base
readscript [-n] [-d] [-c] [-m] [PATH]	In a console session, the readscript command generates a text dump of all commands and parameters required to configure the LANCOM in its current state.
Release [-x] <Interface 1> ... <Interface n>	The DHCPv6 client returns its IPv6 address and/or its prefix to the DHCPv6 server. It then submits a new request for an address or prefix to the DHCPv6 server. Depending on the

Command	Description
	provider, the server assigns a new address to the client, or reassigns the previous one. Whether the client receives a different address or prefix is determined solely by the server. The option switch <code>-x</code> suppresses the confirmation message. The <code>*</code> wildcard applies the command on all of the interfaces and prefix delegations.
repeat <INTERVAL> <Command>	Release IPv6 address: Repeats the command every INTERVAL seconds until the process is ended with new input
sleep [-u] value[suffix]	Delays the processing of configuration commands by a particular time or terminates them at a particular time. Valid suffixes are <code>s</code> , <code>m</code> and <code>h</code> for seconds, minutes and hours. If no suffix is defined, the command uses milliseconds. With option switch <code>-u</code> , the sleep command accepts times in format <code>MM/DD/YYYY hh:mm:ss</code> (English) or in format <code>TT.MM.JJJJ hh:mm:ss</code> (German). Times will only be accepted if the system time has been set.
stop	Ends the PING command
set [PATH] <value(s)>	Sets a configuration parameter to a particular value. If the configuration parameter is a table value, a value must be specified for each column. Entering the <code>"*</code> character leaves any existing table entry unchanged.
set [PATH] ?	Listing of the possible input values for a configuration parameter. If no name is specified, the possible input values for all configuration parameters in the current directory are listed.
setenv <NAME> <VALUE>	Set environment variable
show <Options>	Display of special internal data. For information on displaying IPv6-specific data, read the section Overview of IPv6-specific show commands on page 25. <code>show ?</code> displays all available information, such as most recent boot processes ('bootlog'), firewall filter rules ('filter'), VPN rules ('VPN') and memory usage ('mem' and 'heap')
smssend [-s <SMSC-Number>] (-d <Destination>) (-t <Text>)	Available only on devices with 3G/4G WWAN module: Sends a text message to the destination number entered. <ul style="list-style-type: none"> ■ <code>-s <SMSC-Number></code>: Alternative SMSC phone number (optional). If you omit this part of the command, the device uses the phone number stored on the USIM card or that configured under SNMP ID 2.83. ■ <code>-d <Destination></code>: Destination phone number ■ <code>-t <Text></code>: Contents of the message with ≤ 160 characters. For an overview of available characters, see the section Character set for sending SMS on page 30. Special characters must be in UTF8 encoded form.
sysinfo	Display of system information (e.g. hardware/software version)
testmail	Sends an e-mail. See 'testmail ?' for parameters
time	Set time (DD.MM.YYYY hh:mm:ss)
trace [...]	Configuration of the diagnostics display. For further information on this command refer to the section Parameter overview for the trace command on page 23.
unsetenv <NAME>	Delete environment variable
who	List active sessions
writeconfig	Load a new configuration file in the device syntax. All subsequent lines are interpreted as configuration values until two blank lines occur
writeflash	Load a new firmware file (only via TFTP)
!!	Repeat last command
!<num>	Repeat command <num> times

Command	Description
!<prefix>	Repeat last command beginning with <prefix>
#<blank>	Comment

- **PATH:**
 - Path name for a menu or parameter, separated by / or \
 - .. means one level higher
 - . means the current level
- **VALUE:**
 - Possible input value
 - "" is a blank input value
- **NAME:**
 - Sequence of characters (made up of _ 0..9 A..Z)
 - First character cannot be a digit
 - Case insensitive
- All commands and directory/parameter names can be entered using their short-forms as long as they are unambiguous. For example, command "sysinfo" can be shortened to "sys" and "cd Management" to "c ma". Input "cd /s" is not valid, however, since it corresponds to both "cd /Setup" and "cd /Status".
- Directories can be addressed with the corresponding SNMP ID. For example, the command "cd /2/8/10/2" has the same effect as "cd /Setup/IP-router/Firewall/Rules".
- Multiple values in a table row can be changed with **one** command, for example in the rules table of the firewall:
 - `set WINS UDP` sets the protocol of the WINS rule to UDP
 - `set WINS UDP ANYHOST` sets the protocol of the WINS rule to UDP and the destination to ANY-HOST
 - `set WINS * ANYHOST` also sets the destination of the WINS rule to ANYHOST; the asterisk means that the protocol remains unchanged
- The values in a table row can alternatively be addressed via the column name or the position number in curly brackets. The command `set ?` in the table shows the name, the possible input values and the position number for each column. For example, in the rules table of the firewall, the destination has the number 4:
 - `set WINS {4} ANYHOST` sets the destination of the WINS rule to ANYHOST
 - `set WINS {destination} ANYHOST` also sets the destination of the WINS rule to ANYHOST
 - `set WINS {dest} ANYHOST` sets the destination of the WINS rule to ANYHOST, because specifying "dest" here is sufficient to uniquely identify the column name.
- Names that contain spaces must be enclosed within quotation marks ("").
- A command-specific help function is available for actions and commands (call the function with a question mark as the parameter). For example, `ping ?` shows the options of the integrated ping command.
- Enter ? on the command line for a complete listing of the console commands available.

Parameter overview for the ping command

The ping command entered at the command prompt of a Telnet or terminal connection sends an "ICMP echo-request" packet to the destination address of the host to be checked. If the receiver supports the protocol and it is not filtered out in the firewall, the destination host will respond with an "ICMP echo reply". If the target computer is not reachable, the last router before the host responds with a "network unreachable" or "host unreachable" message.

The syntax of the ping command is as follows:

- `ping [-fnqr] [-s n] [-i n] [-c n] [-a a.b.c.d] destination host`

The meaning of the optional parameters is explained in the following table:

Parameters	Meaning
-a a.b.c.d	Sets the ping's sender address (default: IP address of the router)
-a INT	Sets the intranet address of the router as the sender address
-a DMZ	Sets the DMZ address of the router as the sender address
-a LBx	Sets one of the 16 loopback addresses in the LANCOM as the sender address. Valid values for x are the hexadecimal values 0 – f
-6 [IPv6 address] %[Scope]	<p>Performs a ping command to the link-local address via the interface specified by <scope>.</p> <p>For IPv6, the scope of parameters is of central importance: IPv6 requires a link-local address (fe80::/10) to be assigned to every network interface (logical or physical) on which the IPv6 protocol is enabled, so you must specify the scope when pinging a link-local address. This is the only way that the ping command knows which interface it should send the package to. A percent sign (%) separates the name of the interface from the IPv6 address.</p> <p>Examples:</p> <ul style="list-style-type: none"> ■ <code>ping -6 fe80::1%INTRANET</code> Ping the link-local address "fe80::1", which is accessible via the interface and/or the network "INTRANET". ■ <code>ping -6 2001:db8::1</code> Pings the global IPv6 address '2001:db8::1'.
-f	flood ping: Sends a large number of pings in a short time. Can be used to test network bandwidth, for example. WARNING: flood ping can easily be misinterpreted as a DoS attack.
-n	Returns the computer name of a specified IP address
-q	Ping command returns no output to the console (quiet)
-r	Changes to traceroute mode: The route taken by the data packets underway to the target computer is shown with all of the intermediate stations
-s n	Sets the packet size to n bytes (max. 1472)
-i n	Time between packets in seconds
-c n	Send n ping signals
Target computer	Address or host name of the target computer

Parameters	Meaning
stop /<RETURN>	Entering "stop" or pressing the RETURN button terminates the ping command

```

192.168.2.100 - PuTTY
root@_ :/
> ping -a 192.168.2.50 -c 217.160.175.241
': Syntax error

root@_ :/
> ping -a 192.168.2.50 -c 2 217.160.175.241

56 Byte Packet from 217.160.175.241 seq.no=0 time=53.556 ms

---217.160.175.241 ping statistic---
56 Bytes Data, 1 packets transmitted, 1 packets received, 0% loss

root@_ :/
> ping -n -c 1 217.160.175.241
p15125178.pureserver.info
56 Byte Packet from 217.160.175.241 seq.no=0 time=53.279 ms

---217.160.175.241 ping statistic---
56 Bytes Data, 1 packets transmitted, 1 packets received, 0% loss

root@_ :/
> ping -f
1 Traceroute 217.5.98.182 seq.no=0 time=47.961 ms
2 Traceroute 217.237.154.146 seq.no=1 time=44.962 ms
3 Traceroute 62.154.46.182 seq.no=2 time=55.810 ms
4 Traceroute 194.140.114.121 seq.no=3 time=56.797 ms
5 Traceroute 194.140.115.244 seq.no=4 time=71.948 ms
6 Traceroute 212.99.215.81 seq.no=5 time=78.293 ms
7 Traceroute 213.217.69.77 seq.no=6 time=82.287 ms
Traceroute 213.217.69.69 seq.no=7 time=79.340 ms

---213.217.69.69 ping statistic---
56 Bytes Data, 8 packets transmitted, 8 packets received, 0% loss

root@_ :/
>

```

Parameter overview for the trace command

! The traces available for a particular model can be displayed by entering `trace` without any arguments.

Table 1: Overview of all possible traces

This parametercauses the following message in the trace:
Status	Connection status messages
Error	Connection error messages
IPX router	IPX routing
PPP	PPP protocol negotiation
SAP	IPX service advertising protocol
IPX watchdog	IPX watchdog spoofing
SPX watchdog	SPX watchdog spoofing
LCR	Least-cost router
Script	Script negotiation
IPX RIP	IPX routing information protocol
Firewall	Displays firewall events

This parametercauses the following message in the trace:
RIP	IP routing information protocol
ARP	Address resolution protocol
ICMP	Internet control message protocol
IP masquerading	Events in the masquerading module
DHCP	Dynamic host configuration protocol
NetBIOS	NetBIOS administration
DNS	Domain name service protocol
Packet dump	Displays the first 64 bytes of a packet in hexadecimal
D channel dump	Traces the D channel of the ISDN bus connected
ATM cell	ATM packet level
ATM error	ATM error
ADSL	ADSL link status
SMTP client	Email processing with the integrated mail client
Mail client	Email processing with the integrated mail client
SNTP	Simple network time protocol
NTP	Timeserver trace
Connect	Messages from the activity protocol
Cron	Activities of the scheduler (cron table)
RADIUS	RADIUS trace
Serial	Information on the state of the serial interface
USB	Information on the state of the USB interface
Load balancer	Information on load balancing
VRRP	Information on the virtual router redundancy protocol
Ethernet	Information on the Ethernet interfaces
VLAN	Information on virtual networks
IGMP	Information on the internet group management protocol
WLAN	Information on activity in the wireless networks
IAPP	Trace on inter access point protocol giving information on wireless LAN roaming.
DFS	Trace on dynamic frequency selection, automatic channel selection in the 5 GHz wireless LAN band
Bridge	Information on the wireless LAN bridge
EAP	Trace on EAP, the key negotiation protocol used with WPA/802.11i and 802.1x
Spgtree	Information on spanning tree protocol
LANAUTH	LAN authentication (e.g. Public Spot)
SIP-Packet	SIP information that is exchanged between a LANCOM VoIP router and a SIP provider or a upstream SIP telephone system
VPN status	IPSec and IKE negotiations
VPN packet	IPSec and IKE packets
XML-Interface-PbSpot	Messages from the Public Spot XML interface

This parametercauses the following message in the trace:
hnat	Information on hardware NAT
IPv6 config	Information on the IPv6 configuration
IPv6 firewall	IPv6 firewall events
IPv6-Interfaces	Information about the IPv6 interfaces
IPv6-LAN-Packet	Data packets over the IPv6 LAN connection
IPv6-Router	Information about the IPv6 routing
IPv6-WAN-Packet	Data packets over the IPv6 WAN connection

Overview of IPv6-specific show commands

Various IPv6 functions can be queried at the command line. The following command-line functions are available:

- *IPv6 addresses*: `show ipv6-addresses`
- *IPv6 prefixes*: `show ipv6-prefixes`
- *IPv6 interfaces*: `show ipv6-interfaces`
- *IPv6 neighbor cache*: `show ipv6-neighbor-cache`
- *IPv6 DHCP server*: `show dhcp6-server`
- *IPv6 DHCP client*: `show dhcp6-client`
- *IPv6 route*: `show ipv6-route`

Additionally, IPv6 communications can be followed with the `trace` command.

IPv6 addresses

The command `show ipv6-addresses` shows a list of IPv6 addresses that are currently being used. This is sorted by interface. Note that an interface can have multiple IPv6 addresses. One of these addresses is always the link-local address, which starts with `fe80` :

The output is formatted as follows:

<Interface> :

<IPv6 address>, <status>, <attribute>, (<type>)

Table 2: Components of the command-line output `show ipv6-addresses`:

Output	Comment
Interface	The name of the interface
IPv6 address	The IPv6 address
Status	The status field can contain the following values: <ul style="list-style-type: none"> ■ TENTATIVE <p>Duplicate Address Detection (DAD) is currently checking the address. It is not yet available for unicast.</p> ■ PREFERRED <p>The address is valid</p> ■ DEPRECATED <p>The address is still valid, but it is being discontinued. The optimal status for communication is PREFERRED.</p> ■ INVALID

Output	Comment
	The address is invalid and cannot be used for communication. An address given this status after its lifetime has expired.
Attribute	Shows an attribute of the IPv6 address. Possible attributes are: <ul style="list-style-type: none"> ■ None No special attributes ■ (ANYCAST) This is an anycast address ■ (AUTO CONFIG) The address was retrieved by auto-configuration ■ (NO DAD PERFORMED) No DAD is performed
Type	The type of IP address

IPv6 prefixes

The command `show ipv6-prefixes` displays all known prefixes. These are sorted according to the following criteria:

- **Delegated prefixes:** All prefixes that the router has obtained by delegation.
- **Advertised prefixes:** All prefixes that the router announces in its router advertisements.
- **Deprecated prefixes:** All prefixes that are being discontinued. These may still be functional, but they will be deleted after a certain time.

IPv6-Interfaces

The command `show ipv6-interfaces` displays a list of IPv6 interfaces and their status.

The output is formatted as follows:

<Interface> : <Status>, <Forwarding>, <Firewall>

Table 3: Components of the command-line output `show ipv6-interfaces`:

Output	Comment
Interface	The name of the interface
Status	The status of the interface Possible entries are: <ul style="list-style-type: none"> ■ oper status is up ■ oper status is down
Forwarding	The forwarding status of the interface. Possible entries are: <ul style="list-style-type: none"> ■ forwarding is enabled ■ forwarding is disabled
Firewall	The status of the firewall. Possible entries are: <ul style="list-style-type: none"> ■ forwarding is enabled ■ firewall is disabled

IPv6 neighbor cache

The command `show ipv6-neighbor-cache` displays the current neighbor cache.

The output is formatted as follows:

```
<IPv6 address> iface <interface> lladdr <MAC address> (<switch port>) <device type> <status> src <source>
```

Table 4: Components of the command-line output `show ipv6-neighbor-cache`:

Output	Comment
IPv6 address	The IPv6 address of the neighboring device
Interface	The interface where the neighbor is accessed
MAC address	The MAC address of the neighbor
Switch port	The switch port on which the neighbor was found
Device type	Neighbor's device type (host or router)
Status	The status of the connection to neighboring devices. Possible entries are: <ul style="list-style-type: none"> ■ INCOMPLETE Resolution of the address was still in progress and the link-layer address of the neighbor was not yet determined. ■ REACHABLE The neighbor was reached in the last ten seconds. ■ STALE The neighbor is no longer qualified as REACHABLE, but an update will only be performed when an attempt is made to reach it. ■ DELAY The neighbor is no longer qualified as REACHABLE, but data was recently sent to it; waiting for verification by other protocols. ■ PROBE The neighbor is no longer qualified as REACHABLE. Neighbor solicitation probes are sent to it to confirm availability.
Source	The IPv6 address at which the neighbor was detected.

IPv6 DHCP server

The command `show dhcpv6-server` displays the current status of the DHCP server. The display includes information about the interface on which the server is active, which DNS server and prefixes it has, and what client preferences it has.

IPv6 DHCP client

The command `show dhcpv6-client` displays the current status of the DHCP client. The display includes information about the interface being used by the client and the prefixes and DNS server that it is using.

IPv6 route

The command `show ipv6-route` displays the complete IPv6 routing table. Routers with fixed entered routes are displayed with the suffix `[static]` and the dynamically obtained routes have the suffix `[connected]`. The loopback address is marked `[loopback]`. Other automatically generated addresses have the suffix `[local]`.

Functions for editing commands

The following commands can be used to edit commands on the command line. The `ESC` key sequences show (for comparison) the shortcuts used on typical VT100/ANSI terminals:

Function	Esc key sequences	Description
Up arrow	ESC [A	In the list of commands last run, jumps one position up (in the direction of older commands).
Down arrow	ESC [B	In the list of commands last run, jumps one position down (in the direction of newer commands).
Right arrow	Ctrl-F ESC [C	Moves the insert cursor one position to the right.
Left arrow	Ctrl-B ESC [D	Moves the insert cursor one position to the left.
Home or Pos1	Ctrl-A ESC [A ESC [1~ (Moves the insert cursor to the first character in the line.
End	Ctrl-E ESC [F ESC [O ESC [4~	Moves the insert cursor to the last character in the line.
Ins	ESC [ESC [2~	Switches between input and overwrite modes.
Del	Ctrl-D ESC <BS> ESC [3~	Deletes the character at the current position of the insert cursor or ends the Telnet session if the line is blank.
erase	<BS>	Deletes the next character to the left of the insert cursor.
erase-bol	Ctrl-U	Deletes all characters to the left of the insert cursor.
erase-eol	Ctrl-K	Deletes all characters to the right of the insert cursor.
Tabulator		<p>Completes the input from the current position of the insert cursor for a command or path of the LCOS menu structure:</p> <ol style="list-style-type: none"> 1. If there is only one possibility of completing the command/path, this is accepted by the line. 2. If there is more than one possibility of completing the command/path, this is indicated by an audible sound when pressing the Tab key. Pressing the Tab key again displays a list of all possibilities to complete the entry. Then enter e.g. another letter, to allow unambiguous completion of the input. 3. If there is no possibility of completing the command/path, this is indicated by an audible sound when pressing the Tab key. No further actions are run.

Function keys for the command line

WEBconfig: Setup / Config / Function keys

The function keys enable the user to save frequently used command sequences and to call them easily from the command line. In the appropriate table, commands are assigned to function keys F1 to F12 as they are entered in the command line.

- Key

Name of function key.

Possible values:

- Selection from function keys F1 to F12.

Default:

- F1

- Mapping

Description of the command/shortcut to be run on calling the function key in the command line.

Possible values:

- All commands/shortcuts possible in the command line

Default:

- Blank

Special values:

- The caret symbol ^ is used to represent special control commands with ASCII values below 32.
- ^A stands for Ctrl-A (ASCII 1)
- ^Z stands for Ctrl-Z (ASCII 26)
- ^[stands for Escape (ASCII 27)
- ^^ double caret symbol stands for the caret symbol itself.

❗ If a caret symbol is entered in a dialog field or editor followed directly by another character, the operating system may possibly interpret this sequence as another special character. By entering caret + A the Windows operating system outputs an Â. To enter the caret character itself, enter a space in front of the subsequent characters. Sequence ^A is then formed from caret symbol + space + A.

Tab command when scripting

When working with scripts, the `tab` command enables the desired columns for the subsequent `set` command.

When you perform the configuration with a command line tool, you generally supplement the `set` command with the values for the columns of the table.

For example, you set the values for the performance settings of a WLAN interface as follows:

```
> cd /Setup/Interfaces/WLAN/Performance
> set ?

Possible Entries for columns in Performance:
[1][Ifc]                : WLAN-1 (1)
[5][QoS]                : No (0), Yes (1)
[2][Tx-Bursting]       : 5 chars from: 1234567890

> set WLAN-1 Yes *
```

In this example the Performance table has three columns:

- Ifc, the desired interface
- Enable or disable QoS
- The desired value for TX bursting

With the command `set WLAN-1 Yes *` you enable the QoS function for WLAN-1, and you leave the value for TX bursting unchanged with the asterisk (*).

Working with the `set` command in this way is adequate for tables with only a few columns. However, tables with many columns can pose a major challenge. For example, the table under **Setup > Interfaces > WLAN > Transmission** contains 22 entries:

```
> cd /Setup/Interfaces/WLAN/Transmission
> set ?

Possible Entries for columns in Transmission:
[1][Ifc]                : WLAN-1 (1), WLAN-1-2 (16), WLAN-1-3 (17), WLAN-1-4 (18), WLAN-1-5
(19), WLAN-1-6 (20), WLAN-1-7 (21), WLAN-1-8 (22)
[2][Packet-Size]       : 5 Chars from: 1234567890
[3][Min-Tx-Rate]       : Auto (0), 1M (1), 2M (2), 5.5M (4), 11M (6), 6M (8), 9M (9), 12M
(10), 18M (11), 24M (12), 36M (13), 48M (14), 54M (15)
[9][Max-Tx-Rate]       : Auto (0), 1M (1), 2M (2), 5.5M (4), 11M (6), 6M (8), 9M (9), 12M
(10), 18M (11), 24M (12), 36M (13), 48M (14), 54M (15)
[4][Basic-Rate]        : 1M (1), 2M (2), 5.5M (4), 11M (6), 6M (8), 9M (9), 12M (10), 18M
(11), 24M (12), 36M (13), 48M (14), 54M (15)
[19][EAPOL-Rate]       : Like-Data (0), 1M (1), 2M (2), 5.5M (4), 11M (6), 6M (8), 9M
(9), 12M (10), 18M (11), 24M (12), 36M (13), 48M (14), 54M (15), HT-1-6.5M (28), HT-1-13M
(29), HT-1-19.5M (30),
HT-1-26M (31), HT-1-39M (32), HT-1-52M (33), HT-1-58.5M (34), HT-1-65M (35), HT-2-13M (36),
```

```

HT-2-26M (37), HT-2-39M (38), HT-2-52M (39), HT-2-78M (40), HT-2-104M (41), HT-2-117M
(42), HT-2-130M (43)
[12][Hard-Retries]      : 3 Chars from: 1234567890
[11][Soft-Retries]     : 3 Chars from: 1234567890
[7][11b-Preamble]      : Auto (0), Long (1)
[16][Min-HT-MCS]       : Auto (0), MCS-0/8 (1), MCS-1/9 (2), MCS-2/10 (3), MCS-3/11 (4),
MCS-4/12 (5), MCS-5/13 (6), MCS-6/14 (7), MCS-7/15 (8)
[17][Max-HT-MCS]       : Auto (0), MCS-0/8 (1), MCS-1/9 (2), MCS-2/10 (3), MCS-3/11 (4),
MCS-4/12 (5), MCS-5/13 (6), MCS-6/14 (7), MCS-7/15 (8)
[23][Use-STBC]         : No (0), Yes (1)
[24][Use-LDPC]         : No (0), Yes (1)
[13][Short-Guard-Interval] : Auto (0), No (1)
[18][Min-Spatial-Streams] : Auto (0), One (1), Two (2), Three (3)
[14][Max-Spatial-Streams] : Auto (0), One (1), Two (2), Three (3)
[15][Send-Aggregates]   : No (0), Yes (1)
[22][Receive-Aggregates] : No (0), Yes (1)
[20][Max-Aggr.-Packet-Count] : 2 Chars from: 1234567890
[6][RTS-Threshold]     : 5 Chars from: 1234567890
[10][Min-Frag-Len]     : 5 Chars from: 1234567890
[21][ProbeRsp-Retries] : 3 Chars from: 1234567890

```

Use the following command to set the short guard interval in the transmission table for the WLAN-1-3 interface to No:

```
> set WLAN-1-3 * * * * * * * * * * No
```

 The asterisks for the values after the column for the short guard interval are unnecessary in this example, as the columns will be ignored when setting the new values.

As an alternative to this rather confusing and error-prone notation, you can use the `tab` command as the first step to determine which columns are changed with the subsequent `set` command:

```
> tab Ifc short guard-Interval
> set WLAN-1-3 No
```

The `tab` command also makes it possible to change the order of the columns. The following example for the WLAN-1-3 interface sets the value for the short guard interval to `No` and the value for `Use-LDPC` to `Yes`, although the corresponding columns in the table are displayed in a different order:

```
> tab Ifc short guard-Interval Use-LDPC
> set WLAN-1-3 No Yes
```

 The tables may only contain only a selection of the columns, depending on the hardware model. The `tab` command ignores columns which do not exist for that device. This gives you the option to develop unified scripts for different hardware models. The `tab` instructions in the scripts reference the maximum number of required columns. Depending on the model, the script only performs the `set` instructions for the existing columns.

You can also abbreviate the `tab` command with curly brackets. Use the following command to set the short guard interval in the transmission table for the WLAN-1-3 interface to No:

```
> set WLAN-1-3 {short-guard} No
```

The curly brackets also enable you to change the order of the columns. The following example for the WLAN-1-3 interface sets the value for the short guard interval to `No` and the value for `Use-LDPC` to `Yes`, although the corresponding columns in the table are displayed in a different order:

```
> set WLAN-1-3 {Short-Guard-Interval} No {Use-LDPC} Yes
```

Character set for sending SMS

An SMS can contain a maximum of 160 characters (each of 7 bits = 1,120 bits). These are made up of the GSM basic character set (total of 128 characters) as well as selected characters from the extended GSM character set. Although the extended character set allows the use of some additional characters, these take up twice the space and correspondingly reduce the maximum number of characters that the SMS can contain. Characters not implemented in the SMS module are ignored by the device.

The following characters are defined in the **GSM basic character set**:


@	Δ	SP	0	i	P	ı	p
£	_	!	1	A	Q	a	q
\$	Φ	"	2	B	R	b	r
¥	Γ	#	3	C	S	c	s
è	Λ	α	4	D	T	d	t
é	Ω	%	5	E	U	e	u
ù	Π	&	6	F	V	f	v
ì	Ψ	'	7	G	W	g	w
ò	Σ	(8	H	X	h	x
Ç	Θ)	9	I	Y	i	y
LF	Ξ	*	:	J	Z	j	z
Ø	ESC	+	;	K	Ä	k	ä
ø	Æ	,	<	L	Ö	l	ö
CR	æ	-	=	M	Ñ	m	ñ
Å	ß	.	>	N	Ü	n	ü

The following characters are implemented from the **extended GSM character set**:


{|}[]~^\\€

1.4 Configuration with WEBconfig

Device settings can be configured from any web browser. The WEBconfig configuration software is an integral component of the LANCOM. All you need to work with WEBconfig is a web browser. In a network with a DHCP server, you can access the device simply by entering its IP address into your web browser.

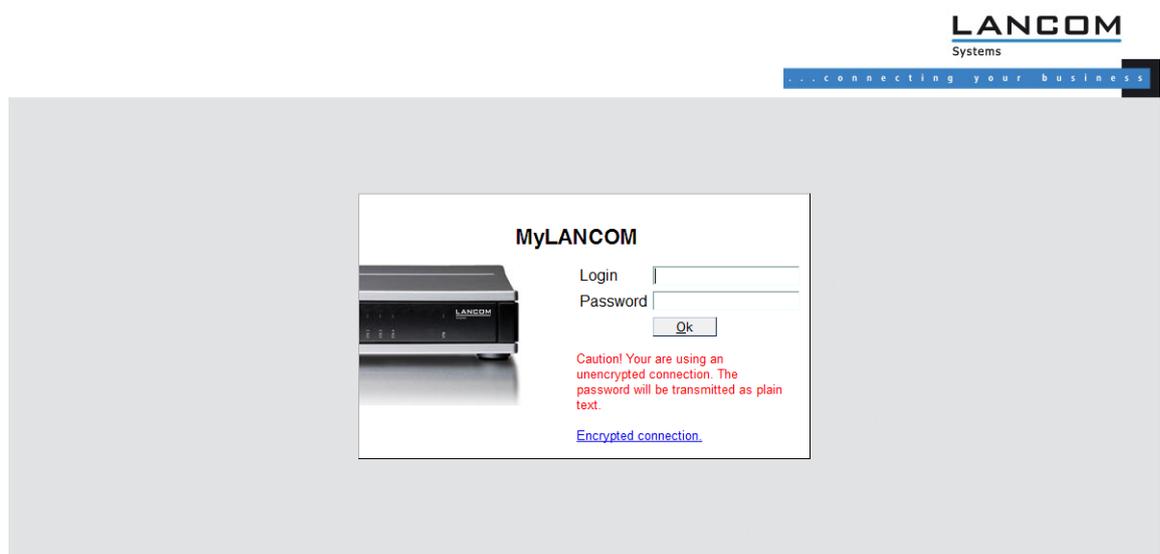

The menu area "LCOS Menu Tree" provides the configuration parameters in the same structure as they are used under Telnet. Clicking the question mark calls up help for each configuration parameter.

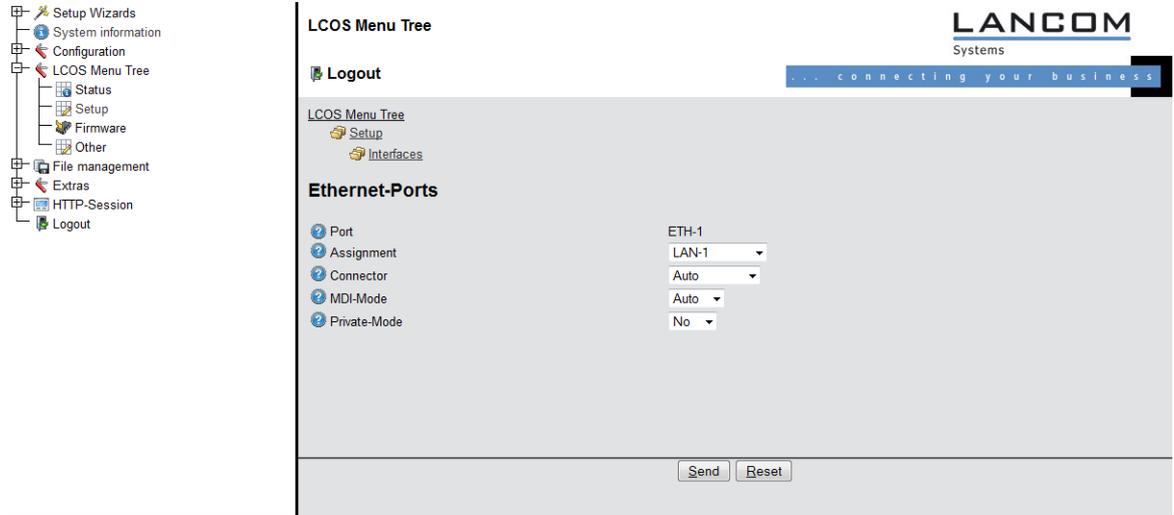

2 Setup

This menu allows you to adjust the settings for this device.

Telnet path: /Setup

2.1 Name

This field can be used to enter a name of your choice for this device.

Telnet path: /Setup

Possible values:

- Max. 16 characters

2.2 WAN

This menu contains the configuration of the Wide Area Network (WAN).

SNMP ID: 2.2

Telnet path: /Setup

2.2.2 Dialup peers

Here you configure the ISDN remote sites that your router is to connect to and exchange data with.

Telnet path: /Setup/WAN

 If two remote-site lists contain identical names for remote sites (e.g. DSL broadband remote sites and Dialup peers), the LANCOM automatically takes the "fastest" interface when establishing the connection. The other interface is available for backup purposes. If the list does not specify DSL broadband remote sites, access concentrators or services, then the router connects to the first AC that responds to the request over the exchange. For an existing DSLoL interface, the same entries apply as for a DSL interface. This information is entered into the list of DSL broadband remote sites.

2.2.2.1 Peer

Enter the name of the remote site here.

Telnet path: /Setup/WAN/Dialup-Peers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.2.2 Dialup remote

A telephone number is only required if the remote is to be called. The field can be left empty if calls are to be received only. Several numbers for the same remote can be entered in the round-robin list.

Telnet path: /Setup/WAN/Dialup-Peers

Possible values:

- Max. 31 characters

Default: Blank

2.2.2.3 B1 DT

The connection is terminated if it remains unused for the time set here.

Telnet path: /Setup/WAN/Dialup-Peers

Possible values:

- 0 to 9999

Default: 0

2.2.2.4 B2 DT

Hold time for bundling: When channels are bundled, the second B channel will be terminated if it is not used for the time entered here.

Telnet path: /Setup/WAN/Dialup-Peers

Possible values:

- 0 to 9999

Default: 0

2.2.2.5 WAN layer

From the layer list, select an entry that is to be used for this remote site.

The layer list already contains a number of entries with popular standard settings. For example, you should use the PPPHDL entry to establish a PPP connection to an Internet provider.

Telnet path: /Setup/WAN/Dialup-Peers

Possible values:

- Select from the list of defined layers.

Default: Blank

2.2.2.6 Callback

With callback activated, an incoming call from this remote site will not be answered, but it will be called back instead.

This is useful if, for example, telephone fees are to be avoided at the remote site.

Activate a check of the name if you want to be sure that the remote site is authenticated before the callback.

Select the fast option if the callback is to follow within seconds. The remote site must also support this method and the expect-callback option must be activated. Additionally, the remote site must be entered into the number list.

Telnet path: /Setup/WAN/Dialup-Peers

Possible values:

- No: There is no return call.
- Auto: If the remote site is found in the numbers list, this number is called back. Initially the call is rejected and, as soon as the channel is free again, a return call is made (last approx. 8 seconds). If the remote site is not found in the numbers list, the DEFAULT remote site is initially taken and the return call is negotiated during the protocol negotiation. The call is charged with one unit.

- Name: Before a return call is made, the protocol is always negotiated even if the remote site is found in the numbers list (e.g. for Windows computers that dial-in to the device). Small call charges are incurred for this.
- Fast: If the remote site is found in the numbers list, the return call is made quickly, i.e. the LANCOM sends a special signal to the remote site and it calls back as soon as the channel is free again. The connection is established within about 2 seconds. If the remote site does not cancel the call immediately after the signal, then two seconds later it reverts to the normal return call procedure (lasts about 8 seconds). This procedure is available with DSS1 connections only.
- Looser: Use the "looser" option if a return call from the remote site is expected. This setting fulfills two jobs in one. Firstly it ensures that a connection it established itself terminates if a call arrives from the remote site that was just called, and secondly this setting activates the function that reacts to the procedure for fast return calls. This means that to use fast return calls, the caller must be in 'Looser' mode and, at the called party, the return call must be set to 'LANCOM Systems'.

Default: No

 The setting 'Name' offers the highest security if there is an entry in the numbers list and in the PPP list. The setting 'LANCOM' enables the fastest method of call-back between two routers from LANCOM Systems.

 For Windows remote sites, ensure that you select the setting 'Name'.

2.2.3 RoundRobin

If a remote site can be reached at various call numbers. you can enter these numbers into this list.

Telnet path: /Setup/WAN

2.2.3.1 Peer

Here you select the name of a remote site from the list of remote sites.

Telnet path: /Setup/WAN/RoundRobin

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.3.2 Round robin

Specify here the other call numbers for this peer. Separate the individual call numbers with hyphens.

Telnet path: /Setup/WAN/RoundRobin

2.2.3.3 Head

Specify here whether the next connection is to be established to the number last reached successfully, or always to the first number.

Telnet path: /Setup/WAN/RoundRobin

Possible values:

- First
- Last

Default: Last

2.2.4 Layer

Here you collect individual protocols into 'layers' that are to be used to transfer data to other routers.

Telnet path: /Setup/WAN

2.2.4.1 WAN layer

This name is used for selecting the layer in the list of remote stations.

Telnet path: /Setup/WAN/Layer

Possible values:

- Max. 9 characters

Default: Blank

2.2.4.2 Encapsulation

Additional encapsulations can be set for data packets.

Telnet path: /Setup/WAN/Layer

Possible values:

- Transparent: No additional encapsulation
- Ethernet: Encapsulation as Ethernet frames.
- LLC-MUX: Multiplexing via ATM with LLC/SNAP encapsulation as per RFC 2684. Several protocols can be transmitted over the same VC (virtual channel).
- VC-MUX: Multiplexing via ATM by establishing additional VCs as per RFC 2684.

Default: ETHER

2.2.4.3 Layer 3

The following options are available for the network layer:

Telnet path: /Setup/WAN/Layer

Possible values:

- Transparent: No additional header is inserted.
- PPP: The connection is established according to the PPP protocol (in synchronous mode, i.e. bit oriented).
The configuration data are taken from the PPP table.
- AsyncPPP: Like 'PPP', but here the asynchronous mode is used instead. PPP works with characters.
- ... with script All options can be executed with their own script. The script is specified in the script list.
- DHCP: Allocation of network parameters by DHCP.

Default: PPP

2.2.4.4 Layer 2

This field configures the upper sublayer of the data link layer.

Telnet path: /Setup/WAN/Layer

Possible values:

- Transparent: No additional header is inserted.
- X.75LAPB: Connections are established with X.75 and LAPM (Link Access Procedure Balanced).
- PPPoE: PPP information is encapsulated in Ethernet frames

Default: X.75LAPB

2.2.4.5 Layer 2 options

Here you can activate the compression of transmitted data and channel bundling. These options are only come into effect if they are supported by the interfaces used and by the selected Layer 2 and Layer 3 protocols. For further information please refer to section 'ISDN channel bundling with MLPPP'

Telnet path: /Setup/WAN/Layer

Possible values:

- None
- Compression
- Channel bundling
- Compr. + bundling

Default: None

2.2.4.6 Layer 1

In this field the lower section of the security layer (Data Link Layer) is configured.

Telnet path: /Setup/WAN/Layer

Possible values:

- AAL-5: ATM adaptation layer
- ETH: Transparent Ethernet as per IEEE 802.3.
- HDLC64K: Securing and synchronization of data transmission as per HDLC (in 7 or 8-bit mode).
- HDLC56K: Securing and synchronization of data transmission as per HDLC (in 7 or 8-bit mode).
- V110_9K6: Transmission as per V.110 at max. 9,600 bps, e.g. for dialing in by HSCSD mobile phone
- V110_19K2: Transmission as per V.110 at max. 19,200 bps
- V110_38K4: Transmission as per V.110 at max. 38,400 bps
- Serial: For connections by analog modem or cellular modem with AT interface. The modem can be connected to the device at its serial interface (outband) or to a USB interface by means of a USB-to-serial adapter. Some models feature a CardBus slot that accommodates suitable cards. Some models have an internal integrated modem.
- Modem: For connections via the internal modem emulation when operating as a V.90 host modem over ISDN. Operation of the internal modem may require an additional software option for the device.
- VDSL: VDSL2 data transmission as per ITU G.993.2

Default: HDLC64K

 The range of available values depends on the hardware model at hand.

2.2.5 PPP

In order for the router to be able to establish PPP or PPTP connections, you must enter the corresponding parameters (such as name and password) for each remote site into this list.

Telnet path: /Setup/WAN

2.2.5.1 Peer

Enter the name of the remote site here. This name has to agree with the entry in the list of peers/remote sites.

You can also select a name directly from the list of peers / remote sites.

Telnet path: /Setup/WAN/PPP

Possible values:

- Select from the list of defined peers.

Default: Blank

Special values: DEFAULT: During PPP negotiations, a remote site dialing-in to the LANCOM logs on with its name. The LANCOM can use the name to retrieve the permitted values for authentication from the PPP table. At the start of the negotiation, the remote site occasionally cannot be identified by call number (ISDN dial-in), IP address (PPTP dial-in) or MAC address (PPPoE dial-in). It is thus not possible to determine the permitted protocols in this first step. In these cases, authentication is performed first with those protocols enabled for the remote site with name DEFAULT. If the remote site is authenticated successfully with these settings, the protocols permitted for the remote site can also be determined.

If authentication uses a protocol entered under DEFAULT, but which is not permitted for the remote site, then authentication is repeated with the permitted protocols.

2.2.5.2 Authent. request

Method for securing the PPP connection that the router expects from the remote site.

Telnet path: /Setup/WAN/PPP

Possible values:

- PAP
- CHAP
- MS-CHAP
- MS-CHAPv2
- (Multiple entries can be selected)

Default: No entry

2.2.5.3 Password

Password transferred from your router to the remote site (if required). A * in the list indicates that an entry exists.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 32 characters

Default: Blank

2.2.5.4 Time

Time between two tests of the connection with LCP (see also LCP). This time is entered in multiples of 10 seconds (e.g. 2 for 20 seconds). The value is also the time between two tests of the connection as per CHAP. This time is entered in minutes. For remote sites running the Windows operating system the time must be set to 0.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 10 characters

Default: 0

2.2.5.5 Try

Number of retries for the test attempt. Multiple retries reduces the impact from temporary line faults. The connection is only terminated if all tries prove unsuccessful. The time between two retries is one tenth (1/10) of the time between two tests. This value is also the maximum number of "Configure Requests" that the router sends before assuming a line fault and tearing down the connection itself.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 10 characters

Default: 5

2.2.5.6 Username

Name with which your router logs in to the remote site. If there is no entry here, your router's device name is used.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 64 characters

2.2.5.7 Conf

This parameter affects the mode of operation of the PPP. The parameter is defined in RFC 1661 and is not described in further detail here. If you are unable to establish PPP connections, you can refer to this

RFC in conjunction with the PPP statistics of the router for information on fault rectification. The default settings are generally sufficient. This parameter can only be changed with LANconfig, SNMP or TFTP.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 10 characters

Default: 10

2.2.5.8 Fail

This parameter affects the mode of operation of the PPP. The parameter is defined in RFC 1661 and is not described in further detail here. If you are unable to establish PPP connections, this RFC in conjunction with the PPP statistics of the router provides information on fault rectification. The default settings are generally sufficient. This parameter can only be changed with LANconfig, SNMP or TFTP.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 10 numerical characters

Default: 5

2.2.5.9 Term

This parameter affects the mode of operation of the PPP. The parameter is defined in RFC 1661 and is not described in further detail here. If you are unable to establish PPP connections, this RFC in conjunction with the PPP statistics of the router provides information. The default settings are generally sufficient. This parameter can only be changed with LANconfig, SNMP or TFTP.

Telnet path: /Setup/WAN/PPP

Possible values:

- Max. 10 numerical characters

Default: 2

2.2.5.10 Rights

Specifies the protocols that can be routed to this remote site.

Telnet path: /Setup/WAN/PPP

Possible values:

- IP
- IP+NBT
- IPX
- IP+IPX
- IP+NBT+IPX

Default: IP

2.2.5.11 Authent. response

Method for securing the PPP connection that the router offers when dialing into a remote site.

Telnet path: /Setup/WAN/PPP

Possible values:

- PAP
- CHAP
- MS-CHAP
- MS-CHAPv2 (multiple entries can be selected)

Default: PAP, CHAP, MS-CHAP, MS-CHAPv2

 The LANCOM only uses the protocols enabled here—other negotiations with the remote site are not possible.

2.2.6 Incoming calling numbers

Based on the telephone numbers in this list, your router can identify which remote site is making the incoming call.

Telnet path: /Setup/WAN

2.2.6.1 Dialup remote

Here you enter the call number that is transmitted when you are called from the remote site.

Generally this is the number of the remote site combined with the corresponding local area code with the leading zero, e.g. 0221445566.

For remote sites in other countries, you must add the corresponding country code with two leading zeros, e.g. 0049221445566.

Telnet path: /Setup/WAN/Incoming-Calling-Numbers

2.2.6.2 Peer

Enter the name of the relevant remote site.

Once a router has identified a remote site by means of its call number, the list of peers/remote sites is searched for an entry with that name and the associated settings are used for the connection.

Telnet path: /Setup/WAN/Incoming-Calling-Numbers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.8 Scripts

If a login script has to be processed when connecting to a remote site, enter the script here.

Telnet path: /Setup/WAN

2.2.8.1 Peer

Enter the name of the remote site here. The remote site should already have been entered into the list of peers / remote sites.

You can also select an entry directly from the list of peers / remote sites.

Telnet path: /Setup/WAN/Scripts

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.8.2 Scripts

Specify here the login script for this peer.

In order for this script to be used, a layer with the appropriate protocol for this peer must be set up in the list of peers / remote sites.

Telnet path: /Setup/WAN/Scripts

2.2.9 Protect

Here you set the conditions to be satisfied in order for the device to accept incoming calls.

Telnet path: /Setup/WAN/Protect

Possible values:

- None: The device answers any call.
- Number: The device will receive a call only if the caller's number is transmitted and if that number is in the number list.
- Screened: The machine will only accept a call if the caller is in the number list, the caller's number is transmitted, and if the number has been checked by the exchange.

Default: None

2.2.10 Callback attempts

Set the number of callback attempts for automatic callback connections.

Telnet path: /Setup/WAN

Possible values:

- 0 to 9 attempts

Default: 3

2.2.11 Router interface

Enter here further settings for each WAN interface used by the router, for example the calling numbers to be used.

Telnet path: /Setup/WAN

2.2.11.1 Ifc

WAN interface to which the settings in this entry apply.

Telnet path: /Setup/WAN/Router-Interface

Possible values:

- Select from the list of available WAN interfaces, e.g. S0-1, S0-2 or EXT.

2.2.11.2 MSN/EAZ

Specify here for this interface the call numbers for which the router should accept incoming calls. As a rule these numbers are the call numbers of the ISDN interface (MSN) without an area code, or the internal call number (internal MSN) behind a PBX, as appropriate. Multiple number can be entered by separating them with a semi-colon. The first call number is used for outgoing calls.

Telnet path: /Setup/WAN/Router-Interface

Possible values:

- Max. 30 characters

Default: Blank

 If you specify any number outside of your MSN number pool, the router will accept no calls at all.

 If you do not enter a number here, the router will accept all calls.

2.2.11.3 CLIP

Activate this option if a peer called by the router should not see your call number.

Telnet path: /Setup/WAN/Router-Interface

Possible values:

- On
- Off

Default: Off

 This function must be supported by your network operator.

2.2.11.8 Y Connection

In the router interface list, the entry for the Y connection determines what happens when channel bundling is in operation and a request for a second connection arrives.

Y connection on: The router interrupts channel bundling to establish the second connection to the other remote device. If the second channel becomes free again, it is automatically used for channel bundling again (always for static bundling, when required for dynamic bundling).

Y connection off: The router maintains the existing bundled connection; the second connection must wait.

Telnet path: /Setup/WAN/Router-Interface

Possible values:

- On
- Off

Default: On

 Please note that channel bundling incurs costs for two connections. No further connections can be made over LANCAPI! Only use channel bundling when the full transfer speed is required and used.

2.2.11.9 Accept calls

Specify here whether calls to this ISDN interface should be answered or not.

Telnet path: /Setup/WAN/Router-Interface

Possible values:

- All
- None

Default: All

 If you have specified an MSN for device configuration (Management / Admin), all calls with this MSN will be accepted, whatever you select here.

2.2.13 Manual dialing

This menu contains the settings for manual dialing.

Telnet path: /Setup/WAN

2.2.13.1 Connect

Establishes a connection to the remote site which is entered as a parameter.

Telnet path: /Setup/WAN/Manual-Dialing

Possible values:

- Parameter: Name of a remote site defined in the device.

2.2.13.2 Disconnect

Terminates a connection to the remote site which is entered as a parameter.

Telnet path: /Setup/WAN/Manual-Dialing

Possible values:

- Parameter: Name of a remote site defined in the device.

2.2.18 Backup delay seconds

Wait time before establishing a backup connection in case a remote site should fail.

Telnet path: /Setup/WAN

Possible values:

- Max. 4 characters

Default: 30

2.2.19 DSL broadband peers

Here you configure the DSL broadband remote sites that your router is to connect to and exchange data with.

Telnet path: /Setup/WAN

2.2.19.1 Peer

Enter the name of the remote site here.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.19.2 Short holding time

This value specifies the number of seconds that pass before a connection to this remote site is terminated if no data is being transferred.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 10 characters

Default: 0

Special values: 9999: With the value 9999, connections are established immediately and without a time limit.

2.2.19.3 AC name

The parameters for access concentrator and service are used to explicitly identify the Internet provider.

These parameters are communicated to you by your Internet provider.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 64 characters

Default: Blank

2.2.19.10 Service name

The parameters for access concentrator and service are used to explicitly identify the Internet provider.

These parameters are communicated to you by your Internet provider.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 32 characters

Default: Blank

2.2.19.5 WAN layer

Select the communication layer to be used for this connection. How to configure this layer is described in the following section.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 9 characters

Default: Blank

2.2.19.9 AC name

Parameters for the access concentrator and the service uniquely identify the Internet provider. The Internet provider can inform you of these parameters.

Telnet path: /Setup/WAN/DSL-Broadband-Peers/AC-Name

Possible values:

- Max. 64 numerical characters

Default: Blank

2.2.19.10 Service name

The service parameters help you to specify your Internet provider. Contact your provider to obtain these parameters.

Telnet path: /Setup/WAN/DSL-Broadband-Peers/Service-Name

Possible values:

- Max. 32 numerical characters

Default: Blank

2.2.19.11 ATM-VPI

Enter the VPI (Virtual Path Identifier) and the VCI (Virtual Channel Identifier) for your ADSL connection here.

These values are communicated to you by your ADSL network operator. Typical values for VPI/VCI are, for example: 0/35, 0/38, 1/32, 8/35, 8/48.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 10 characters

Default: 0

2.2.19.12 ATM-VCI

Enter the VPI (Virtual Path Identifier) and the VCI (Virtual Channel Identifier) for your ADSL connection here.

These values are communicated to you by your ADSL network operator. Typical values for VPI/VCI are, for example: 0/35, 0/38, 1/32, 8/35, 8/48.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 10 characters

Default: 0

2.2.19.13 User def. MAC

Enter the MAC address of your choice is a user-defined address is required.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 12 characters

Default: 0

2.2.19.14 DSL interface(s)

Enter the port number of the DSL port here. It is possible to make multiple entries. Separate the list entries either with commas (1,2,3,4) or divide it into ranges (1-4). Activate channel bundling in the relevant layer to bundle the DSL lines.

Telnet path: /Setup/WAN/DSL-Broadband-Peers/DSL-Ifc(s)

Possible values:

- Maximum 8 alphanumerical characters

Default: Blank

2.2.19.15 MAC type

Here you select the MAC addresses which are to be used. If a certain MAC address (user defined) is to be defined for the remote site, this can be entered into the following field.

If local is selected, the device MAC addresses are used to form further virtual addresses for each WAN connection.

If global is selected, the device MAC address is used for all connections.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Globally
- Local
- User defined

Default: Local

2.2.19.16 VLAN-ID

Here you enter the specific ID of the VLAN to identify it explicitly on the DSL connection.

Telnet path: /Setup/WAN/DSL-Broadband-Peers

Possible values:

- Max. 10 characters

Default: 0

2.2.20 IP list

If certain remote sites do not automatically transmit the IP parameters needed for a connection, then enter these values here.

Telnet path: /Setup/WAN

2.2.20.1 Peer

Specify here a NetBIOS name server to be used in case the first NBNS server fails.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.20.2 IP address

If your Internet provider has supplied you with a fixed, publicly accessible IP address, you can enter this here. Otherwise leave this field empty.

If you use a private address range in your local network and the device is to be assigned with one of these addresses, do not enter the address here but under intranet IP address instead.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.3 IP netmask

Specify here the netmask associated with the address above.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.4 Gateway

Enter the address of the standard gateway here.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.5 DNS default

Specify here the address of a name server to which DNS requests are to be forwarded.

This field can be left empty if you have an Internet provider or other remote site that automatically assigns a name server to the router when it logs in.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.6 DNS backup

Specify here a name server to be used in case the first DNS server fails.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.7 NBNS default

Specify here the address of a NetBIOS name server to which NBNS requests are to be forwarded.

This field can be left empty if you have an Internet provider or other remote site that automatically allocates a NetBIOS name server to the router when it logs in.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.8 NBNS backup

IP address of the NetBIOS name server for the forwarding of NetBIOS requests. Default: 0.0.0.0 The IP address of the LANCOM wireless in this network is communicated as the NBNS server if the NetBIOS proxy is activated for this network. If the NetBIOS proxy is not active for this network, then the IP address in the global TCP/IP settings is communicated as the NBNS server.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.20.9 Masquerading IP address

The masquerading IP address is optional. This is used as an alternative address which masks the actual address assigned when the connection was established.

If the masquerading IP address is not set, then the address assigned when the connection was established is used for masquerading.

Telnet path: /Setup/WAN/IP-List

Possible values:

- Valid IP address.

Default: 00.0.0



This setting is necessary when a private address is assigned during the PPP negotiation (172.16.x.x). Normal masquerading is thus impossible as this type of address is filtered in the Internet.

2.2.21 PPTP peers

This table displays and adds the PPTP remote sites.

Telnet path: /Setup/WAN

2.2.21.1 Peer

This name from the list of DSL broadband peers.

Telnet path: /Setup/WAN/PPTP-Peers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.21.3 Port

IP port used for running the PPTP protocol. According to the protocol standard, port '1,723' should always be specified.

Telnet path: /Setup/WAN/PPTP-Peers

Possible values:

- Max. 10 characters

Default: 0

2.2.21.4 SH time

This value specifies the number of seconds that pass before a connection to this remote site is terminated if no data is being transferred.

Telnet path: /Setup/WAN/PPTP-Peers

Possible values:

- Max. 10 characters

Default: 0

Special values: With the value 9999, connections are established immediately and without a time limit.

2.2.21.5 Routing tag

Routing tag for this entry.

Telnet path: /Setup/WAN/PPTP-Peers

Possible values:

- Max. 10 characters

Default: 0

2.2.21.6 IP address

Specify the IP address of the PPTP remote station here.

Telnet path: /Setup/WAN/PPTP-Peers/IP-Address

Possible values:

- Maximum 63 alphanumerical characters

Default: Blank

2.2.21.7 Encryption

Enter the key length here.

SNMP ID:

2.2.21.7

Telnet path:

Setup > WAN > PPTP-peers

Possible values:

Off

40 bit

56 bit

128 bit

Default:

Off

2.2.22 RADIUS

This menu contains the settings for the RADIUS server.

Telnet path: /Setup/WAN

2.2.22.1 Operating

Switches RADIUS authentication on/off.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Yes
- No

Default: No

2.2.22.2 Server address

Specify here the IP address of your RADIUS server from which users are managed centrally.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.2.22.3 Authentication port

The TCP/UDP port over which the external RADIUS server can be reached.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Max. 10 characters

Default: 1812

2.2.22.4 Secret

Specify here the key (shared secret) of your RADIUS server from which users are managed centrally.

Telnet path: /Setup/WAN/RADIUS

Default: Blank

2.2.22.5 PPP operation

When PPP remote sites dial in, the internal user authentication data from the PPP list, or alternatively an external RADIUS server, can be used for authentication.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Yes: Enables the use of an external RADIUS server for authentication of PPP remote sites. A matching entry in the PPP list takes priority however.
- No: No external RADIUS server is used for authentication of PPP remote sites.
- Exclusive: Enables the use of an external RADIUS server as the only possibility for authenticating PPP remote sites. The PPP list is ignored.

Default: No



If you switch the PPP mode to 'Exclusive', the internal user authentication data is ignored, otherwise these have priority.

2.2.22.6 CLIP operation

When remote sites dial in, the internal call number list, or alternatively an external RADIUS server, can be used for authentication.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Yes: Enables the use of an external RADIUS server for the authentication of dial-in remote sites. A matching entry in the call number list takes priority however.
- No: No external RADIUS server is used for authentication of dial-in remote sites.
- Exclusive: Enables the use of an external RADIUS server as the only possibility for authenticating dial-in remote sites. The call number list is ignored.

Default: No

 The dial-in remote sites must be configured in the RADIUS server such that the name of the entry corresponds to the call number of the remote site dialing in.

2.2.22.7 CLIP password

Password for the log-in of dial-in remote sites to the external RADIUS server.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Max. 31 characters

Default: Blank

 The dial-in remote sites must be configured in the RADIUS server such that all the entries for all call numbers use the password configured here.

2.2.22.8 Loopback addr.

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Various forms of entry are accepted:

Name of the IP networks whose addresses are to be used.

"INT" for the address of the first intranet.

"DMZ" for the address of the first DMZ (Note: If there is an interface named "DMZ", its address will be taken).

LBO ... LBF for the 16 loopback addresses.

Furthermore, any IP address can be entered in the form x.x.x.x.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

 If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used.

2.2.22.9 Protocol

RADIUS over UDP or RADSEC over TCP with TLS can be used as the transmission protocol for authentication on an external server.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- RADIUS
- RADSEC

Default: RADIUS

2.2.22.10 Authentication protocols

Method for securing the PPP connection permitted by the external RADIUS server.

Do not set a method here if the remote site is an Internet provider that your router is to call.

Telnet path: /Setup/WAN/RADIUS

Possible values:

- MS-CHAPv2
- MS-CHAP
- CHAP
- PAP

Default: MS-CHAPv2, MS-CHAP, CHAP, PAP

 If all methods are selected, the next available method of authentication is used if the previous one failed. If none of the methods are selected, authentication is not requested from the remote site.

2.2.23 Polling table

In this table you can specify up to 4 IP addresses for non-PPP-based remote sites which are to be accessed for connection monitoring purposes.

SNMP ID: 2.2.23

Telnet path: /Setup/WAN

2.2.21.1 Peer

Name of the remote site which is to be checked with this entry.

Telnet path: /Setup/WAN/Polling-Table

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.23.2 IP address-1

IP addresses for targeting with ICMP requests to check the remote site.

Telnet path: /Setup/WAN/Polling-Table

Possible values:

- Valid IP address.

Default: 0.0.0.0**2.2.23.3 Time**

Enter the ping interval in seconds here.

Telnet path: /Setup/WAN/Polling-Table**Possible values:**

- Max. 10 characters

Default: 0**Special values:** If you enter 0 here and for the re-tries, the default values will be used.**2.2.23.4 Try**

If no reply to a ping is received then the remote site will be checked in shorter intervals. The device then tries to reach the remote site once a second. The number of retries defines how many times these attempts are repeated. If the value "0" is entered, then the standard value of 5 retries applies.

Telnet path: /Setup/WAN/Polling-Table**Possible values:**

- 0 to 255
- 0: Use default
- Default: 5 retries

Default: 0**2.2.23.5 IP address-2**

IP addresses for targeting with ICMP requests to check the remote site.

Telnet path: /Setup/WAN/Polling-Table**Possible values:**

- Valid IP address.

Default: 0.0.0.0**2.2.23.6 IP address-3**

IP addresses for targeting with ICMP requests to check the remote site.

Telnet path: /Setup/WAN/Polling-Table**Possible values:**

- Valid IP address.

Default: 0.0.0.0**2.2.23.7 IP address-4**

IP addresses for targeting with ICMP requests to check the remote site.

Telnet path: /Setup/WAN/Polling-Table**Possible values:**

- Valid IP address.

Default: 0.0.0.0

2.2.22.8 Loopback addr.

Sender address sent with the ping; this is also the destination for the answering ping. The following can be entered as the loopback address: Name of a defined IP network. 'INT' for the IP address in the first network with the setting 'Intranet'. 'DMZ' for the IP address in the first network with the setting 'DMZ'.

Telnet path: /Setup/WAN/Polling-Table

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank



If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used. Name of a loopback address. Any other IP address.

2.2.23.9 Type

This setting influences the behavior of the polling.

SNMP ID:

2.2.23.9

Telnet path:

Setup > WAN > Polling-Table

Possible values:

- Forced** The device polls in the given interval. This is the default behavior of LCOS versions <8.00, which did not yet have this parameter.
- Auto:** The device only polls actively if it receives no data. ICMP packets received are not considered to be data and are still ignored.

Default:

Forced

2.2.24 Backup peers

This table is used to specify a list of possible backup connections for each remote site.

Telnet path: /Setup/WAN

2.2.24.1 Peer

Here you select the name of a remote site from the list of remote sites.

Telnet path: /Setup/WAN/Backup-Peers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.24.2 Alternative peers

Specify here one or more remote sites for backup connections.

Telnet path: /Setup/WAN/Backup-Peers

Possible values:

- List of backup peers.

Default: Blank

2.2.24.3 Head

Specify here whether the next connection is to be established to the number last reached successfully, or always to the first number.

Telnet path: /Setup/WAN/Backup-Peers

Possible values:

- Last
- First

Default: Last

2.2.25 Action table

With the action table you can define actions that are executed when the status of a WAN connection changes.

Telnet path: /Setup/WAN

2.2.25.1 Index

The index gives the position of the entry in the table, and thus it must be unique. Entries in the action table are executed consecutively as soon as there is a corresponding change in status of the WAN connection. The entry in the field "Check for" can be used to skip lines depending on the result of the action. The index sets the position of the entries in the table (in ascending order) and thus significantly influences the behavior of actions when the option "Check for" is used. The index can also be used to actuate an entry in the action table via a cron job, for example to activate or deactivate an entry at certain times.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Max. 10 characters

Default: 0

2.2.25.2 Host name

Action name. This name can be referenced in the fields "Action" and "Check for" with the place holder %h (host name).

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Max. 64 characters

Default: Blank

2.2.25.3 Peer

A change in status of this remote site triggers the action defined in this entry.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.25.4 Lock time

Prevents this action from being repeated within the period defined here in seconds.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Max. 10 characters

Default: 0

2.2.25.5 Condition

The action is triggered when the change in WAN-connection status set here occurs.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Establish: The action is triggered when the connection has been established successfully.
- Disconnect: The action is triggered when the device itself terminates the connection (e.g. by manual disconnection or when the hold time expires).
- End: The action is triggered on disconnection (whatever the reason for this).
- Failure: This action is triggered on disconnects that were not initiated or expected by the device.
- Establish failure: This action is triggered when a connection establishment was started but not successfully concluded.

Default: Establish

2.2.25.6 Action

Here you describe the action that should be executed when there is a change in the status of the WAN connection. Only one action can be triggered per entry.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- exec: – This prefix initiates any command as it would be entered at the Telnet console. For example, the action “exec:do /o/m/d” terminates all current connections.
- dnscheck: – This prefix initiates a DSN name resolution. For example, the action “dnscheck:myserver.dyndns.org” requests the IP address of the indicated server.
- http: – This prefix initiates an HTTP-get request. For example, you can use the following action to execute a DynDNS update at dyndns.org:
http://username:password@members.dyndns.org/nic/update?system=dyndns&hostname=%h&myip=%a
- The meaning of the place holders %h and %a is described below.
- https: – Like “http:”, except that the connection is encrypted.
- gnudip: – This prefix initiates a request to the corresponding DynDNS server via the GnuDIP protocol. For example, you can use the following action to use the the GnuDIP protocol to execute a DynDNS update at a DynDNS provider:
gnudip://gnudipsrv?method=tcp&user=myserver&domn=mydomain.org
&pass=password&reqc=0&addr=%a
- The line-break is for legibility only and is not to be entered into the action. The meaning of the place holder %a is described below.

- **repeat:** – This prefix together with a time in seconds repeats all actions with the condition "Establish" as soon as the connection has been established. For example, the action "repeat 300" causes all of the establish actions to be repeated every 5 minutes.
- **mailto:** – This prefix causes an e-mail to be sent. For example, you can use the following action to send an e-mail to the system administrator when a connection is terminated:
- **mailto:admin@mycompany.com?subject=VPN connection broken at %t?body=VPN connection to Subsidiary 1 was broken.**
- **Optional variables for the actions:**
 - **%a** – WAN IP address of the WAN connection relating to the action.
 - **%H** – Host name of the WAN connection relating to the action.
 - **%h** – Like %h, except the hostname is in small letters
 - **%c** – Connection name of the WAN connection relating to the action.
 - **%n** – Device name
 - **%s** – Device serial number
 - **%m** – Device MAC address (as in Sysinfo)
 - **%t** – Time and date in the format YYYY-MM-DD hh:mm:ss
 - **%e** – Description of the error that was reported when connection establishment failed.
 - The result of the actions can be evaluated in the "Check for" field.

Default: Blank

2.2.25.7 Check for

The result of the action can be evaluated here to determine the number of lines to be skipped in the processing of the action table.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- **contains=** – This prefix checks if the result of the action contains the defined string.
- **isequal=** – This prefix checks if the result of the action is exactly equal to the defined string.
- **?skipiftrue=** – This suffix skips the defined number of lines in the list of actions if the result of the "contains" or "isequal" query is TRUE.
- **?skipiffalse=** – This suffix skips the defined number of lines in the list of actions if the result of the "contains" or "isequal" query is FALSE.
- **Optional variables for the actions:**
- As with the definition of the action.

Default: Blank

2.2.25.8 Operating

Activates or deactivates this entry.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Yes
- No

Default: Yes

2.2.25.9 Owner

Owner of the action. The exec actions are executed with the rights of the owner. If the owner does not have the necessary rights (e.g. administrators with write access) then the action will not be carried out.

Telnet path: /Setup/WAN/Action-Table

Possible values:

- Select from the administrators defined in the device.

Default: root

2.2.25.10 Routing tag

A routing tag is used to map actions in the action table to a specific WAN connection. The LANCOM performs the action over the connection indicated by this routing tag.

SNMP ID:

2.2.25.10

Telnet path:

Setup > WAN > Action-Table

Possible values:

Max. 5 characters from 0123456789

Default:

0

2.2.26 MTU list

This table allows you to set alternative MTU (Maximum Transfer Unit) values to those automatically negotiated by default.

Telnet path: /Setup/WAN

2.2.26.1 Peer

Enter the name of the remote site here. This name has to agree with the entry in the list of peers/remote sites.

You can also select a name directly from the list of peers / remote sites.

Telnet path: /Setup/WAN/MTU-List

Possible values:

- Select from the list of defined peers.

Default: Blank

2.2.26.2 MTU

Here you can manually define a maximum MTU per connection in addition to the automatic MTU settings.

Enter the maximum IP packet length/size in bytes. Smaller values lead to greater fragmentation of the payload data.

Telnet path: /Setup/WAN/MTU-List

Possible values:

- Max. 4 characters

Default: 0

2.2.30 Additional PPTP gateways

Here you can define up to 32 additional gateways to ensure the availability of PPTP peers. Each of the PPTP peers has the possibility of using up to 33 gateways. The additional gateways can be defined in a supplementary list.

Telnet path: /Setup/WAN

2.2.30.1 Peer

Here you select the PPTP remote site that this entry applies to.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Select from the list of defined PPTP remote stations.

Default:

- Blank

2.2.30.2 Begin with

Here you select the order in which the entries are to be tried.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Last used: Selects the entry for the connection which was successfully used most recently.
- First: Selects the first of the configured remote sites.
- Random: Selects one of the configured remote sites at random. This setting provides an effective measure for load balancing between the gateways at the headquarters.

Default:

- Last used

2.2.30.3 Gateway-1

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default:

- Blank

2.2.30.4 Rtg-Tag-1

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default:

0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.5 Gateway-2

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default:

- Blank

2.2.30.6 Rtg-Tag-2

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default:

0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.7 Gateway-3

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.8 Rtg-Tag-3

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.9 Gateway-4

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.10 Rtg tag 4

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.11 Gateway 5

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.12 Rtg-Tag-5

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.13 Gateway 6

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.14 Rtg-Tag-6

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.15 Gateway-7

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.16 Rtg-Tag-7**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.17 Gateway-8

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.18 Rtg-Tag-8**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.19 Gateway-9

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.20 Rtg-Tag-9

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.21 Gateway-10

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.22 Rtg-Tag-10

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.23 Gateway-11

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.24 Rtg-Tag-11

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.25 Gateway-12

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.26 Rtg-Tag-12

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.27 Gateway-13

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.28 Rtg-Tag-13

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.29 Gateway-14

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways/Gateway-14

Possible values:

- IP address or 63 alphanumerical characters.

Default: Blank

2.2.30.30 Rtg-Tag-14

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.31 Gateway-15

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.32 Rtg-Tag-15

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.33 Gateway-16

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.34 Rtg-Tag-16**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.35 Gateway-17

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.36 Rtg-Tag-17**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.37 Gateway-18

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.38 Rtg-Tag-18**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.39 Gateway-19

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.40 Rtg-Tag-19

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.41 Gateway-20

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways/Gateway-20

Possible values:

- IP address or 63 alphanumerical characters.

Default: Blank

2.2.30.42 Rtg-Tag-20

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.43 Gateway-21

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.44 Rtg-Tag-21

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.45 Gateway-22

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.46 Rtg-Tag.22

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.47 Gateway-23

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.48 Rtg-Tag-23

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.49 Gateway-24

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.50 Rtg-Tag-24

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.51 Gateway-25

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.52 Rtg-Tag-25

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.53 Gateway-26

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.54 Rtg-Tag-26

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.55 Gateway-27

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank

2.2.30.56 Rtg-Tag-27

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.57 Gateway-28

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways/Gateway-28

Possible values:

- IP address or 63 alphanumerical characters.

Default: Blank**2.2.30.58 Rtg-Tag-28**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.59 Gateway-29

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.60 Rtg-Tag-29**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.61 Gateway-30

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumerical characters.

Default: Blank**2.2.30.62 Rtg-Tag-30**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways

Possible values:

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.63 Gateway-31

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways/Gateway-31**Possible values:** IP address or 63 alphanumeric characters.**Default:** Blank**2.2.30.64 Rtg-Tag-31**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.30.65 Gateway-32

Enter the IP address of the additional gateway to be used for this PPTP remote station.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- IP address
- Maximum 63 alphanumeric characters.

Default: Blank**2.2.30.66 Rtg-Tag-32**

Enter the routing tag for setting the route to the relevant remote gateway.

Telnet path: /Setup/WAN/Additional-PPTP-Gateways**Possible values:**

- Maximum 5 characters.

Default: 0

 If you do not specify a routing tag here (i.e. routing tag is 0), then the routing tag configured for this remote station in the PPTP connection list will be taken for the associated gateway.

2.2.31 PPTP-Source-Check

With this entry you specify the basis used by the PPTP (point-to-point tunneling protocol) to check incoming connections.

SNMP ID:

2.2.31

Telnet path:**Setup > WLAN****Possible values:**

- **Address:** The PPTP checks the address only. This is the standard behavior of older versions of LCOS without this parameter.
- **Tag+address:** The PPTP checks the address and also the routing tag of interface to be used for the connection.

Default:

Address

2.2.45 X.25 bridge

This menu contains the settings for the TCP-X.25 bridge.

SNMP ID:

2.2.45

Telnet path:**Setup > WAN**

2.2.45.2 Outgoing-Calls

This table contains the settings for the incoming TCP connections (of the LAN remote site) and outgoing X.25 connections (for the X.25 remote site).

SNMP ID:

2.2.45.2

Telnet path:**Setup > WAN > X.25-Bridge**

2.2.45.2.1 Name

Enter a name for the table entry or the X.25 connection that has to be configured.

SNMP ID:

2.2.45.2.1

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls****Possible values:**

Max. 16 characters from [A-Z][0-9]@{|}~!\$%&'()+-./:;<=>?[\]^_.

Default:

DEFAULT

2.2.45.2.2 Prio

Specify the priority of the selected X.25 connection. The lower the value, the higher the priority.

 LCOS sorts the displayed table entries in descending order according to the priorities.

SNMP ID:

2.2.45.2.2

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls****Possible values:**

0 ... 65535

Default:

0

2.2.45.2.3 Terminal-IP

Enter the IPv4 address of the remote site in your LAN to be used to send data packets over the selected X.25 connection.

SNMP ID:

2.2.45.2.3

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls****Possible values:**

Max. 39 characters from [0-9] [A-F] [a-f] : .

Special values:**0.0.0.0**

The TCP-X.25 bridge can be used for all remote sites, not only those in your LAN but also those from the WAN.

Default:

0.0.0.0

2.2.45.2.4 Terminal-Port

Enter the port of the remote site in your LAN that the remote site can use to send data packets.

SNMP ID:

2.2.45.2.4

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls****Possible values:**

0 ... 65535

Special values:

0

The TCP-X.25 bridge allows connections using any port.

Default:

0

2.2.45.2.5 Loopback address

Specify the IPv4 address, which has an ARF context used by your device to receive connections from the terminal. The loopback address replaces the entries for IP address and routing tag. The device selects the routing tag and its local address based on the loopback address. If the loopback address is empty, the device accepts connections on any address (even the WAN!).

SNMP ID:

2.2.45.2.5

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls****Possible values:**

Max. 16 characters from [A-Z][0-9]@{|}~!\$%&'()+-./:;<=>?[\]^_.

Default:*empty***2.2.45.2.6 Local-Port**

Enter the TCP port which your device uses to make a connection to the X.25 remote site.

SNMP ID:

2.2.45.2.6

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls****Possible values:**

1 ... 65535

Default:

1998

2.2.45.2.7 ISDN-Remote

Enter the ISDN phone number of the X.25 remote site.

SNMP ID:

2.2.45.2.7

Telnet path:**Setup > WAN > X.25-Bridge > Outgoing-Calls**

2 Setup

Possible values:

Max. 21 characters [0–9]

Default:

0

2.2.45.2.8 ISDN-Local

Enter the ISDN phone number that your device uses as its outgoing number.

SNMP ID:

2.2.45.2.8

Telnet path:

Setup > WAN > X.25-Bridge > Outgoing-Calls

Possible values:

Max. 21 characters [0–9]

Default:

empty

2.2.45.2.9 X.25-Remote

Enter the X.25 address of the X.25 remote site.

SNMP ID:

2.2.45.2.9

Telnet path:

Setup > WAN > X.25-Bridge > Outgoing-Calls

Possible values:

Max. 14 characters [0–9]

Default:

empty

2.2.45.2.10 X.25-Local

Enter the X.25 address of the device.

SNMP ID:

2.2.45.2.10

Telnet path:

Setup > WAN > X.25-Bridge > Outgoing-Calls

Possible values:

Max. 14 characters [0–9]

Default:

empty

2.2.45.2.11 Protocol-ID

Enter the X.25 protocol number. Your device enters this ID as bytes 0 to 3 in the X.25 *User data*.

SNMP ID:

2.2.45.2.11

Telnet path:

Setup > WAN > X.25-Bridge > Outgoing-Calls

Possible values:

Max. 8 characters [0-9][a-f]

Default:

00000000

2.2.45.2.12 User data

You can store additional information in the X.25 data packets that your device transmits to the X.25 remote site.

SNMP ID:

2.2.45.2.12

Telnet path:

Setup > WAN > X.25-Bridge > Outgoing-Calls

Possible values:

Max. 8 characters [A-Z][a-z][0-9]@{|}~!\$%&'()+-./:;<=>?[\]^_`~`#

Default:

empty

2.2.45.2.13 Payload-Size

Specify the size of the X.25 payload. Valid values are powers of two between 16 and 1024.



The X.-25 standard allows different settings for the sizes of sent and received packets. The configuration relates to both directions.

SNMP ID:

2.2.45.2.13

Telnet path:

Setup > WAN > X.25-Bridge > Outgoing-Calls

Possible values:

16 ... 1024 Bytes

Default:

128

2.2.45.4 Disconnect delay

Using these parameters you define the time that the device waits after establishing the X.25 connection before it disconnects the ISDN connection. Within this time period no other X.25 connections can be established without completely re-establishing the ISDN connection.

SNMP ID:

2.2.45.4

Telnet path:**Setup > WAN > X.25-Bridge****Possible values:**

0 ... 99 Seconds

Special values:**0**

This parameter disables the waiting period. The device disconnects ISDN connections in conjunction with the X.25 connection.

Default:

5

2.2.45.5 Data trace

This parameter enables and disables the tracing of data packets that pass the X.25 bridge. The trace is output on the console where you enabled the trace.

SNMP ID:

2.2.45.5

Telnet path:**Setup > WAN > X.25-Bridge****Possible values:****Off**

The device does not output any traces.

On

The device does not output any trace data in the direction of the transmission and the number of the data bytes. Example of a data trace:

```
[X.25-Bridge] 2014/01/15 13:55:39,331  
Receiving 256 bytes of data from X.25.
```

Advanced

Identical to **On**, although the device additionally outputs the data as a dump. Example for a data trace with added dump output (excerpt):

```
[X.25-Bridge] 2014/01/15 13:55:39,331  
Receiving 256 bytes of data from X.25.
```

```

Adr:= 04394380
Len:= 00000100
00000000: C2 79 .. 46 60 50 8C .. E3 B7 | .6y..GF` P.....
00000010: 2D AE .. 24 5D E9 B6 .. 40 59 | -.0..U$] ..l..g@Y
00000030: A5 36 .. 3C 6B 01 21 .. 9D 14 | .6.M..<k !H..u..
00000040: 94 38 .. 89 AA 54 22 .. 81 F7 | .8..2m.. T".=....
00000050: E0 7C .. F3 28 B6 E8 .. 74 2F | .|.....( ..a]b.t/
[...]
```

Default:

Off

2.3 Charges

This menu contains the settings for charge management.

Telnet path: /Setup

2.3.1 Budget units

Specify here the maximum number of budget units that can be consumed in the time period defined above. Once this limit is reached, the router establishes no further connections.

Telnet path: /Setup/Charges

Possible values:

- Max. 10 characters

Default: 830

2.3.2 Days per period

Specify a period in days that will serve as the basis for the controlling the charges and time limits.

Telnet path: /Setup/Charges

Possible values:

- Max. 10 characters

Default: 1

2.3.3 Spare units

Displays the number of charge units remaining for dial-in connections in the current period.

Telnet path: /Setup/Charges

2.3.4 Router units

Displays the number of minutes used by router connections in the current time period.

Telnet path: /Setup/Charges

2.3.5 Table budget

This table displays an overview of configured budgets for your interfaces, sorted by budget units.

Telnet path: /Setup/Charges

2.3.5.1 lfc.

The interface referred to by the entry.

Telnet path: /Setup/Charges/Table-Budget

2.3.5.2 Budget units

Displays the budget units used up for this interface.

Telnet path: /Setup/Charges/Table-Budget

2.3.5.3 Spare units

Displays the remaining budgeted units for this interface.

Telnet path: /Setup/Charges/Table-Budget

2.3.5.4 Units

Displays the budgeted units used until now for this interface.

Telnet path: /Setup/Charges/Table-Budget

2.3.6 Total units

Displays the total of budgeted units used until now on all interfaces.

Telnet path: /Setup/Charges

Default: 10

2.3.7 Time table

This table displays an overview of configured budgets for your interfaces, sorted by budget minutes.

Telnet path: /Setup/Charges

2.3.7.1 lfc.

The interface referred to by the entry.

Telnet path: /Setup/Charges/Time-Table

2.3.7.2 Budget minutes

Displays the budgeted minutes used up for this interface.

Telnet path: /Setup/Charges/Time-Table

2.3.7.3 Spare minutes

Displays the remaining budgeted minutes for this interface.

Telnet path: /Setup/Charges/Time-Table

2.3.7.4 Minutes active

Displays the budgeted minutes of activity for data connections on this interface.

Telnet path: /Setup/Charges/Time-Table

2.3.7.5 Minutes passive

Displays the budgeted minutes that this interface was connected passively.

Telnet path: /Setup/Charges/Time-Table

2.3.8 DSL broadband minutes budget

Specify here the maximum number of online minutes that can be consumed in the time period defined above. Once this limit is reached, the router establishes no further connections.

Telnet path: /Setup/Charges

Possible values:

- Max. 10 characters

Default: 600

2.3.9 Spare DSL broadband minutes

Displays the number of minutes remaining for DSL broadband connections in the current period.

Telnet path: /Setup/Charges

2.3.10 Router DSL broadband budget

Displays the number of minutes used by DSL broadband connections in the current time period.

Telnet path: /Setup/Charges

2.3.11 Additional DSL broadband budget

Specify here the number of additional online minutes that are permitted within the above time period if the reserve is activated.

Telnet path: /Setup/Charges

Possible values:

- Max. 10 characters

Default: 300

2.3.12 Reset budgets

You can manually reset units, time and volume budgets.

Enter the name of the WAN connection as the parameter. You can reset all volume budgets with the parameter '*'. If you do not specify a parameter, you reset only the unit- and time counters.

 By resetting the current budget, you remove any charge limiter that may be in effect.

SNMP ID:

2.3.12

Telnet path:

Setup > Charges

2.3.13 Dialup minutes budget

Specify here the maximum number of online minutes that can be consumed in the time period defined above. Once this limit is reached, the router establishes no further connections.

Telnet path: /Setup/Charges

Possible values:

- Max. 10 characters

Default: 210

2.3.14 Spare dialup minutes

Displays the number of minutes remaining for dial-in connections in the current period.

Telnet path: /Setup/Charges

2.3.15 Router ISDN serial minutes active

Displays the number of minutes used by dial-in connections in the current time period.

Telnet path: /Setup/Charges

2.3.16 Activate additional budget

Some providers allow you an additional data volume or time limit if your budget is reached. This action can be used to increase the volume- or time budget by an appropriate amount.

Specify the name of the WAN connection as well as the amount of the budget in MB as additional parameters. If you do not specify a budget, you approve the full amount of the budget specified for this WAN connection.

 By activating an additional budget, you remove any charge limiter that may be in effect.

SNMP ID:

2.3.16

Telnet path:

Setup > Charges

2.3.17 Volume budgets

Depending on your tariff plan, mobile or landline operators may activate bandwidth throttling if a certain data volume is exceeded, also for flatrate plans. This directory allows you to set a data volume for each remote station, and also to define an action for the device to perform when this limit is exhausted.

SNMP ID:

2.3.17

Telnet path:

Setup > Charges

2.3.17.1 Peer

Name of the remote station for which this data volume applies.

SNMP ID:

2.3.17.1

Telnet path:**Setup > Charges > Volume-budgets****Possible values:**

Select from the list of defined peers.

Max. 16 characters

Default:

Blank

2.3.17.2 Limit-MB

Data volume in megabytes that applies to the specified remote station.

SNMP ID:

2.3.17.2

Telnet path:**Setup > Charges > Volume-budgets****Possible values:**

0 - 4294967295 MB

Max. 10 characters

Special values:

0: No monitoring of data volume

Default:

0

2.3.17.3 Action

Action to be executed by the device when the budget is exhausted. Possible actions are:

- **syslog**: The device stores a SYSLOG message (with the flag "Critical") that you can analyze with LANmonitor or a special SYSLOG client.
- **mail**: The device sends a message to the e-mail address that you specified in **Setup > Charges > Charging-Email**.
- **disconnect**: The device disconnects from the remote station.



The **disconnect** action activates the charge limiter. The device can no longer connect to this remote until the end of the month unless you increase the volume budget for this remote site.

You can also specify that the device should perform multiple actions. If they include the action **disconnect**, the device performs this action as the last one.

SNMP ID:

2.3.17.3

Telnet path:**Setup > Charges > Volume-budgets**

Possible values:

SYSLOG
Mail
Disconnect

Default:

Blank

2.3.18 Free networks

If data transfer to certain networks does not affect the volume budget for a remote site, you can exclude these networks from the budgeting.

SNMP ID:

2.3.18

Telnet path:

Setup > Charges

2.3.18.1 Peer

Name of the remote station for which this exception applies.



You can make multiple entries for each remote by suffixing the name of the remote station with the # character and adding a number (e.g. "INTERNET", "INTERNET#1", "INTERNET#2", etc.). This is useful if you explicitly wish to define an exception that is only temporarily active. When this exception is no longer valid, you delete only the entry with the correspondingly numbered remote station.

SNMP ID:

2.3.18.1

Telnet path:

Setup > Charges > Free -Networks

Possible values:

Select from the list of defined peers.
Max. 20 characters

Default:

Blank

2.3.18.2 Free networks

This parameter allows you to specify individual IPv4- and IPv6 addresses, or even entire networks (using prefix notation, for example "192.168.1.0/24"), which are exempt from the budget.

SNMP ID:

2.3.18.2

Telnet path:

Setup > Charges > Free -Networks

Possible values:

Valid IPv4- and IPv6 address(es), max. 100 characters. Multiple values can be provided in a comma-separated list.

Default:

Blank

2.3.19 Budget control

This table defines when the monthly recordings should begin.

SNMP ID:

2.3.19

Telnet path:

Setup > Charges

2.3.19.1 Peer

Name of the remote station for which this time applies.



You can use wildcards for the names of the remote stations. The wild card "*" in this case applies for all remote stations.

SNMP ID:

2.3.19.1

Telnet path:

Setup > Charges > Budget-Control

Possible values:

Select from the list of defined peers.

Max. 16 characters

Default:

Blank

2.3.19.2 Day

Day of the month for resetting the data-volume budget.

SNMP ID:

2.3.19.2

Telnet path:

Setup > Charges > Budget-Control

Possible values:

1 - 31

Default:

1

2.3.19.3 Hour

Hour of the day for resetting the data-volume budget.

SNMP ID:

2.3.19.3

Telnet path:

Setup > Charges > Budget-Control

Possible values:

0 - 23

Default:

0

2.3.19.4 Minute

Minute of the hour for resetting the data-volume budget.

SNMP ID:

2.3.19.4

Telnet path:

Setup > Charges > Budget-Control

Possible values:

0 - 59

Default:

0

2.3.20 Charging e-mail

If the device is to send an e-mail when the data volume is exhausted, you specify the e-mail address here.

SNMP ID:

2.3.20

Telnet path:

Setup > Charges

Possible values:

Valid e-mail address with a maximum of 255 characters.

Default:

Blank

2.4 LAN

This item contains the settings for the LAN.

SNMP ID: 2.4

Telnet path: /Setup/LAN

2.4.2 MAC-Address

This is the hardware address of the network adapter in your device.

Telnet path: /Setup/LAN/MAC-Address

2.4.3 Spare heap

The spare-heap value indicates how many blocks of the LAN heap are reserved for communication with the device over HTTP(S)/Telnet(S)/SSH. This heap is used to maintain the device's accessibility even in case of maximum load (or if queue blocks get lost). If the number of blocks in the heap falls below the specified value, received packets are rejected immediately (except for TCP packets sent directly to the device).

Telnet path: /Setup/LAN/Spare-Heap

Possible values:

- Max. 3 numeric characters in the range 0 – 999

Default: 10

2.4.8 Trace MAC

Use this value to limit the Ethernet trace to those packets that have the specified MAC address as their source or destination address.

Telnet path: /Setup/LAN/Trace-MAC

Possible values:

- 12 hexadecimal characters

Default: 000000000000

Special values: If set to 000000000000, the Ethernet trace outputs all packages.

2.4.9 Trace level

The output of trace messages for the LAN-Data-Trace can be restricted to contain certain content only.

Telnet path: /Setup/LAN/Trace-Level

Possible values:

- Numerical characters from 0 to 255

Default: 255

Special values:

- 0: Reports that a packet has been received/sent
- 1: Adds the physical parameters for the packets (data rate, signal strength...)
- 2: Adds the MAC header
- 3: Adds the Layer-3 header (e.g. IP/IPX)
- 4: Adds the Layer-4 header (TCP, UDP...)
- 5: Adds the TCP/UDP payload
- 255: Output is not limited

2.4.10 IEEE802.1x

This menu contains the settings for the integrated 802.1x supplicant. The device requires these settings, for example, if it is connected to an Ethernet switch with activated 802.1x authentication.

Telnet path: /Setup/LAN/IEEE802.1x

2.4.10.1 Supplicant Ifc setup

This table controls the function of the integrated 802.1x supplicant for the available LAN interfaces.

Telnet path: /Setup/LAN/IEEE802.1x/Supplicant-Ifc-Setup

2.4.10.1.1 Ifc

Here you select the LAN interface that the settings for the 802.1x supplicant apply to.

Telnet path: /Setup/LAN/IEEE802.1x/Supplicant-Ifc-Setup/Ifc

Possible values:

- Choose from the LAN interfaces available in the device, e.g. LAN-1 or LAN-2.

Default: LAN-1

2.4.10.1.2 Method

Here you select the method to be used by the 802.1x supplicant for authentication.

Telnet path: /Setup/LAN/IEEE802.1x/Supplicant-Ifc-Setup/Method

Possible values:

- None
- MD5
- TLS
- TTLS/PAP
- TTLS/CHAP
- TTLS/MSCHAP
- TTLS/MSCHAPv2
- TTLS/MD5
- PEAP/MSCHAPv2
- PEAP/GTC

Default: None

Special values: The value "None" disables the 802.1x supplicant for the respective interface.

2.4.10.1.3 Credentials

Depending on the EAP/802.1X method, enter the credentials necessary to login. TLS requires nothing to be entered here. The authentication is carried out with the EAP/TLS certificate stored in the file system. For all other methods, enter the user name and password in the format 'user:password'.

Telnet path: /Setup/LAN/IEEE802.1x/Supplicant-Ifc-Setup/Credentials

Possible values:

- Max. 64 alphanumeric characters

Default: Blank

2.4.11 Linkup-Report-Delay-ms

This setting specifies the time (in milliseconds) after which the LAN module signals to the device that a link is 'up' and data transfer can begin.

SNMP ID:

2.4.11

Telnet path:

Setup > LAN > Linkup-Report-Delay-ms

Possible values:

0 to 4294967295

Default:

50

2.4.12 HNAT

With this setting you enable or disable the use of hardware NAT on the QVER platform. With HNAT enabled, the hardware can handle the routing WAN connection data, which increases the throughput and reduces the CPU load on your device.

 HNAT is only available on devices of the 1781 series with an Ethernet switch AR8327N as well as the WLC4006+.

SNMP ID:

2.4.12

Telnet path:

Setup > LAN

Possible values:

No

Yes

Default:

No

2.5 Bridge

This menu contains the settings for the bridge.

Telnet path: /Setup/Bridge

 These bridge settings are included to maintain compatibility to earlier firmware versions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.5.1 Operating

This is where you can activate or deactivate the remote bridge. The remote bridge couples two remote networks as if they were physically connected. This makes them completely independent of the employed network protocols.

LANconfig description: Remote bridge enabled

Telnet path: /Setup/Bridge/Operating

LANconfig path: Bridge/General

Possible values:

-

Possible LANconfig values:

- On
- Off

Default: Off

2.5.2 Peer

Choose the name of the remote site here. If the remote station is to be actively contacted, then this must be an entry from the list of defined peers.

LANconfig description:

Telnet path: /Setup/Bridge/Peer

LANconfig path: Bridge/General

Possible values:

- Entry from the list of defined peers

Possible LANconfig values:

- Entry from the list of defined peers

Default: Blank

2.5.3 Bridge table

This status table displays information about the MAC addresses known to the bridge with the following values:

- MAC address of a local or remote computer
- Time when a packet was last received from the MAC address (in milliseconds of operating time)
- Flags indicating from where the MAC address was learned (local/remote) and what should happen with a package that is received from the MAC address
 - LAN-Dest.-Filter: Filtering of transmissions towards the LAN
 - LAN-Src.-Filter: Filtering of transmissions received from the LAN
 - WAN-Dest.-Filter: Filtering of transmissions towards the WAN
 - WAN-Src.-Filter Filtering of transmissions received from the LAN

SNMP ID: 2.5.3

Telnet path: /Setup/Bridge/Bridge-Table

2.5.3.1 MAC address

This entry shows the MAC address of the local or remote computer.

SNMP ID:

2.5.3.1

Telnet path:

Setup > Bridge > Bridge-Table

2.5.3.2 Last access

This entry shows the time when a packet was last received from the MAC address (in milliseconds of operating time)

SNMP ID:

2.5.3.2

Telnet path:

Setup > Bridge > Bridge-Table

2.5.3.3 Forward flag

This entry shows the flags indicating from where the MAC address was learned (local/remote) and what should happen with a package that is received from the MAC address

- LAN-Dest.-Filter: Filtering of transmissions towards the LAN
- LAN-Src.-Filter: Filtering of transmissions received from the LAN
- WAN-Dest.-Filter: Filtering of transmissions towards the WAN
- WAN-Src.-Filter: Filtering of transmissions received from the LAN

SNMP ID:

2.5.3.3

Telnet path:

Setup > Bridge > Bridge-Table

2.5.4 Aging minutes

Here you can specify a time period in minutes after which the bridge table is updated automatically, i.e. any MAC addresses that have not been contacted are removed from the list.

Telnet path: /Setup/Bridge/Aging-Minutes

Possible values:

- Max. 63 numerical characters

Default: 30

2.5.5 LAN configuration

The settings for the filter options for local networks are located here.

LANconfig description: Local filtering

Telnet path: /Setup/Bridge/LAN-Config

LANconfig path: Bridge

2.5.5.1 Broadcast

Specify here whether broadcast packets from the LAN should be transmitted or not.

LANconfig description: Broadcasts

Telnet path: /Setup/Bridge/LAN-Config/Broadcast

LANconfig path: Bridge/Local filtering

Possible values:

-

Possible LANconfig values:

- Never transmit
- Always transmit
- Only when connected

Default: Always transmit

2.5.5.2 Multicast

Specify whether multicast packets from the local network should be transmitted always, never or only when connected.

LANconfig description: Multicast

Telnet path: /Setup/Bridge/LAN-Config/Multicast

LANconfig path: Bridge/Local filtering

Possible values:

-

Possible LANconfig values:

- Never transmit
- Always transmit
- Only when connected

Default: Always transmit

2.5.5.3 Destination address

The settings here control the filtering of incoming packets according to their destination addresses.

Telnet path: /Setup/Bridge/LAN-Config./Dest.-Address

2.5.5.3.1 Filter type

Here you specify the criteria which are to be used for filtering the destination addresses.

LCOS Menu Tree/Setup/Bridge/LAN-Config./Dest.-Address/Filter-Type

Possible values:

- Positive: Only the addresses contained in the filter table are filtered out; all the others are allowed through
- Negative: Only the addresses contained in the filter table are allowed through; all the others are filtered out

Default: Positive

2.5.5.3.2 Filter table

Packets from the local network sent to the addresses in this table will be filtered out or allowed to pass, depending on the filter type.

Telnet path: /Setup/Bridge/LAN-Config./Dest.-Address/Filter-Table

2.5.5.3.2.1 Destination address

Enter the address which is to be filtered here.

Telnet path: /Setup/Bridge/LAN-Config./Dest.-Address/Filter-Table/Dest.-Address

Possible values:

- Maximum 12 alphanumerical characters

Default: Blank

2.5.5.4 Source address

The settings for filtering the source addresses can be adjusted here.

Telnet path: /Setup/Bridge/LAN-Config/Src.-Address

2.5.5.4.1 Filter type

Here you specify the criteria which are to be used for filtering the source addresses.

Telnet path: /Setup/Bridge/LAN-Config./Src.-Address/Filter-Type

Possible values:

- Positive: Only the addresses contained in the filter table are filtered out; all the others are allowed through
- Negative: Only the addresses contained in the filter table are allowed through; all the others are filtered out

Default: Positive

2.5.5.4.2 Filter table

Packets from the local network sent from the addresses in this table will be filtered out or allowed to pass, depending on the filter type.

Telnet path: /Setup/Bridge/LAN-Config./Src.-Address/Filter-Table

2.5.5.4.2.1 Source address

Enter the address which is to be filtered here.

Telnet path: /Setup/Bridge/LAN-Config./Src.-Address/Filter-Table/Src.-Address

Possible values:

- Maximum 12 alphanumerical characters

Default: Blank

2.5.6 WAN configuration

The settings for the filter options for remote networks are located here.

LANconfig description: Remote filtering

Telnet path: /Setup/Bridge/WAN-Config

LANconfig path: Bridge

2.5.6.1 Broadcast

Specify here whether broadcast packets from the WAN should be transmitted or not.

LANconfig description: Broadcasts

Telnet path: /Setup/Bridge/WAN-Config/Broadcast

LANconfig path: Bridge/Remote filtering

Possible values:

-

Possible LANconfig values:

- Never transmit
- Always transmit
- Only when connected

Default: Always transmit

2.5.6.2 Multicast

Specify whether multicast packets from the WAN should be transmitted always, never or only when connected.

LANconfig description: Multicast

Telnet path: /Setup/Bridge/WAN-Config/Multicast

LANconfig path: Bridge/Remote filtering

Possible values:

-

Possible LANconfig values:

- Never transmit
- Always transmit
- Only when connected

Default: Always transmit

2.5.6.3 Destination address

The settings here control the filtering of incoming packets according to their destination addresses.

Telnet path: /Setup/Bridge/WAN-Config/Dest.-Address

2.5.6.3.1 Filter type

Here you specify the criteria which are to be used for filtering the destination addresses.

Telnet path: /Setup/Bridge/WAN-Config./Dest.-Address/Filter-Type

Possible values:

- Positive: Only the addresses contained in the filter table are filtered out; all the others are allowed through
- Negative: Only the addresses contained in the filter table are allowed through; all the others are filtered out

Default: Positive

2.5.6.3.2 Filter table

Packets from the WAN sent to the addresses in this table will be filtered out or allowed to pass, depending on the filter type.

Telnet path: /Setup/Bridge/WAN-Config./Dest.-Address/Filter-Table

2.5.6.3.2.1 Destination address

Enter the address which is to be filtered here.

Telnet path: /Setup/Bridge/WAN-Config./Dest.-Address/Filter-Table/Dest.-Address

Possible values:

- Maximum 12 alphanumerical characters

Default: Blank

2.5.6.4 Source address

The settings for filtering the source addresses can be adjusted here.

Telnet path: /Setup/Bridge/WAN-Config/Src.-Address

2.5.6.4.1 Filter type

Here you specify the criteria which are to be used for filtering the source addresses.

Telnet path: /Setup/Bridge/WAN-Config./Src.-Address/Filter-Type

Possible values:

- Positive: Only the addresses contained in the filter table are filtered out; all the others are allowed through
- Negative: Only the addresses contained in the filter table are allowed through; all the others are filtered out

Default: Positive

2.5.6.4.2 Filter table

Packets from the WAN sent from the addresses in this table will be filtered out or allowed to pass, depending on the filter type.

Telnet path: /Setup/Bridge/WAN-Config./Src.-Address/Filter-Table

2.5.6.4.2.1 Destination address

Enter the address which is to be filtered here.

Telnet path: /Setup/Bridge/WAN-Config./Src.-Address/Filter-Table/Src.-Address

Possible values:

- Maximum 12 alphanumerical characters

Default: Blank

2.5.7 LAN interface

Here you select the interface to which the bridge settings apply.

Telnet path: /Setup/Bridge/LAN-Interface

Possible values:

- LAN-1
- LAN-2
- LAN-3
- LAN-4

Default: LAN-1

2.5.8 VLAN-ID

Enter the ID of the VLAN with the active bridge here.

Telnet path: /Setup/Bridge/VLAN-ID

Possible values:

- Numeric value from 0 – 4096

Default: 0

2.7 TCP-IP

This menu contains the TCP/IP settings.

Telnet path: /Setup

2.7.1 Operating

Activates or deactivates the TCP-IP module.

Telnet path: Setup/TCP-IP

Possible values:

- Yes
- No

Default: Yes

2.7.6 Access list

The access list contains those stations that are to be granted access to the device's configuration. If the table contains no entries, all stations can access the device.

Telnet path: Setup/TCP-IP

2.7.6.1 IP address

IP address of the station that is to be granted access to the device's configuration.

Telnet path: /Setup/TCP-IP/Access-List

Possible values:

- Valid IP address.

2.7.6.2 IP netmask

IP netmask of the station that is to be given access to the device's configuration.

Telnet path: /Setup/TCP-IP/Access-List

Possible values:

- Valid IP address.

2.7.6.3 Routing tag

Routing tag for selecting a specified route.

Telnet path: /Setup/TCP-IP/Access-List

Possible values: Max. 5 characters

2.7.7 DNS default

Specify here the address of a name server to which DNS requests are to be forwarded. This field can be left empty if you have an Internet provider or other remote site that automatically assigns a name server to the router when it logs in.

Telnet path: Setup/TCP-IP

Possible values:

- Valid IP address.

Default: 00.0.0

2.7.8 DNS backup

Specify here a name server to be used in case the first DNS server fails.

Telnet path: Setup/TCP-IP

Possible values:

- Valid IP address.

Default: 00.0.0

2.7.9 NBNS default

Specify here the address of a NetBIOS name server to which NBNS requests are to be forwarded. This field can be left empty if you have an Internet provider or other remote site that automatically allocates a NetBIOS name server to the router when it logs in.

Telnet path: Setup/TCP-IP

Possible values:

- Valid IP address.

Default: 00.0.0

2.7.10 NBNS backup

Specify here a NetBIOS name server to be used in case the first NBNS server fails.

Telnet path: Setup/TCP-IP

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.7.11 ARP aging minutes

Here you can specify the time in minutes after which the ARP table is updated automatically, i.e. any addresses that have not been contacted since the last update are removed from the list.

Telnet path: Setup/TCP-IP

Possible values:

- 1 to 60 minutes

Default: 15 minutes

2.7.16 ARP table

The address resolution protocol (ARP) determines the MAC address for a particular IP address and stores this information in the ARP table.

Telnet path: Setup/TCP-IP

2.7.16.1 IP address

IP address for which a MAC address was determined.

Telnet path: /Setup/TCP-IP/ARP-Table

Possible values:

- Valid IP address.

2.7.16.2 MAC address

MAC address matching the IP address in this entry.

Telnet path: /Setup/TCP-IP/ARP-Table

2.7.16.3 Last access

The time when this station last access the network.

Telnet path: /Setup/TCP-IP/ARP-Table

2.7.16.5 Ethernet port

Physical interface connecting the station to the device.

Telnet path: /Setup/TCP-IP/ARP-Table

2.7.16.6 Peer

Remote device over which the station can be reached.

Telnet path: /Setup/TCP-IP/ARP-Table

Possible values:

- Select from the list of defined peers.

2.7.16.7 VLAN-ID

VLAN ID of network where the station is located.

Telnet path: /Setup/TCP-IP/ARP-Table

2.7.16.8 Connect

Logical interface connecting the device.

Telnet path: /Setup/TCP-IP/ARP-Table/Connect

Possible values:

- A parameter from the list of logical interfaces.

2.7.17 Loopback list

This table is used to configure alternative addresses.

Telnet path: Setup/TCP-IP

2.7.17.1 Loopback address

You can optionally configure up to 16 loopback addresses here. The device considers each of these addresses to be its own address and behaves as if it has received the package from the LAN. This applies in particular to masked connections. Answers to packets sent to a loopback address are not masked.

Telnet path: /Setup/TCP-IP/Loopback-List

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

Default: 0.0.0.0

2.7.17.2 Name

You can enter a name with a max. 16 characters here

Telnet path: /Setup/TCP-IP/Loopback-List

Possible values:

- Max. 16 characters

Default: Blank

2.7.17.3 Routing tag

Here you specify the routing tag that identifies routes to remote gateways that are not configured with their own routing tag (i.e. the routing tag is 0).

Telnet path: /Setup/TCP-IP/Loopback-List

Possible values:

- 0 to max. 65,535

Default: 0

2.7.20 Non-local ARP replies

When this option is activate the device will reply to ARP requests for its address even if the sender address is not located in its own local network.

Telnet path: Setup/TCP-IP

2.7.21 Alive test

This menu contains the settings for the alive test. The alive test sends a ping to a destination address at configurable intervals. If there is no response from the destination, the device performs a reboot or other action according to defined criteria.

To configure the alive test you have to define the target address, the action to be performed, the combination of pings and retries, and the threshold for triggering the defined action. The parameters required for this have the following default values:

- Fail limit: 10
- Test interval: 10
- Retry interval: 1
- Retry count: 1

These settings cause the device to transmit a ping every 10 seconds (test interval). If this ping is not answered, the device repeats the ping after 1 second (retry interval) and exactly one time (retry count). If this ping also goes unanswered, the device considers the series to have failed. If 10 series in a row fail (fail limit) then the device triggers the defined action, in this case after 10 x 10 seconds = 100 seconds.

SNMP ID: 2.7.21

Telnet path: Setup/TCP-IP

2.7.21.1 Target address

The target address to which the device sends a ping.

SNMP ID: 2.7.21.1

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- Valid IP address.

2.7.21.2 Test interval

The time interval in seconds, in which the device sends a ping to the target address. If the ping is unanswered, the device optionally repeats a set number of pings in the defined interval. With this configuration, the device forms a "series" of ping attempts. Only when all pings go unanswered is the complete series evaluated as unsuccessful.

 The product of the error limit and test interval defines the overall duration until rebooting or executing the action.

SNMP ID: 2.7.21.2

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- 0 to 4294967295 seconds

 Select the test interval as a time which is greater than the product of the retry interval and retry count, so that the desired number of retries can be performed within the test interval.

Default: 10

2.7.21.3 Retry count

If a ping goes unanswered, this value defines the number of times that the device will repeat the ping to the target address.

SNMP ID: 2.7.21.3

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- 0 to 4294967295

 Set the retry count to a number such that the product of retry interval and retry count is less than the test interval. This ensures that the desired number of retries can be performed within the test interval.

Default: 1

Special values: With a retry count of 0 the device sends no repeat pings.

2.7.21.4 Retry interval

If a ping goes unanswered, this value defines the time interval before the device repeats the ping to the target address.

SNMP ID: 2.7.21.4

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- 0 to 4294967295

 Set the retry interval to a number such that the product of retry interval and retry count is less than the test interval. This ensures that the desired number of retries can be performed within the test interval.

Default: 1

Special values: With a retry interval of 0 the device sends no repeat pings.

2.7.21.5 Fail limit

This parameter defines the number of consecutive failed test series before the device is rebooted or the configured action is executed.

 The product of the error limit and test interval defines the overall duration until rebooting or executing the action.

SNMP ID: 2.7.21.5

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- 0 to 4294967295

Default: 10

2.7.21.6 Boot type

The device executes this action if the ping to the target address was unsuccessful.

SNMP ID: 2.7.21.6

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- Cold boot: The device performs a cold boot.
- Warm boot: The device performs a warm boot.
- Action: The device performs a configurable action. Configure the action under /Setup/TCP-IP/Alive-Test (also see [Action](#)).

Default: Warm boot

2.7.21.7 Action

Enter the action to be performed by the device if the target address is unreachable. You can use the same actions as used in the cron table, i.e. executing CLI commands, HTTP requests, or sending messages.

 The action set here will only be executed if the boot type is set to the value **Action**. The boot type is configured under /Setup/TCP-IP/Alive-test/Boot-type (also see [Boot type](#)).

SNMP ID: 2.7.21.7

Telnet path: /Setup/TCP-IP/Alive-Test

Possible values:

- 251 characters

Default: Blank

2.7.22 ICMP on ARP timeout

When the LANCOM device receives a packet that it should transmit to the LAN it uses ARP requests to determine the recipient. If a request goes unanswered, the device returns a "ICMP host unreachable" message to the sender of the packet.

Telnet path: Setup/TCP-IP

2.7.30 Network list

This table is used to define IP networks. These are referenced from other modules (DHCP server, RIP, NetBIOS, etc.) via the network names.

Telnet path: Setup/TCP-IP

2.7.30.1 Network name

Enter a unique name with max. 16 characters that the other modules (DHCP server, RIP, NetBIOS, etc.) can use to reference the network.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Max. 16 characters

Default: Blank

2.7.30.2 IP address

If you use a private address range in your local network, then enter an available address from this range here. IP masquerading conceals these addresses from remote networks, and these see only the Internet IP address of the corresponding remote station.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.7.30.3 IP netmask

If the intranet IP address you entered is an address from a private address range, then enter the associated netmask here.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Valid IP address.

Default: 255.255.255.0

2.7.30.4 VLAN-ID

A single physical interface can be used to connect multiple separate VLANs (which were separated by a switch previously). The router must be given its own address and/or its own network in each of these VLANs. For this purpose, the interfaces and also a VLAN can be assigned to each network. If a packet is received on an interface with this VLAN ID, then the package is assigned to the respective network, i.e. the network is only accessible for packets that come from the same VLAN. Packages coming from this network will be marked with this VLAN ID when being sent. A "0" stands for an untagged network (no VLAN). Caution: Changing the ID is very dangerous. It is very easy to lock yourself out of the device if you do not have access to the VLAN. Also note that this setting affects all of the traffic managed by this network. This includes all packets that are routed through this network.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Max. 4,094

Default: 0

2.7.30.5 Interface

Here you select the interface that is to be allocated to the network. If a "random" choice is made here, then this network is accessible via any network interfaces that are not otherwise bound to a network.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Any
- LAN-1
- LAN-2
- LAN-3
- LAN-4
- WLAN-1
- WLAN-1-2
- WLAN-1-3
- WLAN-1-4
- WLAN-1-5
- WLAN-1-6
- WLAN-1-7
- WLAN-1-8
- P2P-1-1
- P2P-1-2
- P2P-1-3
- P2P-1-4
- P2P-1-5
- P2P-1-6
- BRG-1
- BRG-2
- BRG-3
- BRG-4
- BRG-5
- BRG-6
- BRG-7
- BRG-8

Default: Any

2.7.30.6 Source check

This setting influences the address check by the firewall. "Loose" does not expect a return route, so any source address is accepted when the device is contacted. Thus the device can be accessed directly, as before. 'Strict', on the other hand, expects an explicit route if no IDS alarms are to be triggered.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Loose
- Strict

Default: Loose

2.7.30.7 Type

Use this item to choose the type of the network (Intranet or DMZ) or disable it.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Disabled

2 Setup

- Intranet
- DMZ

Default: Intranet

2.7.30.8 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received on this network are marked internally with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules. This tag also has an influence on the routes propagated by IP and on the hosts and groups visible to the NetBIOS proxy.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Maximum 65,535

Default: 0

2.7.30.9 Comment

You can enter a comment here.

Telnet path: /Setup/TCP-IP/Network-List

Possible values:

- Max. 64 characters

Default: Blank

2.8 IP-Router

This menu contains the settings for the IP router.

SNMP ID: 2.8

Telnet path: /Setup

2.8.1 Operating

Switches the IP router on or off.

Telnet path: /Setup/IP-Router

Possible values:

- Active
- Inactive

Default: Inactive

2.8.2 IP routing table

In this table you enter the remote sites which are to be used for accessing certain networks or stations.

Telnet path: /Setup/IP-Router

2.8.2.1 IP address

This is where you specify the destination address for this route. This can be an individual station that you wish to integrate into your network, or an entire network that you wish to couple with your own network.

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.2.2 IP netmask

Specify here the netmask associated with the IP addresses entered. If you only need to translate one single IP address, enter the netmask 255.255.255.255.

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.2.3 Peer or IP

Select the router that the packets for this route should be forwarded to.

Here you select the name of a remote site from the list of remote sites.

If this route is to lead to another station in the local network, simply enter the station's IP address.

Telnet path: /Setup/IP-Router/IP-Routing-Table

2.8.2.4 Distance

Enter the number of hops to this router. You do not normally need to set this value as it is managed by the router automatically.

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- 0 to 16

Default: 0

2.8.2.5.4 Masquerade

You can use IP masquerading to hide a logical network behind a single address (that of the router). If, for example, you have an Internet connection, you can use it to connect your entire network to the Internet. Almost all Internet providers usually have the remote device assign a dynamic IP address to your router when it establishes the connection. If your Internet provider has assigned fixed IP addresses, you can assign them to the relevant connection in the IP parameter list. Select "Mask intranet and DMZ" if you wish to activate IP masquerading for all LAN interfaces. If you wish to assign fixed IP addresses to computers in the demilitarized zone (DMZ) and yet you still wish to activate IP masquerading for the computers on the other LAN interfaces (intranet), select "Intranet" (Mask intranet only).

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- No - IP masquerading switched off
- Yes - Intranet and DMZ masquerading (standard)
- Intranet - Intranet masquerading only

Default: No - IP masquerading switched off

2.8.2.6 Operating

Specify the switch status here. The route can be activated and either always propagated via RIP or only propagated via RIP when the destination network can be reached.

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- Yes: The route is activated and will always be propagated by RIP (sticky).
- Semi: The route can be activated and is propagated via RIP when the destination network can be reached (conditional).
- No: The route is off.

Default: Yes: The route is activated and will always be propagated by RIP (sticky)

2.8.2.7 Comment

This field is available for comments.

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- Max. 64 characters

2.8.2.8 Routing tag

If you specify a routing tag for this route, then the route will be used exclusively for packets given the same tag by the firewall or arriving from a network with the corresponding interface tag.

Telnet path: /Setup/IP-Router/IP-Routing-Table

Possible values:

- Maximum 65535

Default: 0



It follows that the use of routing tags only makes sense in combination with corresponding, decorative rules in the firewall or tagged networks.

2.8.5 Proxy-ARP

This is where you can activate/deactivate the ARP mechanism . Use proxy ARP to integrate remote computers into your local network as if they were connected locally.

Telnet path: /Setup/IP-Router

Possible values:

- Active
- Inactive

Default: Inactive

2.8.6 Send-ICMP-Redirect

This is where you can chose if ICMP redirects should be sent.

Telnet path: /Setup/IP-Router

Possible values:

- Active

- Inactive

Default: Active

2.8.7 Routing method

This menu contains the configuration of the routing methods used by your IP router.

Telnet path: /Setup/IP-Router

2.8.7.1 Routing method

Analysis of ToS or DiffServ fields.

Telnet path: /Setup/IP-Router

Possible values:

- Normal: The TOS/DiffServ field is ignored.
- Type-of-service: The TOS/DiffServ field is regarded as a TOS field; the bits 'low delay' and 'high reliability' will be evaluated.
- DiffServ: The TOS/DiffServ field is regarded as a DiffServ field and evaluated as follows.
- CSx (including CS0 = BE): Normal transmission
- AFxx: Secure transmission
- EF: Preferred transmission

2.8.7.2 ICMP-Routing-Method

Specify if the router should transmit secure ICMP packets.

Telnet path: /Setup/IP-Router

Possible values:

- Normal
- Secured

Default: Normal

2.8.7.3 SYN/ACK speedup

Specify if TCP SYN and ACK packets should be given preferential treatment when forwarding.

Telnet path: /Setup/IP-Router/Routing-Method

Possible values:

- Active
- Inactive

Default: Active

2.8.7.4 L2-L3 tagging

Specify what should happen with DiffServ layer 2 tags.

Telnet path: /Setup/IP-Router/Routing-Method

Possible values:

- No - Ignore
- Yes - Copy to layer 3
- Auto - Copy automatically

Default: Ignore

2.8.7.5 L3-L2 tagging

Specify if DiffServ layer 3 tags should be copied to layer 2.

Telnet path: /Setup/IP-Router

Possible values:

- Active
- Inactive

Default: Inactive

2.8.7.6 Route internal services

This is where you select whether the internal services are to be directed via the router.

Telnet path: /Setup/IP-Router/Routing-Method

Possible values:

- Yes: Packets for internal services are directed via the router.
- No: Packets are returned straight to the sender.

Default: No



You should treat the internal services VPN and PPTP specially since routing all packets without exception will result in performance loss. The device only forwards the initial packets sent by these services to the router while the connection is being established if you activate this option. Further packets are forwarded to the next port.

2.8.8 RIP

This menu contains the RIP configuration for your IP router.

Telnet path: /Setup/IP-Router

2.8.8.2 R1 mask

This setting is only required if you selected RIP-1 as RIP support. It affects how network masks are formed for routes learned on the basis of RIP.

Telnet path: /Setup/IP-Router/RIP

Possible values:

- Class
- Address
- Class + address

Default: Class

2.8.8.4 WAN sites

Here you configure the WAN-side RIP support separately for each remote site.

Telnet path: /Setup/IP-Router/RIP

2.8.8.4.1 Peer

Name of the remote station from which WAN RIP packets are to be learned.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Select from the list of defined peers.

Default: Blank

Special values: Multiple remote sites can be configured in one entry by using * as a place holder. If for example multiple remote stations are to propagate their networks via WAN RIP, while the networks for all other users and branch offices are defined statically, the appropriate remote stations can be given names with the prefix "RIP_". To configure all of the remote stations, the WAN RIP table requires just a single entry for remote station "RIP_*".

2.8.8.4.2 RIP type

The RIP type details the RIP version with which the local routes are propagated.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Off
- RIP-1
- RIP-1 compatible:
- RIP 2

Default: Off

2.8.8.4.3 RIP accept

The column RIP accept lists whether RIP from the WAN is to be accepted. The RIP type must be set for this.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- On
- Off

Default: Off

2.8.8.4.4 Masquerade

The column Masquerade lists whether or not masquerading is performed on the connection and how it is carried out. This entry makes it possible to start WAN RIP even in an empty routing table.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Auto: The masquerade type is taken from the routing table. If there is no routing entry for the remote site, then masquerading is not performed.
- To: All connections are masqueraded.
- Intranet: IP masquerading is used for connections from the intranet, connections from the DMZ pass through transparently.

Default: On

2.8.8.4.5 Default routing tag

The column Default tag lists the valid "Default routing tag" for the WAN connection. All untagged routes are tagged with this tag when sent on the WAN.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Maximum 65,535

Default: 0

2.8.8.4.6 Routing tag list

The column Routing tags list details a comma-separated list of the tags that are accepted on the interface. If this list is empty, then all tags are accepted. If at least one tag is in the list, then only the tags in this list are accepted. When sending tagged routes on the WAN, only routes with valid tags are propagated.

All learned routes from the WAN are treated internally as untagged routes and propagated on the LAN with the default tag (0). In the WAN, they are propagated with the tag with which they were learned.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Comma-separated list with max. 33 characters

Default: Blank

2.8.8.4.7 Poisoned reverse

Poisoned reverse prevents the formation of routing loops. An update is sent back to the router that propagated the route to inform it that the network is unreachable at the associated interface.

However, this has a significant disadvantage over WAN connections: The central location transmits a high number of routes which would then suffer from route poisoning, so leading to a heavy load on the available bandwidth. For this reason, poisoned reverse can be manually activated for every LAN/WAN interface.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- On
- Off

Default: Off

2.8.8.4.8 RFC2091

Other than in the LAN, WAN bandwidth limitations may make regular updates every 30 seconds undesirable. For this reason, RFC 2091 requires that routes are transmitted to the WAN once only when the connection is established. After this, updates only are transmitted (triggered updates).

Because updates are explicitly requested here, broadcasts or multicasts are not to be used for delivering RIP messages. Instead, the the subsidiary device must be statically configured with the IP address of the next available router at the central location. Due to these requests, the central router knows which subsidiary routers it has received update requests from; it then sends any messages on route changes directly to the subsidiary device.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- On
- Off

Default: Off



In a central gateway, the setting "RFC 2091" can always be off and the "Gateway" entry always set to 0.0.0.0 because the central gateway always considers the gateway as specified at the subsidiary.

2.8.8.4.9 Gateway

IP address of the nearest available router in the context of RFC 2091.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Valid IP address.

Default: 00.0.0

Special values: If 0.0.0.0 is entered, the gateway address is determined from PPP negotiation.

 In a router at the central location, RFC 2091 can be switched off and the gateway can remain on 0.0.0.0 because the central location always observes the requests from the subsidiaries.

 The LANCOM device automatically reverts to standard RIP if the gateway indicated does not support RFC 2091.

 In a central gateway, the setting "RFC 2091" can always be off and the "Gateway" entry always set to 0.0.0.0 because the central gateway always considers the gateway as specified at the subsidiary.

2.8.8.4.10 RX filter

Here you define the filter to be used when receiving RIP packets.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Select from the list of defined RIP filters (max. 16 characters).

Default: Blank

2.8.8.4.11 TX filter

Here you define the filter to be used when sending RIP packets.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites

Possible values:

- Select from the list of defined RIP filters (max. 16 characters).

Default: Blank

2.8.8.4.12 RIP send

Specify whether RIP is to be propagated on the WAN routes. The RIP type must be set for this.

LANconfig description: Send RIP to this remote device.

Telnet path: /Setup/IP-Router/RIP/WAN-Sites/RIP-Send

LANconfig path: IP router/WAN RIP

Possible values:

- No
- Yes

Possible LANconfig values:

- Off
- On

Default: No/Off

2.8.8.5 LAN sites

This table is used to adjust RIP settings and to select the network that they apply to.

Telnet path: /Setup/IP-Router/RIP

2.8.8.5.1 Network name

Select here the name of the network to which the settings are to apply.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites

Possible values:

- Intranet
- DMZ

Default: Blank

2.8.8.5.2 RIP type

Specify whether the router should support IP-RIP or not. IP-RIP can be used to exchange routing information between individual stations automatically.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites

Possible values:

- Off
- RIP-1
- RIP-1 compatible:
- RIP-2

Default: Off

2.8.8.5.3 RIP accept

Specify here whether routes from this network should be learned or not.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites

Possible values:

- Active
- Inactive

Default: Inactive

2.8.8.5.4 Propagate

This option defines whether the associated network is to be propagated to other networks.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites

Possible values:

- Active
- Inactive

Default: Inactive

2.8.8.5.5 Default routing tag

Enter a value here for the default routing tag that is valid for the selected interface. Routes that have the interface tag set will be propagated on this interface with the default routing tag. Routes learned by the interface that have this default routing tag set will be added to the RIP table with the interface tag. In addition, unmarked routes (i.e. routes with tag '0') will not be propagated on this interface unless the interface itself has the tag '0'.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites

Possible values:

- 0 to 65535

Default: 0**2.8.8.5.6 Routing tag list**

This field contains a comma-separated list of routing tags that are accepted by this interface. If this list is empty, then all routes are accepted irrespective of their routing tags. If the list contains at least one tag, then only the tags in this list are accepted. Similarly, when marked routes are being sent, only routes with permitted tags (i.e. those listed here) are forwarded. The routing tag list corresponds insofar to the WAN RIP list with the difference that any realization using standard routing is also taken into account. This means for example that, in the case of an interface tag '1' and the standard routing tag '0', the tag '0' has to be included in the routing tag list because it is internally changed to tag '1' when it is received. When transmitted, the internal tag '1' is converted into the external tag '0'. This measure is necessary in order for a virtualized router to be able to work together with other routers in the LAN that do not support tagged routes.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites**Possible values:**

- Max. 33 characters

Default: Blank**2.8.8.5.7 Poisoned reverse**

Poisoned reverse prevents the formation of routing loops. An update is sent back to the router that propagated the route to inform it that the network is unreachable at the associated interface.

However, this has a significant disadvantage over WAN connections: The central location transmits a high number of routes which would then suffer from route poisoning, so leading to a heavy load on the available bandwidth. For this reason, poisoned reverse can be manually activated for every LAN/WAN interface.

Telnet path: /Setup/IP-Router/RIP/LAN-Sites**Possible values:**

- Active
- Inactive

Default: Inactive**2.8.8.5.10 RX filter**

Specify here the filter to be applied when receiving (RX) RIP packets.

Telnet path: /Setup/IP router/RIP/LAN-Sites/Rx-Filter**Possible values:**

- Max. 16 alphanumerical characters

Default: Blank

You must first define the filter in the RIP filter list in order to use it here.

2.8.8.5.11 TX filter

Specify here the filter to be applied when sending (TX) RIP packets.

Telnet path: /Setup/IP router/RIP/LAN-Sites/Tx-Filter**Possible values:**

- Max. 16 alphanumeric characters

Default: Blank



You must first define the filter in the RIP filter list in order to use it here.

2.8.8.5.12 RIP send

Specify here whether routes should be propagated in this network. The RIP type must also be set.

Telnet path: /Setup/IP router/RIP/LAN-Sites/RIP-Send

Possible values:

- No
- Yes

Default: No

2.8.8.6 Parameter

The routing information protocol (RIP) regularly provides neighboring routers with updates on the available networks and the associated metrics (hops). RIP uses various timers to control the exchange of routing information.

Telnet path: /Setup/IP-Router/RIP

2.8.8.6.1 Update

The time between two regular updates. A random value of +/-5 seconds is always added to this value.

SNMP ID: 2.8.8.6.1

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 10 to 99 seconds

Default: 30 seconds

2.8.8.6.2 Holddown

The holddown interval defines how many update intervals pass before a route from router A which is no longer being propagated is replaced by an inferior route from router B.

The LANCOM will only accept a route from the same router that propagated the original route until the holddown interval expires. Within this period, the LANCOM device only accepts a route from another router if it is better than the former route.

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 0 to 99 as multiples of the update interval

Default: 4

2.8.8.6.3 Invalidate

The invalidate interval defines the number of update intervals before a route is marked as invalid (unavailable) when it stops being propagated by the router that originally reported it.

If the LANCOM device learns of an equivalent or better route from another router within this time period, then this will be used instead.

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 0 to 99 as multiples of the update interval

Default: 6

2.8.8.6.4 Flush

If a route in a router is not updated before the flush interval expires, then the route is deleted from the dynamic routing table.

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 0 to 99 as multiples of the update interval

Default: 10

2.8.8.6.5 Update delay

With a triggered update, changes to the metrics are immediately reported to the neighboring router. The system does not wait until the next regular update. An update delay stops faulty configurations from causing excessive update messages.

The update delay starts as soon as the routing table, or parts of it, are propagated. As long as this delay is running, new routing information is accepted and entered into the table but it is not reported any further. The router actively reports its current entries only after expiry of this delay.

The value set here sets the upper limit for the delay – the actual delay is a random value between one second and the value set here.

SNMP ID: 2.8.8.6.5

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 1 to 99 seconds

Default: 5

2.8.8.6.6 Max hopcount

In some scenarios it may be desirable to use a larger maximum hop count than that provided for by RIP (16). This value can be adapted with the parameter Max Hopcount.

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 16 to 99

Default: 16

2.8.8.6.7 Routes per frame

The number of routes that can be propagated in a single packet.

Telnet path: /Setup/IP-Router/RIP/Parameter

Possible values:

- 1 to 90

Default: 25

2.8.8.7 Filter

Routes learned from RIP can be filtered by their routing tag according to the settings for LAN and WAN RIP. Routes can additionally be filtered by specifying network addresses (e.g. "Only learn routes in the network 192.168.0.0/255.255.0.0"). First of all a central table is used to define the filters that can then be used by entries in the LAN and WAN RIP table.

Filters defined in the filter table can be referenced in the columns for RX filter and TX filter in the LAN RIP and WAN RIP tables. RX defines the networks from which routes can be learned or blocked, and TX defines the networks to which propagation should be allowed or blocked.

Telnet path: /Setup/IP-Router/RIP

2.8.8.7.1 Name

Name of the filter.

Telnet path: /Setup/IP-Router/RIP/Filter

Possible values:

- 18 characters

 The hash symbol # can be used to combine multiple entries into a single filter. Taken together, the entries LAN#1 and LAN#2 make up a filter "LAN" that can be called from the RIP table.

2.8.8.7.2 Filter

Comma-separated list of networks that are to be accepted (+) or rejected (-).

Telnet path: /Setup/IP-Router/RIP/Filter

Possible values:

- 64 characters from ,+/-0123456789.

 The plus-sign for accepted networks is optional.

 Filtering by routing tags is unaffected, i.e. if a tag for a route indicates that it is not to be learned or propagated, then this cannot be forced by means of the filter table.

2.8.8.8 Best routes

In large networks a destination network may be reachable via several gateways. If all these gateways propagate their routes using RIP the device will learn several routes to the same destination. The preferred routes are stored in the "Best Routes" table. This table contains the following entries:

- IP address
- IP netmask
- Rtg tag
- Gateway
- Distance
- Time
- Peer
- Port
- VLAN-ID
- Network name

Telnet path: /Setup/IP-Router/RIP/Best-Routes

2.8.8.8.1 IP address

The IP address of the network to which the route belongs.

SNMP ID:

2.8.8.8.1

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.8.2 IP netmask

The IP address of the network to which the route belongs.

SNMP ID:

2.8.8.8.2

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.8.3 Time

The time required to reach the network via this route.

SNMP ID:

2.8.8.8.3

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.8.4 Distance

The distance to the network to which the route belongs (i.e. the number of intermediate hops).

SNMP ID:

2.8.8.8.4

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.8.5 Gateway

The gateway via which the network can be reached to which the route belongs.

SNMP ID:

2.8.8.8.5

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.8.6 Routing tag

The routing tag of the network to which the route belongs.

SNMP ID:

2.8.8.8.6

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.8.8 Peer name**

Remote device that can be reached over this route.

SNMP ID:

2.8.8.8.8

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.8.10 VLAN-ID**

The VLAN ID of the network to which the route belongs.

SNMP ID:

2.8.8.8.10

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.8.11 Network name**

The name of the network to which the route belongs.

SNMP ID:

2.8.8.8.11

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.8.12 Port**

The (logical) LAN interface via which the route was learned.

SNMP ID:

2.8.8.8.12

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.9 All routes**

In large networks a destination network may be reachable via several gateways. If all these gateways propagate their routes using RIP the device will learn several routes to the same destination. These routes are stored in the "All Routes" table. This table contains the following entries:

- IP address
- IP netmask

- Rtg tag
- Gateway
- Distance
- Time
- Peer
- Port
- VLAN-ID
- Network name

Telnet path: /Setup/IP-Router/RIP/All-Routes

2.8.8.9.1 IP address

The IP address of the network to which the route belongs.

SNMP ID:

2.8.8.9.1

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.9.2 IP netmask

The IP address of the network to which the route belongs.

SNMP ID:

2.8.8.9.2

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.9.3 Time

The time required to reach the network via this route.

SNMP ID:

2.8.8.9.3

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.9.4 Distance

The distance to the network to which the route belongs (i.e. the number of intermediate hops).

SNMP ID:

2.8.8.9.4

Telnet path:

Setup > IP-Router > RIP > Best-Routes

2.8.8.9.5 Gateway

The gateway via which the network can be reached to which the route belongs.

SNMP ID:

2.8.8.9.5

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.9.6 Routing tag**

The routing tag of the network to which the route belongs.

SNMP ID:

2.8.8.9.6

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.9.8 Peer name**

Remote device that can be reached over this route.

SNMP ID:

2.8.8.9.8

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.9.10 VLAN-ID**

The VLAN ID of the network to which the route belongs.

SNMP ID:

2.8.8.9.10

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.9.11 Network name**

The name of the network to which the route belongs.

SNMP ID:

2.8.8.9.11

Telnet path:**Setup > IP-Router > RIP > Best-Routes****2.8.8.9.12 Port**

The (logical) LAN interface via which the route was learned.

SNMP ID:

2.8.8.9.12

Telnet path:**Setup > IP-Router > RIP > Best-Routes**

2.8.9 1-N-NAT

This menu contains the configuration of 1-N-NAT for your IP router.

Telnet path: /Setup/IP-Router

2.8.9.1 TCP aging seconds

Specify here how long an IPsec connection is inactive before the corresponding entry in the masquerading table is deleted.

Telnet path: /Setup/IP-Router/1-N-NAT/**Possible values:**

- 0 to 65,535

Default: 300 seconds

2.8.9.2 UDP aging seconds

Specify here how long an IPsec connection is inactive before the corresponding entry in the masquerading table is deleted.

Telnet path: /Setup/IP-Router/1-N-NAT/**Possible values:**

- 0 to 65,535

Default: 20 seconds

2.8.9.3 ICMP aging seconds

Specify here how long an IPsec connection is inactive before the corresponding entry in the masquerading table is deleted.

Telnet path: /Setup/IP-Router/1-N-NAT/**Possible values:**

- 0 to 65,535

Default: 10 seconds

2.8.9.4 Service table

If you wish to make certain services or stations accessible from outside of your network (e.g. a web server), enter these services and stations in this table.

Telnet path: /Setup/IP-Router/1-N-NAT/

2.8.9.4.1 D-port from

Specify the port of the desired service here.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table**Possible values:**

- Maximum 65,535

Default: 0

2.8.9.4.2 Intranet address

Enter the address of the computer in the intranet providing the service.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.9.4.3 D-port to

Specify the port of the desired service here.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Maximum 65,535

Default: 0

2.8.9.4.4 Map port

Port used for forwarding the packet.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Maximum 65,535

Default: 0

2.8.9.4.5 Active

You can set this entry temporarily inactive without having to delete it.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Active
- Inactive

Default: Active

2.8.9.4.6 Comment

This field is available for comments.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Max. 64 characters

Default: /

2.8.9.4.7 Peer

Remote site which is valid for this entry.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Select from the list of defined peers.

2.8.9.4.8 Protocol

Here you define which protocol the dataset applies to.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- TCP
- UDP
- TCP+UDP

Default: TCP+UDP

2.8.9.4.9 WAN address

Here you define which WAN address the dataset applies to. Where more than one static IP address is available, specifying this address enables a targeted port forwarding to be achieved for this address. If the address 0.0.0.0 is specified, then the address assigned to the connection will continue to be used.

Telnet path: /Setup/IP-Router/1-N-NAT/Service-Table

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.9.5 Table-1-N-NAT

The 1-N-NAT table shows the masked connections.

Telnet path: /Setup/IP-Router/1-N-NAT/

2.8.9.5.1 Intranet address

Shows the internal IP address of the station to which a masked connection has been stored.

Telnet path: /Setup/IP-Router/1-N-NAT/Table-1-N-NAT

Possible values:

- Valid IP address.

2.8.9.5.2 Source port

Source port of the masked connection.

Telnet path: /Setup/IP-Router/1-N-NAT/Table-1-N-NAT

2.8.9.5.3 Protocol

Protocol (UDP/TCP) used by the masked connection.

Telnet path: /Setup/IP-Router/1-N-NAT/Table-1-N-NAT

2.8.9.5.4 Timeout

Lease period for the masked connection in seconds (set under TCP aging, UDP aging or ICMP aging).

Telnet path: /Setup/IP-Router/1-N-NAT/Table-1-N-NAT

2.8.9.5.5 Handler

Handler required for masking, e.g. FTP

Telnet path: /Setup/IP-Router/1-N-NAT/Table-1-N-NAT

2.8.9.5.6 Remote address

Remote IP address that the masked connection was connected to.

Telnet path: /Setup/IP-Router/1-N-NAT/Table-1-N-NAT

Possible values:

- Valid IP address.

2.8.9.6 Fragments

This setting controls the firewall's behavior regarding fragmented IP packets.

Telnet path: /Setup/IP-Router/1-N-NAT/

Possible values:

- Filter: Fragments are always rejected (filtered).
- Route: The fragments are demasked. However, the fragments must be received in their original order. In addition, this settings allows only the individual fragments to be checked by the firewall, and not the entire IP packet.
- Reassemble: The fragments are stored temporarily until the IP packet can be reassembled in full. The fragments may be received in any order. The firewall also checks the reassembled IP packet.

Default: Reassemble

2.8.9.7 Fragment aging seconds

If an IP packet cannot be fully desmasked because fragments are missing, this time in seconds determines when the incomplete fragments are dropped.

Telnet path: /Setup/IP-Router/1-N-NAT/

Possible values:

- 1 to 255

Default: 5

2.8.9.8 IPSec aging seconds

Specify here how long an IPSec connection is inactive before the corresponding entry in the masquerading table is deleted.

Telnet path: /Setup/IP-Router/1-N-NAT/

Possible values:

- 0 to 65,535

Default: 2000

2.8.9.9 IPSec table

The IPSec table displays the masked IPSec connections, including some of the connection parameters.

Telnet path: /Setup/IP-Router/1-N-NAT/

2.8.9.9.1 Remote address

Address of the remote VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

Possible values:

- Valid IP address.

2.8.9.9.2 Local address

Address of the local VPN gateway (generally a VPN client in the local network)

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

Possible values:

- Valid IP address.

2.8.9.9.3 Rc-hi

The most significant 32 bits of the IKE cookie of the remote VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.4 Rc-lo

The least significant 32 bits of the IKE cookie of the remote VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.5 Lc-hi

The most significant 32 bits of the IKE cookie of the local VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.6 Lc-lo

The least significant 32 bits of the IKE cookie of the local VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.7 Remote SPI

SPI used by the remote VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.8 Local SPI

SPI used by the local VPN gateway

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.9 Timeout

Timeout in seconds until the entry is deleted. The value is divided into IPsec aging seconds. The default value is 2000 seconds

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.10 Flags

Flags that describe the state of the connection:

0x01 Connection is inverse masqueraded

0x02 Connection waiting for SPI

0x04 Other connections waiting for SPI

0x08 Aggressive mode connection

0x10 NAT-Traversal connection

0x20 Session recovery

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.11 CO

Connect timeout. Runs straight after the entry is created. If no SA is negotiated within 30 seconds (i.e. no ESP packet is sent or received) the entry is deleted again

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.12 NL

Local notification timeout. This timer is started when an IKE notification is received from the local VPN gateway. The entry is deleted if no IKE or ESP packet is received from the remote site within 30 seconds

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.13 NR

Remote notification timeout. Corresponds to the local notification timeout, except that in this case the notification was received from the remote VPN gateway.

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.9.14 DP

DPD timeout: This timer is started when a DPD packet is received from one site. If no DPD packet is received from the other site within 30 seconds the entry is removed.

Telnet path: /Setup/IP-Router/1-N-NAT/IPSec-Table

2.8.9.10 ID spoofing

NAT replaces the packet IDs in the outbound packets (ID spoofing). This enables fragmented packets to be transmitted and it stops information on the internal network (packet IDs) from being leaked to the outside. If AH is being used, this procedure should be avoided as the packet IDs are required by AH. For AH to function properly, ID spoofing can be deactivated here.

Telnet path: /Setup/IP-Router/1-N-NAT/

Possible values:

- Yes
- No

Default: Yes

2.8.10 Firewall

This menu contains the firewall configuration.

SNMP ID: 2.8.10

Telnet path: /Setup/IP-Router

2.8.10.1 Objects

Elements/objects that are to be used in the firewall rules table are defined in the objects table. Objects can be:

- Individual computers (MAC or IP address , hostname)
- Complete networks
- Protocols
- Services (ports or port areas, e.g. HTTP, Mail&News, FTP, ...)

SNMP ID: 2.8.10.1

Telnet path: /Setup/IP-Router/Firewall

2.8.10.1.1 Name

Specify here a unique name for this object.

SNMP ID: 2.8.10.1.1

Telnet path: /Setup/IP-Router/Firewall/Objects

Possible values:

- Max. 32 characters

Default: Blank

2.8.10.1.2 Description

SNMP ID: 2.8.10.1.2

Telnet path: /Setup/IP-Router/Firewall/Objects

Objects can be combined and hierarchically structured in any way. For example, objects for the TCP and UDP protocols can be defined first. Building upon this, objects can subsequently be created, for example, for FTP (= TCP + ports 20 and 21), HTTP (= TCP + port 80) and DNS (= TCP, UDP + port 53). These can in turn be combined into one object that contains all the definitions of the individual objects.

Possible values:

Stations and services can be defined in the objects table according to the following rules.

Table 5: Objects for firewall actions

Description	Object ID	Examples and comments
Local network	%L	
remote sites	%H	Name must be in DSL/ISDN/PPTP or VPN remote site list
Host name	%D	
MAC address	%E	00:A0:57:01:02:03
IP address	%A	%A10.0.0.1, 10.0.0.2; %A0 (all addresses)
Netmask	%M	%M255.255.255.0
Protocol (TCP/UDP/ICMP, etc.)	%P	%P6 (for TCP)
Service (port)	%S	%S20-25 (for ports 20 to 25)

! Definitions of the same type can be created as comma-separated lists, such as host lists/address lists (%A10.0.0.1, 10.0.0.2) or with ranges separated by hyphens, such as port lists (%S20-25). Specifying '0' or an empty string denotes the Any object.

! For configuration from the console (Telnet or terminal application), the combined parameters (port, destination, source) must be enclosed with quotation marks (").

Default: Blank

2.8.10.2 Rules

The rules table links various pieces of information on a firewall rule. The rule contains the protocol to be filtered, the source, the destination and the firewall action to be executed. For every firewall rule there is also an on/off switch, a priority, the option to link with other rules, and activation of the rule for VPN connections.

LCOS uses a special syntax to define firewall rules. This syntax enables the representation of complex interrelationships for the testing and handling of data packets in the firewall with just a few characters. The rules are defined in the rules table. Pre-defined objects can be stored in two further tables so that frequently used objects do not have to be entered into the syntax every time:

The firewall actions are stored in the action table

The object table holds the stations and services

The definition of firewall rules can contain entries in the object table for protocols, services, stations and the action table for firewall actions, and also direct definitions in the appropriate LCOS syntax (e.g. %P6 for TCP).

SNMP ID: 2.8.10.2

Telnet path: /Setup/IP-Router/Firewall

! The objects from these tables can be used for rule definition, although this is not compulsory. They merely simplify the use of frequently used objects. For direct input of level parameters in the LCOS syntax, the same rules apply as specified in the following sections for protocols, source/destination and firewall actions.

2.8.10.2.1 Name

Specify here a unique name for this firewall rule.

SNMP ID: 2.8.10.2.1

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Max. 32 characters

Default: Blank

2.8.10.2.2 Protocol

Specification of the protocols for which this entry is to apply.

SNMP ID: 2.8.10.2.2

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Direct entry in LCOS syntax as described in the [Objects](#) table.
- Link to an entry of the object table.

Default: Blank

2.8.10.2.3 Source

Specification of the source stations for which this entry is to apply.

SNMP ID: 2.8.10.2.3

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Direct entry in LCOS syntax as described in the [Objects](#) table.
- Link to an entry of the object table.

Default: Blank

2.8.10.2.4 Destination

Specification of the destination stations for which this entry is to apply.

SNMP ID: 2.8.10.2.4

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Direct entry in LCOS syntax as described in the [Objects](#) table.
- Link to an entry of the object table.

Default: Blank

2.8.10.2.7 Action

Action to be run if the firewall rule applies to a packet.

SNMP ID: 2.8.10.2.7

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Direct entry in LCOS syntax as described in the [Actions](#) table.
- Link to an entry of the action table.

Default: Blank

2.8.10.2.8 Linked

Links the rule to other rules.

SNMP ID: 2.8.10.2.8

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Yes
- No

Default: No

2.8.10.2.9 Priority

Priority of the rule.

SNMP ID: 2.8.10.2.9

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- 0 to 255

Default: Blank

2.8.10.2.10 Active

Switches the rule on/off.

SNMP ID: 2.8.10.2.10

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Yes
- No

Default: Yes

2.8.10.2.11 VPN rule

Activates the rule for creating VPN rules.

SNMP ID: 2.8.10.2.11

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Yes
- No

Default: No

2.8.10.2.12 Stateful

When this option is enabled, a check is performed as to whether a connection is being established correctly. Erroneous packets are discarded whilst the connection is being established. If this option is disabled, all packets for which this rule applies are accepted.

Furthermore, this option is enabled for the automatic protocol recognition for FTP, IRC, PPTP necessary to be able to open a port in the firewall for each data connection.

The test for portscans/SYN flooding is also enabled/disabled with this option. This can exclude particular, heavily-frequented servers from the test, meaning that limits for half-open connections (DOS) or port requests (IDS) do not have to be set so high that they effectively become useless.

SNMP ID: 2.8.10.2.12

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Yes
- No

Default: Yes

2.8.10.2.13 Comment

Comment for this entry.

SNMP ID: 2.8.10.2.13

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- Max. 64 characters

Default: Blank

2.8.10.2.14 Routing tag

Routing tag for the rule.

SNMP ID: 2.8.10.2.14

Telnet path: /Setup/IP-Router/Firewall/Rules

Possible values:

- 0 to 65535

Default: 0

2.8.10.2.15 Source tag

The source tag (the expected interface- or routing tag) is used to identify the ARF context from which a packet was received. This can be used to restrict firewall rules to certain ARF contexts.

SNMP ID:

2.8.10.2.15

Telnet path:

Setup > IP-Router > Firewall > Rules

Possible values:

0 - 65535

Comment

- 65535: The firewall rule is applied if the expected interface- or routing tag is 0.
- 1 - 65534: The firewall rule is applied if the expected interface- or routing tag is 1...65534.
- 0: Wildcard. The firewall rule is applied to all ARF contexts (the expected interface- or routing tag is 0...65535).

Default:

0

2.8.10.3 Filter list

The filter list is generated from the rules in the firewall. The filters it contains are static and can only be changed when firewall rules are added, edited or deleted..

SNMP ID: 2.8.10.3

Telnet path: /Setup/IP-Router/Firewall

2.8.10.3.1 Index

Index for this entry in the list.

SNMP ID: 2.8.10.3.1

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.2 Protocol

TCP protocol for data packets processed by this entry.

SNMP ID: 2.8.10.3.2

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.3 Source address

Source IP address for data packets processed by this entry.

SNMP ID: 2.8.10.3.3

Telnet path: /Setup/IP-Router/Firewall/Filter-List

Possible values:

- Valid IP address.

2.8.10.3.4 Source netmask

Source IP netmask for data packets processed by this entry.

SNMP ID: 2.8.10.3.4

Telnet path: /Setup/IP-Router/Firewall/Filter-List

Possible values:

- Valid IP address.

2.8.10.3.5 S-St. (source start)

Start address of range of source IP addresses whose data packets are processed by this entry.

SNMP ID: 2.8.10.3.5

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.6 S-End (source end)

End address of the range of source IP addresses whose data packets are processed by this entry.

SNMP ID: 2.8.10.3.6

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.7 Destination address

Destination IP address for data packets processed by this entry.

SNMP ID: 2.8.10.3.7

Telnet path: /Setup/IP-Router/Firewall/Filter-List

Possible values:

- Valid IP address.

2.8.10.3.8 Destination netmask

Destination IP netmask for data packets processed by this entry.

SNMP ID: 2.8.10.3.8

Telnet path: /Setup/IP-Router/Firewall/Filter-List

Possible values:

- Valid IP address.

2.8.10.3.9 D-St.

Start address of range of destination IP addresses whose data packets are processed by this entry.

SNMP ID: 2.8.10.3.9

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.10 D-End

Finish address of range of destination IP addresses whose data packets are processed by this entry.

SNMP ID: 2.8.10.3.10

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.11 Action

Action performed for the data packets processed by this entry.

SNMP ID: 2.8.10.3.11

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.13 Source MAC

Source MAC address for data packets processed by this entry.

SNMP ID: 2.8.10.3.13

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.14 Destination MAC

Destination MAC address for data packets processed by this entry.

SNMP ID: 2.8.10.3.14

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.15 Linked

Indicates whether further firewall rules are applied after this action.

SNMP ID: 2.8.10.3.15

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.16 Priority

Priority for this entry.

SNMP ID: 2.8.10.3.16

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.17 Routing tag

This routing tag is added to data packets processed by this entry.

SNMP ID: 2.8.10.3.17

Telnet path: /Setup/IP-Router/Firewall/Filter-List

2.8.10.3.18 Source tag

The source tag (the expected interface- or routing tag) is used to identify the ARF context from which a packet was received.

SNMP ID:

2.8.10.3.18

Telnet path:**Setup > IP-Router > Firewall > Filter-List****2.8.10.4 Actions**

A firewall action comprises of a condition, a limit, a packet action and other measures.

As with the elements of the object table, firewall actions can be given a name and be combined with each other in any way recursively. The maximum recursion depth is limited to 16. They can also be entered into the actions field of the rules table directly.

SNMP ID: 2.8.10.4**Telnet path:** /Setup/IP-Router/Firewall**2.8.10.4.1 Name**

Specify a unique name for this action.

SNMP ID: 2.8.10.4.1**Telnet path:** /Setup/IP-Router/Firewall/Actions**Possible values:**

- Max. 32 characters

Default: Blank**2.8.10.4.2 Description****SNMP ID:** 2.8.10.4.2**Telnet path:** /Setup/IP-Router/Firewall/Actions

In the actions table, firewall actions are combined as any combination of conditions, limits, packet actions and other measures.

Possible values:

A firewall action comprises of a condition, a limit, a packet action and other measures. In the actions table, firewall actions are made up of combinations of any of the following elements.

Conditions**Table 6: Conditions for firewall actions**

Condition	Description	Object ID
Connect filter	The filter is active if there is no physical connection to the destination of the packet	@c
DiffServ filter	The filter is active if the packet contains the specified Differentiated Services Code Point (DSCP)	@d
Internet filter	The filter is active if the packet was received, or is to be sent, via the default route	@i

Condition	Description	Object ID
VPN filter	The filter is active if the packet was received, or is to be sent, via a VPN connection	@v

 If no further action is specified for the “Connect” or “Internet” filter, a combination of these filters is implicitly adopted with the “Reject” action.

Limits

Each firewall action can be associated with a limit, which triggers the action if it is exceeded. Action chains can be formed by combining multiple limits for a filter. Limit objects are generally initiated with %L, followed by:

- Relation: connection-related (c) or global (g)
- Type: Data rate (d), number of packets (p), or packet rate (b)
- Limit value
- Other parameters (e.g., time and size)

The following limits are available:

Table 7: Limits for firewall actions

Limit	Description	Object ID
Data (abs)	Absolute number of kilobytes over the connection, after which the action is performed	%lcd
Data (rel)	Number of kilobytes per second, minute, hour over the connection, after which the action is performed	%lcds , %lcdm , %lcdh
Packet (abs)	Absolute number of packets over the connection, after which the action is performed	%lcp
Packet (rel)	Number of packets per second, minute, hour, or absolute over the connection, after which the action is performed	%lcps , %lcpm , %lcpH
Global data (abs)	Absolute number of kilobytes sent to or received from the destination computer, after which the action is performed	%lgd
Global data (rel)	Number of kilobytes per second, minute, or hour sent to or received from the destination computer, after which the action is performed	%lgds , %lgdm , %lgdh
Global packet (abs)	Absolute number of packets sent to or received from the destination computer, after which the action is performed	%lgp
Global packet (rel)	Number of packets per second, minute, or hour sent to or received from the destination computer, after which the action is performed	%lgps , %lgpm , %lgph
Receive option	Limit applies to the receive direction only (in combination with the above limitations). Examples are given in the object ID column	%lgdsr , %lcdsr
Transmit option	Limit applies to the transmit direction only (in combination with the above limitations). Examples are given in the object ID column	%lgdst , %lcdst

 If an action is specified without a limit, a packet limit is used that is immediately exceeded on the first packet.

Quality-of-service objects

Another limit object is the Quality-of-service object (or QoS object) that allows you to define a minimum throughput or a minimum bandwidth, either per connection or globally. It is possible to specify any of the limits that apply to the normal limit objects, such as connection-related or global minimums, absolute or time-dependent (relative) minimums, and packet- or data-related minimums. The same conventions apply as for the limit objects.

QoS objects are invoked by the token `%q`, and they are only different from limit objects in that they initially have an implicit "accept" action, i.e. after the threshold has been exceeded the packets that follow are still accepted.

- All packets that pass through a filter with a QoS object are transmitted preferentially by the device (corresponding to a 'low delay' flag set in the TOS field of the IP header) as long as the quantity of transmitted packets or data is less than the specified threshold.
- If the threshold is exceeded, the actions behind the QoS object are executed. This combination of QoS and limit objects can be used to set a minimum and maximum bandwidth for a service.

For example, the description below results in a minimum bandwidth of 32 kbps per connection and a maximum bandwidth of 256 kbps for all connections:

```
%a %qcds32%a %lgds256%d
```

In this case we can avoid explicitly specifying the accept action, either as the main action or as the triggered action, and the description be abbreviated as follows:

```
%qcds32 %lgds256%d
```

If the minimum and maximum bandwidths of a channel should be the same, then the drop action can be specified directly in the QoS object (abbreviated notation):

```
%qcds32%d
```

In this case, a minimum bandwidth of 32 kbps is reserved and, at the same time, all packets that are to be transmitted above this bandwidth are dropped. This formulation is thus synonymous with `%a %qcds32%a %lgds32%d`.

The following objects are available:

Table 8: QoS objects for firewall actions

QoS object	Description	Object ID
Reserve minimum and maximum bandwidth	Reserves the specified bandwidth according to the other parameters, either globally or per connection	<code>%q</code>
Force minimum or maximum bandwidth	Forces the specified bandwidth. If the requested bandwidth is unavailable, the device refuses the connection.	<code>%qf</code>

Packet actions

Table 9: Packet actions for firewall actions

Packet action	Description	Object ID
Accept	The packet is accepted.	<code>%a</code>
Reject	The packet is rejected with a corresponding error message.	<code>%r</code>
Drop	The packet is dropped silently.	<code>%d</code>
External check	The packet is passed another module for an external check. The <code>%x</code> follows the identifier of the module performing the check. Possible values: <ul style="list-style-type: none"> ■ <code>%xc</code> for the content filter, followed by a previously defined content-filter profile, e.g. <code>%xcCF-BASIC-PROFILE</code>. 	<code>%x</code>

- ! These packet actions can be combined with one another in any way. For nonsensical or ambiguous actions (such as Accept + Drop), the more secure one is taken - "Drop" in this example.

Other measures

Apart from packet actions, the firewall can perform other actions once the limits have been reached. For example, the firewall can send notifications over various channels, or block ports or hosts for a certain period.

The following measures are available:

Table 10: Other measures for firewall actions

Countermeasures	Description	Object ID
Syslog	Provides a detailed message via Syslog.	%s
E-mail	Sends an e-mail to the administrator.	%m
SNMP	Sends an SNMP trap	%n
Close port	Closes the destination port of the packet for a configurable time	%p
Deny host	Blocks the sender address of the packet for a configurable time	%h
Disconnect	Disconnects the physical connection to the remote site over which the packet was received or is to be sent.	%t
Zero limit	Resets the limit counter (see below) to 0 when the trigger threshold is exceeded	%z
Fragmentation	Forces the fragmentation of all packets not matching the rule.	%f

- ! When the "Close port" action is run, an entry is made in a block list with which all packets sent to the respective computer and port are discarded. For the "Close port" object, a block time in seconds, minutes or hours can be specified. This is noted directly behind the object ID. This time is made up of the identifier for the time unit (h, m, s for hour, minute, second) as well as the actual time specification. For example, %pm10 blocks the port for 10 minutes. "Minutes" is used as the unit if no time unit is specified. (%p10 is therefore equivalent to %pm10)

- ! If the "Deny host" action is run, the sender of the packet is entered into a block list. From this moment on, all packets received from the blocked computer are discarded. The "Deny host" object can also be given a block time, formed as described for the "Close port" option.

- ! The "fragmentation" action can be applied directionally (e.g. %ft512 fragments transmitted packets and %fr512 fragments received packets to 512 bytes) or, instead of hard fragmentation, it can reduce the PMTU only (%fp512 reduces the PMTU to 512 bytes). The PMTU reduction can also be defined depending on direction (%fpt512, %fpr512). The "Fragmentation" action applies at all times, irrespective of whether a limit has been exceeded or not.

Default: Blank

2.8.10.5 Connection list

Established connections are entered into the connection list if the checked packet is accepted by the filter list. The connection list records the source and destination, the protocol, and the port that a connection is currently allowed to use. The list also indicates how long the entry remains in the list and which firewall rule generated the entry. This list is highly dynamic and always "on the move".

SNMP ID: 2.8.10.5

Telnet path: /Setup/IP-Router/Firewall

2.8.10.5.1 Source address

IP address of the station that established a connection.

SNMP ID: 2.8.10.5.1

Telnet path: /Setup/IP-Router/Firewall/Connection-List

Possible values:

- Valid IP address.

2.8.10.5.2 Destination address

Destination IP address to which a connection was established.

SNMP ID: 2.8.10.5.2

Telnet path: /Setup/IP-Router/Firewall/Connection-List

Possible values:

- Valid IP address.

2.8.10.5.3 Protocol

Protocol allowed on this connection.

SNMP ID: 2.8.10.5.3

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.4 Source port

Source port of the station that established a connection.

SNMP ID: 2.8.10.5.4

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.5 Destination port

Destination port to which a connection was established.

SNMP ID: 2.8.10.5.5

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.6 Timeout

Lease for this entry in the table.

SNMP ID: 2.8.10.5.6

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.7 Flags

The flags are used to store information on the connection state and other (internal) information to a bit field.

The states can have the following values: New, establish, open, closing, closed, rejected (corresponding to the TCP flags: SYN, SYN ACK, ACK, FIN, FIN ACK and RST).

UDP connections know the states, open and closing (the latter only if the UDP connection is linked by a stateful control channel. This is the case with H.323, for example).

Telnet path: /Setup/IP-Router/Firewall/Connection-List

Possible values:

- 00000001 TCP: SYN sent
- 00000002 TCP: SYN/ACK received
- 00000004 TCP: Wait for ACK from server
- 00000008 all: Connection open
- 00000010 TCP: FIN received
- 00000020 TCP: FIN sent
- 00000040 TCP: RST sent or received
- 00000080 TCP: Session being restored
- 00000100 FTP: Passive FTP connection being established
- 00000400 H.323: Associated T.120 connection
- 00000800: Connection via loopback interface
- 00001000: Check linked rules
- 00002000: Rule is linked
- 00010000: Destination is on "local route"
- 00020000: Destination is on default route
- 00040000: Destination is on VPN route
- 00080000: No physical connection established
- 00100000: Source is on default route
- 00200000: Source is on VPN route
- 00800000: No route to destination
- 01000000: Contains global action with condition

2.8.10.5.8 Filter rule

Shows the filter rule that generated the entry.

SNMP ID: 2.8.10.5.8

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.9 Source route

Source route used to establish this connection.

SNMP ID: 2.8.10.5.9

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.10 Destination route

Destination route to which a connection was established.

SNMP ID: 2.8.10.5.10

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.5.11 Routing tag

Connection routing tag.

SNMP ID: 2.8.10.5.11

Telnet path: /Setup/IP-Router/Firewall/Connection-List

2.8.10.6 Host block list

The port blocking list contains those stations that are blocked for a certain time due to a firewall event. This list is dynamic and new entries can be added continuously by corresponding firewall events; entries disappear automatically after the blocking time expires.

SNMP ID: 2.8.10.6

Telnet path: /Setup/IP-Router/Firewall

2.8.10.6.1 Source address

Source IP address that is blocked by this entry.

SNMP ID: 2.8.10.6.1

Telnet path: /Setup/IP-Router/Firewall/Host-Block-List

Possible values:

- Valid IP address.

2.8.10.6.2 Timeout

Lease for this entry in the table.

SNMP ID: 2.8.10.6.2

Telnet path: /Setup/IP-Router/Firewall/Host-Block-List

2.8.10.6.3 Filter rule

Shows the filter rule that generated the entry.

SNMP ID: 2.8.10.6.3

Telnet path: /Setup/IP-Router/Firewall/Host-Block-List

2.8.10.7 Port block list

The port blocking list contains those protocols and services that are blocked for a certain time due to a firewall event. This list is dynamic and new entries can be added continuously by corresponding firewall events; entries disappear automatically after the blocking time expires.

SNMP ID: 2.8.10.7

Telnet path: /Setup/IP-Router/Firewall

2.8.10.7.1 Destination address

Destination IP address that is blocked by this entry.

SNMP ID: 2.8.10.7.1

Telnet path: /Setup/IP-Router/Firewall/Port-Block-List

Possible values:

- Valid IP address.

2.8.10.7.2 Protocol

Protocol that is blocked by this entry.

SNMP ID: 2.8.10.7.2

Telnet path: /Setup/IP-Router/Firewall/Port-Block-List

2.8.10.7.3 Destination port

Destination port blocked by this entry.

SNMP ID: 2.8.10.7.3

Telnet path: /Setup/IP-Router/Firewall/Port-Block-List

2.8.10.7.4 Timeout

Lease for this entry in the table.

SNMP ID: 2.8.10.7.4

Telnet path: /Setup/IP-Router/Firewall/Port-Block-List

2.8.10.7.5 Filter rule

Shows the filter rule that generated the entry.

SNMP ID: 2.8.10.7.5

Telnet path: /Setup/IP-Router/Firewall/Port-Block-List

2.8.10.8 Max. half-open connections

Denial-of-Service attacks take advantage of inherent weaknesses in the TCP/IP protocol in combination with poor implementations. Attacks which target these inherent weaknesses include SYN Flood and Smurf. Attacks which target erroneous implementations include those operating with erroneously fragmented packets (e.g. Teardrop) or with fake sender addresses (e.g. Land). Your device detects most of these attacks and reacts with appropriate countermeasures.

SNMP ID: 2.8.10.8

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- 100 to 9999

Default: 100

2.8.10.9 DoS action

This is where you can specify what action should be taken with packets that activate or exceed the trigger. You can transfer the packets, drop them uncommented or reject them using ICMP reject (i.e. the sender is informed).

SNMP ID: 2.8.10.9

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Transmit
- Drop
- Reject

Default: Drop

2.8.10.10 Admin e-mail

If you wish to be notified of predefined events (DoS, IDS or when limits are exceeded) you must specify a valid e-mail address here.

SNMP ID: 2.8.10.10

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Max. 255 characters

 For e-mail messaging, you have to enter the necessary settings into the main group "Log & Trace" in the subsection "SMTP".

2.8.10.11 Operating

You can switch the entire firewall on or off here. The firewall inspects and counts every single incoming and outgoing packet. Depending on the protocol in question, it temporarily opens the channels that are required by a local station for processing a request. Furthermore individual networks, peers, services or protocols can be preferred, limited or blocked.

SNMP ID: 2.8.10.11

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Up
- Down

Default: Operating

 Defined VPN rules continue to be observed even with the firewall switched off.

2.8.10.12 Port scan threshold

Intrusion detection system (IDS). Your device detects most unauthorized intrusion attempts and can respond with countermeasures that can be configured here.

SNMP ID: 2.8.10.12

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- 50 to 9999

Default: 50

2.8.10.13 IDS action

This is where you can specify what action should be taken with packets that activate or exceed the trigger. You can transfer the packets, drop them uncommented or reject them using ICMP reject (i.e. the sender is informed).

SNMP ID: 2.8.10.13

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Transmit
- Drop
- Reject

Default: Drop

2.8.10.14 Ping block

A controversial method of increasing security is to conceal the router by not responding to ping and traceroute requests (ping blocking). This is controversial because the failure to answer can also betray the existence of a device. If there truly is no device present, the previous router will respond to the relevant packets with 'undeliverable' as it is unable to deliver them. However, if the previous router no longer responds with a corresponding rejection, the packet is 'deliverable' and,

regardless of the recipient's subsequent behavior, is most certainly present. It is not possible to simulate the behavior of the previous router without keeping your device offline or switching it off (and thus making it unreachable for the services you yourself request).

SNMP ID: 2.8.10.14

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Off
- Always
- WAN
- Default route

Default: Off

2.8.10.15 Stealth mode

A controversial method of increasing security is to conceal the router by not conforming to standards and rejecting TCP and UDP requests, but by ignoring them (stealth mode). This is controversial because the failure to answer can also betray the existence of a device. If there truly is no device present, the previous router will respond to the relevant packets with 'undeliverable' as it is unable to deliver them. However, if the previous router no longer responds with a corresponding rejection, the packet is 'deliverable' and, regardless of the recipient's subsequent behavior, is most certainly present. It is not possible to simulate the behavior of the previous router without keeping your device offline or switching it off (and thus making it unreachable for the services you yourself request).

SNMP ID: 2.8.10.15

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Off
- Always
- WAN
- Default route

Default: Off

2.8.10.16 Authentication port

Hiding TCP or UDP ports will cause problems on masked connections where so-called 'authenticate' or 'ident' queries, as used by some mail and news servers to request additional information from users, are no longer rejected correctly. These servers then time out, resulting in considerable delays in the delivery of mail or news. In order to overcome this problem when stealth mode is switched on, stealth mode is deactivated temporarily for the port in question. The firewall recognizes that the internal station's wish to establish contact with a mail (SMTP, POP3, IMAP2) or news server (NNTP) and opens the port for 20 seconds. You can use this option to suppress the temporary deactivation of stealth mode for the authentication port.

SNMP ID: 2.8.10.16

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Up
- Down

Default: Down

2.8.10.17 Deny session recover

The firewall opens appropriate channels for each session initiated and its associated connections (e.g. FTP with control and data connections) for a certain period. If there is no communication over the connection for a defined period of time (setting in the IP router masquerading), then the session is considered to be ended and the channels associated with the connections are closed. Selecting 'session recover' determines the behavior of the firewall when receiving packets which appear to belong to an earlier session. The packets are dropped or it is assumed that a session existed but that no communication took place for too long. In this case, an equivalent session can be reestablished. The latter behavior can in general be allowed or forbidden. Denial of a session can be restricted to the default route or to WAN sessions.

SNMP ID: 2.8.10.17

Telnet path: /Setup/IP-Router/Firewall

Possible values:

- Off - always permitted
- Always - always forbidden
- WAN - forbidden over WAN
- Default-route - forbidden on default route

Default: Default-route - forbidden on default route

2.8.10.19 Open port list

The port blocking list contains protocols and services that a firewall event has permitted for a certain time. This list is dynamic and new entries can be added continuously by corresponding firewall events; entries disappear automatically after the blocking time expires.

SNMP ID: 2.8.10.19

Telnet path: /Setup/IP-Router/Firewall

2.8.10.19.1 Source address

Source IP address that can be used by the open ports and protocols in this entry.

SNMP ID: 2.8.10.19.1

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

Possible values:

- Valid IP address.

2.8.10.19.2 Destination address

Destination IP address to which a connection may be established using the open ports and protocols in this entry.

SNMP ID: 2.8.10.19.2

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

Possible values:

- Valid IP address.

2.8.10.19.3 Protocol

Protocol opened by this entry.

SNMP ID: 2.8.10.19.3

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

2.8.10.19.5 Destination port

Destination port opened by this entry.

SNMP ID: 2.8.10.19.5

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

2.8.10.19.6 Timeout

Lease for this entry in the table.

SNMP ID: 2.8.10.19.6

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

2.8.10.19.8 Filter rule

Shows the filter rule that generated the entry.

SNMP ID: 2.8.10.19.8

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

2.8.10.19.9 Source route

Source route used to establish this connection.

SNMP ID: 2.8.10.19.9

Telnet path: /Setup/IP-Router/Firewall/Open-Port-List

2.8.10.20 Applications

This menu contains the configuration of individual firewall applications.

SNMP ID: 2.8.10.20

Telnet path: /Setup/IP-Router/Firewall

2.8.10.20.1 FTP

This menu contains the configuration of FTP for your firewall.

SNMP ID: 2.8.10.20.1

Telnet path: /Setup/IP-Router/Firewall/Applications

2.8.10.20.1.1 FTP block

When an FTP session is identified on any port, the countermeasures configured here are taken. 'FTP block' specifies whether and on what routes any type of FTP should be given special treatment.

SNMP ID: 2.8.10.20.1.1

Telnet path: /Setup/IP-Router/Firewall/Applications/FTP

Possible values:

- Off
- Always
- WAN
- Default route

Default: No

2.8.10.20.1.2 Active FTP block

When an FTP session is identified on any port, the countermeasures configured here are taken. 'Block active FTP' specifies whether and on what routes active FTP should be given special treatment.

SNMP ID: 2.8.10.20.1.2

Telnet path: /Setup/IP-Router/Firewall/Applications/FTP

Possible values:

- No
- Always
- WAN
- Default route

Default: No

2.8.10.20.1.3 Minimum port

When an FTP session is identified on any port, the countermeasures configured here are taken. 'Minimum port number' specifies the smallest permitted port for active FTP.

SNMP ID: 2.8.10.20.1.3

Telnet path: /Setup/IP-Router/Firewall/Applications/FTP

Possible values:

- 1024 to 9999

Default: 1024

2.8.10.20.1.4 Check host IP

When an FTP session is identified on any port, the countermeasures configured here are taken. 'Check host IP' specifies whether and on what routes the address transmitted in the FTP command should be checked against the source address of the FTP client. If it does not match, the countermeasures configured below will be taken. This check will of course be skipped if a site-to-site transfer is to take place and is permitted es.

SNMP ID: 2.8.10.20.1.4

Telnet path: /Setup/IP-Router/Firewall/Applications/FTP

Possible values:

- No
- Always
- WAN
- Default route

Default: Default route

2.8.10.20.1.5 FXP block

When an FTP session is identified on any port, the countermeasures configured here are taken. 'FXP block' specifies whether site-to-site transfers (FXP) should be given special treatment.

SNMP ID: 2.8.10.20.1.5

Telnet path: /Setup/IP-Router/Firewall/Applications/FTP

Possible values:

- No
- Always

- WAN
- Default route

Default: Default route

2.8.10.20.2 IRC

This menu contains the configuration of IRC for your firewall.

SNMP ID: 2.8.10.20.2

Telnet path: /Setup/IP-Router/Firewall/Applications

2.8.10.20.2.1 IRC block

When an IRC session is identified on any port, the countermeasures configured here are taken. 'Block IRC' specifies whether and on what routes any type of IRC should be given special treatment.

SNMP ID: 2.8.10.20.2.1

Telnet path: /Setup/IP-Router/Firewall/Applications/IRC

Possible values:

- No
- Always
- WAN
- Default route

Default: No

2.8.10.20.2.2 DDC block

When an IRC session is identified on any port, the countermeasures configured here are taken. 'Block DDC' specifies whether and on what routes Direct-Data-Connect (private chats and file transfers) should be given special treatment.

SNMP ID: 2.8.10.20.2.2

Telnet path: /Setup/IP-Router/Firewall/Applications/IRC

Possible values:

- No
- Always
- WAN
- Default route

Default: No

2.8.10.20.2.3 Minimum port

When an IRC session is identified on any port, the countermeasures configured here are taken. 'Minimum port number' specifies the smallest permitted port for DDC.

SNMP ID: 2.8.10.20.2.3

Telnet path: /Setup/IP-Router/Firewall/Applications/IRC

Possible values:

- 1024 to 9999

Default: 1024

2.8.10.20.2.4 Check host IP

When an IRC session is identified on any port, the countermeasures configured here are taken. 'Check-Host-IP' indicates whether and on what routes the address transmitted in the DDC command should be checked against the source address of the IRC client.

SNMP ID: 2.8.10.20.2.4

Telnet path: /Setup/IP-Router/Firewall/Applications/IRC

Possible values:

- No
- Always
- WAN
- Default route

Default: Default route

2.8.10.20.10 Application action

When an IRC session is identified on any port, the countermeasures configured here are taken.

SNMP ID: 2.8.10.20.10

Telnet path: /Setup/IP-Router/Firewall/Applications

Possible values:

- Transmit
- Drop
- Reject

Default: Reject

2.8.11 Start-WAN-Pool

Enter a range of IP addresses that should be assigned to users dialing into the device..

Each user is automatically assigned a free address from this range. As soon as a user disconnects from the device, the assigned address is freed up and is available for other users.

Telnet path: /Setup/IP-Router

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.12 End WAN pool

Enter a range of IP addresses that should be assigned to users dialing into the device..

Each user is automatically assigned a free address from this range. As soon as a user disconnects from the device, the assigned address is freed up and is available for other users.

Telnet path: /Setup/IP-Router

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.13 Default time list

Time-dependent control allows you to specify different destinations for the default route depending on the day of the week and time.

Telnet path: /Setup/IP-Router

2.8.13.1 Index

Index for this entry in the list.

Telnet path: /Setup/IP-Router/Default-Time-List

2.8.13.2 Days

Specify the days when this entry should be used.

Telnet path: /Setup/IP-Router/Default-Time-List

Possible values:

- Monday
- Tuesday
- Wednesday
- Thursday
- Friday
- Saturday
- Sunday
- Holiday

Default: No days are marked

2.8.13.3 Start

Used to specify the time period during which this entry should be used.

Telnet path: /Setup/IP-Router/Default-Time-List

Possible values:

- 00:00 to 23:59

Default: 0

2.8.13.4 Stop

Used to specify the time period during which this entry should be used.

Telnet path: /Setup/IP-Router/Default-Time-List

Possible values:

- 00:00 to 23:59

Default: 0.999305556

2.8.13.5 Peer

The remote site specified here will become the default route after this entry becomes valid when the defined time period is reached. Here you select the name of a remote site from the list of remote sites.

Telnet path: /Setup/IP-Router/Default-Time-List

Possible values:

- Select from the list of defined peers.

2.8.14 Usage default timetable

Activates the time-dependent control of the default route. The default route is normally used to establish the connection to an Internet provider. The time control allows you to select various Internet providers depending on the time, for example to benefit from the most favorable provider at a certain time of day.

Telnet path: /Setup/IP-Router

Possible values:

- Active
- Inactive

Default: Inactive

 To make use of this mechanism, a default route must have been specified in the routing table. The router specified in the default route is only used during those times that are not covered by the timed control table.

2.8.19 N-N-NAT

The rules in the N:N-NAT table regulate the IP addresses to which source addresses or entire IP networks are translated. These rules must be specified explicitly for each remote site because translation takes place after routing. The remote site reaches the stations or networks at their translated IP address as specified.

Telnet path: /Setup/IP-Router

2.8.19.1 Index

Unique index for the entry

Telnet path: /Setup/IP-Router/N-N-NAT

Possible values:

- Max. 4 characters

Default: Blank

2.8.19.2 Source address

IP address of the computer or network that is to receive an alternative IP address.

Telnet path: /Setup/IP-Router/N-N-NAT

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.19.3 Src-Mask

Netmask of the source range.

Telnet path: /Setup/IP-Router/N-N-NAT

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.19.4 Destination station

Name of the remote device that can be used to access the remote network.

Telnet path: /Setup/IP-Router/N-N-NAT

Possible values:

- Select from the list of defined peers.

Default: Blank

2.8.19.5 New network address

IP addresses or address range to be used for translation.

Telnet path: /Setup/IP-Router/N-N-NAT

Possible values:

- Valid IP address.

Default: 00.0.0

 For the new network address, the same netmask is taken as used by the source address. The following applies with the assignment of source and mapping addresses:

- When translating individual addresses, source and mapping can be assigned in any way.
- When entire address ranges are translated, the computer-related part of the IP address is used directly and only the network-related part of the mapping address is appended. When assigning 10.0.0.0/255.255.255.0 to 192.168.1.0, the server in the LAN with the IP address 10.1.1.99 is necessarily assigned with the mapping address 192.168.1.99.

 The address range for translation must be at least as large as the source address range.

 Please note that the N:N mapping function is only effective when the firewall is activated

2.8.20 Load balancer

This menu contains the configuration of load balancing for your IP router.

Telnet path: /Setup/IP-Router

2.8.20.1 Operating

This is where you can set parameters for load balancing. Load balancing can be used if your provider does not offer true channel bundling. At least one virtual connection must be specified in the load balancing table for this. The maximum number of remote sites that can be bundled depends on how many DSL ports are available for the type of device used.

Telnet path: /Setup/IP-Router/Load-balancer

Possible values:

- Active
- Inactive

Default: Inactive

2.8.20.2 Bundle peers

If your Internet provider offers true channel bundling, it is possible for multiple connections to be combined with the help of load balancing.

Telnet path: /Setup/IP-Router/Load-balancer

2.8.20.2.1 Peer

Unique name for a virtual load-balancing remote site. This remote site can then be used in the routing table.

Telnet path: /Setup/IP-Router/Load-balancer/Bundle-Peers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.8.20.2.2 Bundle peer 1

Name of a previously configured remote site to which the others are to be bundled.

Telnet path: /Setup/IP-Router/Load-balancer/Bundle-Peers

Possible values:

- Max. 16 characters

Default: Blank

2.8.20.2.3 Bundle peer 2

Name of a previously configured remote site to which the others are to be bundled.

Telnet path: /Setup/IP-Router/Load-balancer/Bundle-Peers

Possible values:

- Max. 16 characters

Default: Blank

2.8.20.2.4 Bundle peer 3

Name of a previously configured remote site to which the others are to be bundled.

Telnet path: /Setup/IP-Router/Load-balancer/Bundle-Peers

Possible values:

- Max. 16 characters

Default: Blank

2.8.20.2.5 Bundle peer 4

Name of a previously configured remote site to which the others are to be bundled.

Telnet path: /Setup/IP-Router/Load-balancer/Bundle-Peers

Possible values:

- Max. 16 characters

Default: Blank

2.8.21 VRRP

This menu contains the configuration of VRRP for your IP router.

Telnet path: /Setup/IP-Router

2.8.21.1 Operating

VRRP – Virtual Router Redundancy Protocol – enables multiple physical routers to appear as a single "virtual" router. Of the existing physical routers, one is always the "master". The master is the only router that establishes a data connection to the Internet, for example, and transfers data. Only when the master fails, for example as a result of a power outage or if its Internet connection is dropped, will the other routers become active. They will then negotiate with the VRRP protocol to determine which router should assume the role of master. The new master completely takes over the tasks that were carried out by the previous master.

Telnet path: Setup/IP-Router/VRRP

Possible values:

- Active
- Inactive

Default: Inactive

2.8.21.2 VRRP-List

In the VRRP list you can define and configure virtual routers.

Telnet path: Setup/IP-Router/VRRP

2.8.21.2.1 Router ID

Unique ID for the virtual router.

Telnet path: /Setup/IP-Router/VRRP/VRRP-List

Possible values:

- 0 to 255

Default: 1

2.8.21.2.2 virt.-Adresse

IP address for the virtual router. All routers on which the virtual router is set up must assign this router the same IP address.

Telnet path: /Setup/IP-Router/VRRP/VRRP-List

Possible values:

- Valid IP address.

Default: 00.0.0

2.8.21.2.3 Prio

Main priority for the virtual router. Values between 0 and 255 are permitted. Priority is proportional to the value entered. The values 0 and 255 have special meanings. '0' turns the virtual router off. '255' is only accepted when the virtual router address is identical to the address of the interface that is connected to the router. If this is not the case, the router will be reported by all other routers in their event logs.

Telnet path: /Setup/IP-Router/VRRP/VRRP-List

Possible values:

- 0 to 255

Default: 0

2.8.21.2.4 B-Prio

Backup priority for the virtual router. Values between 0 and 255 are permitted. Priority is proportional to the value entered. The values 0 and 255 have special meanings. 0 disables the virtual router in the event of backup. Checks are conducted regularly in order to determine whether the standard connection can be reestablished. The interval is determined by the Reconnect-Delay parameter. '255' is only accepted when the virtual router address is identical to the address of the interface that is connected to the router. If this is not the case, the router will be reported by all other routers in their event logs. When the backup connection cannot be established in backup mode, then the virtual router switches completely to the standby mode and attempts to reestablish the standard or backup connection at regular intervals.

Telnet path: /Setup/IP-Router/VRRP/VRRP-List

Possible values:

- 0 to 255

Default: 0

2.8.21.2.5 Peer

The entry for the name of the remote site is optional. If a peer name is entered here it will be controlled by VRRP. If, for example, the peer loses its Internet connection backup mode kicks in. If no peer is entered, VRRP can be used to cover a hardware outage. The remote site can still also be assigned to other virtual routers.

Telnet path: /Setup/IP-Router/VRRP/VRRP-List

Possible values:

- Select from the list of defined peers.

Default: Blank

2.8.21.2.6 Comment

This is where you can insert a comment to describe the virtual router.

Telnet path: /Setup/IP-Router/VRRP/VRRP-List

Possible values:

- Max. 64 characters

Default: Blank

2.8.21.3 Reconnect-Delay

The router will no longer be propagated if the backup connection could not be established. The reconnect delay specifies after how many minutes such a router should in this case attempt to establish its main or backup connection. While the attempt is being made, the router will not be propagated.

Telnet path: Setup/IP-Router/VRRP

Possible values:

- 0 to 999 minutes

Default: 30 minutes

2.8.21.4 Advert.-Interval

The advertising interval shows how many seconds until a virtual router is propagated again. All routers in virtual router system must be configured with the same value.

Telnet path: Setup/IP-Router/VRRP

Possible values:

- 0 to 999 seconds

Default: 1 seconds

2.8.21.5 Internal-Services

The Internal services checkbox controls how the router should behave when it is addressed via a virtual router address. In the default 'on' position, the router reacts to DNS and NETBIOS services exactly as if it had been addressed via its actual address. This only occurs when the device itself is the master of the virtual router. The 'off' setting results in RFC-compliant behavior, i.e. relevant packets are rejected.

Telnet path: Setup/IP-Router/VRRP

Possible values:

- Yes
- No

Default: Yes

2.8.22 WAN-Tag-Creation

WAN tag creation defines the source for the assignment of interface tags. Besides assignment via the firewall or direct assignment via the tag table, the interface tag can also be selected based on the effective routing table (static routing entries plus routes learned via RIP). The tag selected from this routing table is for the route that matches both the remote site and the associated network. If the effective routing table contains more than one entry for a remote site with the same network, the smallest tag is used.

Telnet path: /Setup/IP-Router

Possible values:

- Manual: With this setting, the interface tags are determined solely by an entry in the tag table. The routing table has no significance in the assignment of interfaces tags.
- Auto: With this setting, the interface tags are determined initially by an entry in the tag table. If no matching entry is located there, the tag is determined based on the routing table.

Default: Manual:

 The interface tags determined via the tag table and on the basis of the routing table can be overwritten with an appropriate entry in the firewall.

2.8.23 Tag-Table

The tag table enables inbound data packets to be directly assigned with an interface tag that depends on the remote site.

Telnet path: /Setup/IP-Router

2.8.23.1 Peer

Name of the remote site whose packets are to be given interface tags when received.

Telnet path: /Setup/IP-Router/Tag-Table

Possible values:

- Select from the list of defined peers.

Default: Blank

Special values: Multiple remote sites can be configured in one entry by using * as a place holder. If, for example, several remote sites (RAS users) of a company are to be tagged, all appropriate remote sites can be given a name with the prefix

"Company1_". To configure all of the remote sites, just one entry with remote site "Company1_*" can be included in the tag table.

2.8.23.2 Rtg-tag

This interface tag is assigned to the inbound packets of the remote site.

Telnet path: /Setup/IP-Router/Tag-Table

Possible values:

- 0 to 65535

Default: 0

2.8.23.3 Start-WAN-Pool

The start WAN pool represents the beginning of the address pool for the remote site or group of remote sites (when using placeholders to specify remote site). When RAS users dial in, the remote site is assigned an address from the address pool defined here.

Telnet path: /Setup/IP-Router/Tag-Table

Possible values:

- Valid IP address

Default: 00.0.0

2.8.23.4 End-WAN-Pool

The end WAN pool represents the end of the address pool for the remote site or group of remote sites (when using placeholders to specify remote site). When RAS users dial in, the remote site is assigned an address from the address pool defined here.

Telnet path: /Setup/IP-Router/Tag-Table

Possible values:

- Valid IP address

Default: 00.0.0

Special values: If the pool is empty (start and end addresses are 0.0.0.0), the global pool is used.

2.8.23.5 DNS-Default

Using this entry you configure the address that the remote station is given as its DNS server.

If the specified value is 0 . 0 . 0 . 0, your device assigns the DNS server that is configured in the setup menu under **TCP-IP/DNS-Default**. If 0 . 0 . 0 . 0 is also entered there, your device assigns itself as the DNS server.

SNMP ID:

2.8.23.5

Telnet path:

Setup > IP-Router > Tag-Table

Possible values:

Valid IPv4 address

Default:

0.0.0.0

2.8.23.6 DNS-Backup

Using this entry you configure the address that the remote station is assigned as an alternate DNS server.

If the specified value is 0 . 0 . 0 . 0, your device assigns the alternate DNS server that is configured in the setup menu under **TCP-IP/DNS-Backup**.

SNMP ID:

2.8.23.6

Telnet path:

Setup > IP-Router > Tag-Table

Possible values:

Valid IPv4 address

Default:

0.0.0.0

2.8.23.7 NBNS-Default

Using this entry you configure the address that the remote station is assigned as its NBNS server.

If the specified value is 0 . 0 . 0 . 0, your device assigns the NBNS server that is configured in the setup menu under **TCP-IP/NBNS-Default**. If 0 . 0 . 0 . 0 is also entered there, your device assigns itself as the NBNS server, if NetBIOS proxy is enabled.

SNMP ID:

2.8.23.7

Telnet path:

Setup > IP-Router > Tag-Table

Possible values:

Valid IPv4 address

Default:

0.0.0.0

2.8.23.8 NBNS-Backup

Using this entry you configure the address that the remote station is assigned as an alternate NBNS server.

If the specified value is 0 . 0 . 0 . 0, your device assigns the alternate DNS server that is configured in the setup menu under **TCP-IP/NBNS-Backup**.

SNMP ID:

2.8.23.8

Telnet path:

Setup > IP-Router > Tag-Table

Possible values:

Valid IPv4 address

Default:

0.0.0.0

2.9 SNMP

This menu contains the configuration of SNMP.

Telnet path: /Setup

2.9.1 Send traps

When serious errors occur, for example when an unauthorized attempt is made to access the device, it can send an error message to one or more SNMP managers automatically. Activate the option and, in the IP traps table, enter the IP addresses of those computers where the SNMP managers are installed.

Telnet path: /Setup/SNMP

Possible values:

- Yes
- No

Default: No

2.9.2 IP-Traps

You can enter SNMP managers here.

Telnet path: /Setup/SNMP

2.9.2.1 Trap-IP

Enter the IP address of the computer where an SNMP manager is installed.

Telnet path: /Setup/SNMP/IP-Traps

Possible values:

- Valid IP address.

Default: Blank

2.9.2.3 Loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

Telnet path: /Setup/SNMP/IP-Traps

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank



If the list of IP networks or loopback addresses contains an entry named 'DMZ', the associated IP address will be used.

2.9.2.4 Version

Indicates SNMP version that should be used for the traps sent to this receiver.

Telnet path: /Setup/SNMP/IP-Traps

Possible values:

- SNMPv1
- SNMPv2

Default: SNMPv2

2.9.3 Administrator

Name of the device administrator. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 characters

Default: Blank

2.9.4 Location

Location information for this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 characters

Default: Blank

2.9.5 Register monitor

This action allows SNMP agents to log in to the device in order to receive subsequent SNMP traps. The command is specified together with the IP address, the port and the MAC address of the SNMP agent. All three values can be replaced with the wildcard *, in which case the device ascertains the values from the packets received from the SNMP agent.

Telnet path: /Setup/SNMP

Possible values:

- <IP address|*>:<Port|*> <MAC address|*> <W>

Default: Blank

Special values: <W> at the end of the command is necessary if registration is to be effected over a wireless LAN connection.



A LANmonitor need not be explicitly logged in to the device. LANmonitor automatically transmits the login information to the device when scanning for new devices.

2.9.6 Delete monitor

This action allows registered SNMP agents to be removed from the monitor list. The command is specified together with the IP address and the port of the SNMP agent. All three values can be replaced with the wildcard *, in which case the device ascertains the values from the packets received from the SNMP agent.

Telnet path: /Setup/SNMP

Possible values:

- <IP address|*>:<Port|*>

Default: Blank

2.9.7 Monitor table

The monitor table shows all SNMP agents registered with the device.

Telnet path: /Setup/SNMP

2.9.7.1 IP address

IP address of the remote station from where an SNMP agent accesses the device.

Telnet path: /Setup/SNMP/Monitor-Table

Possible values:

- Valid IP address.

2.9.7.2 Port

Port used by the remote device to access the local device with an SNMP agent.

Telnet path: /Setup/SNMP/Monitor-Table

2.9.7.3 Timeout

Timeout in minutes until the remote device is removed from the monitor table.

Telnet path: /Setup/SNMP/Monitor-Table

2.9.7.4 MAC address

MAC address of the remote station from where an SNMP agent accesses the device.

Telnet path: /Setup/SNMP/Monitor-Table

2.9.7.5 Peer

Name of the remote station from where an SNMP agent accesses the device.

Telnet path: /Setup/SNMP/Monitor-Table

Possible values:

- Select from the list of defined peers.

2.9.7.6 Loopback address

Loopback address of the remote station from where an SNMP agent accesses the device.

Telnet path: /Setup/SNMP/Monitor-Table

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

2.9.7.7 VLAN-ID

ID of the VLAN used by the remote device to access the local device with an SNMP agent.

Telnet path: /Setup/SNMP/Monitor-Table

2.9.7.8 LAN-Ifc

LAN Ifc used by the remote device to access the local device with an SNMP agent.

Telnet path: /Setup/SNMP/Monitor-Table

2.9.7.9 Ethernet port

Ethernet port used by the remote device to access the local device with an SNMP agent.

Telnet path: /Setup/SNMP/Monitor-Table

2.9.10 Password required for SNMP read access

This setting specifies whether a password is required to read SNMP messages with an SNMP agent (e.g. LANmonitor).

SNMP ID:

2.9.10

Telnet path:

Setup > SNMP

Possible values:

No

This setting allows information about the state of the device, current connections, reports, etc., to be read out publicly via SNMP ('public' ready-only community enabled).

Yes

This setting only allows information about the state of the device, current connections, reports, etc., to be read out via SNMP after the user authenticates at the device ('public' ready-only community disabled). The authorization can either use the access credentials of the administrator account or those of the individual SNMP community.

Default:

No

2.9.11 Comment-1

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 characters

Default: Blank

2.9.12 Comment-2

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 characters

Default: Blank

2.9.13 Comment-3

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 characters

Default: Blank

2.9.14 Comment-4

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 characters

Default: Blank

2.9.15 Read-Only-Community

This parameter specifies an individual SNMP community for read access. Either specify a master password or a username:password pair. Leave the field empty if you do not wish to use any read-only communities except for 'public' (if activated).

 Disabling the community 'public' has no effect on accessing with the community created here. An individual SNMP read-only community always has an alternative access key, which is not tied to an administrator account.

SNMP ID:

2.9.15

Telnet path:

Setup > SNMP

Possible values:

No direct dependency on other values. However, **Read-Only-Community** under **Setup > SNMP > Read-Only Communities** does add additional read-only communities to the parameters defined here.

Max. 31 characters from [A-Z][a-z][0-9]@{|}~!\$%&'()+-./:;<=>?[\]^_`~`

Default:

empty

2.9.16 Comment-5

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 alphanumerical characters

Default: Blank

2.9.17 Comment-6

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 alphanumeric characters

Default: Blank

2.9.17 Comment-7

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 alphanumeric characters

Default: Blank

2.9.17 Comment-8

Comment on this device. For display purposes only.

Telnet path: /Setup/SNMP

Possible values:

- Max. 255 alphanumeric characters

Default: Blank

2.9.20 Full host MIB

Please select whether a full host MIB is used for the device.

Telnet path: /Setup/SNMP/Full-Host-MIB

Possible values:

- No
- Yes

Default: No

2.9.22 Read-Only-Communities

In this table, you define further write-protected communities for SNMP access.

SNMP ID:

2.9.22

Telnet path:

Setup > SNMP

2.9.22.1 Read-Only-Community

This parameter specifies an additional individual SNMP community for read access. You can specify either a master password or a username:password pair.

 Disabling the community 'public' has no effect on accessing with the community created here. An individual SNMP read-only community always has an alternative access key, which is not tied to an administrator account.

SNMP ID:

2.9.22.1

Telnet path:

Setup > SNMP > Read-Only-Communities

Possible values:

No direct dependency on other values. However, this parameter does supplement the **Read-Only-Community** under **Setup > SNMP** with additional read-only communities.

Max. 31 characters from [A-Z][a-z][0-9]@{|}~!\$%&'()+-./:;<=>?[\]^_`~`

Default:

empty

2.10 DHCP

This menu contains the DHCP settings.

SNMP ID: 2.10

Telnet path: /Setup

2.10.6 Max.-Lease-Time-Minutes

When a client requests an IP address from a DHCP server, it can also ask for a lease period for the address. This values governs the maximum length of lease that the client may request.

Telnet path: Setup/DHCP

Possible values:

- Max. 10 characters

Default: 6000

2.10.7 Default-Lease-Time-Minutes

When a client requests an address without asking for a specific lease period, the address will be assigned the value set here as lease.

Telnet path: Setup/DHCP

Possible values:

- Max. 10 characters

Default: 500

2.10.8 DHCP table

The DHCP table provides an overview of the IP addresses used in the IP networks. The DHCP table is purely a status table where no parameters can be configured.

Telnet path: Setup/DHCP

2.10.8.1 IP address

IP address used by the client.

Telnet path: Setup/DHCP/DHCP-Table

Possible values:

- Valid IP address.

2.10.8.2 MAC-Address

The client's MAC address.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.3 Timeout

Lease for the address assignment in minutes.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.4 Hostname

Name of the client, if it was possible to determine this.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.5 Type

The 'Type' field indicates how the address was assigned. This field may contain the following values:

New: The client made the request for the first time. The DHCP checks that the address to be assigned to the client is unique.

Unknown: When the server checked if the address was unique, it was found that the address had already been assigned to another client. Unfortunately, the DHCP server does not have any way of obtaining further information about this client.

Stat: A client has informed the DHCP server that it has a fixed IP address. This address may not be used for any other clients in the network.

Dyn.: The DHCP server has assigned an address to the client.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.7 Ethernet port

Physical interface connecting the client to the device.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.8 VLAN-ID

The VLAN ID used by the client.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.9 Network name

Name of the IP network where the client is located.

Telnet path: Setup/DHCP/DHCP-Table

2.10.8.10 LAN-Ifc

The LAN interface that this entry refers to.

Telnet path: /Setup/DHCP/DHCP-Table/LAN-Ifc

2.10.8.11 Assignment

This column shows the time stamp (date and time in the format "dd.mm.yyyy hh:mm:ss") when the DHCP assignment for the specified IP address was made.

SNMP ID:

2.10.8.11

Telnet path:

Setup > DHCP > DHCP-Table

2.10.9 Hosts

The bootstrap protocol (BOOTP) can be used to communicate a certain IP address and other parameters to a workstation when it boots up. For this, the workstation's MAC address is entered in the hosts table.

Telnet path: Setup/DHCP

2.10.9.1 MAC-Address

Enter the MAC address of the workstation to which an IP address is to be assigned.

Telnet path: Setup/DHCP/Hosts

Possible values:

- Valid MAC address

Default: 000000000000

2.10.9.2 IP address

Enter the client IP address that is to be assigned to the client.

Telnet path: Setup/DHCP/Hosts

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.9.3 Hostname

Enter the name that is to be used to identify the station. If the station does not communicate its name, the device will use the name entered here.

Telnet path: Setup/DHCP/Hosts

Possible values:

- Max. 30 characters

Default: Blank

2.10.9.4 Image alias

If the client uses the BOOTP protocol, you can select a boot image that the client should use to load its operating system from.

Telnet path: Setup/DHCP/Hosts

Possible values:

- Max. 16 characters

Default: Blank

 You must enter the server providing the boot image and the name of the file on the server in the boot image table.

2.10.9.5 Network name

Enter the name of a configured IP network here. Only if a requesting client is located in this IP network will it be assigned the relevant IP address defined for the MAC address.

Telnet path: Setup/DHCP/Hosts

Possible values:

- Max. 16 characters

Default: Blank

Special values: Blank: The IP address will be assigned if the IP address defined in this field belongs to the range of addresses for the IP network where the requesting client is located.

 If the requesting client is located in an IP network for which there is no corresponding entry in the hosts table, the client will be assigned an IP address from the address pool of the appropriate IP network.

2.10.10 Alias list

The alias list defines the names for the boot images that are used to reference the images in the hosts table.

Telnet path: Setup/DHCP

2.10.10.1 Image alias

Enter any name you wish for this boot image. This name is used when you assign a boot image to a particular client in the station list.

Telnet path: Setup/DHCP/Alias-List

Possible values:

- Max. 16 characters

Default: Blank

2.10.10.2 Image file

Enter the name of the file on the server containing the boot image.

Telnet path: Setup/DHCP/Alias-List

Possible values:

- Max. 60 characters

Default: Blank

2.10.10.3 Image server

Enter the IP address of the server that provides the boot image.

Telnet path: Setup/DHCP/Alias-List

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.18 Ports

The port table is where the DHCP server is enabled for the appropriate logical interface of the device.

Telnet path: Setup/DHCP

2.10.18.2 Port

Select the logical interface for which the DHCP server should be enabled or disabled.

Telnet path: Setup/DHCP/Ports

Possible values:

- Select from the list of logical devices in this device, e.g. LAN-1, WLAN-1, P2P-1-1 etc.

2.10.18.3 Enable-DHCP

Enables or disables the DHCP server for the selected logical interface.

Telnet path: Setup/DHCP/Ports

Possible values:

- Yes
- No

Default: Yes

2.10.19 User class identifier

The DHCP client in the device can supplement the transmitted DHCP requests with additional information to simplify the recognition of request within the network. The vendor class identifier (DHCP option 60) shows the device type, e.g. 'LANCOM L-54ag'. The vendor class ID is always transmitted. The user class ID (DHCP option 77) specifies a user-defined string. The user class ID is only transmitted when the user has configured a value.

Telnet path: Setup/DHCP

Possible values:

- Max. 63 characters

Default: Blank

2.10.20 Network list

If multiple DHCP servers are active in a network, the stations "divide" themselves equally between them. However, the DNS server in devices can only properly resolve the name of the station which was assigned the address information by the DHCP server. In order for the DNS server to be able to resolve the names of other DHCP servers, these can be operated in a cluster. In this operating mode, the DHCP server monitors all DHCP negotiations in the network. It additionally supplements its table with the stations which are registered at the other DHCP servers in the cluster.

A DHCP server's operation in the cluster can be activated or deactivated for each individual ARF network with the associated DHCP settings.

Telnet path: Setup/DHCP/Network-list

2.10.21.2 Network-name

The name of the network which the DHCP server settings apply to.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Max. 16 characters

Default: Blank

2.10.20.2 Start address pool

The first IP address in the pool available to the clients. If no address is entered here the DHCP server takes the first available IP address from the network (as determined by network address and netmask).

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.3 End address pool

The last IP address in the pool available to the clients. If no address is entered here the DHCP server takes the last available IP address from the network (as determined by network address and netmask).

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.4 Netmask

Corresponding netmask for the address pool available to the clients. If no address is entered here the DHCP server uses the netmask from the corresponding network.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.5 Broadcast address

As a rule, broadcast packets in a local network have an address which results from the valid IP addresses and the netmask. In special cases (e.g. when using subnets for a selection of workstations) it may be necessary to use a different broadcast address. In this case the broadcast address is entered into the DHCP module.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0 (broadcast address is determined automatically).

 We recommend that only experienced network specialists change the presetting for the broadcast address. Errors in the configuration can lead to the establishment of undesired and costly connections.

2.10.20.6 Gateway address

As standard, the DHCP server issues its own IP address as the gateway address to computers making requests. If necessary, the IP address of another gateway can also be transmitted if a corresponding address is entered here.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.7 DNS default

IP address of the DNS name server that the requesting workstation should use.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

 If no default or backup DNS server is defined, the device will assign the requesting workstation its own IP address in the relevant ARF network as (primary) DNS server.

2.10.20.8 DNS backup

IP address of the backup DNS server. The workstation will use this DNS server if the first DNS server fails

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 00.0.0

 If no default or backup DNS server is defined, the device will assign the requesting workstation its own IP address in the relevant ARF network as (primary) DNS server.

2.10.20.9 NBNS default

IP address of the NBNS name server that the requesting workstation should use.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.10 NBNS backup

IP address of the backup NBNS name server. The workstation will use this NBNS server if the first NBNS name server fails

Telnet path: Setup/DHCP/Network-list

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.11 Operating

DHCP server operating mode in this network. Depending on the operating mode, the DHCP server can enable/disable itself. The DHCP statistics show whether the DHCP server is enabled.

Telnet path: Setup/DHCP/Network-list**Possible values:**

- No: DHCP server is permanently switched off.
- Yes: DHCP server is permanently switched on. When this value is entered the server configuration (validity of the address pool) is checked. If the configuration is correct then the device starts operating as a DHCP server in the network. Errors in the configuration (e.g. invalid pool limits) will cause the DHCP server to be deactivated. Only use this setting if you are certain that no other DHCP server is active in the LAN.
- Automatic: With this setting, the device regularly searches the local network for other DHCP servers. The LAN-Rx/Tx LED flashes briefly when this search is in progress. If another DHCP server is discovered the device switches its own DHCP server off. If the LANCOM is not configured with an IP address, then it switches into DHCP client mode and queries the LAN DHCP server for an IP address. This prevents unconfigured devices introduced to the network from assigning addresses unintentionally. If no other DHCP server is discovered the device switches its own DHCP server on. If another DHCP server is activated later, then the DHCP server in the LANCOM will be disabled.
- 'Relay requests': The DHCP server is active and receives requests from DHCP clients in the LAN. The device does not respond to requests, but forwards them to a central DHCP server elsewhere in the network (DHCP relay agent mode).
- 'Client mode': The DHCP server is disabled, the device behaves as a DHCP client and obtains its address from another DHCP server in the LAN. Only use this setting if you are certain that another DHCP server is in the LAN and actively assigning IP addresses.

Default: No

 Only use the setting "Yes" if you are certain that no other DHCP server is active in the LAN. Only use the "client mode" setting if you are certain that another DHCP server is in the LAN and actively assigning IP addresses.

2.10.20.12 Broadcast bit

This setting decides whether the broadcast bit from clients is to be checked. If the bit is not checked then all DHCP messages are sent as broadcasts.

Telnet path: Setup/DHCP/Network-list**Possible values:**

- Yes
- No

Default: No

2.10.20.13 Master server

This is where the IP address for the upstream DHCP server is entered where DHCP requests are forwarded when the mode 'Relay requests' is selected for the network.

Telnet path: Setup/DHCP/Network-list**Possible values:**

- Valid IP address.

Default: 0.0.0.0

2.10.20.14 Cache

This option allows the responses from the superordinate DHCP server to be stored in the LANCOM Wireless. Subsequent requests can then be answered by the LANCOM Wireless itself. This option is useful if the superordinate DHCP server can only be reached via a connection which incurs costs.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Yes
- No

Default: No

2.10.20.15 Adaption

This option allows the responses from the superordinate DHCP server to be adapted to the local network. When activated, the LANCOM Wireless adapts the responses from the superordinate DHCP server by replacing the following entries with its own address (or locally configured addresses):

- Gateway
- Network mask
- Broadcast address
- DNS server
- NBNS server
- Server ID

This option is worthwhile if the superordinate DHCP server does not permit the separate configuration for DHCP clients in another network.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Yes
- No

Default: No

2.10.20.16 Cluster

This setting defines whether the DHCP server for this ARF network is to be operated separately or in the cluster.

Telnet path: Setup/DHCP/Network-list

Possible values:

- Yes: With cluster mode activated, the DHCP server monitors all of the ongoing DHCP negotiations in the network, and it additionally supplements its table with the stations which are registered at the other DHCP servers in the cluster. These stations are flagged as "cache" in the DHCP table.
- No: The DHCP server manages information only for the stations connected to it.

Default:

No

 If the lease time for the information supplied by DHCP expires, the station requests a renewal from the DHCP server which supplied the original information. If the original DHCP server does not respond, the station then emits its rebinding request as a broadcast to all available DHCP servers. DHCP servers in a cluster ignore renew requests, which forces a rebinding. The resulting broadcast is used by all of the DHCP servers to update their

entries for the station. The only DHCP server to answer the rebind request is the one with which the station was originally registered. If a station repeats its rebind request, the all DHCP servers in the cluster assume that the original DHCP server is no longer active in the cluster, and they respond to the request. The responses received by the station will have the same IP address, but the gateway and DNS server addresses may differ. From these responses, the station selects a new DHCP server to connect with, and it updates its gateway and DNS server (and other relevant parameters) accordingly.

2.10.20.17 2nd master server

This is where the IP address for an alternative DHCP server is entered where DHCP requests are forwarded when the mode 'Relay requests' is selected for the network.

Telnet path: /Setup/DHCP/Network-list/2nd-Master-Server

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.18 3rd master server

This is where the IP address for an alternative DHCP server is entered where DHCP requests are forwarded when the mode 'Relay requests' is selected for the network.

Telnet path: /Setup/DHCP/Network-list/2nd-Master-Server

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.20.19 4th master server

This is where the IP address for an alternative DHCP server is entered where DHCP requests are forwarded when the mode 'Relay requests' is selected for the network.

Telnet path: /Setup/DHCP/Network-list/2nd-Master-Server

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.10.21 Additional options

DHCP options can be used to send additional configuration parameters to the clients. The vendor class ID (DHCP option 60) shows e.g. the type of device. This table allows additional options for DHCP operations to be defined.

Telnet path: Setup/DHCP

2.10.21.1 Option number

Number of the option that should be sent to the DHCP client. The option number describes the transmitted information. For example "17" (root path) is the path to a boot image that a PC without its own hard disk uses to obtain its operating system via BOOTP.

Telnet path: Setup/DHCP/Additional-Options

Possible values: Max. 3 characters

Default: Blank

 You can find a list of all DHCP options in RFC 2132 – "DHCP Options and BOOTP Vendor Extensions" of the Internet Engineering Task Force (IETF).

2.10.21.2 Network name

Name of the IP network where this DHCP option is to be used.

Telnet path: Setup/DHCP/Additional-Options

Possible values:

- Select from the list of defined IP networks.

Default: Blank

Special values: Blank: If no network name is specified the DHCP option defined in this entry will be used in all IP networks.

2.10.21.3 Option Value

This field defines the contents of the DHCP option. IP addresses are normally specified using the conventional IPv4 notation, e.g. "123.123.123.100". Integer tapes are usually entered in normal decimal digits and string types as simple text. Multiple values in a single field are separated with commas, e.g. "123.123.123.100, 123.123.123.200".

Telnet path: Setup/DHCP/Additional-Options

Possible values:

- Max. 128 characters

 The maximum possible length value depends on the selected option number. RFC 2132 lists the maximum length allowed for each option.

2.10.21.4 Option-Type

Entry type.

Telnet path: Setup/DHCP/Additional-Options

This value depends on the respective option. For option "35" according to RFC 1232, e.g.the ARP cache time is defined as follows:

ARP cache timeout option

This option specifies the timeout in seconds for ARP cache entries.

The time is specified as a 32-bit unsigned integer.

The code for this option is 35, and its length is 4.

Code	Len	Time			
35	4	t1	t2	t3	t4

This description tells you that this the type "32-bit integer" is used for this option.

Possible values:

- String
- Integer8
- Integer16
- Integer32
- IP address

Default: String

 You can find out the type of the option either from the corresponding RFC or from the manufacturer's documentation of their DHCP options.

2.10.22 Vendor-Class-Identifier

The vendor class identifier (DHCP option 60) shows the device type, e. g. 'BAT300-Rail'. The vendor class ID is always transmitted.

SNMP ID:

2.10.22

Telnet path:

Setup > DHCP > Vendor-Class-Identifier

Possible values:

max. 63 characters

Default:

Empty

2.11 Config

Contains the general configuration settings.

SNMP ID: 2.11

Telnet path: /Setup

2.11.3 Password required for SNMP read access

If this option is activated and no password has been set, you will always be requested to set a password when you log in to the device.

Telnet path: Setup/Config

Possible values:

- Yes
- No

Default: No

2.11.4 Maximum connections

The maximum number of simultaneous configuration connections to this device.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 0

Special values: 0 switches the limit off.

2.11.5 Config aging minutes

Specify here the number of minutes after which an inactive TCP configuration connection (e.g. via telnet) is automatically terminated.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 15

2.11.6 Language

Terminal mode is available in English or German. Devices are set with English as the default console language.

Telnet path: Setup/Config

Possible values:

- Deutsch
- English

Default: English

 Please ensure that the language you use to enter commands matches with that set for the console, otherwise scheduler commands will not be observed.

2.11.7 Login errors

In order to protect the configuration of your device against unauthorized access, the device can lock itself after repeated incorrect attempts to log in. Use this setting to specify the number of incorrect login attempts are allowed before the device is locked.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 10

2.11.8 Lock minutes

In order to protect the configuration of your device against unauthorized access, the device can lock itself after repeated incorrect attempts to log in. Enter the period for which the lock is to be active for. Access to the device will only be possible after this period expires.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 45

Special values: 0 switches the lock off.

2.11.9 Administrator EAZ-MSN

If the LANCAP server is to receive incoming calls, enter your ISDN telephone number which is to receive the LANCAP calls into the 'EAZ-MSNs' field. Multiple telephone numbers are separated by semicolons. If no telephone number is entered here, LANCAP receives calls on any of its ISDN telephone numbers.

Telnet path: Setup/Config

Possible values:

- Max. 31 characters

Default: Blank

2.11.10 Display contrast

This item allows you to set the contrast for the display of the device.

Telnet path: /Setup/Config/Display-contrast

Possible values:

- K1 (low contrast) to K8 (high contrast).

Default: K4

2.11.12 WLAN authentication pages only

This setting gives you the option of restricting device access via the Public Spot interface to the Public Spot authentication pages only. All other configuration protocols are automatically blocked.

 Public Spot access to a Public Spot network's configuration (WEBconfig) should always be prohibited for security reasons. We strongly recommend that you enable this setting for Public Spot scenarios!

SNMP ID:

2.11.12

Telnet path:

Setup > Config

Possible values:

No

Yes

Default:

No

2.11.13 TFTP client

Default values for the device configuration, firmware and/or a script can be used if the latest configurations, firmware versions and scripts are always stored under the same name in the same location. In this case, the simple commands LoadConfig, LoadFirmware and LoadScript can be used to load the relevant files.

SNMP ID: 2.11.13

Telnet path: Setup/Config

2.11.13.1 Configuration address

Default path for configuration files when the parameter -f is not specified for LoadConfig commands.

SNMP ID: 2.11.13.1

Telnet path: /Setup/Config/TFTP-Client

Possible values:

- Path specified in the notation //Server/Directory/File name

Default: Blank

2.11.13.2 Configuration filename

Default name of the configuration file when the parameter -f is not specified for LoadConfig commands.

SNMP ID: 2.11.13.2

Telnet path: /Setup/Config/TFTP-Client

Possible values:

- Max. 63 characters

Default: Blank

2.11.13.3 Firmware address

Default path for firmware files when the parameter -f is not specified for LoadFirmware.

SNMP ID: 2.11.13.3

Telnet path: /Setup/Config/TFTP-Client

Possible values:

- Path specified in the notation //Server/Directory/File name

Default: Blank

2.11.13.4 Firmware filename

Default path for the firmware file when the parameter -f is not specified for LoadFirmware.

SNMP ID: 2.11.13.4

Telnet path: /Setup/Config/TFTP-Client

Possible values:

- Max. 63 characters

Default: Blank

2.11.13.6 Script address

Default path for scripts when the parameter -f is not specified for LoadScript.

SNMP ID: 2.11.13.6

Telnet path: /Setup/Config/TFTP-Client

Possible values:

- Path specified in the notation //Server/Directory/File name

Default: Blank

2.11.13.7 Script filename

Default path for the script when the parameter -f is not specified for LoadScript.

SNMP ID: 2.11.13.7

Telnet path: /Setup/Config/TFTP-Client

Possible values:

- Max. 63 characters

Default: Blank

2.11.15 Access table

Here you can set the access rights separately for each network and configuration protocol. You can also set limitations on the access to certain stations.

Telnet path: Setup/Config

2.11.15.1 Interface

The LAN interface that this entry refers to.

Telnet path: /Setup/Config/Access-Table

2.11.15.2 Telnet

Use this option to set the access rights for configuring the device via the TELNET protocol. This protocol is required for text-based configuration of the device with the Telnet console, which is independent of the operating system.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: Yes

2.11.15.3 TFTP

Use this option to set the access rights for configuring the device via the TFTP protocol (Trivial File Transfer Protocol). This protocol is required, for example, for configuration using the LANconfig application.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: Yes

2.11.15.4 HTTP

Use this option to set the access rights for configuring the device via the HTTP protocol (Hypertext Transfer Protocol). This protocol is required for configuring the device via the implemented web-based browser interface independent of the operating system.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: Yes

2.11.15.5 SNMP

Use this option to set the access rights for configuring the device via the SNMP protocol (Simple Network Management Protocol). This protocol is required, for example, for configuring the device using the LANmonitor application.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: Yes

2.11.15.6 HTTPS

Use this option to set the access rights for configuring the device via the HTTPS protocol (Hypertext Transfer Protocol Secure or HTTP via SSL). This protocol is required for configuring the device via the implemented web-browser interface independent of the operating system.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: Yes

2.11.15.7 Telnet-SSL

Use this option to set the access rights for configuring the device via the TELNET protocol. This protocol is required for text-based configuration of the device with the Telnet console, which is independent of the operating system.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: LAN: Yes, WAN:No

2.11.15.8 SSH

Use this option to set the access rights for configuring the device via the TELNET/SSH protocol. This protocol is required for configuring the device securely via the implemented Telnet console from text-based systems independent of the operating system.

Telnet path: /Setup/Config/Access-Table

Possible values:

- VPN
- Yes
- Read
- No

Default: Yes

2.11.16 Screen height

Specifies the maximum height of the screen in lines. Entering 0 here causes the device to determine optimum screen height automatically when you log in.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 24

Special values: 0

2.11.17 Prompt

This value sets the prompt on the command line.

Telnet path: Setup/Config

Possible values:

- Max. 31 characters with the following variables:
- %f: Starts a [Test] if you previously entered the command 'flash no' on the command line. The command 'flash no' activates the test mode for the configuration changes outlined below. When test mode is enabled, the device saves the changes to the configuration in RAM only. As the device's RAM is deleted during a reboot, all of the configuration changes made in test mode are lost. The [Test] display alerts the administrator about this potential loss of changes to the configuration.
- %u: User name
- %n: Device name
- %p: Current path
- %t: Current time
- %o: Current operating time

Default: Blank

2.11.18 LED test

Activates the test mode for the LEDs to test LED function in different colors.

Telnet path: Setup/Config

Possible values:

- Off: Switches all LEDs off
- Red Switches all LEDs on that emit red.
- Green: Switches all LEDs on that emit green.
- Orange Switches all LEDs on that emit orange.
- No_Test: Normal LED operating mode.

Default: No_Test:

2.11.20 Cron table

CRON jobs are used to carry out recurring tasks on a LANCOM device automatically at certain times. If the installation features a large number of active devices, all of which are subjected to the same CRON job at the same time (e.g. updating a configuration by script), unpleasant side effects can result if, for example, all devices try to establish a VPN connection at once. To avoid these effects, the CRON jobs can be set with a random delay time between 0 and 59 minutes.

Telnet path: Setup/Config

2.11.20.1 Index

Index for this entry.

Telnet path: /Setup/Config/Cron-Table

2.11.20.2 Minute

The value defines the point in time when a command is to be executed. With no value entered, it is not included in the controlling. A comma-separated list of values can be entered, or alternatively a range of minimum and maximum values.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Max. 50 characters

Default: Blank

2.11.20.3 Hour

The value defines the point in time when a command is to be executed. With no value entered, it is not included in the controlling. A comma-separated list of values can be entered, or alternatively a range of minimum and maximum values.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Max. 50 characters

Default: Blank

2.11.20.4 DayOfWeek

The value defines the point in time when a command is to be executed. With no value entered, it is not included in the controlling. A comma-separated list of values can be entered, or alternatively a range of minimum and maximum values.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- 0: Sunday
- 1: Monday
- 2: Tuesday
- 3: Wednesday
- 4: Thursday
- 5: Friday
- 6: Saturday

Default: Blank

2.11.20.5 Day

The value defines the point in time when a command is to be executed. With no value entered, it is not included in the controlling. A comma-separated list of values can be entered, or alternatively a range of minimum and maximum values.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Max. 50 characters

Default: Blank

2.11.20.6 Month

The value defines the point in time when a command is to be executed. With no value entered, it is not included in the controlling. A comma-separated list of values can be entered, or alternatively a range of minimum and maximum values.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- 0: Sunday
- 1: Monday
- 2: Tuesday
- 3: Wednesday
- 4: Thursday
- 5: Friday
- 6: Saturday

Default: Blank

2.11.20.7 Command

The command to be executed or a comma-separated list of commands. Any LANCOM command-line function can be executed.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Max. 100 characters

Default: Blank

2.11.20.8 Base

The time base field determines whether time control is based on real time or on the device's operating time.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Real-Time: These rules evaluate all time/date information. Rules based on real-time can only be executed if the device has a time from a valid source, e.g. via NTP.
- Operation-Time: These rules only evaluate the minutes and hours since the last time the device was started.

Default: Real time

2.11.20.9 Active

Activates or deactivates the entry.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Yes
- No

Default: Yes

2.11.20.10 Owner

An administrator defined in the device can be designated as owner of the CRON job. If an owner is defined, then the CRON job commands will be executed with the rights of the owner.

Telnet path: /Setup/Config/Cron-Table

Possible values:

- Max. 16 characters

Default: Blank**2.11.20.11 Variation**

This parameter specifies the maximum delay in minutes for the start of the CRON job after the set start time. The actual delay time is determined randomly and lies between 0 and the time entered here.

Telnet path: /Setup/Config/Cron-Table**Possible values:**

- 0 to 65535 seconds

Default: 0**Special values:** With the variation set to zero the CRON job will be executed at the set time.

 Rules based on real-time can only be executed if the device has a time from a valid source, e.g. via NTP.

2.11.21 Admins

Here you can create additional administrator user accounts.

Telnet path: Setup/Config**2.11.21.1 Administrator**

Multiple administrators can be set up in the configuration of the device, each with different access rights. Up to 16 different administrators can be set up for a LANCOM device.

Telnet path: Setup/Config/Admins**Possible values:**

- Max. 16 characters

Default: Blank

 Besides these administrators set up in the configuration, there is also the "root" administrator with the main password for the device. This administrator always has full rights and cannot be deleted or renamed. To log in as root administrator, enter the user name "root" in the login window or leave this field empty. As soon as a password is set for the "root" administrator in the device's configuration, WEBconfig will display the button Login that starts the login window. After entering the correct user name and password, the WEBconfig main menu will appear. This menu only displays the options that are available to the administrator who is currently logged in. If more than one administrator is set up in the admin table, the main menu features an additional button 'Change administrator' which allows other users to log in (with different rights, if applicable).

2.11.21.2 Password

Password for this entry.

Telnet path: Setup/Config/Admins**Possible values:**

- Max. 16 characters

Default: Blank

2.11.21.3 Function rights

Each administrator has "function rights" that determine personal access to certain functions such as the Setup Wizards. You assign these function rights when you create a new administrator.

If you create a new administrator via Telnet, the following hexadecimal values are available to you. By entering one or more of these values with **set** you set the function rights.

In WEBconfig you assign the function rights by selecting the appropriate check boxes in the menu shown below.

SNMP ID:

2.11.21.3

Telnet path:

Setup > Config > Admins

Possible values:

- 0x00000001: The user can run the Basic Wizard.
- 0x00000002: The user can run the Security Wizard.
- 0x00000004: The user can run the Internet Wizard.
- 0x00000008: The user can run the Wizard for selecting Internet providers.
- 0x00000010: The user can run the RAS Wizard.
- 0x00000020: The user can run the LAN-LAN link Wizard.
- 0x00000040: The user can set the date and time (also applies for Telnet and TFTP).
- 0x00000080: The user can search for additional devices.
- 0x00000100: The user can run the WLAN link test (also applies for Telnet).
- 0x00000200: The user can run the a/b Wizard.
- 0x00000400: The user can run the WTP Assignment Wizard.
- 0x00000800: The user can run the Public Spot Wizard.
- 0x00001000: The user can run the WLAN Wizard.
- 0x00002000: The user can run the Rollout Wizard.
- 0x00004000: The user can run the Dynamic DNS Wizard.
- 0x00008000: The user can run the VoIP Call Manager Wizard.
- 0x00010000: The user can run the WLC Profile Wizard.
- 0x00020000: The user can use the integrated Telnet or SSH client.
- 0x00001000: The user can run the Public-Spot User management Wizard.

Default:

Blank

2.11.21.4 Active

Activates or deactivates the function

Telnet path: Setup/Config/Admins

Possible values:

- Yes
- No

Default: Yes

2.11.21.5 Access rights

Access to the internal functions can be configured for each interface separately:

2 Setup

- ISDN administration access
- LAN
- Wireless LAN (WLAN)
- WAN (e.g. ISDN, DSL or ADSL)

Access to the network configuration can be further restricted so that, for example, configurations can only be edited from certain IP addresses or LANCAPi clients. Furthermore, the following internal functions can be switched on/off separately:

- LANconfig (TFTP)
- WEBconfig (HTTP, HTTPS)
- SNMP
- Terminal/Telnet

For devices supporting VPN, it is also possible to restrict the use of internal functions that operate over WAN interfaces to be restricted to VPN connections only.

SNMP ID: 2.11.21.5

Telnet path: Setup/Config/Admins

Possible values:

- None
- Admin-RO limit
- Admin-RW limit
- Admin-RO
- Admin-RW
- Supervisor

Default: Blank

2.11.23 Telnet port

This port is used for unencrypted configuration connections via Telnet.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 23

2.11.24 Telnet SSL port

This port is used for encrypted configuration connections via telnet.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 992

2.11.25 SSH port

This port is used for configuration connections via SSH.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 22

2.11.26 SSH authentication methods

Here you specify the authentication method to be used for SSH.

Telnet path: Setup/Config

2.11.26.1 Interface

The authentication methods permitted for SSH access can be set separately for LAN, WAN and WLAN.

Telnet path: Setup/Config/SSH-Authentication-Methods**Possible values:**

- LAN
- WAN
- WLAN

2.11.26.2 Methods

The SSH protocol generally allows two different authentication mechanisms: Username and password, using a public key, or interactively via the keyboard.

Telnet path: Setup/Config/SSH-Authentication-Methods**Possible values:**

- Public-Key: Only allows authentication with a digital certificate.
- Keyboard-Interactive: Only allows authentication via the keyboard.
- Password: Only allows authentication with a password.
- Password+Keyboard-Interactive: Allows authentication with password or interactively via the keyboard.
- Password+Public-Key: Allows authentication using password or using digital certificate.
- Keyboard-Interactive+Public Key: Only allows authentication via the keyboard or via digital certificate.
- All: Allows authentication using any method.

Default: All

2.11.27 Predefined Admins

Here you will find the predefined administrator account for the device. This administrator account is used when no user name is defined when logging in.

Telnet path: Setup/Config/Predef.-Admins

2.11.27.1 Name

Enter the name of the predefined administrator account here.

Telnet path: Setup/Config/Predef.-Admins/Name**Possible values:**

- Maximum 16 characters

Default: Blank

2.11.28 SSH

This item manages the mechanisms used for SSH encryption. You can select which algorithms are supported in both server and client mode.

SNMP ID:

2.11.28

Telnet path:**Setup > Config**

2.11.28.1 Cipher algorithms

The cipher algorithms are used for encrypting and decrypting data. Select one or more of the available algorithms.

SNMP ID:

2.11.28.1

Telnet path:**Setup > Config > SSH****Possible values:**

3DES-cbc
3DES-ctr
arcfour
arcfour128
arcfour256
blowfish-cbc
blowfish-ctr
aes128-cbc
aes192-cbc
aes256-cbc
aes128-ctr
aes192-ctr
aes256-ctr

Default:

3des-cbc,3des-ctr,arcfour,arcfour128,arcfour256,blowfish-cbc,blowfish-ctr,aes128-cbc,
aes192-cbc,aes256-cbc,aes128-ctr,aes192-ctr,aes256-ctr

2.11.28.2 MAC algorithms

MAC algorithms are used to check the integrity of messages. Select one or more of the available algorithms.

SNMP ID:

2.11.28.2

Telnet path:**Setup > Config > SSH**

Possible values:

hmac-md5-96
hmac-md5
hmac-sha1-96
hmac-sha1
hmac-sha2-256-96
hmac-sha2-256
hmac-sha2-512-96
hmac-sha2-512

Default:

hmac-md5-96,hmac-md5,hmac-sha1-96,hmac-sha1,hmac-sha2-256-96,
hmac-sha2-256,hmac-sha2-512-96,hmac-sha2-512

2.11.28.3 Key exchange algorithms

The MAC key exchange algorithms are used to negotiate the key algorithm. Select one or more of the available algorithms.

SNMP ID:

2.11.28.3

Telnet path:

Setup > Config > SSH

Possible values:

diffie-hellman-group1-sha1
diffie-hellman-group14-sha1
diffie-hellman-group-exchange-sha1
diffie-hellman-group-exchange-sha256

Default:

diffie-hellman-group1-sha1,diffie-hellman-group14-sha1,
diffie-hellman-group-exchange-sha1,diffie-hellman-group-exchange-sha256

2.11.28.4 Host key algorithms

The host key algorithms are used to authenticate hosts. Select one or more of the available algorithms.

SNMP ID:

2.11.28.4

Telnet path:

Setup > Config > SSH

Possible values:

ssh-rsa
ssh-dss

Default:

ssh-rsa,ssh-dss

2.11.28.5 Min host key length

This parameter defines the minimum length of your host keys.

SNMP ID:

2.11.28.5

Telnet path:**Setup > Config > SSH****Possible values:**

Max. 5 numbers

Default:

512

2.11.28.6 Max host key length

This parameter defines the maximum length of your host keys.

SNMP ID:

2.11.28.6

Telnet path:**Setup > Config > SSH****Possible values:**

Max. 5 numbers

Default:

8192

2.11.28.7DH groups

The Diffie-Hellman groups are used for the key exchange. Select one or more of the available groups.

SNMP ID:

2.11.28.7

Telnet path:**Setup > Config > SSH****Possible values:**

Group 1

Group 5

Group 14

Group 15

Group 16

Default:

Group 1, group 5, group 14

2.11.28.8 Compression

With this setting, you enable or disable compression of data packets for connections using SSH.

SNMP ID:

2.11.28.8

Telnet path:

Setup > Config > SSH

Possible values:

Yes

No

Default:

Yes

2.11.28.10 SFTP-Server

This menu allows you to adjust the settings for the SFTP server.

SNMP ID:

2.11.28.10

Telnet path:

Setup > Config > SSH

2.11.28.10.1 Operating

You enable or disable the SFTP server with this setting.

SNMP ID:

2.11.28.10.1

Telnet path:

Setup > Config > SSH > SFTP-Server

Possible values:

Yes

No

Default:

Yes

2.11.28.11 Keepalive interval

Using this parameter, you configure the SSH keepalives for server-side connections. The parameter defines the interval in which the internal LCOS SSH server sends keepalives to keep a connection open.

SNMP ID:

2.11.28.11

Telnet path:**Setup > Config > SSH****Possible values:**

0 ... 0 Seconds

Special values:**0**

This value disables the function.

Default:

60

2.11.31 Anti-Theft-Protection

After being stolen, the device can theoretically be operated at another location by unauthorized persons.

Password-protected device configurations do not stop third parties from operating RAS access, LAN connectivity or VPN connections that are set up in the device: A thief could gain access to a protected network. The device's operation can be protected in such a way that it will cease to function if there is an interruption to the power supply, or if the device is switched on in another location.

GPS location verification

GPS location verification enables a geographical position to be defined within the device. After being switched on the device automatically activates the GPS module and checks if it is located at the "correct" position. The router module only switches on if the check is positive. After location verification has been carried out the GPS module is switched off again, unless it was activated manually. ISDN location verification can prevent the misuse of a router: Each time it is switched on, the router carries out a check by making an ISDN telephone call to itself to ensure that it is installed at the intended location. Only after successful location verification is the router module activated.

ISDN location verification

The device must be reachable from the public ISDN telephone network. The device needs two free B channels for the duration of the check. If just one channel is free, e.g. one channel at a point-to-multipoint connection with two B channels is being used for a telephone call, then the device cannot make a call to itself via ISDN.

Telnet path: Setup/Config

2.11.31.1 Enabled

Activate location verification with the 'Enabled' option. ISDN location verification can prevent the misuse of a router. Each time it is switched on, the router carries out a check by making an ISDN telephone call to itself to ensure that it is installed at the intended location. Only after successful location verification is the router module activated. Prerequisites for successful ISDN location verification: The device must be reachable from the public ISDN telephone network. The device needs two free B channels for the duration of the check. If just one channel is free, e.g. one channel at a point-to-multipoint connection with two B channels is being used for a telephone call, then the device cannot make a call to itself via ISDN.

Telnet path: Setup/Config/Anti-Theft-Protection

2.11.31.2 Called number

This call number is used as outgoing calling number when a call is made for ISDN location verification.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- Max. 14 characters

Default: Blank

2.11.31.3 Outgoing calling number

This number is called for ISDN location verification.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- Max. 14 characters

Default: Blank

2.11.31.4 Checked calling number

This call number is expected as outgoing call number for ISDN location verification.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- Max. 14 characters

Default: Blank

2.11.31.6 Method

Select the method for the location check.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- Basic call: 'Self call' for a check via ISDN by means of a return call.
- Facility: Call forwarding check via ISDN by requesting the call number from the exchange. No call-back is necessary in this case.
- GPS: GPS verification for a check on the geographical coordinates.

 For a location check by GPS an appropriate GPS antenna must be connected to the AUX connector on the device. Additionally, a SIM card for mobile telephone operation has to be inserted and the device must be logged on to a mobile phone network. For ISDN location verification to function, the device must be reachable from the public ISDN telephone network. The device needs two free B channels for the duration of the check. If just one channel is free, e.g. one channel at a point-to-multipoint connection with two B channels is being used for a telephone call, then the device cannot make a call to itself via ISDN.

2.11.31.7 ISDN interface

The interface that this entry refers to.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- S0-1
- S0-2

2.11.31.8 Deviation

Deviation from the intended position in meters

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- 50

2.11.31.9 Longitude

Longitude of the location where the device is to operate.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- Blank

2.11.31.10 Latitude

Latitude of the location where the device is to operate.

Telnet path: Setup/Config/Anti-Theft-Protection

Possible values:

- Blank

2.11.31.12 Get GPS position

This option allows the device to determine the geographical coordinates of its current location. Once the configuration is written back to the device, the current longitude and latitude are entered automatically, assuming that location verification is activated and a valid GPS position is available. Subsequently this option is automatically deactivated again.

Telnet path:Setup/Config/Anti-Theft-Protection

Possible values:

- Yes
- No

2.11.32 Reset button

The reset button offers two basic functions—boot (restart) and reset (to the factory settings)—which are called by pressing the button for different lengths of time.

It is not always possible to install a device under lock and key. There is consequently a risk that the configuration will be deleted by mistake if a co-worker presses the reset button too long. The behavior of the reset button can be controlled with this setting.

Telnet path: Setup/Config

Possible values:

- Ignore: The button is ignored.
- Boot only: With a suitable setting, the behavior of the reset button can be controlled; the button is then ignored or a press of the button prompts a restart only, however long it is held down.
- Reset-or-boot (standard setting): With this setting, the reset button fulfills different functions depending upon how long the key remains pressed:
 - Less than 5 seconds: Boot (restart), whereby the user-defined configuration is loaded from the configuration memory. If the user-defined configuration is empty, then the customer-specific standard settings (first memory space) are loaded instead. The loading of the customer-specific standard settings is visible when all LEDs on the device light up briefly in red. Similarly, the LANCOM factory settings are loaded if the first memory space is empty.
 - Longer than 5 seconds until the first time that all device LEDs light up: Configuration reset (deletes the configuration memory) followed by a restart. In this case the customer-specific standard settings (first memory space) are loaded instead. The loading of the customer-specific standard settings is visible when all LEDs on the device light up briefly in red. The LANCOM factory settings are loaded if the first memory space is empty.

- Longer than 15 seconds until the second time that all device LEDs light up: Activating the rollout configuration and deleting the user-defined configuration. After restarting, the rollout configuration is started from the second memory space. The loading of the rollout configuration is visible when all LEDs on the device light up twice briefly in red. The LANCOM factory settings are loaded if the second memory space is empty.

! Further information about the different boot configurations are to be found in the reference manual.

Default: Reset-or-boot

! After a reset, the LANCOM access point returns to managed mode, in which case the configuration cannot be directly accessed via the WLAN interface!

! After resetting, the device starts completely unconfigured and all settings are lost. If possible be sure to backup the current device configuration before resetting.

! The settings 'Ignore' or 'Boot only' makes it impossible to reset the configuration to the factory settings or to load the rollout configuration with a reset. If the password is lost for a device with this setting, there is no way to access the configuration! In this case the serial communications interface can be used to upload a new firmware version to the device—this resets the device to its factory settings, which results in the deletion of the former configuration. Instructions on firmware uploads via the serial configuration interface are available in the LCOS reference manual.

2.11.33 Outband aging minutes

Specify here the number of minutes after which an inactive serial connection (e.g. via Hyper Terminal) is automatically terminated.

Telnet path: Setup/Config

Possible values:

- Max. 10 characters

Default: 1

2.11.35 Monitor trace

This menu contains the settings for monitor tracing.

Telnet path: Setup/Config

2.11.35.1 Tracemask1

This parameter is for support purposes only.

Telnet path: /Setup/Config/Monitortrace

2.11.35.2 Tracemask2

This parameter is for support purposes only.

Telnet path: /Setup/Config/Monitortrace

2.11.39 License expiry e-mail

The license to use a product can be restricted to a set validity period. You will be reminded of the license expiry date 30 days, one week and one day before it actually expires by an e-mail to the address configured here.

Telnet path: Setup/Config/License-Expiry-Email

Possible values:

- Valid e-mail address

Default: Blank

2.11.40 Crash message

Here you specify the message that appears in the bootlog when the device crashes.

Telnet path: /Setup/Config/Crash-Message

Possible values:

- Maximum 32 alphanumerical characters

Default: LCOS-Watchdog

2.11.41 Admin gender

Enter the sex of the Admin.

Telnet path: /Setup/Config/Admin-Gender

Possible values:

- Unknown
- Male
- Female

Default: Unknown

2.11.42 Assert action

This parameter affects the behavior of the device when it checks the firmware code.

Telnet path: /Setup/Config/Assert-Action

Possible values:

- log_only
- reboot

Default: log_only

 The settings for this parameter are intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.11.43 Function keys

The function keys enable the user to save frequently used command sequences and to call them easily from the command line. In the appropriate table, commands are assigned to function keys F1 to F12 as they are entered in the command line.

Telnet path: Setup/Config

2.11.43.1 Key

Name of function key.

Telnet path: Setup\Config\Function-Keys

Possible values:

- Selection from function keys F1 to F12.

Default: F1

2.11.43.2 Mapping

Description of the command/shortcut to be run on calling the function key in the command line.

Telnet path: Setup\Config\Function-Keys

Possible values:

- All commands/shortcuts possible in the command line

Default: Blank

Special values: The caret symbol ^ is used to represent special control commands with ASCII values below 32. ^a

^A stands for Ctrl-A (ASCII 1)

^Z stands for Ctrl-Z (ASCII 26)

^[stands for Escape (ASCII 27)

^M stands for Return/Enter This character is useful if you enter a command with the function key and wish to send it immediately.

^^ A double caret symbol stands for the caret symbol itself.

 If a caret symbol is entered in a dialog field or editor followed directly by another character, the operating system may possibly interpret this sequence as another special character. By entering caret + A the Windows operating system outputs an Å. To enter the caret character itself, enter a space in front of the subsequent characters. Sequence ^A is then formed from caret symbol + space + A.

2.11.45 Configuration date

This setting allows LANconfig to be used to set the date of a configuration.

 This value exists only in the SNMP chain.

SNMP ID:

2.11.45

Telnet path:

Setup > Config > Config-Date

Possible values:

Valid configuration date

Default:

2.11.50 LL2M

The menu contains the settings for LANCOM layer-2 management.

Telnet path: Setup/Config

2.11.50.1 Operating

Enables/disables the LL2M server. An LL2M client can contact an enabled LL2M server for the duration of the time limit following device boot/power-on.

Telnet path: /Setup/Config/LL2M

Possible values:

- Yes
- No

Default: Yes**2.11.50.2 Time limit**

Defines the period in seconds during which an enabled LL2M server can be contacted by an LL2M client after device boot/power-on. The LL2M server is disabled automatically after expiry of the time limit.

Telnet path: /Setup/Config/LL2M**Possible values:**

- 0 to 4294967295

Default: 0**Special values:** 0 disables the time limit. The LL2M server stays permanently enabled in this state.**2.11.60 CPU-load interval**

You can select the time interval for averaging the CPU load. The CPU load displayed in LANmonitor, in the status area, in the display (if fitted), or by SNMP tools is a value which is averaged over the time interval set here. The status area under WEBconfig or CLI additionally display the CPU load values for all four of the optional averaging periods.

Meaned values for CPU load are available in the following time intervals:

Telnet path: Setup/Config**Possible values:**

T1s (arithmetic mean)

T5s (arithmetic mean)

T60s (moving average)

T300s (moving average)

Default: T60s**2.11.70 Firmware-Check**

This setting enables the device to issue a SYSLOG warning at startup if non-certified firmware has been uploaded.

SNMP ID:

2.11.70

Telnet path:**Setup > Config****Possible values:**

- **only-certified:** The device accepts only certified firmware. A SYSLOG message is generated if non-certified firmware is used.
- **any:** The device issues a SYSLOG message every time the firmware is updated.

Default:

only-certified

2.11.71 Save bootlog

This parameter enables or disables the boot-persistent storage of SYSLOG messages to the flash memory of the device. Bootlog information is not lost even when restarting after a loss of mains power.

 If necessary, you can delete the persistent bootlog memory with the CLI command `deletebootlog`.

SNMP ID: 2.11.71

Telnet path: Setup/Config

Possible values:

- Yes
- No

Default: Yes

2.11.72 Save event log

This parameter enables or disables the boot-persistent storage of event log messages to the flash memory of the device. Event log information is retained even when restarting after a loss of mains power. The event log contains the information from the table **Status > Config > Event-Log**. This table stores information on administrator logins and logouts, and on upload and download operations of configurations and firmware files

 If necessary, delete the persistent event log memory by entering the command `deleteeventlog` anywhere on the command line.

SNMP ID:

2.11.72

Telnet path:

Setup > Config

Possible values:

- Yes
- No

Default:

Yes

2.11.80 Authentication

Various options are available to log on to the LANCOM's administration interface:

- **Internal:** The LANCOM manages the users internally in the table **Setup > Config > Admins**.
- **Radius:** A RADIUS server handles user management.
- **Tacacs+:** A TACACS+ server handles user management.

 The data relating to the RADIUS server is managed under **Setup > Config > RADIUS > Server**. The data relating to the TACACS+ server is managed under **Setup > Tacacs+ > Server**.

 Since the RADIUS protocol does not allow for password changes, users who have logged in via RADIUS cannot change their password in the LANCOM.

SNMP ID:

2.11.80

Telnet path:**Setup > Config****Possible values:**

Internal

Radius

TACACS+

Default:

Internal

2.11.81 Radius

If the user login to the LANCOM administration interface is to be authenticated by RADIUS server, you specify the necessary server data and the additional administrative data here.

SNMP ID:

2.11.81

Telnet path:**Setup > Config**

2.11.81.1 Server

This table contains the settings for the RADIUS server.

SNMP ID:

2.11.81.1

Telnet path:**Setup > Config > Radius**

2.11.81.1.1 Name

Enter a name for the RADIUS server here.

SNMP ID:

2.11.81.1.1

Telnet path:**Setup > Config > Radius > Server****Possible values:**

Max. 16 characters

Default:

Blank

2.11.81.1 Server

Enter the IPv4 address of the RADIUS server here.

SNMP ID:

2.11.81.1.2

Telnet path:**Setup > Config > Radius > Server****Possible values:**

Max. 64 characters

Default:

Blank

2.11.81.1.3 Port

Enter the port used by the RADIUS server to communicate with the LANCOM.

SNMP ID:

2.11.81.1.3

Telnet path:**Setup > Config > Radius > Server****Possible values:**

Max. 5 characters

Default:

1812

2.11.81.1.4 Protocol

Enter the protocol used by the RADIUS server to communicate with the LANCOM.

SNMP ID:

2.11.81.1.4

Telnet path:**Setup > Config > Radius > Server****Possible values:**

RADIUS

RADSEC

Default:

RADIUS

2.11.81.1.5 Loopback address

This is where you can configure an optional sender address to be used by the LANCOM instead of the one that would normally be automatically selected for this target address.

SNMP ID:

2.11.81.1.5

Telnet path:**Setup > Config > Radius > Server****Possible values:**

Name of the IP networks whose addresses are to be used by the LANCOM.

"INT" for the address of the first intranet.

"DMZ" for the address of the first DMZ.



If the list of IP networks or loopback addresses contains an entry named 'DMZ', then the LANCOM uses the associated IP address.

LB0 to LBF for one of the 16 loopback addresses

Any valid IP address

Default:

Blank

2.11.81.1.6 Secret

Enter the password for accessing the RADIUS server here, and repeat the entry in the second input field.

SNMP ID:

2.11.81.1.6

Telnet path:**Setup > Config > Radius > Server****Possible values:**

Max. 64 characters

Default:

Blank

2.11.81.1.7 Backup

Enter the name of the alternate RADIUS server to which the LANCOM forwards its requests if the first RADIUS server is unavailable.



The backup server requires an additional entry in the Server table.

SNMP ID:

2.11.81.1.7

Telnet path:**Setup > Config > Radius > Server****Possible values:**

Max. 16 characters

Default:

Blank

2.11.81.1.8 Category

Set the category for the RADIUS server.

You can select neither, one or both categories.

SNMP ID:

2.11.81.1.8

Telnet path:

Setup > Config > Radius > Server

Possible values:

Authentication

Accounting

Default:

Authentication

2.11.81.2 Access rights transfer

The authorization of the user is stored in the RADIUS server. When a request arrives, the RADIUS server sends the access- and function rights to the LANCOM along with the login data, which then logs in the user with the appropriate privileges.

Access rights are usually defined in the RADIUS management privilege level (attribute 136), and the LANCOM simply maps this value to its internal access rights (option: "Mapped"). The attribute can have the following values, which are then mapped by the LANCOM:

- 1: User, read-only
- 3: User, write-only
- 5: Admin, read only, no trace rights
- 7: Admin, read and write, no trace rights
- 9: Admin, read-only
- 11: Admin, read and write
- 15: Supervisor
- The LANCOM maps any other values to "no access".

However, some RADIUS servers may also need to assign function rights, they may use attribute 136 differently, or they may use different, vendor-specific attributes for the authorization. In this case, you must select the vendor-specific attributes. These attributes are defined as follows, based on the LANCOM vendor ID '2356':

- Access rights ID: 11
- Function rights ID: 12

The transferred access-right values are identical to the above. If the RADIUS server also has to transfer function rights, you achieve this as follows:

1. Open the console for the LANCOM.
2. Change to the directory **Setup > Config > Admins**.
3. The command `set?` shows you the current mapping of the function rights to the corresponding hexadecimal code (e.g. `Device-Search (0x80)`).
4. To combine function rights, you add their hex values together.
5. Convert the hexadecimal value to a decimal number.
6. By using this decimal value in the function rights ID, you can transfer the corresponding rights.

SNMP ID:

2.11.81.2

Telnet path:**Setup > Config > Radius****Possible values:**

Vendor-specific

Mapped

Default:

Vendor-specific

2.11.81.3 Accounting

Here, you specify whether the LANCOS should record the user's session. In this case, session data is saved including the start, end, username, authentication mode and, if available, the port used.

SNMP ID:

2.11.81.3

Telnet path:**Setup > Config > Radius****Possible values:**

No

Yes

Default:

No

2.12 WLAN

This menu contains the settings for wireless LAN networks

SNMP ID: 2.12**Telnet path:** /Setup

2.12.3 Spare heap

The heap reserve specifies how many blocks in the LAN heap can be reserved for direct communication (Telnet) with the device. If the number of blocks in the heap falls below the specified value, received packets are rejected immediately (except for TCP packets sent directly to the device).

Telnet path: /Setup/WLAN**Possible values:**

- Max. 3 numbers

Default: 10

2.12.7 Access list

You can limit the data traffic between the wireless LAN and its local network by excluding certain stations from transferring data, or you can approve specific stations only.

Telnet path: /Setup/WLAN

2.12.7.1 MAC address

Enter the MAC address of a station.

Telnet path: Setup/WLAN/Access-List

Possible values:

- Valid MAC address

Default: Blank

 Every network card has its own MAC address that is unique in the world. The address is a 12-character hexadecimal number (e.g. 00A057010203). This address can generally be found printed on the network card.

2.12.7.2 Name

You can enter any name you wish and a comment for any station.

This enables you to assign MAC addresses more easily to specific stations or users.

Telnet path: Setup/WLAN/Access-List

Possible values:

- Max. 64 characters

Default: Blank

2.12.7.3 Comment

Comment on this entry

Telnet path: Setup/WLAN/Access-List

Possible values:

- Max. 64 characters

Default: Blank

2.12.7.4 WPA passphrase

Here you may enter a separate passphrase for each physical address (MAC address) that is used in a 802.11i/WPA/AES-PSK-secured network. If no separate passphrase is specified for this MAC address, the passphrases stored in the '802.11i/WEP' area will be used for each logical wireless LAN network.

Telnet path: Setup/WLAN/Access-List

Possible values:

- ASCII character string with a length of 8 to 63 characters

Default: Blank

 This field has no significance for networks secured by WEP.

 The passphrases should consist of a random string at least 22 characters long, corresponding to a cryptographic strength of 128 bits.

2.12.7.5 Tx limit

Bandwidth restriction for registering WLAN clients.

A client communicates its own settings to the base station when logging in. The base station uses these values to set the minimum bandwidth.

Telnet path: Setup/WLAN/Access-List

Possible values:

- 0 to 4294967296 (2^{32})

Default: 0

Special values: 0: No limit

 The significance of the Rx and Tx values depends on the device's operating mode. In this case, as an access point, Rx stands for "Send data" and Tx stands for "Receive data".

2.12.7.6 Rx limit

Bandwidth restriction for registering WLAN clients.

A client communicates its own settings to the base station when logging in. The base station uses these values to set the minimum bandwidth.

Telnet path: Setup/WLAN/Access-List

Possible values:

- 0 to 4294967296 (2^{32})

Default: 0

Special values: 0: No limit

 The significance of the Rx and Tx values depends on the device's operating mode. In this case, as an access point, Rx stands for "Send data" and Tx stands for "Receive data".

2.12.7.7 VLAN-ID

This VLAN ID is assigned to packets that are received from the client with the MAC address entered here.

Telnet path: Setup/WLAN/Access-List

Possible values:

- 0 to 4096

Default: 0

2.12.8 Access mode

You can limit the data traffic between the wireless LAN and its local network by excluding certain stations from transferring data, or you can approve specific stations only.

Telnet path: /Setup/WLAN

Possible values:

- Filter out data from listed stations, transfer all other
- transfer data from the listed stations, authenticate all other via RADIUS or filter them out

Default: Filter out data from listed stations, transfer all other

2.12.12 IAPP protocol

Access points use the Access Point Protocol (IAPP) to exchange information about their associated clients. This information is used in particular when clients roam between different access points. The new access point informs the former one of the handover, so that the former access point can delete the client from its station table.

Telnet path: /Setup/WLAN

Possible values:

- Yes
- No

Default: Yes

2.12.13 IAPP announce interval

This is the interval (in seconds) with which the access points broadcast their SSIDs.

Telnet path: /Setup/WLAN

Possible values:

- Max. 10 numbers

Default: 120

2.12.14 IAPP handover timeout

If the handover is successful, the new access point informs the former access point that a certain client is now associated with another access point. This information enables the former access point to delete the client from its station table. This stops packets being (unnecessarily) forwarded to the client. For this time space (in milliseconds) the new access point waits before contacting the former access point again. After trying five times the new access point stops these attempts.

Telnet path: /Setup/WLAN

Possible values:

- Max. 10 numbers

Default: 1000

2.12.26 Inter-SSID traffic

Depending on the application, it may be required that the WLAN clients connected to an access point can—or expressly cannot—communicate with other clients. Communications between clients in different SSIDs can be allowed or stopped with this option. For models with multiple WLAN modules, this setting applies globally to all WLANs and all modules.

Telnet path: /Setup/WLAN

Possible values:

- Yes
- No

Default: Yes



Communications between clients in a logical WLAN is controlled separately by the logical WLAN settings (Inter-Station-Traffic). If the Inter-SSID-Traffic is activated and the Inter-Station-Traffic deactivated, a client in one logical WLAN can communicate with clients in another logical WLAN. This option can be prevented with the VLAN settings or protocol filter.

2.12.27 Supervise stations

In particular for public WLAN access points (public spots), the charging of usage fees requires the recognition of stations that are no longer active. Monitoring involves the access point regularly sending packets to logged-in stations. If the stations do not answer these packets, then the charging systems recognizes the station as no longer active.

Telnet path: /Setup/WLAN

Possible values:

- On
- Off

Default: Off

2.12.29 RADIUS access check

This menu contains the settings for the RADIUS access checking

Telnet path: /Setup/WLAN

2.12.29.1 Server address

IP address of the RADIUS server that checks the authorization of WLAN clients using the MAC address (authentication).

Telnet path: /Setup/WLAN/RADIUS-Access-Check

Possible values:

- Valid IP address.

Default: Blank



To use the RADIUS functionality for WLAN clients, the option "Transfer data from the listed stations, authenticate all others via RADIUS or filter them out" must be selected for the "Filter stations" parameter. The general values for retry and timeout must also be configured in the RADIUS section.



WLAN clients must be entered as follows on the RADIUS server: The user name is the MAC address in the format AABBCD-DEEFF. The password for all users is identical to the key (shared secret) for the RADIUS server.

2.12.29.2 Authentication port

Port for communication with the RADIUS server during authentication

Telnet path: /Setup/WLAN/RADIUS-Access-Check

Possible values:

- Valid port specification

Default: 1812

2.12.29.3 Secret

Password used to access the RADIUS server

Telnet path: /Setup/WLAN/RADIUS-Access-Check

Possible values:

- Max. 64 characters

Default: Blank

2.12.29.4 Backup server IP address

IP address of the backup RADIUS server that checks the authorization of WLAN clients using the MAC address (authentication).

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Valid IP address.

Default: Blank

2.12.29.5 Backup authentication port

Port for communication with the backup RADIUS server during authentication

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Valid port specification

Default: 1812

2.12.29.6 Backup secret

Password used to access the backup RADIUS server

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Max. 64 characters

Default: Blank

2.12.29.7 Response lifetime

This value defines the lifetime for an entry stored on the device for a MAC check that was rejected by the RADIUS server.

If a RADIUS server is used to check the MAC addresses of wireless clients, the device forwards all requests from wireless clients to the RADIUS server. If a MAC address is listed in the RADIUS server as blocked, then the reject response from the RADIUS server is stored in the device for the time set here. If the device receives repeated requests from blocked MAC addresses, the requests are not forwarded to the RADIUS server.

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Max. 10 numeric characters ranging from 0 to 4294967295 ($2^{32}-1$)

Default: 15

 Recently cached MAC address entries can be viewed in the table '1.3.48 RADIUS-Cache'.

2.12.29.8 Password source

Here you specify whether the device uses the shared secret or the MAC address as the password during authentication at the RADIUS server.

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Secret
- MAC address

Default: Secret

2.12.29.9 Recheck cycle

If you select a value greater than zero, the device checks your MAC address not only at login but also during the connection in the specified cycle in seconds. If you specify zero, the MAC address is only checked at login. Cyclical rechecking enables the device to recognize, for example, a change in bandwidth limits for a MAC address. In this case the client remains logged on and the connection remains intact.

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Max. 10 numeric characters ranging from 0 – 4294967295 ($2^{32}-1$)

Default: 0

2.12.29.10 Provide server database

Activate this option if the MAC address list is provided by a RADIUS server.

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- No
- Yes

Default: Yes

2.12.29.11 Loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

 If there is an interface named "DMZ", then its address is used.

2.12.29.12 Backup loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Telnet path:/Setup/WLAN/RADIUS-Access-Check

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet

- "DMZ" for the address of the first DMZ
- LBO... LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

2.12.29.13 Protocol

Protocol for communication between the RADIUS server and the clients.

Telnet path: /Setup/WLAN/RADIUS-Access-Check

Possible values:

- RADSEC
- RADIUS

Default: RADIUS

2.12.29.14 Backup protocol

Protocol for communication between the backup RADIUS server and the clients.

Telnet path:/Setup/WLAN/RADIUS-Access-Check/Backup-Protocol

Possible values:

- RADIUS
- RADSEC

Default: RADIUS

2.12.29.15 Force-Recheck

Using this action you manually trigger an immediate RADIUS access check. You can enter optional parameters for the command in the input field. The command expects one or more MAC addresses of registered clients as an argument. For these clients, the initial check of their MAC address using the RADIUS server will be repeated. Multiple MAC addresses can be separated with spaces.

SNMP ID:

2.12.29.15

Telnet path:

Setup > WLAN > RADIUS-Access-Check

Possible values:

MAC address(es) of registered clients using spaces as separators

2.12.36 Country

The device needs to be set with the country where it is operating in order for the WLAN to use the parameters approved for the location.

Telnet path: /Setup/WLAN

Possible values:

- Select from the list of countries.

Default: Unknown

Special values: Unknown: Only settings that are approved worldwide are permitted.

2.12.38 ARP handling

A station in the LAN attempting to establish a connection to a WLAN station which is in power-save mode will often fail or only succeed after a considerable delay. The reason is that the delivery of broadcasts (such as ARP requests) to stations in power-save mode cannot be guaranteed by the base station.

If you activate ARP handling, the base station responds to ARP requests on behalf of the stations associated with it, thus providing greater reliability in these cases.

Telnet path: /Setup/WLAN

Possible values:

- On
- Off

Default: On

 As of LCOS version 8.00, this switch activates a similar treatment for IPv6 neighbor solicitations.

2.12.41 Mail address

Information about events in the WLAN is sent to this e-mail address.

Telnet path: /Setup/WLAN

Possible values:

- Valid e-mail address

Default: Blank

 An SMTP account must be set up to make use of the e-mail function.

2.12.44 Allow illegal association without authentication

The ability of the device to associate with a WLAN without authentication is enabled or disabled with this parameter.

Telnet path: /Setup/WLAN

Possible values:

- Yes
- No

Default: No

2.12.45 RADIUS accounting

The accounting function in the LANCOM can be used to check the budgets of associated wireless LAN clients, among other things. Wireless Internet Service Providers (WISPs) use this option as a part of their accounting procedure. Accounting periods generally switch at the end of the month. A suitable action will cause the accounting session to be restarted at this time. Existing WLAN connections remain intact. A cron job can be used to automate a restart.

Telnet path: /Setup/WLAN

2.12.45.8 Interim update period

This value sets the time interval in seconds after which the device sends an interim update to the accounting server.

Telnet path: /Setup/WLAN/RADIUS-Accounting

Possible values:

- Max. 10 numeric characters in the range 0 – 4289999999

Default: 0

2.12.45.9 Excluded VLAN

Here you enter the ID of the VLAN that the device is to exclude from RADIUS accounting. The RADIUS server then receives no information about the traffic in that VLAN.

Telnet path: /Setup/WLAN/RADIUS-Accounting

Possible values:

- Max. 4 numeric characters in the range 0 – 9999
- 0 deactivates this function.

Default: 0

2.12.45.14 Restart accounting

This feature allows the device to end all running wireless LAN accounting sessions by sending an 'accounting stop' to the RADIUS server. This is helpful, for example, at the end of a billing period.

Telnet path:/Setup/WLAN/RADIUS-Accounting/Restart-Accounting

2.12.45.17 Servers

This table provides the option to configure alternative RADIUS accounting servers for logical WLAN interfaces. This means that you can use special accounting servers for selected WLAN interfaces instead of the globally configured server.

SNMP ID:

2.12.45.17

Telnet path:

Setup > WLAN > RADIUS-Accounting

2.12.45.17.1 Name

Name of the RADIUS server performing the accounting for WLAN clients. The name entered here is used to reference that server from other tables.

SNMP ID:

2.12.45.17.1

Telnet path:

Setup > WLAN > RADIUS-Accounting > Servers

Possible values:

String, max. 16 characters from

[0-9][A-Z]@[|}~!\$%&'()+-./:;<=>?[\]^_.

Default:

2.12.45.17.2 Server address

IP address of the RADIUS server used to perform the accounting for WLAN clients.

 The general values for retry and timeout must also be configured in the RADIUS section.

SNMP ID:

2.12.45.17.2

Telnet path:**Setup > WLAN > RADIUS-Accounting > Servers****Possible values:**

Valid IPv4 address

Default:

0.0.0.0

2.12.45.17.3 Port

Port for communication with the RADIUS server during accounting

SNMP ID:

2.12.45.17.3

Telnet path:**Setup > WLAN > RADIUS-Accounting > Servers****Possible values:**

0 to 65535

Default:

0

2.12.45.17.4 Key

Enter the key (shared secret) for access to the accounting server here. Ensure that this key is consistent with that in the accounting server.

SNMP ID:

2.12.45.17.4

Telnet path:**Setup > WLAN > RADIUS-Accounting > Servers****Possible values:**

Any valid shared secret, max. 64 characters

Default:**2.12.45.17.5 Loopback addr.**

You have the option to enter a different address here (name or IP) to which the RADIUS accounting server sends its reply message.

By default, the server sends its replies back to the IP address of your device without having to enter it here. By entering an optional loopback address you change the source address and route used by the device to connect to the server. This can be useful, for example, when the server is available over different paths and it should use a specific path for its reply message.

SNMP ID:

2.12.45.17.5

Telnet path:**Setup > WLAN > RADIUS-Accounting > Servers****Possible values:**

- Name of the IP network (ARF network), whose address should be used.
- `INT` for the address of the first Intranet
- `DMZ` for the address of the first DMZ

 If an interface with the name "DMZ" already exists, the device will select that address instead.

- `LB0...LB15` for one of the 16 loopback addresses or its name
- Any IPv4 address

 If the sender address set here is a loopback address, these will be used **unmasked** on the remote client!

Default:**2.12.45.17.6 Protocol**

Using this item you specify the protocol that the accounting server uses.

SNMP ID:

2.12.45.17.6

Telnet path:**Setup > WLAN > RADIUS-Accounting > Servers****Possible values:**

RADIUS
RADSEC

Default:

RADIUS

2.12.45.17.7 Backup

Enter the name of the RADIUS backup server used for the accounting of WLAN clients if the actual accounting server is not available. This allows you to configure a backup chaining of multiple backup servers.

SNMP ID:

2.12.45.17.7

Telnet path:**Setup > WLAN > RADIUS-Accounting > Servers****Possible values:**

Name from **Setup > WLAN > RADIUS-Accounting > Servers**, max. 16 characters

Default:**2.12.46 Indoor only operation**

If indoor-only operation is activated, the 5-GHz-band channels are limited to the 5.15 - 5.25 GHz spectrum (channels 36-48) in ETSI countries. Radar detection (DFS) is switched off and the mandatory interruption after 24 hours is no longer

in effect. This mode reduces the risk of interruption due to false radar detections. In the 2.4-GHz band in France, the channels 8 to 13 are also permitted, meaning that more channels are available.

Telnet path: /Setup/WLAN

Possible values:

- On
- Off

Default: Off

 Indoor operation may only be activated if the base station and all other stations are operated within an enclosed space.

 Indoor operation may only be activated if the base station and all other stations are operated within an enclosed space.

2.12.47 Idle timeout

This is the time in seconds during which the access point cannot receive any packets after a client is disconnected.

Telnet path: /Setup/WLAN/Idle-Timeout

Possible values:

- Max. 10 numerical characters

Default: 3600 seconds

2.12.48 Use full channel set

When 5 GHz and DFS are used, this parameter allows the use of channels 120, 124, 128 which are otherwise blocked for 'weather radar'.

Telnet path: /Setup/WLAN/Use-Full-Channelset

Possible values:

- Yes
- No

Default: No

 Please note that activating this option constitutes a breach of ETSI regulations since no approval for these channels has been granted for LCOS.

2.12.50 Signal averaging

This menu contains the settings for signal averaging.

Telnet path: /Setup/WLAN

 The settings for signal averaging are intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.50.1 Method

Method for signal averaging.

Telnet path: /Setup/WLAN/Signal-Averaging

Possible values:

- Standard
- Filtered

Default: Standard

 The settings for signal averaging are intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.50.2 Standard parameters

This menu contains the configuration of the default parameters for signal averaging.

Telnet path: /Setup/WLAN/Signal-Averaging

 The settings for signal averaging are intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.50.2.1 Factor

Factor for the signal averaging.

Telnet path:/Setup/WLAN/Signal-Averaging/Standard-Parameters

Possible values:

- Max. 3 numerical characters

Default: 4

 The settings for signal averaging are intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.51 Rate-Adaption

This menu contains settings for the rate adaption algorithm.

SNMP-ID:

2.12.51

Path Telnet:

Setup > WLAN

2.12.51.2 Initial rate

The initial rate determines the starting bit rate that the algorithm uses to determine the optimal bit rate.

SNMP ID:

2.12.51.2

Telnet path:

Setup > WLAN > Rate-Adaptation

Possible values:

Minimum

RSSI-derived

Default:

Minimum

2.12.51.3 Minstrel averaging factor

The averaging factor used for recalculating the net rates for each bit rate according to the Minstrel method.

SNMP ID:

2.12.51.3

Telnet path:

Setup > WLAN > Rate-Adaptation

Possible values:

0 to 99

Default:

75

2.12.51.4 Standard averaging factor

The averaging factor used for recalculating the net rates for each bit rate according to the standard method.

SNMP ID:

2.12.51.4

Telnet path:

Setup > WLAN > Rate-Adaptation

Possible values:

0 to 99

Default:

0

2.12.51.5 Method

Defines the method for rate adaption

SNMP ID:

2.12.51.5

Telnet path:

Setup > WLAN > Rate-Adaption

Possible values:

Standard

Minstrel

Default:

Minstrel

2.12.60 IAPP-IP network

Here you select the ARF network which is to be used as the IAPP-IP network.

Telnet path: /Setup/WLAN

Possible values:

- Select from the list of ARF networks defined in the device
- Maximum 16 alphanumerical characters

Default: Blank

Special values: Blank: If no IAPP-IP network is defined, IAPP announcements are transmitted on all of the defined ARF networks.

2.12.70 VLAN group key mapping

This table contains the mapping of VLAN group keys to the logical WLAN networks.

SNMP ID:

2.12.70

Telnet path:

Setup > WLAN > VLAN-groupkey-mapping

2.12.70.1 Network

Contains the name of a WLAN network registered in the device.

SNMP ID:

2.12.70.1

Telnet path:

Setup > WLAN > VLAN-groupkey-mapping

2.12.70.2 VLAN ID

Contains the VLAN ID assigned to the logical WLAN network.

SNMP ID:

2.12.70.2

Telnet path:

Setup > WLAN > VLAN-groupkey-mapping

Possible values:

1 to 4094

Default:

1

2.12.70.3 Group key index

The table contains the group key index:

SNMP ID:

2.12.70.3

Telnet path:**Setup > WLAN > VLAN-groupkey-mapping****Possible values:**

1 to 3

2.12.80 Dual roaming

Here is where you manage the roaming behavior of devices with multiple WLAN modules.

SNMP ID:

2.12.80

Telnet path:**Setup > WLAN > Dual-Roaming**

2.12.80.1 Group

Determines whether all WLAN modules participate in dual-roaming.

SNMP ID:

2.12.80.1

Telnet path:**Setup > WLAN > Dual-Roaming****Possible values:**

Off

WLAN-1 + WLAN-2

Default:

Off

2.12.80.2 Lockout-Period-ms

Using this setting you specify the lockout period for time-staggered roaming of the WLAN modules in dual-radio clients.

If you enable dual roaming, your dual-radio device operates both WLAN modules in client mode. With dual roaming, this increases the probability that at least one of the modules has a connection when changing between two cells. The lockout time describes the time (in milliseconds) within which a WLAN module does not perform any roaming operation or background scanning after the other WLAN module has successfully established a new connection.

SNMP ID:

2.12.80.2

Telnet path:**Setup > WLAN > Dual-Roaming****Possible values:**

0 to 4294967295

Default:

100

2.12.85 PMK-Caching

Manage PMK-caching here.

SNMP ID:

2.12.85

Telnet path:**Setup > WLAN > PMK-Caching**

2.12.85.1 Default lifetime

Specifies the duration in seconds that the WLAN client stores the negotiated PMK.



Make sure that the time set here matches the session timeout in the accept message that the access point or RADIUS server sends to the WLAN client. Once this time has expired, the access point or RADIUS server requires a re-authentication.

SNMP ID:

2.12.85.1

Telnet path:**Setup > WLAN > PMK-Caching****Possible values:**

0 to 4294967295

Default:

0

Special values:

0: The negotiated PMK expires immediately.

2.12.86 Packet-Capture

This menu contains the settings for this packet capturing.

SNMP ID:

2.12.86

Telnet path:**Setup > WLAN**

2.12.86.1 WLAN-Capture-Format

Using this setting you specify the format used by the packet capture function to store the WLAN-specific information in the capture file.

SNMP ID:

2.12.86.1

Telnet path:**Setup > WLAN > Packet-Capture****Possible values:**

- **Radiotap:** Uses the radiotap header. Radiotap is a widely accepted format on Linux and BSD WLAN drivers which enables the creation of compact captures due to its flexible structure. With radiotap you can record a large amount of WLAN-specific information with a high compression rate. This also applies to data packets from 802.11n compliant connections. Limitations only arise when recording antenna-specific RSSI and signal strength as well as aggregations (A-MPDU). If you do not require detailed WLAN-specific information for this, choose the PPI format instead.
- **AVS:** Uses the AVS header. The AVS header is a newer development of the PRISM header, and is used by LCOS as the standard header up to version 8.60. However, since AVS is also unable to process information from 802.11n compliant connections, you should choose the more powerful radiotap header.
- **PPI:** Uses the proprietary Wireshark PPI header. Use this setting if you want to analyze the capture file with Wireshark. PPI offers similar functions as radiotap but can also bypass its limitations on the recording of information about 802.11n compliant connections. A disadvantage to radiotap is, however, the weaker compression and less detailed header structure.
- **PRISM:** Uses the classic PRISM header. Only use this setting if you want to analyze the capture file with a program which does not support any of the other formats. PRISM is not suitable for recording information from 802.11n compliant connections. In the meantime this is considered obsolete and should no longer be used.
- **Plain:** Disables all headers. Use this setting if you are only interested in the packet data itself.

Default:

Radiotap

2.12.87 Client steering

This is where you determine the 'WLAN band steering' settings of the WLAN clients registered at the access point.

SNMP ID:

2.12.87

Telnet path:**Setup > WLAN**

2.12.87.1 Operating

This option enables 'client steering' in the access point.

SNMP ID:

2.12.87.1

Telnet path:**Setup > WLAN > Client-Steering****Possible values:**

Yes

No

Default:

No

2.12.87.2 Criterion

Determine here the criteria by which the access point controls the WLAN client.

SNMP ID:

2.12.87.2

Telnet path:**Setup > WLAN > Client-Steering****Possible values:**

Radio-Band

Default:

Radio-Band

2.12.87.3 Preferred band

Set here the preferred frequency band to which the access point steers the WLAN client.

SNMP ID:

2.12.87.3

Telnet path:**Setup > WLAN > Client-Steering****Possible values:**

5GHz

2.4GHz

Default:

5GHz

2.12.87.4 Probe request ageout seconds

Set the time (in seconds) that the WLAN client connection should be stored in the access point. When this time expires, the access point deletes the entry from the table.



This value should be set low if you are using clients in the WLAN that, for example, often switch from dual-band to single-band mode.

SNMP ID:

2.12.87.3

Telnet path:**Setup > WLAN > Client-Steering****Possible values:**

Max. 10 characters

From 0 to 9

Special values:

0: The visible probe requests are deemed invalid immediately.

Default:

120

2.12.100 Card reinitialize cycle

In this interval (in seconds) the internal WLAN cards in older access points are reinitialized in order for point-to-point connections to remain active. This function is handled by the "alive test" in newer models.

Telnet path: /Setup/WLAN

Possible values:

- Max. 10 numbers

Default: 0

Special values: 0: Deactivates this function.

2.12.101 Noise calibration cycle

WLAN cards fitted with the Atheros chipset measure noise levels on the medium in this interval (in seconds).

Telnet path: /Setup/WLAN

Possible values:

- Max. 10 numbers

Default: 0

Special values: 0: Deactivates this function.

2.12.103 Trace MAC

The output of trace messages for the WLAN-Data-Trace can be set for a certain client. The corresponding MAC address is entered here.

Telnet path: /Setup/WLAN

Possible values:

- Max. 12 hexadecimal characters

Default: 000000000000

Special values: 000000000000: Deactivates this function and outputs trace messages for all clients.

2.12.105 Thermal recalibration cycle

In this interval (in seconds) WLAN cards fitted with the Atheros chipset adjust their transmission power to compensate for thermal variations.

Telnet path: /Setup/WLAN

Possible values:

- Max. 10 numbers

Default: 20

Special values: 0: Deactivates this function.

 Please note that deactivating the thermal recalibration cycle for these cards means that they cannot react to changes in temperature.

2.12.107 Radar pattern thresholds

This table is used to define threshold values to be used when the radar detection is activated.

Telnet path: /Setup/WLAN

 These settings are relevant for devices that operate according to ETSI EN 301 893 version 1.3. These settings have no meaning for devices compliant with ETSI EN 301 893 version 1.5 and later.

2.12.107.1 Pattern pps

Select one of the predefined radar patterns here to enter or change the threshold value for the radar pattern recognition.

Telnet path: /Setup/WLAN/Radar-Pattern-Thresholds

Possible values:

- EN301893-1.2-700pps
- EN301893-1.2-1800pps
- EN301893-1.2-330pps
- EN301893-1.3-750pps
- EN301893-1.3-200pps
- EN301893-1.3-300pps
- EN301893-1.3-500pps
- EN301893-1.3-800pps
- EN301893-1.3-1000pps
- EN301893-1.3-1200pps
- EN301893-1.3-1500pps
- EN301893-1.3-1600pps
- EN301893-1.3-2000pps
- EN301893-1.3-2300pps
- EN301893-1.3-3000pps
- EN301893-1.3-3500pps
- EN301893-1.3-4000pps
- EN302502-3000pps
- EN302502-4500pps

2.12.107.2 Threshold

The value entered here describes the accuracy with which the corresponding radar pattern is detected.

Telnet path: /Setup/WLAN/Radar-Pattern-Thresholds

Possible values:

- Max. 10 numeric characters in the range 0 – 4289999999

Defaults:

- EN301893-1.2-700pps: 8
- EN301893-1.2-1800pps: 6
- EN301893-1.2-330pps: 15
- EN301893-1.3-750pps: 7

2 Setup

- EN301893-1.3-200pps: 7
- EN301893-1.3-300pps: 7
- EN301893-1.3-500pps: 7
- EN301893-1.3-800pps: 7
- EN301893-1.3-1000pps: 7
- EN301893-1.3-1200pps: 4
- EN301893-1.3-1500pps: 7
- EN301893-1.3-1600pps: 5
- EN301893-1.3-2000pps: 7
- EN301893-1.3-2300pps: 7
- EN301893-1.3-3000pps: 7
- EN301893-1.3-3500pps: 7
- EN301893-1.3-4000pps: 7
- EN302502-3000pps: 4
- EN302502-4500pps: 4



Changing these default values may cause the device to operate in violation of the standard ETSI EN 301 893 version 1.3.

2.12.108 Radar load threshold

This value indicates the percentage utilization of the wireless module at which the accuracy of radar detection is reduced.

Telnet path: /Setup/WLAN

Possible values:

- Max. 3 numeric characters in the range 0 – 100

Default: 40

2.12.109 Noise offsets

This table is used to define the correction factors which adjust the displayed signal values.

Telnet path: /Setup/WLAN

2.12.109.1 Band

The noise-offset value is applied to the frequency band selected here.

Telnet path: /Setup/WLAN/Noise-Offsets

Possible values:

- Choose from the frequency bands supported by the device, e.g. 2.4 GHz or 5 GHz.

Default: 2.4 GHz

2.12.109.2 Channel

The noise-offset value is applied to the channel selected here.

Telnet path: /Setup/WLAN/Noise-Offsets

Possible values:

- Max. 5 numerical characters

Default: Blank

2.12.109.3 Interface

The noise-offset value is applied to the WLAN interface selected here.

Telnet path: /Setup/WLAN/Noise-Offsets

Possible values:

- Depend on the hardware capabilities, e.g. WLAN-1 or WLAN-2

Default: WLAN-1

2.12.109.4 Value

This numeric value is added to the current noise value.

Telnet path: /Setup/WLAN/Noise-Offsets

Possible values:

- Max. 3 numeric characters in the range 0 – 127

Default: 0

2.12.110 Trace level

The output of trace messages for the WLAN data trace can be restricted to contain certain content only. The messages are entered in the form of a bit mask for this.

Telnet path: /Setup/WLAN

Possible values:

- 0 to 255.
- 0: Reports that a packet has been received/sent
- 1: Adds the physical parameters for the packets (data rate, signal strength...)
- 2: Adds the MAC header
- 3: Adds the Layer-3 header (e.g. IP/IPX)
- 4: Adds the Layer-4 header (TCP, UDP...)
- 5: Adds the TCP/UDP payload

Default: 255

2.12.111 Noise immunity level

The settings for noise-immunity (Adaptive Noise Immunity - ANI) can be adjusted here.

Telnet path: /Setup/WLAN/Noise-Immunity



Under most conditions the settings for noise immunity are controlled automatically by the WLAN module driver according to the radio-field conditions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.111.1 Noise immunity level

This item sets the threshold value to be used for noise immunity.

Telnet path: /Setup/WLAN/Noise-Immunity/Noise-Immunity-Level

Possible values:

- Numerical characters from 0 to 255

Default: 255

-  Under most conditions the settings for noise immunity are controlled automatically by the WLAN module driver according to the radio-field conditions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.111.2 OFDM weak signal detection

This item sets the threshold value to be used for detecting weak OFDM signals.

Telnet path:/Setup/WLAN/Noise-Immunity/OFDM-Weak-Signal-Detection

Possible values:

- Numerical characters from 0 to 255

Default: 255

-  Under most conditions the settings for noise immunity are controlled automatically by the WLAN module driver according to the radio-field conditions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.111.3 CCK weak signal detection threshold

This item sets the threshold value to be used for detecting weak CCK signals.

Telnet path:/Setup/WLAN/Noise-Immunity/CCK-Weak-Signal-Detection-Threshold

Possible values

- Numerical characters from 0 to 255

Default: 255

-  Under most conditions the settings for noise immunity are controlled automatically by the WLAN module driver according to the radio-field conditions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.111.4 Fir step level

This item sets the value to be used for the fir step.

Telnet path:/Setup/WLAN/Noise-Immunity/Fir-Step

Possible values:

- Numerical characters from 0 to 255

Default: 255

-  Under most conditions the settings for noise immunity are controlled automatically by the WLAN module driver according to the radio-field conditions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.111.5 Spurious immunity level

This item sets the threshold value to be used for spurious immunity.

Telnet path:/Setup/WLAN/Noise-Immunity/Spurious-Immunity-Level

Possible values

- Numerical characters from 0 to 255

Default: 255

 Under most conditions the settings for noise immunity are controlled automatically by the WLAN module driver according to the radio-field conditions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.12.111.6 MRC-CCK

With this parameter, the Maximum Ratio Combining (MRC) for 802.11b rates (1 to 11 Mbit) on devices with an Osprey WLAN module (AR93xx) can be enabled (value != 0) or disabled (value = 0). The default value 255 means that the WLAN driver presetting is not overridden. In certain cases it may be reasonable to set this value to 0 in order to artificially "deafen" the receiver in the device.

SNMP ID:

2.12.111.6

Telnet path:

Setup > WLAN > Noise-Immunity

Possible values:

0 to 255

Default:

255

2.12.114 Aggregate retry limit

This parameter specifies how many times a set of packets to be sent by the hardware may be repeated until it is deferred while other packets waiting to be sent are transmitted. Restricting the number of repeat attempts to a small amount, e.g. in VoIP environments, limits the maximum delay for VoIP packets

Telnet path: /Setup/WLAN/Aggregate-Retry-Limit

Possible values:

- 0 to 255

Default: 255

 The absolute value set under 'Hard-Retries' for transmission attempts remains unaffected by the setting here.

2.12.115 Omit global crypto sequence check

This is where you set the value for the crypto sequence check.

Telnet path: /Setup/WLAN

Possible values:

- Auto
- Yes
- No

Default: Auto

Special values: Auto: LCOS contains a list of relevant devices. In the 'Auto' setting, the global sequence check is disabled. For other devices not included in this list, the global sequence check has to be disabled manually.

2.12.116 Trace packets

Similar to Trace MAC and Trace level, the output from WLAN DATA traces can be restricted by the type of packet sent or received, e.g. management (authenticate, association, action, probe-request/response), control (e.g. powersave poll), EAPOL (802.1x negotiation, WPA key handshake).

Telnet path: /Setup/WLAN

Possible values:

- One or more values from Management, Control, Data, EAPOL, All

Default: All

2.12.117 WPA-Handshake-Delay-ms

This setting sets the time (in milliseconds) that the device delays the WPA handshake when roaming. A value of 0 means that there is no delay.

SNMP ID:

2.12.117

Telnet path:

Setup > WLAN

Possible values:

0 to 4294967295

Default:

0

2.12.118 WPA-Handshake-Timeout-Override-ms

This setting sets the time (in milliseconds) that the device overrides the WPA handshake timeout when roaming. A value of 0 means that there is no override.

SNMP ID:

2.12.118

Telnet path:

Setup > WLAN > WPA-Handshake-Timeout-Override-ms

Possible values:

0 to 4294967295

Default:

0

2.12.119 Trace-Beacons

Using this setting you configure whether beacons are also transmitted in the WLAN-DATA trace or not.

SNMP ID:

2.12.119

Telnet path:

Setup > WLAN

Possible values:

Yes

No

Default:

No

2.12.120 Rx-Aggregate-Flush-Timeout-ms

Using this setting you determine the time (in milliseconds) after which the device views parts of aggregates that were not received as "lost", and the subsequent packages are no longer retained.

SNMP ID:

2.12.120

Telnet path:**Setup > WLAN****Possible values:**

0 to 4294967295

Default:

40

2.12.121 HT-Fairness

HT fairness is used for mixed operation with devices that do support 802.11n and those that do not, in order to ensure approximately equal access to broadcast facilities for both types of clients. The device uses a different strategy when selecting which packets are to be transmitted.

SNMP ID:

2.12.121

Telnet path:**Setup > WLAN****Possible values:**

Yes

No

Default:

Yes

2.12.122 DFS-Testmode

You enable or disable the DFS test mode with this setting. If it is enabled, the device only reports known radar bursts and does not switch radio channels – contrary to normal operation.



This parameter is only required for development tests and is not relevant for normal operations. Never change this default setting!

SNMP ID:

2.12.122

Telnet path:**Setup > WLAN****Possible values:**

Yes

No

Default:

No

2.13 LANCAPI

LANCAPI from LANCOM Systems is a specialized version of the widespread ISDN CAPI interface. CAPI stands for Common ISDN Application Programming Interface and it links ISDN adapters and communications software. This software in turn provides the computer with office-communications functions such as a fax or answering machine.

Telnet path: /Setup

2.13.1 Access list

This table is for specifying addresses or address ranges that should have access to the server. If this table is empty, all users automatically have access.

Telnet path: Setup/LANCAPI/Access-List

2.13.1.1 IP address

An IP address that is to be granted access is entered here.

Telnet path:/Setup/LANCAPI/Priority-List/IP-Address**Possible values:** Max. 15 characters**Default:** Blank

2.13.1.2 IP netmask

Enter the associated netmask here.

If you wish to authorize just a single workstation with the previously specified IP address, enter **255.255.255.255** here. If you wish to authorize a whole IP network, enter the corresponding netmask.

Telnet path:/Setup/LANCAPI/Priority-List/IP-Netmask**Possible values:** Max. 15 characters**Default:** Blank

2.13.1.3 Routing tag

If you specify a routing tag for this access rule, the only packets that will be accepted have received the same tag in the firewall or they are from a network with the corresponding interface tag. If the routing tag is 0, access attempts from suitable IP addresses are accepted every time.

Telnet path:/Setup/LANCAPI/Access-List/Rtg-Tag**Possible values:** Max. 5 characters**Default:** Blank

 It follows that the use of routing tags only makes sense in combination with the appropriate accompanying rules in the firewall or tagged networks.

2.13.3 UDP port

You can change the UDP port number of the LANCAPi server here.

Telnet path: /Setup/LANCAPi/UDP-Port

Possible values: Max. 5 characters

Default: 75 (any private telephony service)

2.13.6 Interface list

This list contains an entry for each device of your device. For each interface you can define whether it should be available for LANCAPi clients and which telephone numbers are to be used.

Telnet path: /Setup/LANCAPi

2.13.6.1 lfc

This describes the interface (e.g. S0-1).

Telnet path: /Setup/LANCAPi/Interface-List

2.13.6.2 Operating

You can specify if and how this interface should be **available for LANCAPi clients**. You can specify that, via this interface:

- All/yes
- None/no
- Dial-in only or
- Dial only

calls should be allowed.

Telnet path: /Setup/LANCAPi/Interface-List

2.13.6.3 EAZ MSN(s)

If the LANCAPi server should receive incoming calls, enter your ISDN telephone number which is to receive the LANCAPi calls into the 'EAZ-MSNs' field. Multiple telephone numbers are separated by semicolons. If no telephone number is entered here, LANCAPi receives calls at any of its ISDN telephone numbers.

Telnet path: /Setup/LANCAPi/Interface-List

2.13.6.5 Force out MSN

If an outgoing call is not set with your own number, then this option determines that the number of this interface is set as your own number. Only activate this option if your PBX system does not allow outgoing calls without being set with your own number.

Telnet path: /Setup/LANCAPi/Interface-List

Possible values:

- Yes
- No

Default: No

2.13.6.6 Max connections

A maximum limit can be placed on the number of connections per S0 bus (max. 3 characters)

Telnet path: /Setup/LANCAPI/Interface-List

2.13.7 Priority list

This table is used to define the priorities of the ISDN interfaces for outgoing calls made with the LANCAPI.

Telnet path:/Setup/LANCAPI/Priority-List

2.13.7.1 Interface

Select the ISDN interface here for which you wish to set a priority value.

Telnet path:/Setup/LANCAPI/Priority-List/Ifc

Possible values:

- Choose from the device's ISDN interfaces, e.g. S0-1

2.13.7.2 Priority out

Here you select the priority of the ISDN interface to be used for outgoing calls made with the LANCAPI.

Telnet path:/Setup/LANCAPI/Priority-List/Prio-out

Possible values:

- P1 (high priority) to P3 (low priority)

Default: P3

2.14 Time

This menu contains the configuration of the device time settings.

Telnet path: /Setup

2.14.1 Fetch method

Select here if and how the device synchronizes its internal real-time clock.

SNMP ID:

2.14.1

Telnet path:

Setup > Time

Possible values:

None

ISDN

NTP

GPS

Default:

NTP

2.14.2 Current time

Display of current time.

Telnet path: /Setup/Time

2.14.3 Time call number

Enter here a phone number that the device can call to obtain time information from the ISDN. After being switched on, the device will immediately dial this number and then disconnect the connection immediately. This transmits the current time from the ISDN exchange.

Telnet path: /Setup/Time

Possible values:

- Max. 39 characters

Default: Blank

2.14.5 Call attempts

Specify the maximum number of dial attempts by the device to the specified number for the purpose of time initialization.

Telnet path: /Setup/Time

Possible values:

- Max. 3 digits

Default: 3

2.14.7 UTC in seconds

WEBconfig path: LCOS Menu Tree/Setup/Time/UTC in seconds

Description

2.14.10 Timezone

This item sets the timezone for the location of your device. The time zone is the difference between local time and Coordinated Universal Time (UTC) in hours. This is especially important for the Network Time Protocol (NTP)

Telnet path: /Setup/Time

Possible values:

- 0
- +1
- +2
- +3
- +4
- +5
- +6
- +7
- +8
- +9

- +10
- +11
- +12
- +13
- +14
- -1
- -2
- -3
- -4
- -5
- -6
- -7
- -8
- -9
- -10
- -11
- -12

Default: +1

2.14.11 Daylight saving time

The time change between local standard time and daylight-saving time can be set here manually or automatically. For automatic daylight saving time adjustment, enter the appropriate time region for the location of your device. If your device is located outside the specified time regions, the use of automatic time adjustment requires you to select 'User defined' and for you to enter the following values into the table for automatic time adjustment.

Telnet path: /Setup/Time

Possible values:

- Yes
- No
- Europe (EU)
- Russia
- USA
- Userdefined

Default: Europe (EU)

2.14.12 DST clock changes

Here you configure the individual values for the automatic clock change between summer and winter time, assuming that the local daylight-saving time settings have been selected as 'User defined'.

Telnet path: /Setup/Time

2.14.12.1 Event

Defines the beginning and end of daylight saving time

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.12.2 Index

First or last day of month for switching to daylight-saving time (summertime).

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.12.3 Day

Defines on which recurring weekday of the month the time change is carried out.

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.12.4 Month

The month in which the change is carried out.

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.12.5 Hour

The hour at which the change is carried out.

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.12.6 Minute

The minute at which the change is carried out.

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.12.7 Time type

Time standard, such as UTC (Coordinated Universal Time).

Telnet path: /Setup/Time/DST-Clock-Changes

2.14.13 Get time

This command causes the device to fetch the current time from the specified time server.

Telnet path: /Setup/Time

2.14.15 Holidays

This table contains the holidays that have been defined.

Telnet path: /Setup/Time/Holidays

2.14.15.1 Index

This describes the position of the entry in the table.

Telnet path: /Setup/Time/Holidays/Index

Possible values:

- 0 to 9999

Default: Blank

2.14.15.2 Date

If you have created entries in the least-cost table or the timed control table that should apply on public holidays, enter the days here.

Telnet path: /Setup/Time/Holidays/Date

Possible values:

- Valid date

Default: Blank

2.14.16 Timeframe

Timeframes are used to define the periods when the content-filter profiles are valid. One profile may have several lines with different timeframes. Different lines in a timeframe should complement each other, i.e. if you specify WORKTIME you will probably wish to specify a timeframe called FREETIME to cover the time outside of working hours.

Telnet path: /Setup/Time

2.14.16.1 Name

Enter the name of the timeframe for referencing from the content-filter profile.

Telnet path: /Setup/Time/Timeframe

Possible values:

- Name of a timeframe
- Maximum 31 characters

Default: Blank

2.14.16.2 Start

Here you set the start time (time of day) when the selected profile becomes valid.

Telnet path: /Setup/Time/Timeframe

Possible values:

- Max. 5 characters
- Format HH:MM

Default: 00:00

2.14.16.3 Stop

Here you set the end time (time of day) when the selected profile becomes invalid.

Telnet path: /Setup/Time/Timeframe

Possible values:

- Max. 5 characters
- Format HH:MM

Default: 11:59 PM

2.14.16.4 Weekdays

Here you select the weekday on which the timeframe is to be valid.

Telnet path: /Setup/Time/Timeframe

Possible values:

- Monday
- Tuesday
- Wednesday
- Thursday
- Friday
- Saturday
- Sunday

- Public holiday

Default: Activated for Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday, Holiday

2.15 LCR

This menu contains the configuration of the least-cost router.

Telnet path: /Setup

2.15.1 Router usage

A router is an intelligent network component; comparable with a post office, it uses the logical target address of a packet to determine which network component should transmit the packet next; it knows the overall topology of the network. If this option is activated, all connections made by the router are controlled by least-cost routing.

Telnet path: /Setup/LCR

Possible values:

- Yes
- No

Default: No

2.15.2 Lancapi usage

If this option is activated, all connections made by CAPI clients are controlled by least-cost routing.

Telnet path: /Setup/LCR

Possible values:

- Yes
- No

Default: No

2.15.4 Time list

In this table you can define the Call-by-Call numbers to be used for telephone calls depending on the time, day and area code.

Telnet path: /Setup/LCR

2.15.4.1 Index

Index for this entry in the table.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Max. 10 characters

Default: 0

2.15.4.2 Prefix

Enter the prefix (e.g. area code) or the first few digits of a group of prefixes to which the entry will apply. If, for example, you enter 030 for Berlin, all calls with this prefix will be redirected as indicated here. Optionally you may wish to enter only 03 and then all calls to any place that begins with the prefix 03 will be redirected accordingly.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Max. 10 characters

Default: Blank

2.15.4.3 Days

The days on which this entry should apply. You can create multiple entries for a given prefix, each applying to different periods or different days.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Monday
- Tuesday
- Wednesday
- Thursday
- Friday
- Saturday
- Sunday
- Public holiday

Default: Blank

2.15.4.4 Start

The start of the period during which this entry should apply.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Max. 5 characters

Default: Blank

2.15.4.5 Stop

The end of the period during which this entry should apply.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Max. 5 characters

Default: Blank

2.15.4.6 Number list

Enter here the prefix for the call-by-call provider to be used for calls matching this entry.

Multiple prefixes can be separated by semi-colons. If no connection can be established with the first prefix, the following prefixes will be tried in sequence.

Leave this field empty if calls that match this entry are not to be re-directed.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Max. 29 characters

Default: Blank

2.15.4.7 Fallback

Automatic fallback: If no connection can be established on any of the supplied call-by-call numbers, the least-cost router will connect to your regular telephone service provider. Switch this option off if you do not want this to happen.

Telnet path: /Setup/LCR/Time-List

Possible values:

- Yes
- No

Default: No

2.16 NetBIOS

This menu contains the configuration of the NetBIOS.

Telnet path: /Setup

2.16.1 Operating

When this option is enabled, the router will also be able to forward NetBIOS packets directly to specific stations in remote networks. Without this option enabled, these packets often cause unnecessary connections, since the individual computers of NetBIOS-based networks (e.g. Microsoft Windows networks) continuously exchange status information.

Telnet path: /Setup/NetBIOS

Possible values:

- Yes
- No

Default: No

2.16.2 Scope ID

The device appends this string to the NetBIOS name for all TCP/IP connections using NetBIOS.

Telnet path: /Setup/NetBIOS

Possible values:

- Max. 64 characters

Default: Blank

2.16.4 Peers

Enter the name for the remote stations to which NetBIOS is to be transmitted over IP. These remote stations must also be entered in the IP routing table.

Telnet path: /Setup/NetBIOS

2.16.4.1 Name

Enter the name for the remote station here. This remote station must also be present in the routing table of the IP router.

Telnet path: /Setup/NetBIOS/Peers

Possible values:

- Max. 16 characters

Default: Blank

2.16.4.3 Type

Specify whether the remote station is also a router or an individual workstation with a dial-up remote-access connection.

Telnet path: /Setup/NetBIOS/Peers

Possible values:

- Workstation
- Router

Default: Router

2.16.5 Group list

This list displays all NetBIOS groups.

Telnet path: /Setup/NetBIOS

2.16.5.1 Group/Domain

Name of the workgroup communicated by NetBIOS.

Telnet path: /Setup/NetBIOS/Group-List

2.16.5.2 Type

NetBIOS defines a certain amount of server types, and these are displayed by hexadecimal numbers. The most important of these types are:

- Standard workstation 00
- Win PopUp service 03
- RAS server 06
- Domain master browser or PDC 1B
- Master browser 1D
- NetDDE service 1F
- File or printer service 20
- RAS client 21
- Network monitor agent BE
- Network monitor utility BF

Telnet path: /Setup/NetBIOS/Group-List

2.16.5.3 IP address

The station's IP address.

Telnet path: /Setup/NetBIOS/Group-List

Possible values:

- Valid IP address.

2.16.5.4 Peer

Name of the remote device that can be used to access this NetBIOS group.

Telnet path: /Setup/NetBIOS/Group-List

Possible values:

- Select from the list of defined peers.

2.16.5.5 Timeout

Period of validity (lease) of this entry in minutes.

Telnet path: /Setup/NetBIOS/Group-List

2.16.5.6 Flags

Flags as additional identifiers for the station or group.

Telnet path: /Setup/NetBIOS/Group-List

2.16.5.7 Network name

Name of the IP network where the client is located.

Telnet path: /Setup/NetBIOS/Group-List

2.16.5.8 Routing tag

Routing tag for this entry.

Telnet path: /Setup/NetBIOS/Group-List

2.16.6 Host List

This list displays all NetBIOS hosts.

Telnet path: /Setup/NetBIOS

2.16.6.1 Name

Name of the station communicated by NetBIOS.

Telnet path: /Setup/NetBIOS/Host-List

2.16.6.2 Type

NetBIOS defines a certain amount of server types, and these are displayed by hexadecimal numbers. The most important of these types are:

- Standard workstation 00
- Win PopUp service 03
- RAS server 06
- Domain master browser or PDC 1B
- Master browser 1D

2 Setup

- NetDDE service 1F
- File or printer service 20
- RAS client 21
- Network monitor agent BE
- Network monitor utility BF

Telnet path: /Setup/NetBIOS/Host-List

2.16.6.3 IP address

The station's IP address.

Telnet path: /Setup/NetBIOS/Host-List

Possible values:

- Valid IP address.

2.16.6.4 Peer

Name of the remote site that can be used to access this station.

Telnet path: /Setup/NetBIOS/Host-List

Possible values:

- Select from the list of defined peers.

2.16.6.5 Timeout

Period of validity (lease) of this entry in minutes.

Telnet path: /Setup/NetBIOS/Host-List

2.16.6.6 Flags

Flags as additional identifiers for the station or group.

Telnet path: /Setup/NetBIOS/Host-List

2.16.6.7 Network name

Name of the IP network where the client is located.

Telnet path: /Setup/NetBIOS/Host-List

2.16.6.8 Routing tag

Routing tag for this entry.

Telnet path: /Setup/NetBIOS/Host-List

2.16.7 Server list

This list displays all NetBIOS servers.

Telnet path: /Setup/NetBIOS

2.16.7.1 Host

Displays the host's NetBIOS name

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.2 Group/Domain

Displays the workgroup/domain where the NetBIOS host is located.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.4 IP address

Displays the IP address of the NetBIOS host.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.5 OS ver.

Displays the NetBIOS host's operating system.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.6 SMB version

Displays the SMB version of the NetBIOS host.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.7 Server type

Displays the NetBIOS host's server type.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.8 Peer

Remote device over which the NetBIOS host can be reached.

Telnet path: /Setup/NetBIOS/Server-List

Possible values:

- Select from the list of defined peers.

2.16.7.9 Timeout

Displays the time in minutes until the NetBIOS information is updated.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.10 Flags

Displays the NetBIOS flags detected for the NetBIOS host.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.11 Network name

Displays the IP network where the NetBIOS host is located.

Telnet path: /Setup/NetBIOS/Server-List

2.16.7.12 Routing tag

Routing tag for the connection to the NetBIOS host.

Telnet path: /Setup/NetBIOS/Server-List

2.16.8 Watchdogs

Some stations send watchdog packets from time to time to check whether other stations in the network can be reached. Watchdogs of this type can cause unnecessary connections to be established. Here you can specify whether the device should intercept watchdogs of this type and answer them itself to prevent these connections from being established.

Telnet path: /Setup/NetBIOS

Possible values:

- Spoof
- Route

Default: Spoof

2.16.9 Update

The device has to exchange routing information with other NetBIOS routers from time to time. To avoid unnecessary connections being established, select when this should occur.

Telnet path: /Setup/NetBIOS

Possible values:

- pBack
- Trig
- Time

Default: pBack

2.16.10 WAN update minutes

If you have specified that routing information should be exchanged at particular intervals, enter this interval here in minutes.

Telnet path: /Setup/NetBIOS

Possible values:

- Max. 10 characters

Default: 60

2.16.11 Lease time

The maximum time in minutes for which NetBIOS names remain valid.

A host registers with the device with a NetBIOS name. When this period expires, then the host must re-register with its name.

Telnet path: /Setup/NetBIOS

Possible values:

- Max. 10 numerical characters

Default: 500

2.16.12 Networks

This table is used to adjust NetBIOS settings and to select the network that they apply to.

Telnet path: /Setup/NetBIOS

2.16.12.1 Network name

Select here the name of the network to which the settings are to apply.

Telnet path: /Setup/NetBIOS/Networks

Possible values:

- Max. 16 characters

Default: Blank

2.16.12.2 Operating

Select here whether or not the NetBIOS proxy is to be used for the selected network.

Telnet path: /Setup/NetBIOS/Networks

Possible values:

- Yes
- No

Default: No

2.16.12.3 NT domain

Enter the name of the workgroup used by the computers in your network. If several workgroups exist within your network, entering one name is sufficient.

Telnet path: /Setup/NetBIOS/Networks

Possible values:

- Max. 16 characters

Default: Blank

2.16.13 Browser list

This table shows you an overview of the master browsers known to the NetBIOS proxy.

SNMP ID:

2.16.13

Telnet path:

Setup > NetBIOS

2.16.13.1 Browser

This entry shows the computer name (master browser).

SNMP ID:

2.16.13.1

Telnet path:

Setup > NetBIOS > Browser-List

2.16.13.2 Group/Domain

This entry shows the workgroups/domains.

SNMP ID:

2.16.13.2

Telnet path:

Setup > NetBIOS > Browser-List

2.16.13.4 IP address

This entry shows the IP addresses.

SNMP ID:

2.16.13.4

Telnet path:

Setup > NetBIOS > Browser-List

2.16.13.5 OS-Ver.

This entry shows the OS version.

SNMP ID:

2.16.13.5

Telnet path:

Setup > NetBIOS > Browser-List

2.16.13.7 Server type

This entry shows the server type.

SNMP ID:

2.16.13.7

Telnet path:

Setup > NetBIOS > Browser-List

2.16.13.8 Peer

This entry shows the name of the remote station.

SNMP ID:

2.16.13.8

Telnet path:

Setup > NetBIOS > Browser-List

2.16.13.9 Timeout

This entry shows the number of timeouts.

SNMP ID:

2.16.13.9

Telnet path:**Setup > NetBIOS > Browser-List****2.16.13.10 Flags**

This entry shows the flags.

SNMP ID:

2.16.13.10

Telnet path:**Setup > NetBIOS > Browser-List****2.16.13.11 Network name**

This entry shows the network name.

SNMP ID:

2.16.13.11

Telnet path:**Setup > NetBIOS > Browser-List****2.16.13.12 Routing tag**

This entry shows the routing tag used.

SNMP ID:

2.16.13.12

Telnet path:**Setup > NetBIOS > Browser-List****2.16.14 Support browsing**

Windows uses the browser service or search service to discover the network environment. Since the browser service works with broadcasts, the network environment in routed networks is incomplete if no domains are used. Support of the search service closes this gap by propagating the master browser for each local workgroup to the remote side, or by using broadcasts in the LAN to propagate the master browsers located on the remote side. The list of master browsers known to the NetBIOS proxy can be viewed under /Status/TCP-IP/NetBIOS/Browser-List. Support of the search service only needs to be activated in workgroup networks. Domain networks operate without broadcasts, and the master browser is always the domain controller.

Telnet path:/Setup/NetBIOS/Support-Browsing**Possible values:**

- Yes
- No

Default: Yes

2.17 DNS

This menu contains the domain-name system (DNS) configuration.

SNMP ID: 2.17

Telnet path: /Setup

2.17.1 Operating

Activates or deactivates DNS.

Telnet path: /Setup/DNS/Operating

Possible values:

- Yes
- No

Default: Yes

2.17.2 Domain

Device's own domain.

Telnet path: /Setup/DNS

Possible values:

- Max. 64 characters

Default: Internal

2.17.3 DHCP usage

The DNS server can resolve the names of the stations that have requested an IP address by DHCP.

Use this switch to activate this option.

Telnet path: /Setup/DNS

Possible values:

- Yes
- No

Default: Yes

2.17.4 NetBIOS usage

The DNS server can resolve the names of the clients that are known to the NetBIOS router.

Use this switch to activate this option.

Telnet path: /Setup/DNS

Possible values:

- Yes
- No

Default: Yes

2.17.5 DNS list

Enter the station names and the associated IP addresses here.

Telnet path: /Setup/DNS

2.17.5.1 Hostname

Enter the name of a station here.

For example, if you have a computer named myhost and your domain name is myhome.internal, then you should enter the station name here as myhost.myhome.intern.

Telnet path: /Setup/DNS/DNS-List

Possible values:

- Max. 64 characters

Default: Blank

2.17.5.2 IP address

Enter the IP address of the station.

If a client needs to resolve the name of a station, it sends a request with that name to the DNS server. The server responds by communicating the IP address entered here.

Telnet path: /Setup/DNS/DNS-List

Possible values:

- Valid IP address.

Default: 00.0.0

2.17.5.3 IPv6 address

Enter the IPv6 address of the station.

If a client needs to resolve the name of a station, it sends a request with that name to the DNS server. The server responds by communicating the IPv6 address entered here.

SNMP ID: 2.17.5.3

Telnet path: /Setup/DNS/DNS-List

Possible values:

- Valid IPv6 address.

Default: Blank

2.17.5.4 Routing tag

When resolving a station name, the device uses the routing tag to set the tag context for that station.

SNMP ID:

2.17.5.4

Telnet path:

Setup > DNS > DNS-List

Possible values:

0 to 65535

Default:

0

2.17.6 Filter list

Use the DNS filter to block access to certain stations or domains.

Telnet path: /Setup/DNS

2.17.6.1 Index

Index for the filter entries.

Telnet path: /Setup/DNS/Filter-List

Possible values:

- Max. 4 characters

Default: Blank

2.17.6.2 Domain

Enter the name of a station or a domain that you want to block. The characters '*' and '?' can be used as wildcards.

Telnet path: /Setup/DNS/Filter-List

Possible values:

- Max. 64 characters

Default: Blank

2.17.6.3 IP address

If you want this access restriction to only apply to a specific workstation or subnetwork, enter the IP address of the workstation or subnetwork here.

Telnet path: /Setup/DNS/Filter-List

Possible values:

- Valid IP address.

Default: 00.0.0

2.17.6.4 Netmask

If you have entered the address of a subnetwork for access restriction, you must enter the associated subnet mask here.

Telnet path: /Setup/DNS/Filter-List

Possible values:

- Valid IP address.

Default: 00.0.0



0

2.17.6.5 IPv6-Prefix

Using this setting you set the IPv6 addresses for which the device filters the domain. If you want to apply the filter to all IPv6 addresses, select the prefix : : / 0.

SNMP ID:

2.17.6.5

Telnet path:**Setup > DNS > Filter-List****Possible values:**

Valid IPv6 prefix

Default:

2.17.6.6 Routing tag

The routing tag determines which filters apply in each tag context.

SNMP ID:

2.17.6.6

Telnet path:**Setup > DNS > Filter-List****Possible values:**

0 to 65535

Default:

0

2.17.7 Lease time

Some computers store the names and addresses of clients that they have queried from a DNS server in order to be able to access this information more quickly in the future.

Specify here how long this data may be stored before becoming invalid. After this time the computer in question must issue a new request for the information.

Telnet path: /Setup/DNS**Possible values:**

- Max. 10 characters

Default: 2000

2.17.8 Dynamic DNS list

The Dyn DNS list records names that were registered via a register request. Windows does this when, for example, under Advanced TCP/IP Settings, "DNS", the network-connection options "Register this connection's addresses in DNS" and "Use this connection's DNS suffix in DNS registration" have been activated and the stations register in the domain.

Telnet path: /Setup/DNS

2.17.8.1 Hostname

Name of the station that registered via a register request.

Telnet path: /Setup/DNS/Dyn.-DNS-List

2.17.8.2 IP address

IP address of the station that registered via a register request.

Telnet path: /Setup/DNS/Dyn.-DNS-List

Possible values:

- Valid IP address.

2.17.8.3 Timeout

Lease period for this entry.

Telnet path: /Setup/DNS/Dyn.-DNS-List

2.17.8.4 IPV6-Address

Displays the IPV6 address of the corresponding host (if available).

SNMP ID:

2.17.8.4

Telnet path:

Setup > DNS > Dyn.-DNS-List

2.17.8.5 Network-name

Displays the name of the network in which the host is located.

SNMP ID:

2.17.8.5

Telnet path:

Setup > DNS > Dyn.-DNS-List

2.17.9 DNS destinations

Requests for certain domains can be explicitly forwarded to particular remote sites.

Telnet path: /Setup/DNS

2.17.9.1 Domain name

Here you can enter the domain and assign it a dedicated remote device or a DNS server in order to resolve the name of a certain domain from another DNS server.

Telnet path: /Setup/DNS/DNS-Destinations

Possible values:

- Max. 64 characters

Default: Blank

2.17.9.2 Peer

Specify the remote station for DNS forwarding.

Telnet path: /Setup/DNS/DNS-Destinations

Possible values:

- Max. 31 characters

Default: Blank

0

2.17.9.3 Routing tag

The routing tag makes it possible to specify multiple forwarding definitions that are independent of each other (especially general wildcard definitions with "*"). Depending on the routing context of the requesting client, the router considers only the forwarding entries that are identified accordingly and the general entries marked with "0".

SNMP ID:

2.17.9.3

Telnet path:**Setup > DNS > DNS-Destinations****Possible values:**

0 to 65535

Default:

0

2.17.10 Service location list

Here you configure if and to which station certain services are to be resolved.

Telnet path: /Setup/DNS**2.17.10.1 Service name**

Specify here which service should be resolved by DNS, and how.

The service ID is the service that is to be resolved in accordance with RFC 2782.

By way of illustration, the following example lists several entries used to resolve SIP services: (Service-ID, station name, port)

- _sips._tcp.myhome.intern . 0
- _sip._tcp.myhome.intern myhost.myhome.intern 5060
- _sip._udp.myhome.intern [self] 5060

Telnet path: /Setup/DNS/Service-Location-List**Possible values:**

- Max. 64 characters

Default: Blank**2.17.10.2 Hostname**

The station name indicates which station provides the indicated service. For example, if you have a computer named myhost and your domain name is myhome.internal, then you should enter the station name here as myhost.myhome.intern. The station name '[self]' can be specified as the name if it is the device itself. A period '.' can be entered if this service is blocked and therefore should not be resolved. (In this case any definition in the following port field will be ignored).

Telnet path: /Setup/DNS/Service-Location-List

Possible values:

- Max. 64 characters

Default: Blank

2.17.10.3 Port

The service port denotes the port number used for the defined service at the named client.

Telnet path: /Setup/DNS/Service-Location-List

Possible values:

- Max. 10 characters

Default: 0

2.17.10.4 Routing tag

The routing tag determines whether and how the router should resolve specific service requests within the current tag context.

SNMP ID:

2.17.10.4

Telnet path:

Setup > DNS > Service-Location-List

Possible values:

0 to 65535

Default:

0

2.17.11 Dynamic SRV list

The dynamic SRV list stores service location records that the device uses itself. For example, the VoIP module enters itself here.

Telnet path: /Setup/DNS

2.17.11.1 Service name

Name of the service.

Telnet path: /Setup/DNS/Dynamic-SRV-List

2.17.11.2 Hostname

Name of the station providing this service.

Telnet path: /Setup/DNS/Dynamic-SRV-List

2.17.11.3 Port

Port used to register this service.

Telnet path: /Setup/DNS/Dynamic-SRV-List

2.17.12 Resolve domain

If this option is active, the device answers queries about its own domain with its own IP address.

Telnet path: /Setup/DNS

Possible values:

- Yes
- No

Default: Yes

2.17.13 Sub domains

Here a separate domain can be configured for each logical network.

Telnet path: /Setup/DNS

2.17.13.1 Network name

IP network for which a dedicated domain is to be defined.

Telnet path: /Setup/DNS/Sub-Domains

Possible values:

- Select from the list of defined IP networks.

Default: Blank

2.17.13.2 Sub-domain

Sub-domain that is to be used for the selected IP network.

Telnet path: /Setup/DNS/Sub-Domains

Possible values:

- Max. 64 characters

Default: Blank

2.17.14 Forwarder

Using this setting you specify whether your device forwards or rejects unrecognized DNS requests.

To recognize an address, the device DNS server checks the tables in **Setup > DNS**

- **DNS list**
- **Dyn. DNS list**
- **Service location list**
- **Dynamic SRV list**

and requests the corresponding addresses from the DHCP server and from the NetBIOS proxy, if necessary and if you allow it.

SNMP ID:

2.17.14

Telnet path:

Setup > DNS

Possible values:

Yes

No

Default:

Yes

2.17.15 Tag-Configuration

You manage the specific DNS settings for the individual tag contexts in this table. If an entry for a tag context exists, then only the DNS settings in this table apply for this context. However, if there is no entry in this table, then the global settings of the DNS server apply.

SNMP ID:

2.17.15

Telnet path:**Setup > DNS**

2.17.15.1 Rtg-tag

Unique interface or routing tag, its settings will override the global settings of the DNS server.

SNMP ID:

2.17.15.1

Telnet path:**Setup > DNS > Tag-Configuration****Possible values:**

Valid routing tag, 1 to 65534

Default:

2.17.15.2 Active

Enables the DNS server of the device for the corresponding tag context.

SNMP ID:

2.17.15.2

Telnet path:**Setup > DNS > Tag-Configuration****Possible values:**

No

Yes

Default:

Yes

2.17.15.3 Forwarder

Using this setting you specify whether your device forwards or rejects DNS requests that are not recognized for the specified tag context.

To recognize an address, the device DNS server checks the tables in **Setup > DNS**

- **DNS list**
- **Dyn.-DNS-List**
- **Service location list**
- **Dynamic SRV list**

and requests the corresponding addresses from the DHCP server and from the NetBIOS proxy, if necessary and if you allow it.

SNMP ID:

2.17.15.3

Telnet path:

Setup > DNS > Tag-Configuration

Possible values:

No

Yes

Default:

Yes

2.17.15.4 DHCP-Usage

For the corresponding tag context, enables or disables the resolution of station names which have requested an IP address via DHCP.

SNMP ID:

2.17.15.4

Telnet path:

Setup > DNS > Tag-Configuration

Possible values:

No

Yes

Default:

Yes

2.17.15.5 NetBIOS-usage

For the corresponding tag context, enables or disables the resolution of station names which are recognized by the NetBIOS router.

SNMP ID:

2.17.15.5

Telnet path:

Setup > DNS > Tag-Configuration

2 Setup

Possible values:

No
Yes

Default:

Yes

2.17.15.6 Resolve-Domain

For the corresponding tag context, enables or disables the response of DNS requests to its own domain with the IP address of the router.

SNMP ID:

2.17.15.6

Telnet path:

Setup > DNS > Tag-Configuration

Possible values:

No
Yes

Default:

Yes

2.18 Accounting

This menu contains the configuration of the Accounting.

Telnet path: /Setup

2.18.1 Operating

Turn accounting on or off.

Telnet path: /Setup/Accounting

Possible values:

- Yes
- No

2.18.2 Save to flashrom

Turn accounting data in flash memory on or off. Accounting data saved to flash will not be lost even in the event of a power outage.

Telnet path: /Setup/Accounting

Possible values:

- Yes
- No

2.18.3 Sort by

Select here whether the data should be sorted in the accounting table according to connection times or data volume.

Telnet path: /Setup/Accounting

Possible values:

- Time
- Data

2.18.4 Current user

Displays an accounting list for all current users.

Telnet path: /Setup/Accounting

2.18.4.1 Username

Displays the username.

Telnet path: /Setup/Accounting/Current-User

2.18.4.3 Peer

Displays the name of the remote station.

Telnet path: /Setup/Accounting/Current-User

2.18.4.4 Connection type

Displays the connection type (e.g. DSL connection)

Telnet path: /Setup/Accounting/Current-User

2.18.4.5 Rx kbytes

The number of bytes received.

Telnet path: /Setup/Accounting/Current-User

2.18.4.6 Tx kbytes

The number of bytes sent.

Telnet path: /Setup/Accounting/Current-User

2.18.4.8 Total time

Shows the total time of the corresponding connection.

Telnet path: /Setup/Accounting/Current-User

2.18.4.9 Connection

Displays the number of connections.

Telnet path: /Setup/Accounting/Current-User

2.18.5 Accounting list

Information on connections between clients in the local network and various remote sites is saved in the accounting table with entries for the connection time and the transferred data volume. Using accounting snapshots, accounting data can be regularly saved at specific times for later evaluation.

Telnet path: /Setup/Accounting

2.18.5.1 Username

Displays the username.

Telnet path:/Setup/Accounting/Accounting-List

2.18.5.3 Peer

Displays the name of the remote station.

Telnet path:/Setup/Accounting/Accounting-List

2.18.5.4 Connection type

Displays the connection type (e.g. DSL connection)

Telnet path:/Setup/Accounting/Accounting-List

2.18.5.5 Rx kbytes

The number of bytes received.

Telnet path:/Setup/Accounting/Accounting-List

2.18.5.6 Tx kbytes

The number of bytes sent.

Telnet path:/Setup/Accounting/Accounting-List

2.18.5.8 Total time

Shows the total time of the corresponding connection.

Telnet path:/Setup/Accounting/Accounting-List

2.18.5.9 Connection

Displays the number of connections.

Telnet path:/Setup/Accounting/Accounting-List

2.18.6 Delete accounting list

This option allows you to delete the parameters.

Telnet path: /Setup/Accounting

2.18.8 Time snapshot

When configuring the snapshot, the interval is set at which the accounting data are temporarily saved into a snapshot.

Telnet path: /Setup/Accounting

2.18.8.1 Index

Displays the system's internal index.

Telnet path:/Setup/Accounting/Time-Snapshot

Default: 1

2.18.8.2 Operating

Turn intermediate storage of accounting data on or off.

Telnet path:/Setup/Accounting/Time-Snapshot

Possible values:

- Yes
- No

Default: No

2.18.8.3 Type

Here you can set the interval at which the snapshot will be generated.

Telnet path:/Setup/Accounting/Time-Snapshot

Possible values:

- Daily
- Weekly
- Monthly

Default: Monthly

2.18.8.4 Day

The day of the month on which caching will be performed. Only relevant if the interval is 'monthly'.

Telnet path:/Setup/Accounting/Time-Snapshot

Possible values:

- 0 to 31

Default: 1

2.18.8.5 DayOfWeek

The weekday on which caching will be performed. Only relevant if the interval is 'weekly'.

Telnet path:/Setup/Accounting/Time-Snapshot

Possible values:

- 0 to 7

Default: Unknown

2.18.8.6 Hour

The hour of day at which caching will be performed.

Telnet path:/Setup/Accounting/Time-Snapshot

Possible values:

- 0 to 23

Default: 0

2.18.8.7 Minute

The minute at which caching will be performed.

Telnet path:/Setup/Accounting/Time-Snapshot

Possible values:

- 0 to 59

Default: 0

2.18.9 Last snapshot

Displays the last snapshot.

Telnet path: /Setup/Accounting

2.18.9.1 Username

Displays the username.

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.9.3 Peer

Displays the name of the remote station.

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.9.4 Connection type

Displays the connection type (e.g. DSL connection)

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.9.5 Rx kbytes

The number of bytes received.

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.9.6 Tx kbytes

The number of bytes sent.

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.9.8 Total time

Shows the total time of the corresponding connection.

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.9.9 Connection

Displays the number of connections.

Telnet path: /Setup/Accounting/Last-Snapshot

2.18.10 Discriminator

This is where you can select the feature according to which accounting data are to be gathered. MAC address: The data are collected according to the client's MAC address. IP address: The data are collected according to the client's IP address. --> see information

Telnet path: /Setup/Accounting**Possible values:**

- MAC address

- IP address

 When varying IP addresses are in use, e.g. when using a DHCP server, the option 'IP address' can lead to inaccurate accounting data. In this case, it may not be possible to accurately assign the data to users. Conversely, with this setting, data can be separated from clients that are behind another router and therefore appear with the same MAC address as the router in the accounting list.

2.19 VPN

This menu contains the configuration of the Virtual Private Network (VPN).

SNMP ID:

2.19

Telnet path:

Setup

2.19.3 Isakmp

This menu contains the configuration of the Isakmp.

SNMP ID:

2.19.3

Telnet path:

Setup > VPN

2.19.3.4 Timer

This table contains values that affect the timing of IKE negotiations.

The values are passed to the IKE job with each full VPN configuration (setting up all VPN rules). Each time an IKE job is used it reads these values from its configuration. This means that the expiry timeout will be used immediately for every new negotiation (incl. rekeying of old connections). The retry limit is also used immediately, even during the ongoing repeats of negotiation packets.

Telnet path: /Setup/VPN/Isakmp

2.19.3.4.1 Retry limit

The retry limit specifies the maximum number of times that an IKE negotiation packet will be repeated if there is no response to it. The default value is '5'. The time interval between repeats currently cannot be configured and is 5, 7, 9, 11, 13... seconds. The overall time for IKE negotiation is also capped by the expiry limit.

Telnet path: /Setup/VPN/Isakmp/Timer

Possible values:

- Maximum 5 characters

Default: 5

2.19.3.4.2 Retry timer

 These settings are included to maintain compatibility to earlier firmware versions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

Telnet path: /Setup/VPN/Isakmp/Timer

2.19.3.4.3 Retr-Tim-Usec

 These settings are included to maintain compatibility to earlier firmware versions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

Telnet path: /Setup/VPN/Isakmp/Timer

2.19.3.4.4 Retr-Tim-Max

 These settings are included to maintain compatibility to earlier firmware versions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

Telnet path: /Setup/VPN/Isakmp/Timer

2.19.3.4.5 Exp-Tim

Maximum duration of the IKE negotiation phase in seconds.

Telnet path: /Setup/VPN/Isakmp/Timer

Possible values:

- 0 to 65535

Default: 30 seconds

 These settings are included to maintain compatibility to earlier firmware versions. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.19.3.4.6 Index

The table contains only one line, so the index only has the value '1'.

Telnet path: /Setup/VPN/Isakmp/Timer

2.19.3.29 DH groups

This menu contains the configuration for the precalculation of DH keys.

SNMP ID:

2.19.3.29

Telnet path:

Setup > VPN > Isakmp

2.19.3.29.1 Precalculation

This option enables or disables the precalculation of DH keys.

SNMP ID:

2.19.3.29.1

Telnet path:

Setup > VPN > Isakmp > DH-Groups

Possible values:

Yes

No

Default:

Yes

2.19.3.29.2 Group config

This table specifies the number of DH keys to calculate for each DH group.

SNMP ID:

2.19.3.29.2

Telnet path:

Setup > VPN > Isakmp > DH-Groups

2.19.3.29.2.1 DH group

This value indicates the corresponding DH group.

SNMP ID:

2.19.3.29.2.1

Telnet path:

Setup > VPN > Isakmp > DH-Groups > Group-config

Possible values:

1

2

5

14

Default:

A DH group is fixed for each line.

2.19.3.29.2.2 Precalculation target

This value specifies the number of DH keys to be calculated for this DH group.



If you specify the value 0 here but you have enabled precalculation, the device will take the number from the policies stored in the SPD table (Security Policy Database) as a basis for calculation.

SNMP ID:

2.19.3.29.2.2

Telnet path:

Setup > VPN > Isakmp > DH-Groups > Group-config

Possible values:

0 to 999999999

Default:

0

2.19.4 Proposals

This menu contains the configuration of the Proposals.

Telnet path: /Setup/VPN

2.19.4.9 IKE proposal lists

Here you can display and add IKE proposal lists.

Telnet path: /Setup/VPN/Proposals

2.19.4.9.1 IKE proposal lists

Name for the combination of IKE proposals

Telnet path: /Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Max. 64 characters

Default: Blank

2.19.4.9.2 IKE-Proposal-1

Proposal to be used for this list.

Telnet path: /Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.3 IKE-Proposal-2

Proposal to be used for this list.

Telnet path: /Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.4 IKE-Proposal-3

Proposal to be used for this list.

Telnet path: /Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.5 IKE-Proposal-4

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.6 IKE-Proposal-5

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.7 IKE-Proposal-6

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.8 IKE-Proposal-7

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.9.9 IKE-Proposal-8

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IKE-Proposal-Lists

Possible values:

- Select from the defined IKE proposals

Default: Blank

2.19.4.10 IPSEC proposal lists

Here you combine previously-defined proposals to form proposal lists.

Telnet path: /Setup/VPN/Proposals

2.19.4.10.1 IPSEC proposal lists

Name for the combination of IPSec proposals

Telnet path:/Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Max. 64 characters

Default: Blank

2.19.4.10.2 IPSEC-Proposal-1

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.3 IPSEC-Proposal-2

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.4 IPSEC-Proposal-3

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.5 IPSEC-Proposal-4

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.6 IPSEC-Proposal-5

Proposal to be used for this list.

Telnet path:/Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.7 IPSEC-Proposal-6

Proposal to be used for this list.

Telnet path: /Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.8 IPSEC-Proposal-7

Proposal to be used for this list.

Telnet path: /Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.10.9 IPSEC-Proposal-8

Proposal to be used for this list.

Telnet path: /Setup/VPN/Proposals/IPSEC-Proposal-Lists

Possible values:

- Select from the defined IPsec proposals

Default: Blank

2.19.4.11 IKE

In this table, you can define proposals for managing the SA negotiation.

Telnet path: /Setup/VPN/Proposals

2.19.4.11.1 Name

Name for the combinations of IKE parameters that should be used as the proposal.

Telnet path: /Setup/VPN/Proposals/IKE

Possible values:

- Max. 64 characters

Default: Blank

 The Internet Key Exchange (IKE) is a protocol for authentication and key exchange.

2.19.4.11.2 IKE cryptographic algorithm

Encryption algorithm for this proposal

Telnet path: /Setup/VPN/Proposals/IKE

Possible values:

- AES
- Blowfish
- CAST128

- 3DES
- DES
- NIL

Default: AES-CBC

2.19.4.11.3 IKE cryptographic key length

Key length for this proposal

Telnet path: /Setup/VPN/Proposals/IKE

Possible values:

- 0 to 65535

Default: 128

2.19.4.11.4 IKE authentication algorithm

Hash algorithm for the encryption

SNMP ID:

2.19.4.11.4

Telnet path:

Setup > VPN > Proposals > IKE

Possible values:

MD5

SHA1

SHA2-256

Default:

MD5

2.19.4.11.5 IKE authentication mode

Authentication method for this proposal

Telnet path: /Setup/VPN/Proposals/IKE

Possible values:

- Preshared key: Symmetrical PSK requires the key to be known at both ends of the connection.
- RSA signature: Asymmetrical method with private and public keys, known from Rivest, Shamir Adleman.

Default: Preshared Key

2.19.4.11.6 Lifetime seconds

Validity of the connections negotiated with this proposal with respect to connection duration

Telnet path: /Setup/VPN/Proposals/IKE

Possible values:

- 0 to 65535

Default: 8000 seconds

Special values: 0: No limit on connection time

2.19.4.11.7 Lifetime KB

Validity of the connections negotiated with this proposal with respect to transmitted data volume.

Telnet path: /Setup/VPN/Proposals/IKE

Possible values:

- 0 to 65535

Default: 0 kBytes

Special values: 0: No limit on data volume

2.19.4.12 IPSEC

You can define the defaults for encryption, authentication or compression here.

Telnet path: /Setup/VPN/Proposals

2.19.4.12.1 Name

Name for the combinations of IPSec parameters that should be used as the proposal.

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- Max. 64 characters

Default: Blank



IPsec stands for "IP Security Protocol" and was originally the name used by a working group of the IETF, the Internet Engineering Task Force. Over the years, this group has developed a framework for a secure IP protocol that today is generally referred to as IPSEC.

2.19.4.12.2 Encapsulation mode

Connection mode selection

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- Transport: In transport mode, the IP header of the original packet is left unchanged and the ESP header, encrypted data and both trailers are inserted. The IP header contains the unchanged IP address. Transport mode can therefore only be used between two end points, for the remote configuration of a router, for example. It cannot be used for the connectivity of networks via the Internet – this would require a new IP header with the public IP address of the recipient. In such cases, ESP can be used in tunnel mode.
- Tunnel: In tunnel mode, the entire packet including the original IP header is encrypted and authenticated and the ESP header and trailers are added at the entrance of the tunnel. A new IP header is added to this new packet, this time with the public IP address of the recipient at the end of the tunnel.

Default: Tunnel

2.19.4.12.3 ESP cryptographic algorithm

Encryption algorithm for this proposal

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- AES
- Blowfish
- CAST128

2 Setup

- 3DES
- DES
- NIL

Default: AES-CBC

2.19.4.12.4 ESP cryptographic key length

Key length for this proposal

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- 0 to 65535

Default: 128

2.19.4.12.5 ESP authentication algorithm

ESP authentication method for this proposal

SNMP ID:

2.19.4.12.5

Telnet path:

Setup > VPN > Proposals > IPSEC

Possible values:

No authentication
HMAC-MD5
HMAC-SHA1
HMAC-SHA2-256

Default:

No authentication

2.19.4.12.6 AH authentication algorithm

AH authentication method for this proposal

SNMP ID:

2.19.4.12.6

Telnet path:

Setup > VPN > Proposals > IPSEC

Possible values:

No authentication
HMAC-MD5
HMAC-SHA1
HMAC-SHA2-256

Default:

No authentication

2.19.4.12.7 IPCOMP algorithm

Compression method for this proposal

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- No IPCOMP
- Deflate
- LZS

Default: No IPCOMP

2.19.4.12.8 Lifetime seconds

Validity of the connections negotiated with this proposal with respect to connection duration

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- 0 to 65535

Default: 8000 seconds

Special values: 0: No limit on connection time

2.19.4.12.9 Lifetime KB

Validity of the connections negotiated with this proposal with respect to transmitted data volume.

Telnet path: /Setup/VPN/Proposals/IPSEC

Possible values:

- 0 to 65535

Default: 0 kBytes

Special values: 0: No limit on data volume

2.19.5 Certificate keys

This menu contains the configuration of the certificates and keys.

Telnet path: /Setup/VPN

2.19.5.3 IKE keys

Entered here are the shared key for preshared-key authentication and the identities for preshared-key- and RSA signature authentication.

Telnet path: /Setup/VPN/Certificates-and-Keys

2.19.5.3.1 Name

Name for the combination of identities and keys

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

Possible values:

- Max. 64 characters

Default: Blank

2.19.5.3.2 Remote identity

Remote ID that the entered key is to be valid for.

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

Possible values:

- Max. 64 characters

Default: Blank

2.19.5.3.3 Shared secret

Key/secret that should apply to this combination.

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

Possible values:

- Max. 64 characters

Default: Blank

2.19.5.3.4 Shared secret file

[obsolete, not used: File with PSK]

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

2.19.5.3.5 Remote ID type

Type of remote ID that the entered key is to be valid for.

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

Possible values:

- No identity
- IP address
- Domain name (FQDN)
- E-mail address (FQUN)
- ASN.1 distinguished name

Default: No identity

2.19.5.3.6 Local ID type

Type of local ID that the entered key is to be valid for.

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

Possible values:

- No identity
- IP address
- Domain name (FQDN)
- E-mail address (FQUN)
- ASN.1 distinguished name

Default: No identity

2.19.5.3.7 Local identity

Local ID that the entered key is to be valid for.

Telnet path: /Setup/VPN/Certificates-and-Keys/IKE-Keys

Possible values:

- Max. 64 characters

Default: Blank

2.19.7 Layer

Define other parameters for the individual VPN connections here.

SNMP ID:

2.19.7

Telnet path:

Setup > VPN

2.19.7.1 Name

Name for the combination of connection parameters

Telnet path: /Setup/VPN/Layer

Possible values:

- Max. 64 characters

Default: Blank

2.19.7.3 PFS group

Perfect Forward Secrecy (PFS) is a security feature of encryption algorithms. The PFS group specifies the length of the Diffie-Hellman key used to encrypt the IKE negotiation.

SNMP ID:

2.19.7.3

Telnet path:

Setup > VPN > Layer

Possible values:

- 0: No PFS
- 1: MODP-768
- 2: MODP-1024
- 5: MODP-1536
- 14: MODP-2048

Default:

2: MODP-1024

2.19.7.4 IKE group

The IKE group specifies the length of the Diffie-Hellman key used to encrypt the IKE negotiation.

SNMP ID:

2.19.7.4

Telnet path:**Setup > VPN > Layer****Possible values:**

1: MODP-768

2: MODP-1024

5: MODP-1536

14: MODP-2048

Default:

2: MODP-1024

2.19.7.5 IKE proposal list

IKE proposal list for this connection.

Telnet path: /Setup/VPN/Layer**Possible values:**

- Select from the list of defined IKE proposal lists.

Default: Blank**2.19.7.6 IPSEC proposal list**

IKE key for this connection.

Telnet path: /Setup/VPN/Layer**Possible values:**

- Select from the list of defined IKE keys.

Default: Blank**2.19.7.7 IKE key**

IPsec proposal list for this connection.

Telnet path: /Setup/VPN/Layer**Possible values:**

- Select from the list of defined IPsec proposal lists.

Default: Blank**2.19.8 Operating**

Switches the VPN module on or off.

Telnet path: /Setup/VPN**Possible values:**

- Activated
- Deactivated

Default: Deactivated

2.19.9 VPN peers

In this table you define the VPN connections to be established by your device.

Telnet path: /Setup/VPN

2.19.9.1 Peer

Name of the VPN connection.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Select from the list of defined peers.

Default: Blank

2.19.9.2 Extranet address

If an IP address is specified here, the IP addresses of the local stations behind this IP address will be masked. This is only necessary for specialized scenarios.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Valid IP address.

Default: Blank

2.19.9.4 Layer

Combination of connection parameters (PFS, IKE and IPsec parameters) that should be used for this connection.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Select from the list of defined connection parameters.

Default: Blank

2.19.9.5 Dynamic

LANCOM Dynamic VPN is a technology which permits VPN tunnels to be connected even to remote sites that do not have a static IP address, but a dynamic one instead.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- No dynamic VPN
- Dynamic VPN: A connection is established to transmit IP addresses
- Dynamic VPN: IP addresses are transmitted without establishing a connection if possible:
- Dynamic VPN: An ICMP packet is sent to the remote site to transmit the IP address
- Dynamic VPN: A UDP packet is sent to the remote site to transmit the IP address

Default: No dynamic VPN

2.19.9.6 Short-hold time

This value specifies the number of seconds that pass before a connection to this remote site is terminated if no data is being transferred.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- 0 to 9999

Default: 0

Special values: With the value 9999, connections are established immediately and without a time limit.

2.19.9.7 IKE exchange

Selects the IKE exchange mode

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Main mode
- Aggressive mode

Default: Main mode



Main Mode exchanges significantly more unencrypted messages during the IKE handshake than the Aggressive Mode. This is why main mode is far more secure than the aggressive mode.

2.19.9.8 Remote gateway

DNS name or IP address of the remote gateway which is to be used to set up the VPN connection.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Max. 64 characters

Default: Blank

2.19.9.9 Rule creation

On/off switch and type of rule creation

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Off: No VPN rule is created for the remote site.
- Automatic: Automatically created VPN rules connect the local IP networks with the IP networks entered into the routing table for the remote site.
- Manually: VPN rules are only created for the remote site for IP network relationships specified "Manually" in the firewall configuration.

Default: Automatic

2.19.9.10 DPD-inactivity timeout

Dead peer detection is used when VPN clients dial in to a VPN gateway or when 2 VPN gateways are connected. This is designed to ensure that a peer is logged out if there is an interruption to the VPN connection, for example when the Internet connection is interrupted briefly. If the line were not to be monitored, then the VPN gateway would continue to list the client or the other VPN gateway as logged-on. This would prevent the peer from dialing in again as, for example, the LANCOM Advanced VPN Client does not allow a simultaneous dial-in using the same serial number.

With dead-peer detection, the gateway and peer regularly exchange "keep alive" packets. If no replies are received, the gateway will log out the peer so that this ID can be registered anew once the VPN connection has been re-established. The DPD time for VPN clients is typically set to 60 seconds.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- 0 to 9999 numerical characters

Default: 0

 Without line monitoring, a user with the same "identity" (user name) would be prevented from dialing in because the associated user would still be in the list for the logged-in peer.

2.19.9.11 IKE configuration

When configuring VPN dial-in connections, there is as an alternative to fixed IP addresses for the remote sites that dial in, in that a pool of IP addresses can be made available to them. To this end, the "IKE-CFG" mode is additionally added to the entries in the connection list.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Off: If the IKE-CFG mode is switched off, no IP addresses will be assigned for the connection. Fixed IP addresses must be defined for both ends of the connection.
- Client: With this setting, the device functions as the client for this VPN connection and requests an IP address from the remote site (server). The device acts in a similar manner to a VPN client.
- Server: With this setting, the device functions as the server for this VPN connection. The assignment of an IP address to the client can take place in two ways:
 - If the remote site is entered in the routing table, the IP address defined here will be assigned to the client.
 - If the remote site is not entered in the routing table, an IP address which is available from the IP pool will be taken for the dial-in connections.

Default: Off

 When set as server, the remote site must be configured as IKE-CFG client, and thus has to request an IP address from the server. To dial in with a LANCOM Advanced VPN Client, the option "Use IKE Config Mode" has to be activated in the connection profile.

2.19.9.12 XAUTH

Enables the use of XAUTH for the VPN remote site selected.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Client: In the XAUTH client operating mode, the device starts the initial phase of IKE negotiation (Main mode or Aggressive mode) and then waits for the authentication request from the XAUTH server. The XAUTH client responds to this request with the user name and password from the PPP table entry in which the PPP remote site corresponds to the VPN remote site defined here. There must therefore be a PPP remote site of the same name for the VPN remote site. The user name defined in the PPP table normally differs from the remote site name.
- Server: In the XAUTH server operating mode, the device (after successful negotiation of the initial IKE negotiation) starts authentication with a request to the XAUTH client, which then responds with its user name and password. The XAUTH server searches for the user name in the PPP table and, if a match is found, it checks the password. The user name for this entry in the PPP table is not used.
- Off: No XAUTH authentication is performed for the connection to this remote site.

Default: Off

 If XAUTH authentication is enabled for a VPN remote site, the IKE-CFG option must be set to the same value.

2.19.9.13 SSL-Encaps.

With this option you activate IPsec-over-HTTPS technology when actively establishing a connection to this remote site.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- Yes, No

Default: No



Please note that when the IPsec-over-HTTPS option is activated, the VPN connection can only be established when the remote site also supports this technology and when the remote site is set up to receive passive VPN connections that use IPsec over HTTPS.

2.19.9.15 Routing tag

Routing tags are used on the LANCOM in order to evaluate criteria relevant to the selection of the target route in addition to the IP address. The only routes in the routing table to be used are those with a matching routing tag. The routing tag for each VPN connection can be specified here. The routing tag is used to determine the route to the remote gateway.

Telnet path: /Setup/VPN/VPN-Peers

Possible values:

- 0 to 65535

Default: 0

2.19.9.16 OCSP-Check

With this setting you enable the real-time check of a X.509 certificate via OCSP, which checks the validity of the remote station's certificate. In order to use the OCSP check for individual VPN connections, you must first enable the global OCSP client for VPN connections and then create profile lists of the valid certificate authorities used by the device to perform the real-time check.



Please note that the check via OCSP only checks the locking status of a certificate, but it does not check the mathematical correctness of its signature, validity period, or other usage restrictions.

SNMP ID:

2.19.9.16

Telnet path:

Setup > VPN > VPN-Peers

Possible values:

No

Yes

Default:

No

2.19.10 Aggressive mode proposal list default

This IKE proposal list is used for aggressive-mode connections when the remote address cannot be identified by its IP address but by a subsequently transmitted ID.

Telnet path: /Setup/VPN

Possible values:

- Select from the list of defined IKE proposal lists.

Default: IKE_RSA_SIG

2.19.11 Aggressive mode IKE group default

This IKE group is used for aggressive-mode connections when the remote address cannot be identified by its IP address but by a subsequently transmitted ID.

SNMP ID:

2.19.11

Telnet path:

Setup > VPN

Possible values:

1: MODP-768

2: MODP-1024

5: MODP-1536

14: MODP-2048

Default:

2: MODP-1024

2.19.12 Additional gateways

This table is used to specify a list of possible gateways for each remote site.

Telnet path: /Setup/VPN

2.19.12.1 Peer

Name of the VPN connection that works with the additional gateway defined here.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Select from the list of defined VPN connections.

Default: Blank

2.19.12.2 Remote gateway 1

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.3 Remote gateway 2

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.4 Remote gateway 3

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.5 Remote gateway 4

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.6 Remote gateway 5

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.7 Remote gateway 6

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.8 Remote gateway 7

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.9 Remote gateway 8

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.10 Begin with

Here you select the first gateway that is to be used for establishing the VPN connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- First: Start with the first entry in the list.
- Random: Selects a random entry from the list.
- Last used: Selects the entry for the connection which was successfully used most recently.

Default: Last used

2.19.12.11 Routing tag 1

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.12 Routing tag 2

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.13 Routing tag 3

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.14 Routing tag 4

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.15 Routing tag 5

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.16 Routing tag 6

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.17 Routing tag 7

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.18 Routing tag 8

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.19 Remote gateway 9

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 64 characters

Default: Blank

2.19.12.20 Remote gateway 10

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.21 Remote gateway 11

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.22 Remote gateway 12

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.23 Remote gateway 13

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.24 Remote gateway 14

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.25 Remote gateway 15

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.26 Remote gateway 16

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.27 Routing tag 9

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.28 Routing tag 10

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.29 Routing tag 11

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.30 Routing tag 12

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.31 Routing tag 13

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0

2.19.12.32 Routing tag 14

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways

Possible values:

- 0 to 65535

Default: 0**2.19.12.33 Routing tag 15**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways**Possible values:**

- 0 to 65535

Default: 0**2.19.12.34 Routing tag 16**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways**Possible values:**

- 0 to 65535

Default: 0**2.19.12.35 Gateway-17**

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-17**Possible values:**

- Max. 63 characters

Default: Blank**2.19.12.36 Rtg-Tag-17**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-17**Possible values:**

- 0 to 65535

Default: 0**2.19.12.37 Gateway-18**

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-18**Possible values:**

- Max. 63 characters

Default: Blank**2.19.12.38 Rtg-Tag-18**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-18

Possible values:

- 0 to 65535

Default: 0

2.19.12.39 Gateway-19

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-19

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.40 Rtg-Tag-19

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-19

Possible values:

- 0 to 65535

Default: 0

2.19.12.41 Gateway-20

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-20

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.42 Rtg-Tag-20

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-20

Possible values:

- 0 to 65535

Default: 0

2.19.12.43 Gateway-21

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-21

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.44 Rtg-Tag-21

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-21

Possible values:

- 0 to 65535

Default: 0

2.19.12.45 Gateway-22

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-22

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.46 Rtg-Tag-22

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-22

Possible values:

- 0 to 65535

Default: 0

2.19.12.47 Gateway-23

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-23

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.48 Rtg-Tag-23

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-23

Possible values:

- 0 to 65535

Default: 0

2.19.12.49 Gateway-24

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-24

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.50 Rtg-Tag-24

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-24

Possible values:

- 0 to 65535

Default: 0

2.19.12.51 Gateway-25

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-25

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.52 Rtg-Tag-25

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-25

Possible values:

- 0 to 65535

Default: 0

2.19.12.53 Gateway-26

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-26

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.54 Rtg-Tag-26

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-26

Possible values:

- 0 to 65535

Default: 0

2.19.12.55 Gateway-27

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-27

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.56 Rtg-Tag-27

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-27

Possible values:

- 0 to 65535

Default: 0

2.19.12.57 Gateway-28

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-28

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.58 Rtg-Tag-28

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-28

Possible values:

- 0 to 65535

Default: 0

2.19.12.59 Gateway-29

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-29

Possible values:

- Max. 63 characters

Default: Blank

2.19.12.60 Routing tag 29

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Certificate-Keys/Additional-Gateway-List/Rtg-Tag-29

Possible values:

- 0 to 65535

Default: 0

2.19.12.61 Gateway-30

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-30

Possible values:

- Max. 63 characters

Default: Blank**2.19.12.62 Rtg-Tag-30**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-30**Possible values:**

- 0 to 65535

Default: 0**2.19.12.63 Gateway-31**

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-31**Possible values:**

- Max. 63 characters

Default: Blank**2.19.12.64 Rtg-Tag-31**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-31**Possible values:**

- 0 to 65535

Default: 0**2.19.12.65 Gateway-32**

DNS name or IP address of the remote gateway to be used as an alternative to the connection.

Telnet path: /Setup/VPN/Additional-Gateways/Gateway-32**Possible values:**

- Max. 63 characters

Default: Blank**2.19.12.66 Rtg-Tag-32**

Enter the routing tag for setting the route to the relevant gateway.

Telnet path: /Setup/VPN/Additional-Gateways/Rtg-Tag-32**Possible values:**

- 0 to 65535

Default: 0

2.19.13 Main mode proposal list default

This IKE proposal list is used for main-mode connections when the remote address cannot be identified by its IP address but by a subsequently transmitted ID.

Telnet path: /Setup/VPN

Possible values:

- Select from the list of defined IKE proposal lists.

Default: IKE_PRESH_KEY

2.19.14 Main mode IKE group default

This IKE group is used for main-mode connections when the remote address cannot be identified by its IP address but by a subsequently transmitted ID.

SNMP ID:

2.19.14

Telnet path:

Setup > VPN

Possible values:

1: MODP-768

2: MODP-1024

5: MODP-1536

14: MODP-2048

Default:

2: MODP-1024

2.19.16 NAT-T operating

Enables the use of NAT-Traversal. NAT Traversal eliminates the problems that occur when establishing a VPN connection at the end points of the VPN tunnel.

Telnet path: /Setup/VPN

Possible values:

- On
- Off

Default: Off

 NAT-T can only be used with VPN connections that use ESP (Encapsulating Security Payload) for authentication. Unlike AH (Authentication Header), ESP does not consider the IP header of the data packets when determining the hash value for authentication. The hash value calculated by the receiver is therefore also equivalent to the hash value entered in the packets.

 If the LANCOM functions as a NAT router between the VPN end points, ensure that UDP ports 500 and 4500 are enabled in the firewall when you use NAT-T! This port is activated automatically if you use the firewall assistant in LANconfig.

2.19.17 Simple cert. RAS operating

Enables simplified dial-in with certificates. The simplification is that a shared configuration can be made for incoming connections, as long as the certificates of the remote peers are signed by the issuer of the root certificate in the device. In this case a configuration has to be made for each remote peer. You find the shared configuration necessary for this with the settings for default parameters. Individual remote peers can only be excluded from this function by having their certificates revoked in a CRL (Certificate Revocation List).

Telnet path: /Setup/VPN

Possible values:

- On
- Off

Default: Off

2.19.19 Quick mode proposal list default

This IPSec proposal list is used for simplified dial-in with certificates.

Telnet path: /Setup/VPN

Possible values:

- Select from the list of defined IPSec proposal lists.

Default: ESP_TN

2.19.20 Quick mode PFS group default

This IPSec group is used for simplified dial-in with certificates.

SNMP ID:

2.19.20

Telnet path:

Setup > VPN

Possible values:

- 0: No PFS
- 1: MODP-768
- 2: MODP-1024
- 5: MODP-1536
- 14: MODP-2048

Default:

2: MODP-1024

2.19.21 Quick mode shorthold time default

This hold time is used for simplified dial-in with certificates.

Telnet path: /Setup/VPN

Possible values:

- 0 to 65535

Default: 0

2.19.22 Allow remote network selection

If simplified dial-in with certificates is activated for the device at headquarters, then the remote routers can suggest a network to be used for the connection during the IKE negotiation in phase 2. This network is entered, for example, when setting up the VPN connection on the remote router. The device at headquarters accepts the suggested network when this option is activated. Moreover, the parameters used by the client during dial in must agree with the default values in the VPN router.

Telnet path: /Setup/VPN

Possible values:

- On
- Off

Default: Off

 When configuring the dial-in remote sites, be sure to note that each remote site requests a specific network so that no network address conflicts arise.

2.19.23 Establish SAs collectively

Security Associations (SAs) are the basis for establishing a VPN tunnel between two networks. The establishment of Security Associations is normally initiated by an IP packet which is to be sent from a source network to a destination network.

The establishment of Security Associations is normally initiated by an IP packet which is to be sent from a source network to a destination network. This allows the setup of network relationships to be precisely controlled according to the application.

Telnet path: /Setup/VPN

Possible values:

- Separately: Only the SA which corresponds explicitly to a packet waiting for transfer is to be established.
- Collectively: All SAs defined in the device will be established.
- Collectively with KeepAlive All of the defined SAs will be established for remote sites in the VPN connection list with a hold time set to '9999' (Keep Alive).

Default: Separately

2.19.24 Max concurrent connections

This setting determines how many VPN connections the device can establish.

Telnet path: /Setup/VPN/Max-Concurrent-Connections

Possible values:

- The maximum value is limited by the relevant license.

Default: 0

 With a value of 0, the device may take full advantage of the maximum number permitted by the license. Values above the license limits are ignored.

2.19.25 Flexible ID comparison

This flexible method of identification comparison is activated or deactivated in the VPN configuration.

Telnet path: /Setup/VPN

Possible values:

- Yes
- No

Default: No

Flexible identity comparison is used when checking the (received) remote identity and also for selecting the certificate based on the local identity.

2.19.26 NAT-T port for rekeying

This item sets whether the IKE packets are sent to port 500 (no) or the port 4500 (yes) during rekeying.

Telnet path: /Setup/VPN/NAT-T-Port-For-Rekeying**Possible values:**

- Yes
- No

Default: No

2.19.27 SSL encapsulation allowed

Activate the 'SSL encaps' option in the general VPN settings to enable passive connection establishment to a VPN device from another VPN remote device using IPsec-over-HTTPS technology (LANCOM VPN device or LANCOM Advanced VPN client).

Telnet path: /Setup/VPN**Possible values:**

- Yes, No

Default: No

The LANCOM Advanced VPN Client supports automatic fallback to IPsec over HTTPS. With this setting, the VPN client initially attempts to establish a connection without using the additional SSL encapsulation. If the connection cannot be made, the device then tries to connect with the additional SSL encapsulation.

2.19.28 myVPN

The "myVPN" function is used by devices with the iOS operating system to automatically retrieve VPN profiles and take over the configuration of the internal VPN client. You configure the VPN profile and the parameters for myVPN on the router. With the aid of the LANCOM myVPN app and a suitable PIN, you can configure your device for VPN connection in just a few easy steps.

More information on the myVPN app is available on the [LANCOM homepage](#).

SNMP ID:

2.19.28

Telnet path:**Telnet path:** Setup > Vpn > myVPN

2.19.28.1 Operating

Use this switch to activate myVPN for this device.

SNMP ID:

2.19.28.1

Telnet path:**Telnet path:**Setup > Vpn > myVPN**Possible values:**

Yes

No

Default:

No

2.19.28.2 PIN length

This item sets the length of new PINs generated by the setup wizard.

SNMP ID:

2.19.28.2

Telnet path:**Telnet path:**Setup > Vpn > myVPN**Possible values:**

Maximum length: 12

Minimum length: 4

Default:

4

2.19.28.3 Device hostname

Enter the device name here if a trustworthy SSL certificate is installed on this device. This ensures that the iOS device does not issue a warning about an untrusted certificate when the profile is retrieved.

SNMP ID:

2.19.28.3

Telnet path:**Telnet path:**Setup > Vpn > myVPN**Possible values:**

Max. 31 characters from

0-9

a-z

A-Z

#@[~!\$%&'()*+,-./:;<=>?[\^_`

Default:

Blank

2.19.28.4 Mapping

This table assigns the myVPN PIN to the VPN profiles.

SNMP ID:

2.19.28.4

Telnet path:

Telnet path:Setup > Vpn > myVPN

2.19.28.4.1 PIN

This is where you can store the PIN for retrieving the myVPN app profile.

The myVPN setup wizard also uses this PIN in the PPP list for the actual VPN login. If you change your PIN here, you must also change it in LANconfig under **Communication > Protocols > PPP-list** if you wish to avoid having a different PIN.



Security notice: As a security feature of myVPN, the repeated incorrect entry of a PIN causes the device to temporarily disable profile retrieval, and a notification is sent by SYSLOG and by e-mail. After three failed attempts, the device disables profile retrieval for 15 minutes. After three further failed attempts the device disables profile retrieval for 24 hours. In case of further failed attempts, the time periods vary. Manually releasing this lock resets the corresponding counter. Please also be aware that an attempt to retrieve the profile while access is deactivated (e. g. when the profile has previously been retrieved successfully) is also considered by the device to be a failed attempt.

SNMP ID:

2.19.28.4.1

Telnet path:

Telnet path:Setup > Vpn > myVPN > Mapping

Possible values:

Max. 12 digits from 1234567890

Default:

Blank

2.19.28.4.2 VPN profile

This setting determines which VPN profile the myVPN app should retrieve.

SNMP ID:

2.19.28.4.2

Telnet path:

Telnet path:Setup > Vpn > myVPN > Mapping

Possible values:

16 characters from

0-9

a-z

A-Z

@[!~!\$%&'()+-./:;<=>?[\]^_.

Default:

Blank

2.19.28.4.3 Active

This switch activates the profile retrieval by means of the myVPN app. After the profile has been retrieved successfully, the device automatically disables the corresponding profile to avoid the repeated download by another device.

SNMP ID:

2.19.28.4.3

Telnet path:

Telnet path:Setup > Vpn > myVPN > Mapping

Possible values:

No

Yes

Default:

No

2.19.28.5 Re-enable login

The command `do re-enable-login` releases the lock that was caused by failed attempts. If required, this generates a message about the re-enabling via SYSLOG or e-mail.

SNMP ID:

2.19.28.5

Telnet path:

Telnet path:Setup > Vpn > myVPN

2.19.28.6 E-mail notification

Enable this option to send messages about the myVPN app to a specific e-mail address. These messages include:

- Successful profile retrieval
- Disabled login for myVPN due to too many failed attempts
- Re-enabling of the login (irrespective of whether this is done manually or if the specified time period has expired)

SNMP ID:

2.19.28.6

Telnet path:

Telnet path:Setup > Vpn > myVPN

Possible values:

No

Yes

Default:

No

2.19.28.7 E-mail address

Specify the e-mail address to which messages about the myVPN app are to be sent.

SNMP ID:

2.19.28.7

Telnet path:**Telnet path:**Setup > Vpn > myVPN**Possible values:**

Max. 63 characters from

0-9

a-z

A-Z

@[!~!\$%&'()+-;/,:;<=>?[\]^_`

Default:

Blank

2.19.28.8 SYSLOG

Enable this option to send messages about the myVPN app to SYSLOG. These messages include:

- Successful profile retrieval
- Disabled login for myVPN due to too many failed attempts
- Re-enabling of the login (irrespective of whether this is done manually or if the specified time period has expired)

SNMP ID:

2.19.28.8

Telnet path:**Telnet path:**Setup > Vpn > myVPN**Possible values:**

No

Yes

Default:

No

2.19.28.9 Remote gateway

Here you enter the WAN address of the router or its name as resolved by public DNS servers. If the myVPN app cannot find the remote gateway by means of automatic search, you should enter the gateway into the app as well.

SNMP ID:

2.19.28.9

Telnet path:

Telnet path: Setup > Vpn > myVPN

Possible values:

Max. 63 characters from

0-9

a-z

A-Z

#@{ } ~ ! \$ % & ' () + , - / ; < = > ? [\] ^ _ . `

Default:

Blank

2.19.28.10 Error count for login block

This parameter limits the number of failed logins for the myVPN application.

If the user exceeds the maximum number of failed attempts, the device will lock access for 15 minutes the first time, and for 24 hours the second time.

The console command `Re-enable-login` removes these blocks (see [Re-enable login](#)).

SNMP ID:

2.19.28.10

Telnet path:

Setup > Vpn > myVPN

Possible values:

5-30

Default:

5

2.19.28.11 Allow access from WAN

This parameter allows or prevents the user from downloading myVPN profiles from the WAN.

SNMP ID:

2.19.28.11

Telnet path:

Setup > Vpn > myVPN

Possible values:

Yes

No

Default:

Yes

2.19.30 Anti-replay window size

Used for detecting replay attacks, this parameter defines the size of the window (i.e. number of packets) within which a VPN device considers the sequential number of the received packets to be up-to-date. The VPN device drops packets that have a sequence number older than or duplicated within this window.

SNMP ID:

2.19.30

Telnet path:**Telnet path:**Setup > Vpn > myVPN**Possible values:**

Max. 5 numbers

Default:

0

Special values:

A value of 0 disables replay detection.

2.19.64 OCSP-Client

This menu contains the global settings of the OCSP client.

Path Telnet: /Setup/VPN

2.19.64.1 active

This option globally enables or disables the certificate check with OCSP for all VPN connections.

Path Telnet: /Setup/VPN**Possible values:**

- yes: OCSP check of the VPN certificates is enabled.
- no: OCSP check of the VPN certificates is disabled.

Default: no

2.20 LAN bridge

This menu contains the settings for the LAN bridge.

Telnet path: /Setup

2.20.1 Protocol version

Select the desired protocol here. Depending on the choice made here, the device uses either the classic protocol or the rapid protocol, as defined in the IEEE 802.1D-1998, chapter 8 and IEEE 802.1D-2004 chapter 17 respectively.

Telnet path: /Setup/LAN-Bridge/Protocol-Version

Possible values:

- Classic
- Rapid

Default: Classic

2.20.2 Bridge priority

This value sets the priority of the bridge in the LAN. This value influences which bridge the spanning tree protocol takes to be the root bridge. This is a 16-bit value (0 .. 65535), where higher values mean lower priority. You should only change the default value if you prefer a certain bridge. The selection process still works even if all the values are the same because, if the priorities are identical, the device uses the MAC address of the bridge to make the decision.

Telnet path: /Setup/LAN-Bridge/Bridge-Priority

Possible values:

- Max. 5 numerical characters

Default: 32768

 Even though an entire 16-bit parameter is available for configuring this parameter, special care should be taken where newer versions of the rapid or multiple spanning tree protocol are involved. The priority value should only be changed in increments of 4096, because the lower 12 bits are used for other purposes. This could mean that these values may be ignored by future firmware releases.

2.20.4 Encapsulation table

This table is used to add the encapsulation methods.

Telnet path: /Setup/LAN-Bridge

2.20.4.1 Protocol

A protocol is identified by its 16-bit protocol identifier carried in the Ethernet II/SNAP type field (often referred to as the Ethertype). The protocol type is written as a hexadecimal number from 0001 to ffff. Even if the table is empty, some protocols are implicitly assumed to be listed in this table as type SNAP (such as IPX and AppleTalk). This can be overridden by explicitly setting their protocol to Ethernet II.

Telnet path: /Setup/LAN-Bridge/Encapsulation-Table

2.20.4.2 Encapsulation

Here you can specify whether or not data packets are to be given an Ethernet header when being transmitted. Normally you should enter the option "Transparent". The "Ethernet" option should only be chosen if you wish to combine a layer for use with the bridge.

Telnet path: /Setup/LAN-Bridge/Encapsulation-Table

Possible values:

- Transparent
- Ethernet

Default: Transparent

2.20.5 Maximum age

This value defines the time (in seconds) after which a bridge drops messages received through Spanning Tree as 'outdated'. This defines how quickly the spanning-tree algorithm reacts to changes, for example due to failed bridges. This is a 16-bit value (0 .. 65535).

Telnet path: /Setup/LAN-Bridge/Max-Age

Possible values:

- Max. 5 numerical characters

Default: 20

2.20.6 Hello time:

This parameter specifies the time interval in seconds in which the device operating as the root bridge sends information to the LAN.

Telnet path: /Setup/LAN-Bridge/Hello-Time

Possible values:

- Max. 5 numerical characters

Default: 2

2.20.7 Forward delay

This value determines the time (in seconds) that passes before a port should change from 'listening' to 'learning' or from 'learning' to 'forwarding'. However, now that rapid spanning tree offers a method of determining when a port can be switched into the 'forwarding state' without a long wait, this setting in many cases no longer has any effect.

Telnet path: /Setup/LAN bridge/Forward-Delay

Possible values:

- Max. 5 numerical characters

Default: 6

2.20.8 Isolated mode

This item allows connections to be switched on or off, such as those between layer-2 forwarding and the LAN interfaces.

Telnet path: /Setup/LAN-Bridge

Possible values:

- Bridge or router (isolated mode)

Default: Bridge



Please note that other functions relating to the connection (e.g. spanning tree, packet filters) continue to function, independent of whether the interfaces are switched on or off.

2.20.10 Protocol table

You can add the protocols to be used over the LAN bridge here.

Telnet path: /Setup/LAN-Bridge

2.20.10.1 Name

This name should describe the rule. Note that this is also the content column (index column) of the table, i.e. the content of the table is a string.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Max. 15 characters

Default: Blank

2.20.10.2 Protocol

The identifier of the protocol is entered here. The identifier is a 4-digit hexadecimal number that uniquely identifies each protocol. Common protocols include 0800, 0806 for IP and ARP (Internet), E0E0, 8137 for IPX (Novell Netware), F0F0 for NetBEUI (Windows networks), or 809B, 80F3 for AppleTalk (Apple networks). If you set the protocol field to zero, this rule affects all packets. Other protocols are referred to in the documentation.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- 4-digit hexadecimal number

Default: Blank

2.20.10.3 Sub-protocol

Enter the sub-protocol here. Common sub-protocols within the IP protocol (0800) include 1 ICMP, 6 TCP, 17 UDP, 50 ESP (IPsec). This field specifies the ARP frame type (ARP request/reply, RARP request/reply) for ARP packets. If this value is unequal to 0, the rule will only match if either the packet is an IPv4 packet and the IP protocol (UDP, TCP, ICMP,...) matches the given value, or if it is an ARP packet and the ARP type matches the given value. If the protocol field is set, but the sub-protocol field is set to 0, then the rule applies to all packets of the specified protocol (e.g. for all IP packets for protocol 0800). Note: Further information is to be found at www.iana.org under the section "Protocol Number Assignment Services", documents "Protocol Numbers" and "Port Numbers".

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Maximum 65,535

Default: 0

2.20.10.4 Port

This specifies the range of port numbers for the TCP or UDP protocols. For example, UDP port 500 corresponds to the IKE used by IPsec.

If this value is not equal to 0, then the rule only applies when an IPv4 TCP or UDP packet arrives or when the source of the target TCP/UDP port is within the range defined by these two values.

If '0' is entered as the end port, the rule applies only for the start port. The port numbers of the receiving port and the target port are compared, and a rule applies if just one of these is within the defined range. If the protocol and the sub-protocol are set, but the port fields have the value 0, then the rule applies to all packets of the specified sub-protocol (e.g. for all packets for protocol 0800/6). Note: Further information is to be found at www.iana.org under the section "Protocol Number Assignment Services", documents "Protocol Numbers" and "Port Numbers".

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Maximum 65,535

Default: 0

2.20.10.5 Port end

This specifies the range of port numbers for the TCP or UDP protocols. For example, UDP port 500 corresponds to the IKE used by IPsec.

If this value is not equal to 0, then the rule only applies when an IPv4 TCP or UDP packet arrives or when the source of the target TCP/UDP port is within the range defined by these two values.

If '0' is entered as the end port, the rule applies only for the start port. The port numbers of the receiving port and the target port are compared, and a rule applies if just one of these is within the defined range. If the protocol and the sub-protocol are set, but the port fields have the value 0, then the rule applies to all packets of the specified sub-protocol (e.g. for all packets for protocol 0800/6). Note: Further information is to be found at www.iana.org under the section "Protocol Number Assignment Services", documents "Protocol Numbers" and "Port Numbers".

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Maximum 65,535

Default: 0

2.20.10.6 Interface list

This list contains the LAN interfaces for which the rule applies. The syntax of the interface list is specified in the addenda/supplements/attachments.

The following pre-defined interface descriptors are used to specify the relevant interfaces in a comma-separated expression:

- LAN-1,
- WLAN-1, WLAN-1-2, WLAN-1-3, WLAN-1-4, WLAN-1-5, WLAN-1-6, WLAN-1-7, WLAN-1-8, WLAN-2, WLAN-2-2, WLAN-2-3, WLAN-2-4, WLAN-2-5, WLAN-2-6, WLAN-2-7, WLAN-2-8,
- P2P-n-m ('n' refers to the interface of the wireless LAN network and 'm' is the number of the P2P connection on this WLAN).

Numerically consecutive interface identifiers can be described by the following abbreviations: P2P-4~P2P-10. If no interface is specified here, the selected action will never be executed.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- All LAN interfaces
- DMZ interfaces
- Logical WLAN networks and the point-to-point bridges in the WLAN

Default: Blank

2.20.10.7 Action

This field defines the action to be taken on a packet if it matches the rule. A packet may be discarded (Drop), passed unchanged (Pass), or redirected to a different IP address. For redirection, the IP address that the packet is to be redirected to must be specified in the following field. The redirect feature is only available for packets that support TCP, UDP, or ICMP echo requests. The device will modify the destination MAC and IP address fields before forwarding the packet, and will put an entry in the Connection Table to allow back translation of possible answers.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Pass
- Drop

- Redirect

Default: Drop packets

2.20.10.8 Redirect IP address

If the rule is a redirect rule, this field must be used to specify which IP address the appropriate packets are to be redirected to.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.20.10.9 Destination MAC address

The physical address (MAC) of a destination station in the wireless LAN is entered here. Every network card has its own MAC address that is unique in the world. The address is a 12-character hexadecimal number (e.g. 00A057010203). This address can generally be found printed on the network card. If you enter no MAC address (or zero), this rule affects all packets.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- 12-digit hexadecimal number

Default: Blank

2.20.10.10 IP network

If the first field is set to a value unequal to 0.0.0.0, a packet will match this rule only if it is an IPv4 packet and either the packet's source or destination address are contained in the IP network defined by these two values.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.20.10.11 IP netmask

If the first field is set to a value unequal to 0.0.0.0, a packet will match this rule only if it is an IPv4 packet and either the packet's source or destination address are contained in the IP network defined by these two values.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.20.10.12 DHCP source MAC

This setting decides whether matching of the rule shall depend on a packet's source MAC address, i.e. whether it is the MAC address of a host that received its IP address via DHCP.

DHCP tracking on a particular (W)LAN interface only takes place when protocol filters for the interface have been defined with the parameter "IP allocated by DHCP" set to Yes or No. Additionally, a network can be specified for a filter rule. However, if a rule has the parameter "IP allocated by DHCP" set to Yes, then a given network could be ignored.

Telnet path: /Setup/LAN-Bridge/Protocol-Table

Possible values:

- Irrelevant
- No
- Yes

Default: Irrelevant

2.20.11 Port

This table can be used to set further bridge parameters for each port.

Telnet path: /Setup/LAN-Bridge

2.20.11.2 Port

Selects the port for which the spanning tree parameters are to be set.

Telnet path: /Setup/LAN-Bridge/Port

Possible values:

- Select from the list of the device's logical interfaces, e.g. LAN-1, WLAN-1 or P2P-1-1

2.20.11.3 Active

This can be used to block a port completely, i.e. the port will always have the 'disabled' status.

Telnet path: /Setup/LAN-Bridge/Port

Possible values:

- Active
- Inactive

Default: Activated

2.20.11.5 Bridge group

Assigns the logical interface to a bridge group to enable bridging from/to this logical interface via the LAN bridge. If assigned to a common bridge group, several logical interfaces can be addressed at once and they appear to the LANCOM Wireless to be a single interface. This can then be used for Advanced Routing and Forwarding, for example.

Telnet path: /Setup/LAN-Bridge/Port

Possible values:

- BRG-1 bis BRG-8
- None

Default: BRG - 1

Special values: If the interface is removed from all bridge groups by setting 'none', then there is no communication between the LAN and WLAN via the LAN bridge (isolated mode). With this setting, LAN/WLAN data transfers over this interface are only possible via the router.



A requirement for data transfer from/to a logical interface via the LAN bridge is the deactivation of the global "isolated mode" which applies to the whole of the LAN bridge. Furthermore, the logical interface must be assigned to a bridge group. With the setting 'none', no transfers can be made via the LAN bridge.

2.20.11.6 DHCP limit

Number of clients which can be handled by DHCP. If the limit is exceeded, the oldest entry is dropped. This feature can be used in combination with the protocol filter table to limit access to just one logical interface.

Telnet path: /Setup/LAN-Bridge/Port

Possible values:

- 0 to 255

Default: 0

2.20.11.7 Point-to-point port

This item corresponds to the "adminPointToPointMAC" setting as defined in IEEE 802.1D. By default, the "point-to-point" setting for the LAN interface is derived from the technology and the concurrent status:

An Ethernet port is assumed to be a P2P port if it is operating in full-duplex mode.

A token ring port is assumed to be a P2P port if it is operating in full-duplex mode.

A WLAN SSID is never considered to be a P2P port.

A WLAN P2P connection is always assumed to be a P2P port.

However, this automatic setting can be revised if this is unsuitable for the required configuration. Interfaces in "point-to-point" mode have various specialized capabilities, such as the accelerated port status change for working with the rapid spanning tree protocol.

Telnet path: /Setup/LAN-Bridge/Port

Possible values:

- Automatic
- Yes
- No

Default: Automatic

2.20.12 Aging time

When a client requests an IP address from a DHCP server, it can also ask for a lease period for the address. This value governs the maximum length of lease that the client may request. When a client requests an address without asking for a specific lease period, the value set here will apply.

Telnet path: /Setup/LAN-Bridge

Possible values:

- 1 to 99,999 minutes

Default: Max. validity 6,000 min., default validity: 500 min.

2.20.13 Priority mapping

This table assigns a user priority to each IP packet due to be sent, based on a ToS/DSCP value as per 802.1D. An example of how user priority can be used concerns wireless LANs with activated QoS, where the packets are allocated to access categories (voice/video/best-effort/background).

Telnet path: /Setup/LAN-Bridge/Priority-Mapping

2.20.13.1 Name

Enter a name for a combination of DSCP value and priority.

Telnet path:/Setup/LAN-Bridge/Priority-Mapping/Name

Possible values:

- Maximum 16 alphanumerical characters

Default: Blank

2.20.13.2 DSCP value

Enter the DSCP value that is used for this priority assignment.

Telnet path:/Setup/LAN-Bridge/Priority-Mapping/DSCP-Value

Possible values:

- Numerical characters from 0 to 255

Default: 0

2.20.13.3 Priority

Enter the priority that is used for this priority assignment.

Telnet path:/Setup/LAN-Bridge/Priority-Mapping/Priority

Possible values:

- Best effort
- Background
- Two
- Excellent effort
- Controlled latency
- Video
- Voice
- Network control

Default: Best effort

2.20.20 Spanning tree

This menu contains the settings for the spanning tree.

Telnet path: /Setup/LAN-Bridge

2.20.20.1 Operating

Here you can switch the Spanning-Tree support on and off. When Spanning Tree is turned off, the router does not send any Spanning Tree packets and passes received packets along instead of processing them itself.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Active
- Inactive

Default: Deactivated

2.20.20.2 Bridge priority

This value sets the priority of the bridge in the LAN. This can influence which bridge should preferably be made root bridge by the spanning tree protocol. This is a 16-bit value (0 .. 65535), where higher values mean lower priority. The default value should only be changed if a certain bridge is to be preferred. The selection process still works even if all

the values are the same because, if the priorities are identical, the bridge's MAC address is used to make the decision. Even though an entire 16-bit parameter is available for configuring a parameter, special care should be taken where newer versions of the rapid or multiple spanning tree protocol are involved. The priority value should only be changed in increments of 4096, because the lower 12 bits are used for other purposes. This could mean that these values may be ignored by future firmware releases.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Maximum 65,535

Default: 32768

2.20.20.5 Maximum age

This value defines the time (in seconds) after which a bridge drops messages received through Spanning Tree as 'outdated'. This defines how quickly the spanning-tree algorithm reacts to changes, for example due to failed bridges.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Max. 65535 seconds

Default: 20 seconds

2.20.20.6 Hello time

The Hello Time specifies the time interval (in seconds) for sending root-bridge information to the LAN. Note that the non-root bridge can adopt values from the root bridge. This value might be ignored depending on the topology of the network.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Max. 32768 seconds

Default: 2 seconds

2.20.20.7 Forward delay

This value determines the time (in seconds) that passes before a port should change from 'listening' to 'learning' or from 'learning' to 'forwarding'. However, now that rapid spanning tree offers a method of determining when a port can be switched into the "forwarding state" without a long wait, this setting in many cases no longer has any effect. Do not change this value without detailed knowledge of spanning tree, since it may increase the risk of temporary loops in the network.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Max. 32768 seconds

Default: 6 seconds

2.20.20.11 Port

This table can be used to set further spanning-tree parameters for each port.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

2.20.20.11.2 Port

The name of the LAN interface.

Telnet path:/Setup/LAN-Bridge/Spanning-Tree/Port-Data

2.20.20.11.4 Priority

The priority of the port set as an 8-bit value. If more than one port is available as a path to a LAN and the distance to both ports is the same, then this value decides which port is to be selected. If two ports have the same priority, then the port with the smaller number is selected.

Telnet path:/Setup/LAN-Bridge/Spanning-Tree/Port-Data

Possible values:

- Maximum 255

Default: 128

 Rapid spanning tree uses only the upper 4 bits of this value, for example, if a value is increased and decreased in 16 steps. Lower values take a higher priority.

2.20.20.11.6 Edge port

A port can be labeled as an edge port

Telnet path:/Setup/LAN-Bridge/Spanning-Tree/Port-Data

Possible values:

- On
- No

Default: No label

2.20.20.11.7 Path cost override

Specifies the influence of path cost.

Telnet path:/Setup/LAN-Bridge/Spanning-Tree/Port-Data

Possible values:

- Maximum 4,294,967,295

Default: 0

2.20.20.12 Protocol version

This item selects the spanning-tree protocol version to be used. Setting this switch to 'Classic' will engage the algorithm defined in IEEE 802.1D-1998 chapter 8, while setting it to 'Rapid' will engage the rapid spanning tree scheme defined by IEEE 802.1D-2004 chapter 17.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Classic
- Rapid

Default: Classic

 Note the upward compatibility of this protocol. Rapid spanning tree will automatically fall back to classic spanning tree data elements and schemes if other bridges are detected that do not support rapid spanning tree.

2.20.20.13 Transmit hold count

Determines the number of BPDUs (Bridge Protocol Data Units) that may be sent when using rapid spanning tree, before a second break is inserted. (With classic spanning tree, this value has no effect.)

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Maximum 999

Default: 6

2.20.20.14 Path cost computation

This item sets the protocol to be used for calculating the path cost. While the rapid spanning tree method uses the full 32-bit value range, the classic algorithm only works with a 16-bit value range. The rapid spanning tree method is only useful if it is supported by all bridges in the network and it is consistently configured.

Telnet path: /Setup/LAN-Bridge/Spanning-Tree

Possible values:

- Classic
- Rapid

Default: Classic

2.20.30 IGMP snooping

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

2.20.30.1 Operating

Activates or deactivates IGMP snooping in the device and all of the defined querier instances. Without IGMP snooping the bridge functions like a simple switch and forwards all multicasts to all ports.

 If this function is deactivated, the bridge sends all IP multicast packets on all ports. If there is a change of operating state, the device completely resets the IGMP snooping function, i.e. it clears all dynamically learned values (memberships, router port properties).

SNMP ID:

2.20.30.1

Telnet path:

Setup > LAN-Bridge > IGMP-Snooping

Possible values:

No
Yes
Auto

Default:

No

2.20.30.2 Port settings

This table defines the port-related settings for IGMP snooping.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

2.20.30.2.1 Port

The port for which the settings apply.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Port-Settings/Port

Possible values:

- Selects a port from the list of those available in the device.

2.20.30.2.2 Router port

This option defines the port's behavior.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Port-Settings/Router-Port

Possible values:

- Yes: This port will always work as a router port, irrespective of IGMP queries or router messages received at this port.
- No: This port will never work as a router port, irrespective of IGMP queries or router messages received at this port.
- Auto: This port will work as a router port if IGMP queries or router messages are received. The port loses this status if no packets are received for the duration of "Robustness*Query-Interval+(Query-Response-Interval/2)".

Default: Auto

2.20.30.3 Unregistered data packet handling

This setting defines the handling of multicast data packets with a destination address outside the 224.0.0.x range and for which neither static memberships were defined nor were dynamic memberships learned.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

Possible values:

- Router ports only: Sends these packets to all router ports.
- Flood: Sends these packets to all ports.
- Discard: Drops these packets.

Default: Router ports only

2.20.30.4 Simulated queriers

This table contains all of the simulated queriers defined in the device. These units are employed if IGMP functions are required but there is no multicast router in the network. The querier can be limited to certain bridge groups or VLANs by defining multiple independent queriers to support the corresponding VLAN IDs.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

Name

Name of the querier instance

Possible values:

- 8 alphanumeric characters.

Default: Blank

Operating

Activates or deactivates the querier instance

Possible values:

- Yes
- No

Default: No

Bridge group

Limits the querier instance to a certain bridge group.

Possible values:

- Select from the list of available bridge groups.

Default: None

Special values: If bridge group is set to "none", the IGMP queries will be sent via all bridge groups.

VLAN ID

Limits the querier instance to a certain VLAN.

Possible values:

- 0 to 4096.

Default: 0

Special values: If "0" is selected as VLAN, the IGMP queries are sent without a VLAN tag. For this reason, this value only makes sense when VLAN is deactivated in general.

2.20.30.4.1 Name

Name of the querier instance

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Simulated-Queriers/Name

Possible values:

- 8 alphanumeric characters.

Default: Blank

2.20.30.4.2 Operating

Activates or deactivates the querier instance

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Simulated-Queriers/Operating

Possible values:

- Yes
- No

Default: No

2.20.30.4.3 Bridge group

Limits the querier instance to a certain bridge group.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Simulated-Queriers/Bridge-Group

Possible values:

- Select from the list of available bridge groups.
- None

Special values: If bridge group is set to "none", the IGMP queries will be sent via all bridge groups.

Default: None

2.20.30.4 VLAN-ID

Limits the querier instance to a certain VLAN.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Simulated-Queriers/VLAN-ID

Possible values:

- 0 to 4096

Special values: If "0" is selected as VLAN, the IGMP queries are sent without a VLAN tag. For this reason, this value only makes sense when VLAN is deactivated in general.

Default: 0

2.20.30.5 Query interval

Interval in seconds in which a multicast-capable router (or a simulated querier) sends IGMP queries to the multicast address 224.0.0.1, so prompting the stations to transmit return messages about multicast group memberships. These regular queries influence the time in which memberships age, expire, and are then deleted.

After the startup phase, the querier sends IGMP queries in this interval.

A querier returns to the querier status after a time equal to "Robustness*Query-Interval+(Query-Response-Interval/2)".

A port loses its router-port status after a time equal to "Robustness*Query-Interval+(Query-Response-Interval/2)".

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

Possible values:

- 10-figure number greater than 0

Default: 125

 The query interval must be greater than the query response interval.

2.20.30.6 Query response interval

Interval in seconds influencing the timing between IGMP queries and router-port aging and/or memberships.

Interval in seconds in which a multicast-capable router (or a simulated querier) expects to receive responses to its IGMP queries. These regular queries influence the time in which memberships age, expire, and are then deleted.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

Possible values:

- 10-figure number greater than 0

Default: 10

 The query response interval must be less than the query interval.

2.20.30.7 Robustness

This value defined the robustness of the IGMP protocol. This option tolerates packet losses of IGMP queries with respect to Join messages.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

Possible values:

- 10-figure number greater than 0

Default: 2

2.20.30.8 Static members

This table enables members to be defined manually, for example if they cannot or should not be learned automatically.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

Address

The IP address of the manually defined multicast group.

Possible values:

- Valid IP multicast address

Default: Blank

VLAN ID

The VLAN ID which is to support this static member. Each IP multicast address can have multiple entries with different VLAN IDs.

Possible values:

- 0 to 4096

Default: 0

Special values: If "0" is selected as VLAN, the IGMP queries are sent without a VLAN tag. For this reason, this value only makes sense when VLAN is deactivated in general.

Allow learning

This option activates the automatic learning of memberships in this multicast group. If automatic learning is deactivated, packets can only be sent via the ports which have been manually defined for the multicast group.

Possible values:

- Yes
- No

Default: Yes

Static members

These ports will always be the destination for packets with the corresponding IP multicast address, irrespective of any Join messages received.

Possible values:

- Comma-separated list of the desired ports, max. 215 alphanumerical characters

Default: Blank

2.20.30.8.1 Address

The IP address of the manually defined multicast group.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Static-Members/Address

Possible values:

- Valid IP multicast address

Default: Blank

2.20.30.8.2 Static members

These ports will always be the destination for packets with the corresponding IP multicast address, irrespective of any Join messages received.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Static-Members/Static-Members

Possible values:

- Comma-separated list of the desired ports, max. 215 alphanumerical characters

Default: Blank

2.20.30.8.3 VLAN-ID

The VLAN ID which is to support this static member. Each IP multicast address can have multiple entries with different VLAN IDs.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Static-Members/VLAN-Id

Possible values:

- 0 to 4096

Special values: If "0" is selected as VLAN, the IGMP queries are sent without a VLAN tag. For this reason, this value only makes sense when VLAN is deactivated in general.

Default: 0

2.20.30.8.4 Allow learning

This option activates the automatic learning of memberships in this multicast group. If automatic learning is deactivated, packets can only be sent via the ports which have been manually defined for the multicast group.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping/Static-Members/Allow-Learning

Possible values:

- Yes
- No

Default: Yes

2.20.30.9 Advertise interval

The interval in seconds in which devices send packets advertising themselves as multicast routers. This information makes it quicker for other IGMP-snooping devices to find which of their ports are to operate as router ports. When activating its ports, a switch (for example) can query for multicast routers, and the router can respond to this query with an advertisement of this type. Under some circumstances this method can be much quicker than the alternative IGMP queries.

Telnet path: /Setup/LAN-Bridge/IGMP-Snooping

WEBconfig English: LCOS Menu Tree/Setup/LAN bridge/IGMP snooping

Possible values:

- 4 to 180 seconds

Default: 20

2.21 HTTP

This menu contains the HTTP settings.

SNMP ID: 2.21

Telnet path: /Setup

2.21.1 Document root

This parameter defines the path to a directory where the help for WEBconfig is stored locally.

Telnet path: /Setup/HTTP/Document-Root

Possible values:

- Maximum 99 alphanumerical characters

Default: Blank

 This parameter is for the future, local storage of WEBconfig help. This parameter has no function in current firmware versions.

2.21.2 Page headers

Use this setting to choose whether the page headers of the HTTP pages for the Public Spot should be displayed as text or as images.

Telnet path: /Setup/HTTP

Possible values:

- Images
- Texts

Default: Images

 The settings for the page headers are intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.21.3 Font family

Font family for Web interface display.

Telnet path: /Setup/HTTP

Possible values:

- Max. 39 characters

Default:

- Helvetica
- Sans-serif

2.21.5 Page headers

Select here whether the Public Spot displays the page headers of the standard pages as text or graphics.

Telnet path: /Setup/HTTP/Page-Headers

2 Setup

Possible values:

- Images
- Texts

Default: Images

2.21.6 Error-page style

Normal error display or bluescreen

Telnet path: /Setup/HTTP**Possible values:**

- Standard
- Nifty

2.21.7 Port

Port for the HTTP server connection

Telnet path: /Setup/HTTP**Possible values:**

- Max. 5 characters

Default: 80

2.21.8 SSL port

Port for the HTTPS server connection

Telnet path: /Setup/HTTP**Possible values:**

- Max. 5 characters

Default: 443

2.21.9 Maximum tunnel connections

The maximum number of simultaneously active HTTP tunnels

Telnet path: /Setup/HTTP**Possible values:**

- Max. 255 tunnels

Default: 3

2.21.10 Tunnel idle timeout

Life-expectancy of an inactive tunnel. After expiry of this time period the tunnel closes automatically unless data transfer is actively taking place.

Telnet path: /Setup/HTTP**Possible values:**

- Max. 4294967295 seconds

Default: 300

2.21.11 Session timeout

Period of validity (lease) for the WEBconfig session without user activity, in seconds. When this period expires the password must be reentered.

Telnet path: /Setup/HTTP

Possible values:

- Max. 10 characters

Default: 600

2.21.13 Standard design

Selects the design that will be used by default to display WEBconfig.

Telnet path: /Setup/HTTP

Possible values:

- Normal_design
- Design_for_small_resolutions
- Design_for_high_contrast

Default: Normal_design

2.21.14 Show device information

This table defines the system information that is displayed on the System data/ Device status page in WEBconfig.

Telnet path: /Setup/HTTP

2.21.14.1 Device information

Selection of device information to be displayed in WEBconfig.

Telnet path: /Setup/HTTP/Show-device-information

Possible values:

- CPU
- Memory
- Ethernet ports
- Throughput(Ethernet)
- UMTS/modem interface
- Router
- Firewall
- DHCP
- DNS
- VPN
- ADSL
- ISDN
- DSLoL
- Time
- IP addresses

Default: CPU

2.21.14.2 Position

Index for the sequence for the display of device information.

Telnet path:/Setup/HTTP/Show-device-information

Possible values:

- Max. 10 characters

Default: 0

2.21.15 HTTP compression

The contents of WEBconfig are compressed in order to speed up the display. The compression can be deactivated for browsers that do not support it.

Telnet path: /Setup/HTTP

Possible values:

- Activated
- Deactivated
- Only_for_WAN

Default: Activated

2.21.16 Keep server ports open

This menu contains the parameters for restricting access to the web server services.

Telnet path:/Setup/HTTP/Keep-Server-Ports-Open

2.21.16.1 Interface

Here you select the access path to be set for accessing the web-server services.

Telnet path:/Setup/HTTP/Keep-Server-Ports-Open/Ifc.

Possible values:

- All access methods provided by the device (e.g. LAN, WAN, WLAN, depending on the model).

Default: Blank

2.21.16.2 Keep server ports open

You can decide whether access to the device configuration via HTTP is to be enabled, disabled or limited to read-only. Irrespective of this, access to the web server services can be regulated separately, e.g. to enable communication via CAPWAP, SSL-VPN or SCEP-CA via HTTP(S), even if HTTP(S) has been disabled.

For each access method (LAN, WAN, WLAN, depending on the device), you set the access rights for the device's web server services at the HTTP server port.

Telnet path:/Setup/HTTP/Keep-Server-Ports-Open/Keep-Server-Ports-Open

Possible values:

- Automatic: The HTTP server port is open, as long as a service is registered (e.g. CAPWAP). If no service is registered, the server port will be closed.
- Enabled: The HTTP server port is always open, even if access to the configuration with HTTP is disabled. This can be used to restrict direct access to the configuration. However, the automatic configuration of APs by a WLAN controller is still possible.
- Disabled: The HTTP server port is closed and no service can use the web server. If access to the configuration via HTTP is enabled, then a message is displayed expressing that the web server is not available.

Default: Automatic

2.21.17 Use-User-Provided-Certificate

This option enables the HTTP(S) server of the device to use a SSL certificate provided by the HTTPS client instead of the SSL certificate stored in the device.

Path Telnet: /Setup/HTTP

Possible values:

- Yes
- No

Default: No

2.21.18 SSL versions

This setting allows you to opt for the latest encryption protocols for HTTPS connections.

 Please note that the encryption protocols set here only apply for HTTPS connections. For other protocols, the available encryption algorithms are fixed:

- EAP/TLS/TTLS/PEAP is set to TLS 1.0
- CAPWAP is set to DTLS 1.0 (which is based on TLS 1.1)
- Telnet/SSL is set to 'SSL 3.0+TLS 1.0 + TLS 1.1 + TLS 1.2'
- RADSEC is set to 'SSL 3.0+TLS 1.0'

SNMP ID:

221.18

Telnet path:

Setup > HTTP > SSL-Versions

Possible values:

SSLv3

TLSv1

TLSv1.1

TLSv1.2

Default:

SSLv3

TLSv1

2.21.20 Rollout Wizard

This menu contains the settings for the Rollout Wizard.

Telnet path: /Setup/HTTP

2.21.20.1 Operating

Switches the Rollout Wizard on or off. After being switched on the Wizard appears as an option on the WEBconfig start page.

Telnet path: /Setup/HTTP/Rollout-Wizard

Possible values:

- On
- Off

Default: Off**2.21.20.2 Title**

The name for the Rollout Wizard as displayed on the start page of WEBconfig.

Telnet path: /Setup/HTTP/Rollout-Wizard**Possible values:**

- Max. 50 characters

Default: Rollout**2.21.20.8 Use extra checks**

This option enables consistency tests that check some internal aspects of the wizard.



Executing these additional tests is very time consuming. Activate this option only during development of the wizard and deactivate this option for normal operation.

Telnet path: /Setup/HTTP/Rollout-Wizard**Possible values:**

- On
- Off

Default: Off**2.21.20.9 Presets**

This table enables you to predefine the values for all of the parameters that are requested by the Default Rollout Wizard. Parameters configured in this way are no longer queried when you run the Default Rollout Wizard.



A 'blank' predefined value for **Port** and for **Source loopback address** will be interpreted by the device as the entry 'Auto'. In this case, the Default Rollout Wizard uses the corresponding HTTP(S) standard port and, as the loopback address, the address of your device that matches to the target. If you are working with different ARF networks, you must use the loopback address to specify the ARF where the LSR server is located.

SNMP ID:

2.21.20.9

Telnet path:**Setup > HTTP > Rollout-Wizard****2.21.20.9.1 Name**

This entry shows the name of the parameter to be filled out with preset values.

SNMP ID:

2.21.20.9.1

Telnet path:**Setup > HTTP > Rollout-Wizard > Presets**

2.21.20.9.2 Preset

For the corresponding parameter, this entry shows the preset value to be used by the Rollout Wizard.

SNMP ID:

2.21.20.9.2

Telnet path:

Setup > HTTP > Rollout-Wizard > Presets

Possible values:

Any string, max. 127 characters from

```
[0-9][A-Z][a-z]@{|}~!$%&'()+-./:;<=>?[\]^_.*`
```

Default:

2.21.20.9.2 Use preset

This entry defines whether the parameter value configured here is to be used by the Rollout Wizard. If set to yes, the Rollout Wizard will no longer query this parameter.

SNMP ID:

2.21.20.9.2

Telnet path:

Setup > HTTP > Rollout-Wizard > Presets

Possible values:

No

Yes

Default:

(Depends on the line)

2.21.20.10 Delete Wizard

This action is used when you want to delete a custom Rollout Wizard. The next time you start the Rollout Wizard, the device reverts to the standard internal LCOS wizard.

SNMP ID:

2.21.20.10

Telnet path:

Setup > HTTP > Rollout-Wizard

Possible parameters:

No parameters available

2.21.21 Max-HTTP-Job-Count

Using this setting you specify the maximum number of HTTPS jobs. An HTTP job exists when LCOS is serving an HTTP connection from a client, for example in the form of a request to WEBconfig. The setting therefore defines the maximum number of concurrent HTTP connections.

SNMP ID:

2.21.21

Telnet path:**Setup > HTTP****Possible values:**

5 to 512

Default:

Depends on device

2.21.30 File server

This menu contains the file-server settings for external USB data media.

Telnet path: /Setup/HTTP/File-Server

2.21.30.1 Public subdirectory

This directory is the root directory on a USB medium. The device ignores all other files on the USB medium.

Telnet path: /Setup/HTTP/File-Server/Public-Subdir**Possible values:**

- Maximum 64 alphanumerical characters

Default: public_html

2.21.30.2 Operating

This parameter activates or deactivates the file server for USB media.

Telnet path: /Setup/HTTP/File-Server/Operating**Possible values:**

- Yes
- No

Default: Yes

2.22 SYSLOG

This menu contains the SYSLOG settings.

Telnet path: /Setup

2.22.1 Operating

Activates the dispatch of information about system events to the configured SYSLOG client.

Telnet path: /Setup/SYSLOG**Possible values:**

- Yes
- No

Default: Yes

2.22.2 SYSLOG table

This table defines the SYSLOG clients.

Telnet path: /Setup/SYSLOG

2.22.2.1 Index

Position of the entry in the table.

Telnet path: /Setup/SYSLOG/Server

Possible values:

- Max. 4 characters

Default: Blank

2.22.2.2 IP address

IP address of the SYSLOG client.

Telnet path: /Setup/SYSLOG/Server

Possible values:

- Valid IP address.

Default: 00.0.0

2.22.2.3 Source

Source that caused the message to be sent. Each source is represented by a certain code.

Telnet path: /Setup/SYSLOG/Server

Possible values:

- System time: 01
- Console logins: 02
- System time: 04
- Logins: 08
- Connections: 10
- Accounting: 20
- Administration: 40
- Router: 80

Default: 00

Special values: 00: No source is defined.

2.22.2.4 Level

SYSLOG level with which the message is sent. Each level is represented by a certain code.

Telnet path: /Setup/SYSLOG/Server

Possible values:

- Alert: 01
- Failure: 02
- Warning: 04
- Information: 08
- Debug: 10

Default: 00

Special values: 00: No level is defined.

2.22.2.6 Loopback address

Sender address entered into the SYSLOG message. No answer is expected to a SYSLOG message.

Telnet path: /Setup/SYSLOG/Server

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

2.22.3 Facility mapper

This table defines the allocation of SYSLOG sources to facilities.

Telnet path: /Setup/SYSLOG

2.22.3.1 Source

Mapping sources to specific facilities.

Telnet path: Setup/SYSLOG/Facility-Mapper

Possible values:

- System
- Logins
- System time
- Console logins
- connections
- Accounting
- Administration
- Router

2.22.3.2 Facility

Mapping sources to specific facilities.

Telnet path: Setup/SYSLOG/Facility-Mapper

Possible values:

- KERNEL
- AUTH
- CRON
- AUTHPRIV
- LOCAL0
- LOCAL1
- LOCAL2
- LOCAL3

2.22.4 Port

Port used for sending SYSLOG messages.

Telnet path: /Setup/SYSLOG

Possible values:

- Max. 10 characters

Default: 514

2.22.5 Message table order

This item determines the order in which the messages table is displayed.

SNMP ID: 2.22.5

Telnet path: /Setup/SYSLOG

Possible values:

- Oldest on top
- Newest on top

Default: Newest-on-top

2.22.6 Backup interval

This parameter defines the interval in hours for the boot-persistent storage of SYSLOG messages to the flash memory of the device.

SNMP ID: 2.22.6

Telnet path: /Setup/SYSLOG

Possible values:

- 1 to 99

Default: 2

2.22.7 Backup active

Enables the boot-persistent storage of SYSLOG messages to the flash memory of the device.

SNMP ID: 2.22.7

Telnet path: /Setup/SYSLOG

Possible values:

- Yes
- No

Default: Yes

2.22.8 Log CLI changes

This parameter enables logging of the commands entered on the command line. Enable this parameter to log an entry in the internal SYSLOG memory when a command is entered on the command line of the device.



This protocol logs commands entered on the command line only. Configuration changes and actions made using LANconfig and WEBconfig are not logged.

SNMP ID: 2.22.8

Telnet path: /Setup/SYSLOG

Possible values:

- Yes
- No

Default: No

2.22.9 Max. message age, hours

This parameter defines the maximum period for retaining SYSLOG messages in the internal SYSLOG memory of the device in hours. After this period expires the device automatically deletes the obsolete SYSLOG messages if auto-delete is activated under [Remove old messages](#).

SNMP ID:

2.22.9

Telnet path:

Setup > SYSLOG

Possible values:

1 to 99

Default:

24

2.22.10 Remove old messages

This parameter enables deletion of the SYSLOG messages in the device after the period set for [Maximum-message-age](#).

SNMP ID:

2.22.10

Telnet path:

Setup > SYSLOG

Possible values:

Yes
No

Default:

No

2.22.11 Message age unit

This parameter determines whether the message age is specified in hours, days and months.



In this case, a month is 30 days.

SNMP ID:

2.22.11

Telnet path:**Setup > SYSLOG****Possible values:**

Hour

Day

Month

Default:

Hour

2.23 Interfaces

This menu contains the settings for the interfaces.

SNMP ID: 2.23**Telnet path:** /Setup

2.23.1 S0

This item allows you to make further settings for the device interface.

Telnet path: /Setup/Interfaces

2.23.1.1 Interface

Specifies the ISDN interface that the settings refer to.

Telnet path: /Setup/Interfaces/S0/Ifc**Possible values:**

- Choose from the ISDN interfaces available in the device, e.g. S0-1 or S0-2.

2.23.1.2 Protocol

This item allows you to select the D-channel protocol for this interface.

Telnet path: /Setup/Interfaces/S0/Protocol**Possible values:**

- No
- DSS1
- 1TR6
- P2P-DSS1
- GRPO
- Auto

Default: Auto

2.23.1.7 LL-B channel

This item allows you to set the leased-line channel if the device is operated with a **Group 0**-type leased-line connection.

Telnet path:/Setup/Interfaces/S0/LL-B-chan.

Possible values:

- None
- B1
- B2

Default: None

2.23.1.9 Dial prefix

The number entered here will be placed in front of all telephone numbers making outgoing calls.

This is useful, for example, if your device is operated in a PBX that requires an outside-line access code. This number should be entered here.

Telnet path:/Setup/Interfaces/S0/Dial-prefix

Possible values:

- Max. 8 characters

Default: Blank

2.23.1.13 Max in calls

This setting allows you to place a limit on the number of concurrent calls that can be made over this interface. One advantage of this is that you can always leave a line free for other devices.

Telnet path:/Setup/Interfaces/S0/Max-in-calls

Possible values:

- None
- One
- Two

Default: Two

2.23.1.13 Max out calls

This setting allows you to place a limit on the number of concurrent calls that can be made over this interface. One advantage of this is that you can always leave a line free for other devices.

Telnet path:/Setup/Interfaces/S0/Max-out-calls

Possible values:

- None
- One
- Two

Default: Two

2.23.4 DSL

The settings for the DSL interface are located here.

Telnet path: /Setup/Interfaces

2.23.4.1 Interface

Specifies the interface that the settings refer to.

Telnet path: /Setup/Interfaces/S0/Ifc

Possible values:

- Choose from the ISDN interfaces available in the device, e.g. S0-1 or S0-2.
- ADSL
- VDSL
- Choose from the DSL interfaces available in the device, e.g. DSL-1 or DSL-2.
- UMTS

 The selection options depend on the equipment of the device.

2.23.4.2 Operating

Here you can specify whether the interface is active or not.

Telnet path: /Setup/Interfaces/DSL/Operating

Possible values:

- No
- Yes

Default: No

2.23.4.6 Mode

This item selects the mode in which the WAN interface is operated. In automatic mode, all PPPoE frames and all data packets belonging to a connection established over the DSLoL interface (as configured in the IP parameter list) are routed via the DSLoL interface (WAN). All other data packets are treated as normal LAN packets. In exclusive mode, the LAN interface operates as a WAN interface only.

SNMP ID:

2.23.4.6

Telnet path:

Setup > Interfaces > DSLoL-Interface

Possible values:

Auto
Exclusive

Default:

Exclusive

2.23.4.16 Upstream rate

This item allows you to set the gross upstream rate for this port. The data rate entered here (kbps) limits the outgoing data streams from the device.

Telnet path:/Setup/Interfaces/DSL/Upstream-Rate

Possible values:

- Max. 6 numerical characters

Default: Blank

Special values: 0: No limitation on the amount of data transferred

2.23.4.17 External overhead

The external overhead results from the data that the modem attaches to each packet. For PPPoE connections, this is 4 bytes for the LLC header and 8 bytes for the AAL 5 trailer. The modem is unable to send "broken" ATM cells, so on average half an ATM cell (= 24 bytes) must also be allowed for. The resulting total overhead is thus 36 bytes per transmitted packet.

Telnet path:/Setup/Interfaces/DSL/Ext.-Overhead

Possible values:

- Max. 3 numerical characters

Default: Blank

2.23.4.18 Downstream rate

The downstream rate is measured in kilobits and includes everything arriving at the router over the WAN Ethernet. For example, on a T-DSL connection with guaranteed 768 kbit downstream, the upstream rate negotiated by the modem is 864 kbit. This still includes an overhead typical for this type of connection, which results from the modem using ATM as the transport protocol. If we adjust the 864 kbit to allow for the overhead that results from the structure of an ATM cell (48 bytes of payload for a cell length of 53 bytes), we arrive at $864 * 48/53 = 792$ kbit gross downstream rate, which is transferred from the modem to the router over Ethernet. If data rates negotiated by the modem are unknown, it is possible to multiply the guaranteed data rates by 56/55 to approach the gross data rates.

Telnet path:/Setup/Interfaces/DSL/Downstream-Rate

Possible values:

- Max. 6 numerical characters

Default: Blank

Special values: 0: No restriction on the received data traffic

2.23.4.23 LAN-Ifc

Select the LAN interface that the DSLoL interface is linked with.

Telnet path:/Setup/Interfaces/DSL-Interfaces/LAN-Ifc

Possible values:

- LAN-1
- WLAN-1
- P2P-1-1
- P2P-1-2
- P2P-1-3
- P2P-1-4
- P2P-1-5
- P2P-1-6
- WLAN-1-2
- WLAN-1-3
- WLAN-1-4
- WLAN-1-5
- WLAN-1-6
- WLAN-1-7
- WLAN-1-8
- BRG-1
- BRG-2
- BRG-3

- BRG-4
- BRG-5
- BRG-6
- BRG-7
- BRG-8
- Any

Default: LAN-1

2.23.6 ADSL interface

The settings for the ADSL interface are located here.

Telnet path:/Setup/Interfaces/ADSL-Interface

2.23.6.1 Interface

Select the relevant interface here.

Telnet path:/Setup/Interfaces/ADSL-Interface/lfc

Possible values:

- ADSL
- S0-1
- DSL-1
- DSL-2
- DSL-3
- UMTS

 The selection options depend on the equipment of the device.

2.23.6.2 Protocol

Select the protocol that you want to use for this interface.

With ADSL multimode, the protocols G.DMT, T1.413 and G. Lite are all tried in sequence. Auto mode first attempts to connect using the ADSL2+ protocol. If no connection can be made, the system falls back successively to ADSL2 or G.DMT.

Telnet path:/Setup/Interfaces/ADSL-Interface/Protocol

Possible values:

- No
- Auto
- ADSL2+
- ADSL2
- ADSL Multimode
- Annex-M-Auto
- G.Dmt
- T1.413

Default: No

2.23.6.25 Power management

Activating the power management reduces the power consumption of the integrated ADSL modem.

The L2 mode acts only at the exchange.

The L3-mode enables a reduction of power consumption in the exchange and the ADSL device. To do this, the device enters a sleep mode when the connection is inactive for a defined period of time. Once the connection is activated again, the ADSL device needs a few seconds to initialize and return to operating mode.

Telnet path: /Setup/Interfaces/ADSL-Interface/Power-Management

Possible values:

- Disabled
- L2-allowed
- L3-and-L2-allowed

Default: L2-allowed

2.23.6.26 Linecode

This item sets the mode of operation of the line code. If you select 'Auto', then the system automatically switches to the next entry in the ADSL protocol list within a linecode or, if the end of this list is reached, it switches to the next line code:

- If no signal is detected on the line
- After 3 minutes without sync on ADSL2+
- After 1.5 minutes without sync on ADSL
- Upon the first sync loss after switching to a new line code

The system only switches to line codes that are supported by the currently selected protocol. If a protocol is selected that the current line code does not support, then the system switches to the next appropriate line code.

Line quality is not assessed continuously. The only check in auto mode (protocol and/or line code) is on the number of line faults in the monitoring period. By default, one line fault is allowed per 24 hours. If the maximum number is exceeded, the system switches to the next protocol or line code.

If the number of permissible line faults is not reached during the monitoring time, then the line code currently being used is "fixed" and entered here accordingly. At the same time, the automatic mode for the line code is deactivated. The monitoring period begins one minute after booting or following a change of line code or protocol.

Telnet path: /Setup/Interfaces/ADSL-Interface/Linecode

Possible values:

- Auto
- Annex-A
- Annex-B
- ADSL-A
- ADSL2+A
- ADSL-B
- ADSL2+B

Default: Auto

2.23.7 Modem mobile

The settings for the mobile-telephony modem are located here.

Telnet path: /Setup/Interfaces

2.23.7.1 Interface

Here you select the interface which you want to configure.

Telnet path: /Setup/Interfaces/Mobile/Ifc

Possible values:

- DSL-1
- EXT
- ADSL
- S0-1
- DSL-1
- DSL-2
- DSL-3
- UMTS

 The selection options depend on the equipment of the device.

2.23.7.2 Operating

Select the operating mode for the interface.

SNMP ID:

2.23.7.2

Telnet path:

Setup > Interfaces > Mobile

Possible values:

No
modem
WWAN
UMTS-GPRS

Default:

No

2.23.7.21 Data rate

Select the data rate in kilobytes per second used to transfer the data streams.

Telnet path:/Setup/Interfaces/Mobile/Datarate

Possible Telnet values:

- 19200
- 38400
- 57600
- 115200

Default: 115200

2.23.7.22 Profile

Here you select the profile to be used for the UMTS interface.

Telnet path:/Setup/Interfaces/Mobile/Profile

Possible values:

- Maximum 16 alphanumerical characters

Default: Blank

2.23.20 WLAN

This menu contains the settings for wireless LAN networks

Telnet path: /Setup/Interfaces

2.23.20.1 Network

Here you can adjust further network settings for each logical wireless LAN network (MultiSSID) supported by your device.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.1.1 Interface

Select from the logical WLAN interfaces.

Telnet path: /Setup/Interfaces/WLAN/Network

Possible values:

- Select from the available logical WLAN interfaces.

2.23.20.1.2 Network name

Define a unique SSID (the network name) for each of the logical wireless LANs required. Only WLAN clients that have the same SSID can register with this wireless network.

Telnet path: /Setup/Interfaces/WLAN/Network

Possible values:

- Max. 64 characters

Default: BLANK

2.23.20.1.4 Closed network (for standalone access points only)

You can operate your wireless LAN either in public or private mode. A wireless LAN in public mode can be contacted by any mobile station in the area. Your wireless LAN is put into private mode by activating the closed network function. In this operation mode, mobile stations that do not know the network name (SSID) are excluded from taking part in the wireless LAN.

With the closed-network mode activated, WLAN clients that use an empty SSID or the SSID "ANY" are prevented from associating with your network.

The option **Suppress SSID broadcast** provides the following settings:

- **No:** The access point broadcasts the radio cell's SSID. When a client sends a probe request with an empty or incorrect SSID, the access point responds with the SSID of the radio cell (public WLAN).
- **Yes:** The access point does not broadcast the radio cell's SSID. When a client sends a probe request with an empty SSID, the device similarly responds with an empty SSID.
- **Tightened:** The access point does not broadcast the radio cell's SSID. When a client sends a probe request with a blank or incorrect SSID, the device does not respond.



Simply suppressing the SSID broadcast does not provide adequate protection: When legitimate WLAN clients associate with the access point, this transmits the SSID in plain text so that it is briefly visible to all clients in the WLAN network.

SNMP ID:

2.23.20.1.4

Telnet path:**Telnet path:**Setup > Interfaces > WLAN > Network**Possible values:**

No
Yes
Tightened

Default:

No

2.23.20.1.8 Operating

Switches the logical WLAN on or off separately.

Telnet path:/Setup/Interfaces/WLAN/Network**Possible values:**

- On
- Off

Default: On**2.23.20.1.9 MAC filter**

The MAC addresses of the clients allowed to associate with an access point are stored in the MAC filter list. The 'MAC filter' switch allows the use of the MAC filter list to be switched off for individual logical networks.

Telnet path:/Setup/Interfaces/WLAN/Network**Possible values:**

- On
- Off

Default: On

Use of the MAC filter list is required for logical networks in which the clients register via LEPS with an individual passphrase. The passphrase used by LEPS is also entered into the MAC filter list. The MAC filter list is always consulted for registrations with an individual passphrase, even if this option is deactivated.

2.23.20.1.10 Maximum stations

Here you set the maximum number of clients that may associate with this access point in this network. Additional clients wanting to associate will be rejected.

Telnet path:/Setup/Interfaces/WLAN/Network**Possible values:**

- 0 to 65535

Default: 0**Special values:** 0 = Limitation switched off

2.23.20.1.11 Client-bridge support

Whereas address adjustment allows only the MAC address of a directly connected device to be visible to the access point, client-bridge support provides transparency; all MAC addresses of the LAN stations behind the client stations are transferred.

Furthermore, the three MAC addresses usual in client mode are not used for this operating mode (in this example for server, access point and client station), but rather four addresses as with point-to-point connections (the fourth is the MAC address of the station in the LAN of the client station). The fully transparent connection of a LAN to the client station allows targeted transmission of data packets in the WLAN and hence functions such as TFTP downloads, initiated by a broadcast.

Telnet path:/Setup/Interfaces/WLAN/Network

Possible values:

- Yes: Activates client-bridge support for this logical WLAN.
- No: Deactivates client-bridge support for this logical WLAN.
- Exclusive: Only accepts clients that also support the client-bridge mode.

Default: No



Client-bridge mode can only be used between two LANCOM devices.

2.23.20.1.12 RADIUS accounting

Deactivates accounting via a RADIUS server for this network

Telnet path:/Setup/Interfaces/WLAN/Network

Possible values:

- On
- Off

Default: Off

2.23.20.1.13 Inter-station traffic

Depending on the application, it may be required that the WLAN clients connected to an access point can—or expressly cannot—communicate with other clients. Individual settings can be made for every logical WLAN as to whether clients in this SSID can exchange data with one another.

Telnet path:/Setup/Interfaces/WLAN/Network

Possible values:

- Yes
- No

Default: Yes

2.23.20.1.14 APSD

Activates APSD power saving for this logical WLAN network.

Telnet path:/Setup/Interfaces/WLAN/Network

Possible values:

- On
- Off

Default: Off

 Please note that in order for the APSD function to work in a logical WLAN, QoS must be activated on the device. APSD uses mechanisms in QoS to optimize power consumption for the application.

2.23.20.1.15 Aironet extensions

Activates Aironet extensions for this logical wireless LAN.

Telnet path: /Setup/Interfaces/WLAN/Network/Aironet-Extensions

Possible values:

- Yes
- No

Default: Yes

2.23.20.1.16 Minimum client strength

This value sets the threshold value in percent for the minimum signal strength for clients when logging on. If the client's signal strength is below this value, the access point stops sending probe responses and discards the client's requests.

A client with poor signal strength will not detect the access point and cannot associate with it. This ensures that the client has an optimized list of available access points, as those offering only a weak connection at the client's current position are not listed.

SNMP ID:

2.23.20.1.16

Telnet path:

Telnet path: Setup > Interfaces > WLAN > Network

Possible values:

0-100

Default:

0

2.23.20.1.17 Include UUID

Here you can determine whether the corresponding radio module should transfer its UUID.

SNMP ID:

2.23.20.1.17

Telnet path:

Setup > Interfaces > WLAN > Network

Possible values:

- Yes
- No

Default:

Yes

2.23.20.1.19 Transmit only unicasts

Multicast and broadcast transmissions within a WLAN cell cause a load on the bandwidth of the cell, especially since the WLAN clients often do not know how to handle these transmissions. The access point already intercepts a large part of the multicast and broadcast transmissions in the cell with ARP spoofing. With the restriction to unicast transmissions it filters out unnecessary IPv4 broadcasts from the requests, such as Bonjour or NetBIOS.

The suppression of multicast and broadcast transmissions is also a requirement from the HotSpot 2.0 specification.

SNMP ID:

2.23.20.1.19

Telnet path:**Telnet path: Setup > Interfaces > WLAN > Network****Possible values:**

Yes

No

Default:

No

2.23.20.1.22 Accounting server

An alternate RADIUS accounting server for this logical WLAN interface. If you leave this field blank, the device uses the globally configured accounting server (if RADIUS accounting is enabled on the interface).

SNMP ID:

2.23.20.1.22

Telnet path:**Telnet path: Setup > Interfaces > WLAN > Network****Possible values:****Name** from **Setup > WLAN > RADIUS-Accounting > Servers**, max. 16 characters**Default:**

2.23.20.2 Transmission

Here you can adjust further transmission settings for each logical wireless LAN network (MultiSSID) supported by your device.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.2.1 Interface

Opens the settings for the logical WLAN networks.

Telnet path: /Setup/Interfaces/WLAN/Transmission**Possible values:**

- Select from the available logical WLAN interfaces.

2.23.20.2.2 Packet size

Smaller data packets cause fewer transmission errors than larger packets, although the proportion of header information in the traffic increases, leading to a drop in the effective network load. Increase the factory value only if your wireless

network is largely free from interference and very few transmission errors occur. Reduce the value to reduce the occurrence of transmission errors.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- 500 to 1600 (even values only)

Default: 1600

2.23.20.2.3 Min-Tx-Rate

Normally the access point negotiates the data transmission speeds continuously and dynamically with the connected WLAN clients. The access point adjusts the transmission speeds to the reception conditions. As an alternative, you can set fixed values for the minimum transmission speed if you wish to prevent the dynamic speed adjustment.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- Automatic
- Select from the available speeds

Default: Automatic

2.23.20.2.4 Basic rate

The basic rate is the transmission rate used by the LANCOM to send multicast and broadcast packets.

The rate defined here should allow the slowest clients to connect to the WLAN even under poor reception conditions. A higher value should only be set here if all clients in this logical WLAN can be reached at this speed.

If you choose "Auto", the device automatically matches the transmission rate to the slowest WLAN client on your network.

SNMP ID:

2.23.20.2.4

Telnet path:

Setup > Interfaces > WLAN > Transmission

Possible values:

Auto

Select from the available speeds between 1Mbps and 54Mbps

Default:

2Mbps

2.23.20.2.6 RTS threshold

The RTS threshold uses the RTS/CTS protocol to prevent the occurrence of the "hidden station" phenomenon.

A collision between the very short RTS packets is improbable, although the use of RTS/CTS leads to an increase in overhead. The use of this procedure is only worthwhile where long data packets are being used and the risk of collision is higher. The RTS threshold is used to define the minimum packet length for the use of RTS/CTS. The best value can be found using trial and error tests on location.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- 512 to 2347

Default: 2347

2.23.20.2.7 11b preamble

Normally, the clients in 802.11b mode negotiate the length of the preamble with the access point. "Long preamble" should only be set when the clients require this setting to be fixed.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- On
- Off

Default: Off

2.23.20.2.9 Max-Tx-Rate

Normally the access point negotiates the data transmission speeds continuously and dynamically with the connected WLAN clients. The access point adjusts the transmission speeds to the reception conditions. As an alternative, you can set fixed value for the maximum transmission speed if you wish to prevent the dynamic speed adjustment.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- Automatic
- Select from the available speeds

Default: Automatic

2.23.20.2.10 Min. fragment length

Packet fragment length below which fragments are rejected

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- 0 to 2347

Default: 16

2.23.20.2.11 Soft retries

If the hardware was unable to send a packet, the number of soft retries defines how often the system should attempt retransmission.

The total number of attempts is thus (soft retries + 1) * hard retries.

The advantage of using soft retries at the expense of hard retries is that the rate-adaption algorithm immediately begins the next series of hard retries with a lower data rate.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- 0 to 999

Default: 0

2.23.20.2.12 Hard retries

This value defines the number of times that the hardware should attempt to send packets before a Tx error message is issued. Smaller values mean that a packet which cannot be sent blocks the sender for a shorter time.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- 0 to 15

Default: 10

2.23.20.2.13 Short guard interval

The default setting automatically optimizes the value for guard interval. If the momentary operating conditions allow, the interval will be set to the shortest possible value.

You also have the option is deactivating this mechanism to prevent the short-guard interval from being used.

Put simply, the guard interval reduces the signal distortion caused by intersymbol interference (ISI) when using signal multiplexing (OFDM).

Telnet path:/Setup/Interfaces/WLAN/Transmission/Short-Guard-Interval

Possible values:

- Activated
- Deactivated

Default: Activated

2.23.20.2.14 Max. spatial streams

Spatial streams add a third dimension to the frequency-time matrix available to radio communications: Space. An array of multiple antennas provides the receiver with spatial information that enables the use of spatial multiplexing, a technique that increases transmission rates. This involves the parallel transmission of multiple data streams over a single radio channel. Multiple transmitter and receiver antennas can be operated at the same time. This leads to a significant increase in the performance of the radio system.

The default setting allows settings for the spatial streams to be made automatically to make optimal use of the radio system.

You also have the option of limiting the spatial streams to one or two to reduce the load on the radio system.

Telnet path:/Setup/Interfaces/WLAN/Transmission/Max.-Spatial-Streams

Possible values:

- Automatic
- One
- Two

Default: Automatic

2.23.20.2.15 Send aggregates

The settings for frame aggregation are located here. Frame aggregation is an official standard and, according to the 802.11n standard, it is to be vendor-independent. It is comparable to the long-existing burst mode.

With frame aggregation for WLAN, the frame is enlarged so that multiple Ethernet packets fit into it. This method shortens the waiting time between data packets and increases throughput. The overhead is reduced to release capacity for transmitting data.

However, the increasing length of the frames increases the likelihood that radio interference will make it necessary to retransmit packets. Furthermore, other stations must wait longer for a channel to become available, and they have to collect several data packets for transmission all at once. By default, frame aggregation is activated. This makes sense if you want to increase the throughput for this station and others on this medium are not important. .

Telnet path:/Setup/Interfaces/WLAN/Transmission/Send-Aggregates

Possible values:

- Yes
- No

Default: Yes**2.23.20.2.16 Min. HT MCS**

MCS (Modulation Coding Scheme) automatically adapts transmission speeds. In the 802.11n standard it defines a number of variables that specify the number of spatial streams, the modulation and the data rate of each data stream, among others.

In the default setting the station automatically selects the best possible MCS for each stream, based on the conditions of each channel. If interference arises during operation and the channel conditions change, for example due to movement of the transmitter or signal deterioration, the MCS is dynamically adjusted to suit the new conditions.

You also have the option of setting the MCS to a constant value. This may facilitate testing, or it may be useful in particularly dynamic environments to avoid unnecessary parameterizing where an optimal value simply cannot be expected.

Telnet path:/Setup/Interfaces/WLAN/Transmission/Min.-HT-MCS**Possible values:**

- Automatic
- MCS 0/8
- MCS 1/9
- MCS 2/10
- MCS 3/11
- MCS 4/12
- MCS 5/13
- MCS 6/14
- MCS 7/15

Default: Automatic**2.23.20.2.17 Max. HT MCS**

MCS (Modulation Coding Scheme) automatically adapts transmission speeds. In the 802.11n standard it defines a number of variables that specify the number of spatial streams, the modulation and the data rate of each data stream, among others.

In the default setting the station automatically selects the best possible MCS for each stream, based on the conditions of each channel. If interference arises during operation and the channel conditions change, for example due to movement of the transmitter or signal deterioration, the MCS is dynamically adjusted to suit the new conditions.

You also have the option of setting the MCS to a constant value. This may facilitate testing, or it may be useful in particularly dynamic environments to avoid unnecessary parameterizing where an optimal value simply cannot be expected.

Telnet path:/Setup/Interfaces/WLAN/Transmission/Max.-HT-MCS**Possible values:**

- Automatic
- MCS 0/8
- MCS 1/9
- MCS 2/10
- MCS 3/11
- MCS 4/12

- MCS 5/13
- MCS 6/14
- MCS 7/15

Default: Automatic

2.23.20.2.18 Min. spatial streams

Spatial streams add a third dimension to the frequency-time matrix available to radio communications: Space. An array of multiple antennas provides the receiver with spatial information that enables the use of spatial multiplexing, a technique that increases transmission rates. This involves the parallel transmission of multiple data streams over a single radio channel. Multiple transmitter and receiver antennas can be operated at the same time. This leads to a significant increase in the performance of the radio system.

The default setting allows settings for the spatial streams to be made automatically to make optimal use of the radio system.

You also have the option of limiting the spatial streams to one or two to reduce the load on the radio system.

Telnet path:/Setup/Interfaces/WLAN/Transmission/Min.-Spatial-Streams

Possible values:

- Automatic
- One
- Two

Default: Automatic

2.23.20.2.19 EAPOL rate

Set the data rate for EAPOL transmission here.

Telnet path:/Setup/Interfaces/WLAN/Transmission

Possible values:

- Like-Data

Select from the available speeds:

- 1M
- 2M
- 5.5M
- 11M
- 6M
- 9M
- 12M
- 18M
- 24M
- 36M
- 48M
- 54M
- T-12M
- T-18M
- T-24M
- T-36M
- T-48M
- T-72M

- T-96M
- T-108M

Default: Like-Data

Special values: Like-Data transmits the EAPOL data at the same rate as payload data.

2.23.20.2.20 Max. aggregated packets

This parameter defines the maximum number of packets that may be packed into an aggregate. Aggregation in IEEE 802.11n WLAN transmissions combines multiple data packets to a large package, so reducing the overhead and speeding up the transmission.

Telnet path: /Setup/Interfaces/WLAN/Transmission/Max.-Aggr.-Packet-Number

Possible values:

- Max. 2 numerical characters

Default: 16

2.23.20.2.21 ProbeRsp retries

This is the number of hard retries for probe responses, i.e. messages sent from an access point in answer to a probe request from a client.

Telnet path: /Setup/Interfaces/WLAN/Transmission

Possible values:

- 0 to 15

Default: 3

 Values larger than 15 are taken as 15.

2.23.20.2.22 Receive-Aggregates

With this setting you allow or prohibit the reception of aggregated (compiled) data packets (frames) on this interface.

Frame aggregation is used to combine several data packets (frames) into one large packet and transmit them together. This method serves to reduce the packet overhead, and the data throughput increases.

Frame aggregation is not suitable when working with mobile receivers or time-critical data transmissions such as voice over IP.

SNMP ID:

2.23.20.2.22

Telnet path:

Setup > Interfaces > WLAN > Transmission

Possible values:

No
Yes

Default:

Yes

2.23.20.2.23 Use STBC

Here you activate the use of STBC for data transfer per logical network (SSID).

 If the WLAN chipset does not support STBC, you cannot set this value to **Yes**.

SNMP ID:

2.23.20.2.23

Telnet path:**Setup > Interfaces > WLAN > Transmission****Possible values:**

Yes

No

Default:

Yes (If the WLAN chipset supports STBC)

No (If the WLAN chipset does not support STBC)

2.23.20.2.24 Use LDPC

Here you activate the use of LDPC for data transfer per logical network (SSID).

 If the WLAN chipset does not support STBC, you cannot set this value to **Yes**.

SNMP ID:

2.23.20.2.24

Telnet path:**Setup > Interfaces > WLAN > Transmission****Possible values:**

Yes

No

Default:

Yes (If the WLAN chipset supports STBC)

No (If the WLAN chipset does not support STBC)

2.23.20.2.25 Convert to unicast

Using this parameter you specify which type of data packets, which have been sent as a broadcast, are automatically converted into unicast by the device within a WLAN network.

SNMP ID:

2.23.20.2.25

Telnet path:**Setup > Interfaces > WLAN > Transmission****Possible values:**

- No selection
- **DHCP**: Response messages sent from the DHCP server as a broadcast are converted into unicasts. This form of message delivery is more reliable because data packets sent as a broadcast have no specific

addressee, they do not use optimized transmission techniques such as ARP spoofing or IGMP/MLD snooping, and they have a low data rate.

Default:

DHCP

2.23.20.3 Encryption

This is where you can make encryption settings for each logical wireless LAN network (MultiSSID).

Telnet path: /Setup/Interfaces/WLAN

2.23.20.3.1 Interface

Opens the WPA/WEP settings for the logical WLAN networks.

Telnet path: /Setup/Interfaces/WLAN/Encryption

Possible values:

- Select from the available logical WLAN interfaces.

2.23.20.3.2 Encryption

Activates the encryption for this logical WLAN.

Telnet path: /Setup/Interfaces/WLAN/Encryption

Possible values:

- On
- Off

Default: On

2.23.20.3.3 Default key

Selects the WEP key to be used for encrypting packets sent by this logical WLAN.

Telnet path: /Setup/Interfaces/WLAN/Encryption

Possible values:

- Key 1
- Key 2
- Key 3
- Key 4

Default: Key 1

 Key 1 only applies for the current logical WLAN, keys 2 to 4 are valid as group keys for all logical WLANs with the same physical interface.

2.23.20.3.4 Method

Selects the encryption method and, for WEP, the key length that is to be used to encrypt data packets on the WLAN.

Telnet path: /Setup/Interfaces/WLAN/Encryption

Possible values:

- 802-11i-(WPA)-PSK
- WEP-156 (128 bit)

- WEP-128 (104 bit)
- WEP-64 (40 bit)
- 802-11i-(WPA)-802.1x
- WEP-156 (128 bit)-802.1x
- WEP-128 (104 bit)-802.1x
- WEP-64 (40 bit)-802.1x

Default: WEP-128 (104 bit)

 Please consider that not all wireless cards support all encryption methods.

2.23.20.3.5 Authentication

The encryption method can be selected when using WEP.

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- Open system: For the Open System authentication procedure, all clients are accepted. There is no authentication. The WLAN clients must always transmit correctly encrypted data for this to be forwarded by the base station.
- Shared key: With the shared key authentication procedure, authentication requires that the WLAN client initially responds by returning a correctly encrypted data packet. Only if this succeeds will the encrypted data from the client be accepted and forwarded. However, this method presents an attacker with a data packet in its encrypted and unencrypted form, so providing the basis for an attack on the key itself.

Default: Open system

 For reasons of security we recommend that you use the open system authentication procedure.

2.23.20.3.6 Key

You can enter the key or passphrase as an ASCII character string. An option for WEP is to enter a hexadecimal number by adding a leading '0x'.

The following lengths result for the formats used:

Method, Length

WPA-PSK, 8 to 63 ASCII characters

WEP152 (128 bit), 16 ASCII or 32 HEX characters

WEP128 (104 bit), 13 ASCII or 26 HEX characters

WEP64 (40 bit), 5 ASCII or 10 HEX characters

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- ASCII character string or hexadecimal number

Default: Blank

 When using 802.1x in AP mode, the name entered here refers to the RADIUS server.

 When using 802.1x in client mode and PEAP or TTLS as the client EAP method, the credentials (user:password) are saved here.

2.23.20.3.9 WPA version

Data in this logical WLAN will be encrypted with this WPA version.

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- WPA1
- WPA2
- WPA1/2

Default: WPA1/2

2.23.20.3.10 Client EAP method

LANCOM wireless routers and access points in WLAN client operating mode can authenticate themselves to another access point using EAP/802.1X. To activate the EAP/802.1X authentication in client mode, the client EAP method is selected as the encryption method for the first logical WLAN network.

Please note that the selected client EAP method must match the settings of the access point that this LANCOM access point is attempting to register with.

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- TLS
- TTLS/PAP
- TTLS/CHAP
- TTLS/MSCHAP
- TTLS/MSCHAPv2
- TTLS/MD5
- PEAP/MSCHAPv2

Default: TLS



In addition to setting the client EAP method, also be sure to observe the corresponding setting for the WLAN client operation mode.

2.23.20.3.11 WPA rekeying cycle

Defines how often a WPA key handshake will be retried during an existing connection (rekeying)

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- 0 to 4294967295 s

Default: 0

Special values: 0 = Rekeying deactivated

2.23.1.1.27 WPA1 session key types

Here you select the methods which are to be made available for generating WPA session keys and group key. There is a choice of the Temporal Key Integrity Protocol (TKIP), the Advanced Encryption Standard (AES), or both.

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- TKIP

- AES
- TKIP/AES

Default: TKIP

2.23.20.3.13 WPA2 session key types

Here you select the methods which are to be made available for generating WPA session keys and group key. There is a choice of the Temporal Key Integrity Protocol (TKIP), the Advanced Encryption Standard (AES), or both.

Telnet path:/Setup/Interfaces/WLAN/Encryption

Possible values:

- TKIP
- AES
- TKIP/AES

Default: AES

2.23.20.3.15 PMK caching

Enables PMK caching in WLAN client mode

SNMP ID:

2.23.20.3.15

Telnet path:

Setup > Interfaces > WLAN > Encryption

Possible values:

Yes
No

Default:

No

2.23.20.3.16 Pre-authentication

Enables pre-authentication support for the corresponding WLAN.

 In order to be able to use pre-authentication, PMK caching must be enabled.

SNMP ID:

2.23.20.3.16

Telnet path:

Setup > Interfaces > WLAN > Encryption

Possible values:

Yes
No

Default:

No

2.23.20.4 Group encryption keys

This is where you can specify for each physical wireless LAN interface those WEP group keys 2 to 4, that are used there by the logical wireless LAN networks in common.

Telnet path: /Setup/Interfaces/WLAN

 If 802.1x/EAP is activated, the group encryption keys are used by 802.1x/EAP and are thus no longer available for WEP encryption.

2.23.20.4.1 Interface

Opens the WEP group keys for the physical WLAN interface.

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- Select from the available physical WLAN interfaces.

2.23.20.4.3 Key-2

WEP group encryption key 2

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- You can enter the key as an ASCII character string or as a hexadecimal number (with a leading '0x')
- The following lengths result for the formats used:
 - Method, Length
 - WEP152 (128 bit), 16 ASCII or 32 HEX characters
 - WEP128 (104 bit), 13 ASCII or 26 HEX characters
 - WEP64 (40 bit), 5 ASCII or 10 HEX characters

Default: Blank

2.23.20.4.4 Key-3

WEP group encryption key 3

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- You can enter the key as an ASCII character string or as a hexadecimal number (with a leading '0x')
- The following lengths result for the formats used:
 - Method, Length
 - WEP152 (128 bit), 16 ASCII or 32 HEX characters
 - WEP128 (104 bit), 13 ASCII or 26 HEX characters
 - WEP64 (40 bit), 5 ASCII or 10 HEX characters

Default: Blank

2.23.20.4.5 Key-4

WEP group encryption key 4

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- You can enter the key as an ASCII character string or as a hexadecimal number (with a leading '0x')

- The following lengths result for the formats used:
- Method, Length
- WEP152 (128 bit), 16 ASCII or 32 HEX characters
- WEP128 (104 bit), 13 ASCII or 26 HEX characters
- WEP64 (40 bit), 5 ASCII or 10 HEX characters

Default: Blank

2.23.20.4.7 Key type 2

Select the key length to be used for the WEP group encryption key 2.

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- WEP-156 (128 bit)
- WEP-128 (104 bit)
- WEP-64 (40 bit)

Default: WEP-64 (40 bit)

2.23.20.4.8 Key type 3

Select the key length to be used for the WEP group encryption key 3.

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- WEP-156 (128 bit)
- WEP-128 (104 bit)
- WEP-64 (40 bit)

Default: WEP-64 (40 bit)

2.23.20.4.9 Key type 4

Select the key length to be used for the WEP group encryption key 4.

Telnet path:/Setup/Interfaces/WLAN/Group-Encryption-Keys

Possible values:

- WEP-156 (128 bit)
- WEP-128 (104 bit)
- WEP-64 (40 bit)

Default: WEP-64 (40 bit)

2.23.20.5 Interpoint settings

Here you can specify important parameters for the communication between and the behavior of base stations.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.5.1 Interface

Opens the settings for the physical WLAN interface.

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- Select from the available physical WLAN interfaces.

2.23.20.5.2 Enable

The behavior of an access point when exchanging data with other access points is defined in the "Point-to-point operation mode".

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- Off: The access point only communicates with mobile clients
- On: The access point can communicate with other access points and with mobile clients
- Exclusive: The access point only communicates with other base stations

Default: Off

2.23.20.5.9 Isolated mode

Allows or prohibits the transmission of packets between P2P links on the same WLAN interface (compatibility setting for LCOS versions prior to version 2.70)

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- On
- Off

Default: Off

2.23.20.5.10 Channel selection scheme

In the 5-GHz band, the automatic search for vacant WLAN channels can lead to several simultaneous test transmissions from multiple access points, with the result that they do not find each other. This stalemate situation can be avoided with the appropriate "Channel selection scheme".

Thus it is recommended for the 5GHz band that one central access point should be configured as 'Master' and all other point-to-point partners should be configured as 'Slave'. In the 2.4GHz band, too, this setting simplifies the establishment of point-to-point connections if the automatic channel search is activated.

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- Master: This access point makes the decisions when selecting a free WLAN channel.
- Slave: All other access points will keep searching until they find a transmitting Master.

Default: Master



It is imperative that the channel selection scheme is configured correctly if the point-to-point connections are to be encrypted with 802.11i/WPA.

2.23.20.5.11 Link-loss timeout

Time in seconds after which a (DFS) slave considers the link to the master to be lost if no beacons have been received.

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- 0 to 4294967295 seconds

Default: 4

2.23.20.5.12 Key handshake role

Specifies whether this party should act as authenticator or supplicant when WPA is being used. In default mode, the authenticator is the master of a link, in auto mode the authenticator is the device with the lower MAC address

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- Default
- Auto

Default: Default

2.23.20.5.13 Local Name

For this physical WLAN interface, enter a name which is unique in the WLAN: This name can be used by other WLAN devices to connect this base station over point-to-point.

You can leave this field empty if the device has only one WLAN interface and already has a device name which is unique in the WLAN, or if the other base stations identify this interface by means of the WLAN adapter's MAC address.

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Peers

Possible values:

- Max. 64 characters

Default: Blank

2.23.20.6 Client modes

If you operate your LANCOM wireless device in client mode, you can make detailed settings on its behavior here.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.6.1 Interface

Opens the settings for the physical WLAN interface.

Telnet path:/Setup/Interfaces/WLAN/Client-Modes

Possible values:

- Select from the available physical WLAN interfaces.

2.23.20.6.3 Connection keepalive

This option ensures that the client station keeps the connection to the access point alive even if the connected devices are not exchanging any data packets. If this option is disabled, the client station is automatically logged off the wireless network if no packets are transferred over the WLAN connection within a specified time.

Telnet path:/Setup/Interfaces/WLAN/Client-Modes

Possible values:

- On
- Off

Default: On

2.23.20.6.4 Network types

'Network types' specifies whether the station can only register with infrastructure networks or with adhoc networks as well.

Telnet path:/Setup/Interfaces/WLAN/Client-Modes

Possible values:

- Infrastructure
- Adhoc

Default: Infrastructure**2.23.20.6.5 Scan bands**

This defines whether the client station scans just the 2.4 GHz, just the 5 GHz, or all of the available bands for access points.

Telnet path: /Setup/Interfaces/WLAN/Client-Modes**Possible values:**

- 2.4/5 GHz
- 2.4 GHz
- 5 GHz

Default: 2.4/5 GHz**2.23.20.6.6 Preferred BSS**

If the client station is to log onto one particular access point only, the MAC address of the WLAN card in this access point can be entered here.

Telnet path: /Setup/Interfaces/WLAN/Client-Modes**Possible values:**

- Valid MAC address

Default: Blank**2.23.20.6.7 Address adaptation**

In client mode, the client station normally replaces the MAC addresses in data packets from the devices connected to it with its own MAC address. The access point at the other end of the connection only ever "sees" the MAC address of the client station, not the MAC address of the computer(s) connected to it.

In some installations it may be desirable for the MAC address of a computer to be transmitted to the access point and not the MAC address of the client station. The option 'Address adaptation' prevents the MAC address from being replaced by the client station. Data packets are transferred with their original MAC addresses.

Telnet path: /Setup/Interfaces/WLAN/Client-Modes**Possible values:**

- On
- Off

Default: Off

 Address adaptation only works when just one computer is connected to the client station.

2.23.20.6.8 Client-bridge support

Whereas address adaptation allows only the MAC address of a single attached device to be visible to the access point, client-bridge support provides transparency in that all MAC addresses of the LAN stations behind the client stations are transferred to the access point.

Telnet path: /Setup/Interfaces/WLAN/Client-Modes

Possible values:

- On
- Off

Default: Off**2.23.20.6.9 Tx limit**

Bandwidth restriction for registering WLAN clients.

A client communicates its own settings to the base station when logging in. The base station uses these values to set the minimum bandwidth.

Telnet path:/Setup/Interfaces/WLAN/Client-Modes**Possible values:**

- 0 to 4294967296 (2^{32})

Default: 0**Special values:** 0: No limit

 The significance of the Rx and Tx values depends on the device's operating mode. In this case, as an access point, Rx stands for "Send data" and Tx stands for "Receive data".

2.23.20.6.10 Rx limit

Bandwidth restriction for registering WLAN clients.

A client communicates its own settings to the base station when logging in. The base station uses these values to set the minimum bandwidth.

Telnet path:/Setup/Interfaces/WLAN/Client-Modes**Possible values:**

- 0 to 4294967296 (2^{32})

Default: 0**Special values:** 0: No limit

 The significance of the Rx and Tx values depends on the device's operating mode. In this case, as an access point, Rx stands for "Send data" and Tx stands for "Receive data".

2.23.20.6.12 Selection preference

Here you select how this interface is to be used.

Telnet path:/Setup/Interfaces/WLAN/Client-Modes/WLAN-1**Possible values:**

- Signal strength: Selects the profile for the WLAN offering the strongest signal. This setting causes the WLAN module in client mode to automatically switch to a different WLAN as soon as it offers a stronger signal.
- Profile: Selects the profile for available WLANs in the order that they have been defined (WLAN index, e.g. WLAN-1, WLAN-2, etc.), even if another WLAN offers a stronger signal. In this setting, the WLAN module in client mode automatically switches to a different WLAN as soon as a WLAN with a lower WLAN index is detected (irrespective of signal strengths).

Default: Signal strength

2.23.20.7 Operational settings

In the operational settings you can set basic parameters for operating your WLAN interface.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.7.1 Interface

Opens the settings for the physical WLAN interface.

Telnet path:/Setup/Interfaces/WLAN/Operational

Possible values:

- WLAN-1
- WLAN-2

2.23.20.7.2 Operating

Switches the physical WLAN interface on or off separately.

Telnet path:/Setup/Interfaces/WLAN/Operational

Possible values:

- On
- Off

Default: On

2.23.20.7.3 Operation mode

All LANCOM wireless devices can be operated in various modes.

SNMP ID:

2.23.20.7.3

Telnet path:

Setup > Interfaces > WLAN > Operational

Possible values:

Access Point: As a base station (access point), the device establishes the link to a wired LAN for the WLAN clients.

Station: As a station (client), the device itself locates the connection to another access point and attempts to register with a wireless network. In this case the device serves to connect a wired device to a base station over a point-to-point link.

Managed AP: As a managed access point, the device searches for a central WLAN controller from which it can obtain a configuration.

Probe: In 'Probe' mode, the spectral scan uses the radio module of the access point. The device cannot transmit or receive data in this mode. On startup of the spectral scan, the device automatically switches to 'Probe' mode so that this setting need not be configured manually.

Default:

LANCOM Wireless Router: Access Point

LANCOM Access Points: Managed AP

2.23.20.7.4 Link LED function

When setting up point-to-point connections or operating the device as a WLAN client, the best possible positioning of the antennas is facilitated if the signal strength can be recognized at different positions. The WLAN link LED can be used for displaying the signal quality during the set-up phase. In the corresponding operating mode, the WLAN link LED blinks faster with better reception quality according to the antenna position.

Telnet path: /Setup/Interfaces/WLAN/Operational

Possible values:

- Number of connections: In this operation mode, the LED uses "inverse flashing" in order to display the number of WLAN clients that are logged on to this access point as clients. There is a short pause after the number of flashes for each client. Select this operation mode when you are operating the LANCOM wireless router in access point mode.
- Client signal strength: In this operation mode, this LED displays the signal strength of the access point with which the LANCOM wireless router has registered itself as a client. The faster the LED blinks, the better the signal. Select this operation mode only when you are operating the LANCOM wireless router in client mode.
- P2P1 to P2P6 signal strength: In this operation mode, the LED displays the signal strength of respective P2P partner with which the LANCOM wireless router forms a P2P path. The faster the LED blinks, the better the signal.

Default: Number of connections

2.23.20.7.5 Broken link detection

When an access point is not connected to the cabled LAN, it is normally unable to fulfill its primary task, namely the authorization of WLAN clients for access to the LAN. The broken-link detection function allows a device's WLAN to be disabled if the connection to the LAN should fail. Clients associated with that access point are then able to login to a different one (even if it has a weaker signal).

Until LCOS version 7.80, broken-link detection always applied to LAN-1, even if the device was equipped with multiple LAN interfaces. Furthermore, deactivation affected all of the WLAN modules in the device. With LCOS version 8.00, broken-link detection could be bound to a specific LAN interface.

This function allows the WLAN modules in a device to be disabled if the allocated LAN interface has no connection to the LAN.

Telnet path: /Setup/Interfaces/WLAN/Operational/Broken-Link-Detection

Possible values:

- No: Broken-link detection is disabled.
- LAN-1 to LAN-n (depending on the LAN interfaces available in the device). All of the WLAN modules in the device will be deactivated if the LAN interface set here should lose its connection to the cabled LAN.

Default:

- No

 The interface descriptors LAN-1 to LAN-n stand for the logical LAN interfaces. To make use of this function, the physical Ethernet ports on the device must be set with the corresponding values LAN-1 to LAN-n.

 Broken-link detection can also be used for WLAN devices operating in WLAN client mode. With broken-link detection activated, the WLAN modules of a WLAN client are only activated when a connection exists between the relevant LAN interfaces and the cabled LAN.

2.23.20.8 Radio settings

Here you can adjust settings that regulate the physical transmission and reception over your WLAN interface.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.8.1 Interface

Opens the settings for the physical WLAN interface.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Select from the available physical WLAN interfaces.

2.23.20.8.2 Tx power reduction

In contrast to antenna gain, the entry in the field 'Tx power reduction' causes a static reduction in the power by the value entered, and ignores the other parameters.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- 0 to 999 dB

Default: 0

 The transmission power reduction simply reduces the emitted power. The reception sensitivity (reception antenna gain) remains unaffected. This option is useful, for example, where large distances have to be bridged by radio when using shorter cables. The reception antenna gain can be increased without exceeding the legal limits on transmission power. This leads to an improvement in the maximum possible range and, in particular, the highest possible data transfer rates.

2.23.20.8.3 5GHz mode

Using two neighboring, vacant channels for wireless transmissions can increase the transfer speeds in Turbo Mode up to 108 Mbps.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Normal (54 Mbps mode)
- 108 Mbps (Turbo mode)

Default: Normal (802.11a) or 802.11a/n mixed (with 11n devices)

 This setting is only available for devices that support DFS2 or DFS3.

2.23.20.8.4 Maximum distance

Large distances between transmitter and receiver give rise to increasing delays in the runtime for the data packets. If a certain limit is exceeded, the responses to transmitted packets no longer arrive within a given time limit. The entry for maximum distance increases the wait time for the responses. This distance is converted into a delay as required by the data packets for wireless communications.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- 0 to 65535 km

Default: 0

2.23.20.8.6 Radio band

Selecting the frequency band determines whether the wireless LAN adapter operates in the 2.4 GHz or 5 GHz band, which in turn determines the available radio channels.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- 2.4 GHz
- 5 GHz

Default: 2.4 GHz

2.23.20.8.7 Subbands

In the 5-GHz band, it is also possible to select a subband, which is linked to certain radio channels and maximum transmission powers.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Depends on the frequency band selected

Default: Band-1

2.23.20.8.8 Radio channel

The radio channel selects a portion of the conceivable frequency band for data transfer.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Depend on the selected frequency band and the selected country.

Default: 11

 In the 2.4-GHz band, two separate wireless networks must be at least three channels apart to avoid interference.

2.23.20.8.9 2.4-GHz mode

In the 2.4 GHz band, there are two different wireless standards: The IEEE 802.11b standard with a transmission speed of up to 11 Mbps and the IEEE 802.11g standard offering up to 54 Mbps. If 2.4 GHz is selected as the operating frequency, the transmission speed can be selected in addition.

The 802.11g/b compatibility mode offers the highest possible speeds and yet also offers the 802.11b standard so that slower clients are not excluded. In this mode, the WLAN card in the access point principally works with the faster standard and falls back on the slower mode should a client of this type log into the WLAN. In the '2Mbit compatible' mode, the access point supports older 802.11b cards with a maximum transmission speed of 2 Mbps.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- 802.11g/b mixed
- 802.11g/b 2-Mbit compatible
- 802.11b (11 Mbit)
- 802.11g (54 Mbit)
- 802.11g (108 Mbit)

Default: 802.11b/g mixed or 802.11b/g/n mixed (with 11n devices)

 Please observe that clients supporting only the slower standards may not be able to register with the WLAN if the speeds set here are higher.

2.23.20.8.10 AP density

The more access points there are in a given area, the more the reception areas of the antennae intersect. The setting 'Access point density' can be used to reduce the reception sensitivity of the antenna.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Low
- Medium
- High
- Minicell
- Microcell

Default: Low

2.23.20.8.12 Antenna gain

This item allows you to specify the antenna gain factor (in dBi) minus attenuation of the cable and (if applicable) lightning protection. Based on this, and depending on the country where the system is operated and the frequency band, the base station calculates the maximum permitted transmission power.

Transmission power can be reduced to a minimum of 0.5 dBm in the 2.4-GHz band and 6.5 dBm in the 5-GHz band. This limits the maximum value that can be added to 17.5 dBi in the 2.4-GHz band and 11.5 dBi in the 5-GHz band. Please ensure that your combination of antenna, cable and lightning-protection complies with the legal requirements of the country where the system is operated.

The receiver's sensitivity is unaffected by this.

Example: AirLancer O-18a: Antenna gain: 18dBi, cable attenuation: 4dB --> Value to be entered = 18dBi - 4dB = 14dBi.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values: Max. 4 characters

Default: 3

 The minimum of 6.5 dBm only applies to legacy abg radio modules with G-mode wireless LAN.

 The current transmission power is displayed by the device's web interface or by telnet under 'Status->WLAN statistics->WLAN parameters->Transmission power' or with LANconfig under 'System information->WLAN card->Transmission power'.

2.23.20.8.13 Channel list

This field specifies the subset of channels to be used for automatic channel selection or in client mode.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Comma-separated list of individual numbers or ranges.

Default: Blank

2.23.20.8.14 Background scan

In order to identify other access points within the device's local radio range, the LANCOM Wireless router can record the beacons received (management frames) and store them in the scan table. Since this recording occurs in the background in addition to the access points' "normal" radio activity, it is called a "background scan".

If a value is entered here, the LANCOM wireless router searches the active band for currently unused frequencies to find available access points. This value is the time interval between search cycles.

LANCOM wireless routers in access point mode normally use the background scan function for rogue AP detection. This scan interval should correspond to the time span within which rogue access points should be recognized, e.g. 1 hour.

Conversely, LANCOM wireless routers in client mode generally use the background scan function to improve mobile WLAN client roaming. In order to achieve fast roaming, the scan time is limited here, for example, to 260 seconds.

Telnet path: /Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- 0 to 4294967295

Default: 0

Special values: 0: When the background scan time is '0' the background scanning function is deactivated.

2.23.20.8.15 DFS rescan hours

In some countries, the use of the DFS method for automatic channel selection is a legal requirement.

With the DFS method (Dynamic Frequency Selection) an unused frequency is automatically selected, for example, to avoid interference from radar systems or to distribute WLAN devices as evenly as possible over the entire frequency band. After switching on or booting, the device randomly selects one of the available channels (e.g. based on the country settings). It checks whether radar signals exist on this channel, and whether it is already in use by another WLAN. This scan procedure repeats until a channel is found that is free of radar signals and which has the lowest possible number of other networks. The selected channel is then monitored for radar signals for a further 60 seconds. For this reason, data traffic may be interrupted for a period of 60 seconds while the frequencies are scanned for a free channel.

To avoid having the 60 second pause at an inconvenient time, you can set the time of the scan and thus the database update. To define the time you can use the options provided by cron commands, e.g. '1,6,13' to force a DFS scan at 01:00h, 06:00h or 13:00h, or '0-23/4' for a DFS scan between 0:00h and 23:00h every 4 hours.

Telnet path: /Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Comma-separated list of hours

Default: Blank

 Forced DFS scans require that the device is set with the correct system time.

2.23.20.8.16 Allow 40MHz

The default setting automatically optimizes the value for bandwidth. If the momentary operating conditions allow, a bandwidth of 40MHz will be enabled, which is otherwise limited to 20MHz.

You also have the option of switching this mechanism off, so limiting the bandwidth to the narrower 20MHz.

The 802.11n standard specifies a channel bonding from 20MHz to 40MHz.

Telnet path: /Setup/Interfaces/WLAN/Radio-Settings/Allow-40MHz

2.23.20.8.17 Antenna mask

Antenna grouping can be configured in order to optimize the gain from spacial multiplexing. By default the system automatically selects the optimum grouping setting to match current conditions. You also have the possibility to set an antenna group with a user-defined combination of antennas. The setting has an affect on radiation and reception behavior of the radio system.

Telnet path: /Setup/Interfaces/WLAN/Radio-Settings/Antenna-Mask

Possible values:

- Auto

- Antenna-1
- Antenna-1+2
- Antenna-1+3
- Antenna-1+2+3

Default: Auto

2.23.20.8.18 Background scan unit

Unit for the definition of the background scan interval

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings

Possible values:

- Milliseconds
- Seconds
- Minutes
- Hours
- Days

Default: Seconds

2.23.20.8.19 Channel pairing

This value sets the channel pairs used by 11n devices in 40-MHz mode.

Telnet path:/Setup/Interfaces/WLAN/Radio-Settings/Channel-Pairing

Possible values:

- 11n-compliant: The device uses the channels as specified by 802.11n. Compared to the former proprietary channels used in Turbo Mode, the 40-MHz channels have shifted by 20 MHz.
- Legacy-turbo-friendly: Only useful in outdoor environments to avoid overlapping with other 11a paths in turbo mode.

Default: 11n-compliant

2.23.20.8.20 Preferred DFS scheme

All WLAN systems that have been put into operation since EN 301 893-V1.6 came into effect are required to use DFS4 in the 5GHz band.

Here you can select DFS2 (EN 301 893-V1.3), DFS3 (EN 301 893-V1.5) or DFS4 (EN 301 893-V1.6).

SNMP ID:

2.23.20.8.20

Telnet path:

Setup > Interfaces > WLAN > Radio-settings > Preferred-DFS-Scheme

Possible values:

EN 301 893-V1.3

EN 301 893-V1.5

EN 301 893-V1.6

Default:

EN 301 893-V1.6

-
- ⓘ When upgrading from a firmware version older than LCOS version 8.80 to an LCOS version 8.80 or higher, the existing setting of DFS3 (EN 301 893-V1.5) remains in effect.

2.23.20.8.21 CAC-Duration

Duration of the channel availability check. With this setting you specify how long (in seconds) a WLAN module operating DFS carries out the initial check of the channels before it selects a radio channel and starts with the data transfer.

- ⓘ The duration of the channel availability check is regulated by the appropriate standards (e.g. in Europe by the ETSI EN 301 893). Please observe the regulations valid for your country.

SNMP ID:

2.23.20.8.21

Telnet path:

Setup > Interfaces > WLAN > Radio-settings > CAC-Duration

Possible values:

0 to 4294967295

Default:

60

2.23.20.8.22 Force-40MHz

Option to force the device using 40 MHz bandwidth.

SNMP ID:

2.23.20.8.22

Telnet path:

Setup > Interfaces > WLAN > Radio-Settings > Force-40MHz

Possible values:

Yes

No

Default:

No

2.23.20.8.23 Adaptive noise immunity

A wireless LAN can be subjected to interference from various sources. Devices such as microwave ovens or cordless phones interfere with data transmission, and even the network devices themselves can emit interference and hinder communications. Each type of interference has its own characteristics. Adaptive noise immunity (ANI) enables the access point to use different error conditions to determine the best way to compensate for the interference. By automatically increasing noise immunity, the size of the radio cell can be reduced to mitigate the impact of interference on the data transfer.

The current values and any previous actions are to be found under **Status > WLAN > Noise-Immunity**.

SNMP ID:

2.23.20.8.23

Telnet path:**Setup > Interfaces > WLAN > Radio-settings****Possible values:**

No

Yes

Default:

Yes

2.23.20.8.25 Allow-PHY-Restarts

With this parameter, you specify whether the device allows PHY restarts in order to receive processable information despite overlapping signals.

SNMP ID:

2.23.20.8.25

Telnet path:**Setup > Interfaces > WLAN > Radio-settings****Possible values:****No**

This setting prohibits PHY restarts. The WLAN module discards the overlapping data packets and requests retransmission.

Yes

This setting allows PHY restarts. If two WLAN packets are received at the same time (overlap), the WLAN module processes the one with the stronger signal.

Default:

Yes

2.23.20.9 Performance

Here you can set the parameters that influence the performance of your WLAN interface.

Telnet path: /Setup/Interfaces/WLAN**2.23.20.9.1 Interface**

Opens the settings for the physical WLAN interface.

Telnet path:/Setup/Interfaces/WLAN/Performance**Possible values:**

- Select from the available physical WLAN interfaces.

2.23.20.9.2 Tx bursting

Enables/prevents packet bursting for increasing throughput. Bursting leads to less fairness on the medium.

Telnet path:/Setup/Interfaces/WLAN/Performance

Possible values:

- On
- Off

Default: Off**2.23.20.9.5 QoS**

With the extension to the 802.11 standard, 802.11e, Quality of Service can be provided for transfers via WLAN. Among others, 802.11e supports the prioritization of certain data-packet types. This extension is an important basis for the use of voice applications in WLANs (Voice over WLAN, VoWLAN). The WiFi alliance certifies products that support Quality of Service according to 802.11e, and refer to WMM (WiFi Multimedia, formerly known as WME or Wireless Multimedia Extension). WMM defines four categories (voice, video, best effort and background) which make up separate queues to be used for prioritization. The 802.11e standard sets priorities by referring to the VLAN tags or, in the absence of these, by the DiffServ fields of IP packets. Delay times (jitter) are kept below 2 milliseconds, a magnitude which is inaudible to the human ear. 802.11e controls access to the transfer medium with EDCF, the Enhanced Distributed Coordination Function.

Telnet path: /Setup/Interfaces/WLAN/Performance**Possible values:**

- On
- Off

Default: Off

Priorities can only be set if the WLAN client and the access point both support 802.11e or WMM, and also if the applications are able to mark the data packets with the corresponding priorities.

2.23.20.10 Beaconing

Roaming settings are only relevant in the base-station operating mode. The wireless LAN access point (WLAN AP) periodically transmits a radio signal (beacon) so that the clients can detect it or the logical wireless networks (SSIDs) that it provides.

Telnet path: /Setup/Interfaces/WLAN**2.23.20.10.1 Interface**

Opens the Expert settings for the physical WLAN interface.

Telnet path: /Setup/Interfaces/WLAN/Beaconing**Possible values:**

- Select from the available physical WLAN interfaces.

2.23.20.10.2 Beacon period

This value defines the time interval in μs between beacon transmission (1 μs corresponds to 1024 microseconds and is a measurement unit of the 802.11 standard. 1 μs is also known as a Timer Unit (TU)). Smaller values result in a shorter beacon timeout period for the client and enable quicker roaming in case of failure of an access point, but they also increase the WLAN overhead.

Telnet path: /Setup/Interfaces/WLAN/Beaconing**Possible values:**

- 20 to 65535 TU

Default: 100

2.23.20.10.3 DTIM period

This value defines the number of beacons which are collected before multicasts are broadcast. Higher values enable longer client sleep intervals, but worsen the latency times.

Telnet path: /Setup/Interfaces/WLAN/Beaconing

Possible values:

- 1 to 255

Default: 1

2.23.20.10.4 Beacon order

Beacon order refers to the order in which beacons are sent to the various WLAN networks. For example, if three logical WLAN networks are active and the beacon period is 100 K μ s, then the beacons will be sent to the three WLANs every 100 K μ s. Depending on the beacon order, the beacons are transmitted at times as follows

Telnet path: /Setup/Interfaces/WLAN/Beaconing

Possible values:

- **Cyclic:** In this mode the access point transmits the first beacon transmission at 0 K μ s to WLAN-1, followed by WLAN-2 and WLAN-3. For the second beacon transmission (100 K μ s) WLAN-2 is the first recipient, followed by WLAN-3 and then WLAN-1. For the third beacon transmission (200 K μ s) the order is WLAN-3, WLAN-1, WLAN-2. After this the sequence starts again.
- **Staggered:** In this mode, the beacons are not sent together at a particular time, rather they are divided across the available beacon periods. Beginning at 0 K μ s, WLAN-1 only is sent; after 33.3 K μ s WLAN-2, after 66.6 K μ s WLAN-3. At the start of a new beacon period, transmission starts again with WLAN-1.
- **Simple burst:** In this mode the access point always transmits the beacons for the WLAN networks in the same order. The first beacon transmission (0 K μ s) is WLAN-1, WLAN-2 and WLAN-3; the second transmission is in the same order, and so on.

Default: Cyclic



Some older WLANs are unable to process the quick succession of beacons which occur with simple burst. Consequently these clients often recognize the first beacons only and can only associate with this network. Staggered transmission of beacons produces better results but increases load on the access point's processor. Cyclic transmission proves to be a good compromise as all networks are transmitted first in turn.

2.23.20.11 Roaming

Roaming settings are only relevant in the client operating mode. They regulate the way that the client switches between multiple base stations, where available.

Telnet path: /Setup/Interfaces/WLAN

2.23.20.11.1 Interface

Opens the Expert settings for the physical WLAN interface.

Telnet path: /Setup/Interfaces/WLAN/Roaming

Possible values:

- Select from the available physical WLAN interfaces.

2.23.20.11.2 Beacon miss threshold

The beacon loss threshold defines how many access-point beacons can be missed before a registered client starts searching again.

Higher values will delay the recognition of an interrupted connection, so a longer time period will pass before the connection is re-established.

The lower the value set here, the sooner a potential interruption to the connection will be recognized; the client can start searching for an alternative access point sooner.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 99%

Default: 4

 Values which are too small may cause the client to detect lost connections more often than necessary.

2.23.20.11.3 Roaming threshold

This value is the percentage difference in signal strength between access points above which the client will switch to the stronger access point.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 99%

Default: 15

 Other contexts require the value of signal strengths in dB. The following conversion applies:

64dB - 100%

32dB - 50%

0dB - 0%

2.23.20.11.4 No roaming threshold

This threshold refers to the field strength in percent. Field strengths exceeding the value set here are considered to be so good that no switching to another access point will take place.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 99%

Default: 45

2.23.20.11.5 Force roaming threshold

This threshold refers to the field strength in percent. Field strengths below the value set here are considered to be so poor that a switch to another access point is required.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 99%

Default: 12

2.23.20.11.6 Soft roaming

This option enables a client to use scan information to roam to a stronger access point (soft roaming). Roaming due to connection loss (hard roaming) is unaffected by this. The roaming threshold values only take effect when soft roaming is activated.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- On
- Off

Default: On

2.23.20.11.7 Connect threshold

This value defines field strength in percent defining the minimum that an access point has to show for a client to attempt to associate with it.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 99%

Default: 0

2.23.20.11.8 Connect hold threshold

This threshold defines field strength in percent. A connection to an access point with field strength below this value is considered as lost.

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 99%

Default: 0

2.23.20.11.9 Min. connect signal level

Similar to the connection threshold, but specified as absolute signal strength

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to -128 dBm

Default: 0

2.23.20.11.10 Min. connect hold signal level

Similar to the connection hold threshold, but specified as absolute signal strength

Telnet path:/Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to -128 dBm

Default: 0

2.23.20.11.11 Block time

If your device is operating as a WLAN client in an environment with multiple WLAN access points all with the same SSID, you can define a time period during which the WLAN client will avoid associating with a particular access point after receiving an "association-reject" from it.

Telnet path: /Setup/Interfaces/WLAN/Roaming

Possible values:

- 0 to 4294967295 seconds
- Maximum 10 characters

Default:

- 0

2.23.20.12 Interpoint peers

Here you enter the wireless base stations that are to be networked via the point-to-point connection.

SNMP ID: 223.20.12

Telnet path: /Setup/Interfaces/WLAN

2.23.20.12.1 Interface

Opens settings for the point-to-point peers.

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Settings

Possible values:

- Select from the available point-to-point connections.

2.23.20.12.2 Recognize by

Here you select the characteristics to be used to identify the P2P peer.

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Settings

Possible values:

- **MAC address:** Select this option if the devices are to recognize P2P partners by their MAC address. In this case, fill-out the 'MAC address' with the WLAN MAC address of the physical WLAN interface of the P2P partner.
- **Name:** Select this option if the devices are to recognize P2P partners by their peer name. In this case, fill-out the 'Peer name' with the device name of the P2P peer or, alternatively, the 'Peer name' defined in the physical settings.
- **Serial autoconfig:** Use this setting if the P2P peers are to exchange their MAC addresses via a serial connection.

Default: MAC address

2.23.20.12.3 MAC address

MAC address of the P2P remote station

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Settings

Possible values:

- Valid MAC address

Default: Blank

 If you work with detection by MAC address, enter the MAC address of the WLAN adapter here and not that of the device itself.

2.23.20.12.4 Peer name

Station name of the P2P remote station

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Settings

Possible values:

- Select from the list of defined peers.

Default: Blank

2.23.20.12.5 Operating

Activates or deactivates this point-to-point channel.

Telnet path:/Setup/Interfaces/WLAN/Interpoint-Settings

Possible values:

- On
- Off

Default: Off

2.23.20.12.6 Tx-Limit

With this setting you limit the bandwidth of the uplink (in kbps) for the configured point-to-point link. The value 0 disables the limit (unlimited bandwidth).

SNMP ID:

2.23.20.12.6

Telnet path:

Setup > Interfaces > WLAN > Interpoint-Peers

Possible values:

0 to 4294967295

Default:

0

2.23.20.12.7 Rx-Limit

With this setting you limit the bandwidth of the downlink (in kbps) for the configured point-to-point link. The value 0 disables the limit (unlimited bandwidth).

SNMP ID:

2.23.20.12.7

Telnet path:

Setup > Interfaces > WLAN > Interpoint-Peers

Possible values:

0 to 4294967295

Default:

0

2.23.20.12.9 Connect-Threshold

A WLAN interface can manage point-to-point links to more than one remote station, and each of these connections can have a different "nominal" signal strength.

- The **Connect-Threshold** defines the beacon signal strength with which the remote site must be received in order to establish the point-to-point link.
- The **Connect-Hold-Threshold** defines the beacon signal strength with which the remote site must be received in order to keep the point-to-point link.

Both values represent the necessary signal-to-noise ratio (SNR) in percentage. The purpose of the two different values is to establish a hysteresis which avoids connection state flatter. Fast connection state changes would otherwise lead to instability, for example, in the topology decisions of the spanning-tree algorithm.

 The **Connect-Hold-Threshold** must be lower than the **Connect-Threshold**. The value 0 disables the corresponding limits.

SNMP ID:

2.23.20.12.9

Telnet path:

Setup > Interfaces > WLAN > Interpoint-Peers

Possible values:

0 to 255

Default:

0

2.23.20.12.10 Connect-Hold-Threshold

A WLAN interface can manage point-to-point links to more than one remote station, and each of these connections can have a different "nominal" signal strength.

- The **Connect-Threshold** defines the beacon signal strength with which the remote site must be received in order to establish the point-to-point link.
- The **Connect-Hold-Threshold** defines the beacon signal strength with which the remote site must be received in order to keep the point-to-point link.

Both values represent the necessary signal-to-noise ratio (SNR) in percentage. The purpose of the two different values is to establish a hysteresis which avoids connection state flatter. Fast connection state changes would otherwise lead to instability, for example, in the topology decisions of the spanning-tree algorithm.

 The **Connect-Hold-Threshold** must be lower than the **Connect-Threshold**. The value 0 disables the corresponding limits.

SNMP ID:

2.23.20.12.10

Telnet path:

Setup > Interfaces > WLAN > Interpoint-Peers

Possible values:

0 to 255

Default:

0

2.23.20.13 Network alarm limits

This table contains the settings for the network alarm limits for the device's logical WLAN networks (SSIDs).

Telnet path: /Setup/Interfaces/WLAN

2.23.20.13.1 Interface

Select the logical WLAN network (SSID) for which you want to edit the network alarm limits.

Telnet path: /Setup/Interfaces/WLAN/Network-Alarm-Limits

Possible values:

- Choose from the SSIDs available in the device, e.g. WLAN-1, WLAN-2, etc.

2.23.20.13.2 Phy signal

The negative threshold value for the signal level of the corresponding SSID. If the value falls below this threshold, an alarm is issued. Setting this value to 0 deactivates the check.

Telnet path: /Setup/Interfaces/WLAN/Network-Alarm-Limits

Possible values:

- 3 numerical characters

Default: 0

2.23.20.13.3 Total retries

The threshold value for the total number of transmission retries for the corresponding SSID. Once the value is reached, an alarm is issued. Setting this value to 0 deactivates the check.

Telnet path: /Setup/Interfaces/WLAN/Network-Alarm-Limits

Possible values:

- 4 numeric characters to specify the repetitions in per mille

Default: 0 per mille

2.23.20.13.4 TX errors

The total number of lost packets for the corresponding SSID. Once the value is reached, an alarm is issued. Setting this value to 0 deactivates the check.

Telnet path: /Setup/Interfaces/WLAN/Network-Alarm-Limits

Possible values:

- 4 numeric characters to specify the repetitions in per mille

Default: 0 per mille

2.23.20.14 Interpoint alarm limits

This table contains the settings for the interpoint alarm limits for the device's P2P connections (SSIDs).

Telnet path: /Setup/Interfaces/WLAN

2.23.20.14.1 Interface

Select the P2P connection here for which you wish to set the interpoint alarm limits.

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Alarm-Limits

Possible values:

- Choose from the P2P connections available in the device, e.g. P2P-1, P2P-2, etc.

2.23.20.14.2 Phy signal

The negative threshold value for the signal level of the corresponding P2P connection. If the value falls below this threshold, an alarm is issued. Setting this value to 0 deactivates the check.

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Alarm-Limits

Possible values:

- 3 numerical characters

Default: 0

2.23.20.14.3 Total retries

The threshold value for the total number of transmission retries for the corresponding P2P connection. Once the value is reached, an alarm is issued. Setting this value to 0 deactivates the check.

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Alarm-Limits

Possible values:

- 4 numeric characters to specify the repetitions in per mille

Default: 0 per mille

2.23.20.14.4 TX errors

The total number of lost packets for the corresponding P2P connection. Once the value is reached, an alarm is issued. Setting this value to 0 deactivates the check.

Telnet path: /Setup/Interfaces/WLAN/Interpoint-Alarm-Limits

Possible values:

- 4 numeric characters to specify the repetitions in per mille

Default: 0 per mille

2.23.20.15 Probe settings

This table contains the settings for the spectral scan.

 The device cannot transmit or receive data in this mode.

SNMP ID:

2.23.20.15

Telnet path:

Setup > Interfaces > WLAN

2.23.20.15.1 Ifc

Opens the settings for the physical WLAN interface.

SNMP ID:

2.23.20.15.1

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

Selection from the available physical WLAN interfaces.

2.23.20.15.2 Radio bands

Here you can select which frequency bands should be analyzed by spectral scanning.

SNMP ID:

2.23.20.15.2

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

2.4GHz

5GHz

2.4GHz/5GHz

Default:

2.4GHz

2.23.20.15.3 Subbands 2.4GHz

This setting determines which subbands of the 2.4GHz frequency are to be analyzed.

The spectral scan only takes this field into account when either '2.4GHz' or '2.4GHz/5GHz' is set in **Radio bands**.**SNMP ID:**

2.23.20.15.3

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

Band-1

Band-2

Band-1+2

Default:

Band-1

2.23.20.15.4 Channel list 2.4GHz

Specify in this field the list of channels for the spectral scan in the 2.4GHz frequency band. Individual channels are separated with commas.

There is no need to change the default values of the spectral scan for its operation. The spectral scan examines 20MHz-wide frequency bands at a time. Due to the 5MHz gaps between the individual 20MHz-wide channels in the 2.4GHz radio

band, the channels specified result in a continuous scan of the entire 2.4GHz radio band. In the 5GHz band, the channel bandwidth is also 20MHz, and the individual channels lie next to each other with no overlapping. When no channels are specified, all channels are scanned which results in a complete scan in the 5GHz band.

SNMP ID:

2.23.20.15.4

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

Max. 48 characters

from ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\\]^_0123456789

Default:

1, 5, 9, 13

2.23.20.15.5 Subbands 5GHz

This setting specifies which subbands of the 5GHz frequency are to be analyzed.



The spectral scan only takes this field into account when either '5GHz' or '2.4GHz/5GHz' is set in **Radio bands**.

SNMP ID:

2.23.20.15.5

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

Band-1

Band-2

Band-1+2

Default:

Band-1

2.23.20.15.6 Channel list 5GHz

In this field, specify the list of channels for the spectral scan in the 5GHz frequency band. Individual channels are separated with commas.

SNMP ID:

2.23.20.15.6

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

Max. 48 characters

from ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\\]^_0123456789

Default:

Blank

2.23.20.15.7 Channel dwell time

Determine here the number of milliseconds the spectral scan dwells on a channel.

The web application can display up to 300 readings in the waterfall diagram using the time slider. The readings from a maximum of 24 hours can be cached. The default value is generally adequate. Only lower the value when you need a more accurate resolution, and when the performance of your browser and PC is high enough to process the faster display of the readings.

SNMP ID:

2.23.20.15.7

Telnet path:**Setup > Interfaces > WLAN > Probe-Settings****Possible values:**

Max. 10 characters

from 0 to 9

Default:

250

2.23.10.16 IEEE802.11u

The table **IEEE802.11u** is the highest administrative level for 802.11u and Hotspot 2.0. Here you have the option of enabling or disabling functions for each interface, assigning them different profiles, or modifying general settings.

SNMP ID:

2.23.10.16

Telnet path:**Setup > Interfaces > WLAN****2.23.10.16.1 Ifc**

Name of the logical WLAN interface that you are currently editing.

SNMP ID:

2.23.10.16.1

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****2.23.10.16.2 Operating**

Enable or disable support for connections according to IEEE 802.11u at the appropriate interface. If you enable support, the device sends the interworking element in beacons/probes for the interface or for the associated SSID, respectively. This element is used as an identifying feature for IEEE 802.11u-enabled connections: It includes, for example, the Internet

bit, the ASRA bit, the HESSID, and the location group code and the location type code. These individual elements use 802.11u-enabled devices as the first filtering criteria for network detection.

SNMP ID:

2.23.10.16.2

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:**

Yes

No

Default:

No

2.23.10.16.3 Hotspot2.0

Enable or disable the support for Hotspot 2.0 according to the Wi-Fi Alliance® at the appropriate interface. Hotspot 2.0 extends the IEEE standard 802.11u with additional network information, which stations can request using an ANQP request. These include, for example, the operator-friendly name, the connection capabilities, operating class and WAN metrics. Using this additional information, stations are in a position to make an even more selective choice of Wi-Fi network.

 The prerequisite for this function is that support for connections according to IEEE 802.11u is enabled.

SNMP ID:

2.23.10.16.3

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:**

Yes

No

Default:

No

2.23.10.16.4 Internet

Select whether the Internet bit is set. Over the Internet-bit, all stations are explicitly informed that the Wi-Fi network allows Internet access. Enable this setting if services other than internal services are accessible via your device.

SNMP ID:

2.23.10.16.4

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:**

Yes

No

Default:

No

2.23.10.16.5 Network type

Select a network type from the available list which most closely describes the Wi-Fi network behind the selected interface.

SNMP ID:

2.23.10.16.5

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:**

- **Private**: Describes networks which are blocked to unauthorized users. Select this type, for example, for home networks or corporate networks where access is limited to employees.
- **Private-GuestAcc**: Similar to **Private**, but with guest access for unauthorized users. Select this type, for example, for corporate networks where visitors may use the Wi-Fi network in addition to employees.
- **Public-Charge**: Describes public networks that are accessible to everyone and can be used for a fee. Information about fees may be available through other channels (e.g.: IEEE 802.21, HTTP/HTTPS or DNS forwarding). Select this type, for example, for hotspots in shops or hotels that offer fee-based Internet access.
- **Public-Free**: Describes public networks that are accessible to everyone and for which no fee is payable. Select this type, for example, for hotspots in public, local and long-distance transport, or for community networks where Wi-Fi access is an included service.
- **Personal-Dev**: In general, it describes networks that connect wireless devices. Select this type, for example, for digital cameras that are connected to a printer via WLAN.
- **Emergency**: Describes networks that are intended for, and limited to, emergency services. Select this type, for example, for connected ESS or EBR systems.
- **Experimental**: Describes networks that are set up for testing purposes or are still in the setup stage.
- **Wildcard**: Placeholder for previously undefined network types.

Default:

Private

2.23.10.16.6 Asra

Select whether the ASRA bit (Additional Step Required for Access) is set. Using the ASRA bit explicitly informs all stations that further authentication steps are needed to access the Wi-Fi network. Enable this setting if you have, for example, set up online registration, additional authentication, or a consent form for your terms of use on your web site.



Please remember to specify a forwarding address in the **Network authentication types** table for the additional authentication and/or **WISPr** for the Public Spot module if you set the ASRA bit.

SNMP ID:

2.23.10.16.6

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:**

Yes

No

Default:

No

2.23.10.16.7 HESSID

Specify where the device gets its HESSID for the homogeneous ESS. A homogeneous ESS is defined as a group of a specific number of access points, which all belong to the same network. The MAC address of a connected access point (its BSSID) serves as a globally unique identifier (HESSID). The SSID can not be used as an identifier in this case, because different network service providers can have the same SSID assigned in a hotspot zone, e.g., by common names such as "HOTSPOT".

SNMP ID:

2.23.10.16.7

Telnet path:

Setup > Interfaces > WLAN > IEEE802.11u

Possible values:

BSSID

user

None

Default:

BSSID

2.23.10.16.8 HESSID MAC

If you selected the setting `user` for the **HESSID-Mode**, enter the HESSID of your homogeneous ESS as a 6-octet MAC address. Select the BSSID for the HESSID for any access point in your homogeneous ESS in capital letters and without separators, e.g., `008041AEFD7E` for the MAC address `00:80:41:ae:fd:7e`.



If your device is not present in multiple homogeneous ESS's, the HESSID is identical for all interfaces

SNMP ID:

2.23.10.16.8

Telnet path:

Setup > Interfaces > WLAN > IEEE802.11u

Possible values:

MAC address in capital letters and without separators

Default:

000000000000

2.23.10.16.10 ANQP profile

Select an ANQP or 802.11u profile from the list. Generate 802.11u profiles in the setup menu using the table **Setup > IEEE802.11u > ANQP-Profile**.

SNMP ID:

2.23.10.16.10

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:****Name** from table **Setup > IEEE802.11u > ANQP-Profile**, max. 32 characters**Default:****2.23.10.16.13 HS20 profile**

Select a Hotspot-2.0 or HS20 profile from the list. Generate HS20 profiles in the setup menu using the table **Setup > IEEE802.11u > IEEE802.11u**.

SNMP ID:

2.23.10.16.13

Telnet path:**Setup > Interfaces > WLAN > IEEE802.11u****Possible values:****Name** from table **Setup > IEEE802.11u > Hotspot2.0**, max. 32 characters**Default:**

2.23.21 LAN interfaces

This menu contains the settings for the LAN interfaces.

Telnet path: Setup/Interfaces/LAN-Interfaces

2.23.21.1 Interface

This is where you select the LAN interface to which the subsequent settings are to apply.

Telnet path: /Setup/Interfaces/LAN-Interfaces/lfc**Possible values:**

- Select from the available LAN interfaces.

2.23.21.2 Connector

Select the network connection you will use to connect to your local network. If you select **Auto**, the device will automatically detect the connection used.

Telnet path: /Setup/Interfaces/LAN-Interfaces/Connector**Possible values:**

- Auto
- Auto-10
- Auto-100
- 10B-T
- FD10B-TX
- 100B-TX

- FD100B-TX
- FD1000B-TX
- Power-Down

Default: Auto

 The LAN interfaces of the device are equipped with different types of hardware depending on the model. The first LAN interface supports up to 1000 Mbps in full-duplex mode. The second LAN interface supports a maximum of 100 Mbps in full-duplex mode.

2.23.21.3 MDI mode

This switch activates/deactivates the automatic crossover of send and receive wire pairs (Auto-MDIX) making it unnecessary use node/hub switches or crossover cables. In individual cases (e.g. with certain fiber-optic media converters) it may be necessary to deactivate this automatic function and fix the setting to crossed (MDIX) or non-crossed (MDI).

Telnet path: /Setup/Interfaces/LAN-Interfaces/MDI-Mode

Possible values:

- Auto
- MDI
- MDIX

Default: Auto

2.23.21.5 Clock role

An Ethernet port working in 1000BASE-Tx mode requires a continuous stream of data between both connected partners in order to stay synchronized. The nature of this requires the two ends to have a synchronized clock to transmit data. IEEE 802.3 introduced the concept of a master and a slave for this type of connection. The master provides the clocking for data transmission in both directions while the slave synchronizes to this clock. The roles of clocking master and slave are shared out in the automatic negotiation phase. This aspect can normally be ignored since automatic negotiation works very well in most cases. In some cases it may be necessary to influence master-slave negotiation. For this purpose the following values can be set for clocking:

Telnet path: /Setup/Interfaces/LAN-Interfaces/Clock-Role

Possible values:

- Slave-Preferred: This is the recommended default setting for devices that are not used as a switch. During the negotiation phase, the port will attempt to negotiate the slave role. It will accept the role of master if necessary.
- Master-Preferred: During the negotiation phase, the port will attempt to negotiate the master role. It will accept the role of slave if necessary.
- Slave: The port is set to the role slave only. A connection will be refused if both connection partners use the role of slave.
- Master: The port is set to the role master only. A connection will be refused if both connection partners use the role of master.

Default: Slave-Preferred

 The LAN interfaces of the device are equipped with different types of hardware depending on the model. Setting the clocking role has no effect on the second LAN interface.

2.23.21.7 Active

Activate or deactivate the selected LAN interface.

Telnet path: /Setup/Interfaces/LAN-Interfaces/

Possible values:

- Yes
- No

Default: Yes

2.23.21.8 Tx limit

Enter the bandwidth limit (kbps) in the transmission direction. The value 0 means there is no limit.

Telnet path: Setup/Interfaces/LAN-Interfaces

Possible values:

- Maximum 10 numerical characters

Default: 0

 This setting is only available for devices with a WLAN module.

2.23.21.9 Rx limit

Enter the bandwidth limit (kbps) in the receive direction. The value 0 means there is no limit.

Telnet path: Setup/Interfaces/LAN-Interfaces

Possible values:

- Maximum 10 numerical characters

Default: 0

 This setting is only available for devices with a WLAN module.

2.23.21.10 Power-saving

Using this setting you enable or disable the "Green Ethernet" enhancements according to IEEE 802.3az.

 In order for your device to use the corresponding enhancements for Ethernet connections, the connected device must also support IEEE 802.3az. You can check in the status menu under **LAN > Interfaces > Power-saving** whether this is the case.

SNMP ID:

2.23.21.10

Telnet path:

Setup > Interfaces > LAN-Interfaces

Possible values:

No
Yes

Default:

Yes

2.23.30 Ethernet ports

The Ethernet interfaces on any publicly accessible LANCOM device can potentially be used by unauthorized persons to gain physical access to a network. The Ethernet interfaces on the device can be disabled to prevent this.

Telnet path: /Setup/Interfaces

2.23.30.1 Port

The name of the selected port.

Telnet path:/Setup/Interfaces/Ethernet-Ports

2.23.30.2 Connector

Select the network connection you will use to connect to your local network. If you select Auto, the device will automatically detect the connection used.

Telnet path: /Setup/Interfaces/Ethernet-ports

Possible values:

- Auto
- Auto-100
- 10B-T
- FD10B-TX
- 100B-TX
- FD100B-TX
- FD1000B-TX

Default: Auto

2.23.30.3 Private mode

Once private mode is activated, this switch port is unable to exchange data directly with the other switch ports.

Telnet path:/Setup/Interfaces/Ethernet-Ports

Possible values:

- Yes
- No

Default: No

2.23.30.4 Assignment

Here you select how this interface is to be used.

Telnet path:/Setup/Interfaces/Ethernet-Ports

Possible values:

- LAN-1 to LAN-n: The interface is allocated to a logical LAN.
- DSL-1 to DSL-n: The interface is allocated to a DSL interface.
- Idle: The interface is not allocated to any particular task, but it remains physically active.
- Monitor: The port is a monitor port, i.e. everything received at the other ports is output via this port. A packet sniffer such as Ethereal can be connected to this port, for example.
- Power down: The interface is deactivated.

Default: Depends on the particular interface or the hardware model.

2.23.30.5 MDI mode

This item is used to set the connection type of the switch port. The connection type is either selected automatically or it can be fixed as a crossed (MDIX) or not crossed (MDI) connection.

Telnet path:/Setup/Interfaces/Ethernet-Ports

Possible values: Auto, MDI, MDIX

Default: Auto

2.23.30.6 Clock role

An Ethernet port working in 1000BASE-Tx mode requires a continuous stream of data between both connected partners in order to stay synchronized. The nature of this requires the two ends to have a synchronized clock to transmit data. IEEE 802.3 introduced the concept of a master and a slave for this type of connection. The master provides the clocking for data transmission in both directions while the slave synchronizes to this clock. The roles of clocking master and slave are shared out in the automatic negotiation phase. This aspect can normally be ignored since automatic negotiation works very well in most cases. In some cases it may be necessary to influence master-slave negotiation.

Telnet path:/Setup/Interfaces/Ethernet-Ports/Clock-Role

Possible values:

- Slave-Preferred: This is the recommended default setting for non-switch devices. During the negotiation phase, the port will attempt to negotiate the slave role. It will accept the role of master if necessary.
- Master-Preferred: During the negotiation phase, the port will attempt to negotiate the master role. It will accept the role of slave if necessary.
- Slave: The port is forced to negotiate the slave role. A connection will **not** be established if both connection partners are forced to negotiate the slave role.
- Master: The port is forced to negotiate the master role. A connection will **not** be established if both connection partners are forced to negotiate the master role.

Default: Slave-Preferred

2.23.30.7 Downshift

With this setting you enable or disable automatic adjustment of the connection speed to the employed infrastructure for the specified Ethernet port. By enabling downshift, you allow the device to operate an Ethernet link with a lower transmission rate if the available speed is lower due to the cabling.

If, for example, two Gigabit-capable devices are connected with a cable which is not fully wired, both devices will initially attempt to establish a Gigabit link. Since Gigabit Ethernet in contrast to Fast Ethernet (10 or 100 Mbit) requires all four pairs of wires, the connection will fail. In this case, the downshift feature makes it possible to automatically fall back to the maximum possible transmission rate of the cable.

You can check whether downshift is available for an Ethernet link in the status menu under **Ethernet-Ports > Ports**.

SNMP ID:

2.23.30.7

Telnet path:

Setup > Interfaces > Ethernet-ports

Possible values:

No

Yes

Default:

No

2.23.30.8 Power-saving

Using this setting you enable or disable the "Green Ethernet" enhancements according to IEEE 802.3az.



In order for your device to use the corresponding enhancements for Ethernet connections, the connected device must also support IEEE 802.3az. You can check in the status menu under **LAN > Interfaces > Power-saving** whether this is the case.

SNMP ID:

2.23.30.8

Telnet path:**Setup > Interfaces > Ethernet-ports****Possible values:**

No

Yes

Default:

No

2.23.40 Modem

More commands and options used for an optional external modem connected to the serial interface.

Telnet path: /Setup/Interfaces

2.23.40.1 Ring count

Number of rings before answering.

Telnet path:/Setup/Interfaces/Modem/Ring-Count**Possible values:**

- Numerical characters from 0 to 99

Default: 1

2.23.40.2 Echo-off command

When the modem echo is enabled, the external modem sends back every character it receives. The modem echo must be disabled in order for the external modem to function properly with the device described here. The device uses this command to disable the modem echo.

Telnet path:/Setup/Interfaces/Modem/Echo-Off-Command**Possible values:**

- Maximum 9 alphanumeric characters

Default: E0

2.23.40.3 Reset

The device uses this command to perform a hardware reset on the externally connected modem.

Telnet path: /Setup/Interfaces/Modem/Reset**Possible values:**

- Maximum 9 alphanumeric characters

Default: &F

2.23.40.4 Initialization command

The device uses this command to initialize the external modem.

The device sends this sequence to the external modem after this has had a hardware reset.

Telnet path:/Setup/Interfaces/Modem/Init-Command

Possible values:

- Maximum 63 alphanumerical characters

Default: L0X1M1S0=0**2.23.40.5 Dial command**

The device issues this command when the external modem is to dial a number. The device takes the telephone number from the list of remote stations and appends it to the string specified here.

Telnet path:/Setup/Interfaces/Modem/Dial-Command**Possible values:**

- Maximum 31 alphanumerical characters

Default: DT**2.23.40.6 Request ID**

The device uses this command to query the modem ID. The result is output in the modem status.

Telnet path:/Setup/Interfaces/Modem/Request-ID**Possible values:**

- Maximum 9 alphanumerical characters

Default: I6**2.23.40.7 Answer command**

The device uses this command to accept a call arriving at the external modem.

Telnet path:/Setup/Interfaces/Modem/Answer-Command**Possible values:**

- Max. 9 alphanumerical characters

Default: A**2.23.40.8 Disconnect command**

The device uses this command to terminate calls made by the external modem (hang up).

Telnet path:/Setup/Interfaces/Modem/Disconnect-Command**Possible values:**

- Max. 9 alphanumerical characters

Default: H**2.23.40.9 Escape sequence**

The device uses this command sequence to transmit individual commands to the modem in the data phase.

Telnet path:/Setup/Interfaces/Modem/Escape-Sequence**Possible values:**

- Max. 9 alphanumerical characters

Default: + + +

2.23.40.10 Escape prompt delay (ms)

After the escape sequence, the device waits for the time set here before issuing the command to hang up.

Telnet path:/Setup/Interfaces/Modem/Escape-Prompt-Delay-(ms)

Possible values:

- Numerical values from 0 to 9999 milliseconds

Default: 1000

2.23.40.11 Init. dial

The device sends the initialization sequence for dialing to the external modem before outputting the dial command.

Telnet path:/Setup/Interfaces/Modem/Init.-Dial

Possible values:

- Maximum 63 alphanumeric characters

Default: Blank

2.23.40.11 Init. answer

The device sends the initialization sequence for answering to the external modem before outputting the accept-call command.

Telnet path:/Setup/Interfaces/Modem/Init.-Answer

Possible values:

- Maximum 63 alphanumeric characters

Default: Blank

2.23.40.13 Cycletime AT poll (s)

When disconnected, the device checks the presence and correct functioning of the external modem by sending the string "AT" to the modem. If the modem is connected properly and working, it responds with "OK". The cycle time for the "AT-Poll" defines the time interval between checks.

Telnet path:/Setup/Interfaces/Modem/Cycletime-AT-Poll-(s)

Possible values:

- Numerical characters from 0 to 9 seconds

Default: 1 second

2.23.40.14 AT poll count

If the external modem does not respond to the number of AT polls from the device set here, then the device performs a hardware reset for the external modem.

Telnet path:/Setup/Interfaces/Modem/AT-Poll-Count

Possible values

- Numerical characters from 0 to 9

Default: 5

2.23.41 Mobile telephony

The settings for mobile telephony are located here.

Telnet path: /Setup/Interfaces/Mobile

2.23.41.1 Profiles

This table contains the settings for the GPRS/UMTS profiles.

Telnet path:/Setup/Interfaces/Mobile/Profiles

2.23.41.1.1 Profile

Specify here a unique name for this UMTS/GPRS profile. This profile can then be selected in the UMTS/GPRS WAN settings.

Telnet path:/Setup/Interfaces/Mobile/Profiles/Profile

Possible values:

- Maximum 16 alphanumeric characters

Default: Blank

2.23.41.1.2 PIN

Enter the 4-digit PIN of the mobile phone SIM card used at the UMTS/GPRS interface. The router needs this information to operate the UMTS/GPRS interface.

Telnet path:/Setup/Interfaces/Mobile/Profiles/PIN

Possible values:

- Max. 6 numerical characters

Default: Blank



The SIM card logs every failed attempt with an incorrect PIN. The number of failed attempts remains stored even when the device is temporarily disconnected from the mains. After 3 failed attempts, the SIM card is locked from further access attempts. If this occurs, you usually need the 8-digit PUK or SuperPIN to unlock it.

2.23.41.1.3 APN

Here you enter the name of the access server for mobile data services known as the APN (Access Point Name). This information is specific to your mobile telephony service provider, and you will find this information in the documentation for your mobile telephony contract.

Telnet path:/Setup/Interfaces/Mobile/Profiles/APN

Possible values:

- Maximum 48 alphanumeric characters

Default: Blank

2.23.41.1.4 Network

If you have opted for manual mobile network selection, then the UMTS/GPRS interface will login only to the mobile network specified here with its full name.

Telnet path:/Setup/Interfaces/Mobile/Profiles/Network

Possible values:

- Maximum 16 alphanumeric characters

Default: Blank

2.23.41.1.5 Select

If you have opted for automatic mobile network selection, then the UMTS/GPRS interface will login to any available and valid mobile network. If you select manual mobile network selection, then the UMTS/GPRS interface will only login to the specified mobile network.

Telnet path:/Setup/Interfaces/Mobile/Profiles/Select

Possible values:

- Auto
- Manual

Default: Auto

 Manual selection of the mobile network is useful if the router is operated in a fixed location and the UMTS/GPRS interface should be prevented from logging into other networks, which may offer strong signals, but which may be undesirable or more expensive.

2.23.41.1.6 Mode

This item selects the cellular data transmission standard that is preferred to be used by the UMTS/GPRS/LTE interface.

SNMP ID:

2.23.41.1.6

Telnet path:

Setup > Interfaces > Mobile > Profiles

Possible values:

Auto
GPRS
UMTS
LTE

Default:

Auto

2.23.41.1.7 QoS downstream data rate

The transfer rates used by the UMTS connection should be entered here to ensure that the Quality of Service (QoS) functions in the firewall work properly.

Telnet path:/Setup/Interfaces/Mobile/Profiles/QoS-Downstream-Datarate

Possible values:

- Max. 5 numerical characters

Default: 0

Special values: 0: The interface is unrestricted and QoS mechanisms do not take effect.

2.23.41.1.8 QoS upstream data rate

The transfer rates used by the UMTS connection should be entered here to ensure that the Quality of Service (QoS) functions in the firewall work properly.

Telnet path:/Setup/Interfaces/Mobile/Profiles/QoS-Upstream-Datarate

Possible values:

- Max. 5 numerical characters

Default: 0**Special values:** 0: The interface is unrestricted and QoS mechanisms do not take effect.**2.23.41.1.9 PDP-type**

With this setting you specify the type of PDP context for the cellular network profile. The PDP context describes the support of the address spaces which the backbone of the corresponding cellular network provider offers for connections from the cellular network to the Internet. This can be either IPv4 or IPv6 alone, or can include support for both address spaces (dual stack). Clients that want to use the corresponding cellular network provider must support at least one of the specified address spaces.

SNMP ID:

2.23.41.1.9

Telnet path:**Setup > Interfaces > Mobile > Profiles****Possible values:**

IPv4

IPv6

IPv4v6

Default:

IPv4

2.23.41.1.10 LTE bands

If unfavorable environmental conditions cause the router to constantly switch between two frequency bands, instabilities in the transmission may be the result. This selection allows you to control which frequency bands the mobile router can or should use. The following frequency bands are available:

- **B1_2100:** 2.1GHz band is enabled.
- **B3_1800:** 1.8GHz band is enabled.
- **B7_2600:** 2.6GHz band is enabled.
- **B8_900:** 900MHz band is enabled.
- **B20_800:** 800MHz band is enabled.
- **All:** All frequency bands are enabled.



This option applies only to the LTE standard frequency bands. All bands can be used for UMTS and GPRS.

SNMP ID:

2.23.41.1.10

Telnet path:**Setup > Interfaces > Mobile > Profiles****Possible values:**

All

B1_2100

B3_1800

B7_2600

B8_900

B20_800

Default:

All

2.23.41.2 Scan networks

This command starts a scan for available networks. The networks discovered are listed as a network list under the modem status.

Telnet path: /Setup/Interfaces/Mobile/Scan-Networks

2.23.41.3 Input PUK

If PIN entry is locked after multiple entries of the wrong number (e.g. because the profile is incorrect), the SIM card must be activated again by entering the PUK. This command starts the the PUK entry procedure.

Telnet path: /Setup/Interfaces/Mobile/Input-PUK

2.23.41.6 History interval (sec)

Logging interval in seconds for the values displayed for the modem status under History.

Telnet path: /Setup/Interfaces/Mobile/History-Interval(sec)

Possible values:

- 0 to 999999 seconds

Default: 0

Special values: '0' disables the logging of history values.

2.23.41.7 Syslog enabled

Activate this option if the history values for modem status (also see '2.23.41.6 History interval (sec)') are additionally to be logged by SYSLOG.

Telnet path: /Setup/Interfaces/Mobile/Syslog-enabled

Possible values:

- Yes
- No

Default: No

2.23.41.8 Enable HSUPA

HSUPA can be activated or deactivated here.

Telnet path: /Setup/Interfaces/Mobile/Enable-HSUPA

Possible values:

- Yes
- No

Default: Yes

2.23.41.9 Signal check interval (min)

This value specifies the time in minutes after which the device may switch back a 3G connection (if available).

Telnet path: /Setup/Interfaces/Mobile/Signal-check-interval(min)

Possible values:

- 0 to 9999 minutes

Default: 0 minutes

Special values: '0' disables the fallback from 3G to 2G connections.

2.23.41.10 Threshold 3G-to-2G (dB)

This value specifies the threshold for falling back from 3G to 2G connections. If the signal strength in 3G mode falls below this threshold, then the device switches to a 2G connection (if available). Positive values are automatically converted into negative values.

Telnet path: /Setup/Interfaces/Mobile/Threshold-3G-to-2G[dB]

Possible values:

- -51 to -111 or 51 to 111 dB

Default: -89 dB

Special values: '0' disables the fallback from 3G to 2G connections.

2.23.41.11 Check while connected

Activate this option if the device is also to be allowed to fallback to 2G connections when WAN connections exist.

Telnet path: /Setup/Interfaces/Mobile/Check-while-connected

Possible values:

- Yes
- No

Default: Yes

 This setting only takes effect if the fallback from 3G to 2G connections has been configured.

2.24 Public-Spot-Module

This menu contains the settings for the Public Spot.

SNMP ID: 2.24

Telnet path: /Setup

2.24.1 Authentication mode

Your device supports different types of authentication for network access with a Public Spot. To start with, you can specify whether a user needs to log in at all. The Public Spot stores the credentials in the user table. If you choose to use a registration procedure, you have two options:

- Login is performed with either a username and password, or additionally with the physical or MAC address. In this case, the administrator communicates the access credentials to the users by means of a printout.

- The login is performed using the username and password, which the user generates themselves. Access credentials can be automatically sent to users that login for first time either by e-mail or SMS (text message).
- The login is automatically performed via a RADIUS server after the user has accepted the terms of use on the welcome page that the administrator set up. The access credentials remain hidden from the user, and the user does not need them. The creation of a user account on the RADIUS server is only for the internal administration of the associated users.

SNMP ID:

2.24.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Mode****Possible values:**

None

User+password

MAC+user+password

E-mail

E-mail2SMS

Login via agreement

Default:

None

2.24.2 User table

Users who are to be granted access to your network are created as entries in the user table.

Telnet path: Setup/Public-Spot-Module

2.24.2.1 Name

Enter the user's name.

Telnet path:/Setup/Public-Spot-Module/User-Table/Name**Possible values:**

- Max. 64 characters

2.24.2.2 Password

Enter a password.

Telnet path:/Setup/Public-Spot-Module/User-Table/Password**Possible values:**

- Max. 16 characters

2.24.2.3 MAC address

Enter the MAC address here.

Telnet path:/Setup/Public-Spot-Module/User-Table/MAC-Address**Possible values:**

- Max. 12 characters

2.24.2.4 Comment

You can enter a comment here.

Telnet path:/Setup/Public-Spot-Module/User-Table/Comment

Possible values:

- Max. 80 characters

2.24.2.5 Provider

Enter the provider's name.

Telnet path:/Setup/Public-Spot-Module/User-Table/Provider

Possible values:

- Max. 16 characters

2.24.2.6 Expiry

Enter the validity period for this setting (date).

Telnet path:/Setup/Public-Spot-Module/User-Table/Expiry

Possible values:

- Max. 20 characters

2.24.3 Provider table

When you configure a public spot, the user credentials for authentication and for accounting can be forwarded to one or more RADIUS servers. These are configured in the provider list.

Telnet path: Setup/Public-Spot-Module



In addition to the dedicated parameters for the RADIUS providers, you must enter the general RADIUS parameters, such as the retry and timeout values, into the appropriate configuration areas.

2.24.3.1 Name

Name of the RADIUS server provider who supplies the authentication and/or accounting.

Telnet path:/Setup/Public-Spot-Module/Provider-Table/Name

Possible values:

- Max. 16 alphanumerical characters

Default: Blank

2.24.3.2 Auth. server address

Enter here the IP address of the server that the Public Spot contacts for authenticating the access sessions with this provider.

Telnet path:/Setup/Public-Spot-Module/Provider-Table/Auth.-Server-Address

Possible values:

- Valid IP address

Default: 0.0.0.0

2.24.3.3 Auth. server port

Enter here the port used by the server that the Public Spot requests for authenticating the access sessions with this provider.

Telnet path: /Setup/Public-Spot-Module/Provider-Table/Auth.-Server-Port

Possible values:

- Valid port descriptor

Default: 10

2.24.3.4 Auth. server secret

Enter here the key (shared secret) for access to the RADIUS server of the provider. Ensure that this key is consistent with that in the RADIUS server.

Telnet path: /Setup/Public-Spot-Module/Provider-Table/Auth.-Server-Secret

Possible values:

- Max. 32 alphanumeric characters

Default: Blank

2.24.3.5 Acc. server address

Enter here the IP address of the server that the Public Spot contacts for accounting the access sessions with this provider.

Telnet path: /Setup/Public-Spot-Module/Provider-Table/Auth.-Server-Address

Possible values:

- Valid IP address

Default: 0.0.0.0

2.24.3.6 Acc. server port

Enter here the port used by the server that the Public Spot uses for the accounting of the access sessions with this provider.

Telnet path: /Setup/Public-Spot-Module/Provider-Table/Acc.-Server-Port

Possible values:

- Valid port descriptor

Default: 10

2.24.3.7 Acc. server secret

Enter here the key (shared secret) for access to the accounting server of the provider. Ensure that this key is consistent with that in the accounting server.

Telnet path: /Setup/Public-Spot-Module/Provider-Table/Acc.-Server-Secret

Possible values:

- Max. 32 alphanumeric characters

Default: Blank

2.24.3.8 Backup

From the provider table, select a different entry to be used as backup. If the server at the primary provider is unavailable, the Public Spot contacts the backup provider for authentication and/or accounting of access sessions.

Telnet path: /Setup/Public-Spot-Module/Provider-Table/Backup

Possible values:

- Selection from the list of defined RADIUS providers (max. 16 characters).

Default: Blank

2.24.3.9 Auth. server loopback addr.

Enter here the loopback address of the server that the Public Spot contacts for authenticating the access sessions with this provider.

Telnet path:/Setup/Public-Spot-Module/Provider-Table/Auth.-Server-Loopback-Addr.

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO... LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

2.24.3.10 Acc. server loopback addr.

Enter here the loopback address of the server that the Public Spot contacts for accounting the access sessions with this provider.

Telnet path:/Setup/Public-Spot-Module/Provider-Table/Acc.-Server-Loopback-Addr.

Possible values:

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO... LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

2.24.3.11 Auth. server protocol

This item selects the protocol that the Public Spot is to use for authenticating access sessions with this provider.

Telnet path:/Setup/Public-Spot-Module/Provider-Table/Auth.-Server-Protocol

Possible values:

- RADIUS
- RADSEC

Default: RADIUS

2.24.3.12 Acc. server protocol

This item selects the protocol that the Public Spot is to use for the accounting of the access sessions with this provider.

Telnet path:/Setup/Public-Spot-Module/Provider-Table/Acc.-Server-Protocol

Possible values:

- RADIUS
- RADSEC

Default: RADIUS

2.24.5 Traffic limit bytes

Even before login and quite independent of the servers, networks and pages mentioned earlier, traffic is generated by DHCP, DNS and ARP requests. These requests are allowed. However, they can be misused to tunnel other data.

To counter this, you can define a maximum transfer volume here. This affects only the data exchanged before login and not the data sent to or from the free web servers mentioned above. This remains unlimited at all times.

Telnet path: Setup/Public-Spot-Module

Possible values:

- Max. 10 characters

Default: 0

2.24.6 Server subdir

Enter the directory for the public page used by your Public Spot service. This page should provide information enabling the new user to contact you and register.

Telnet path: /Setup/Public-Spot-Module/Server-Subdir

Possible values:

- Max. 127 characters

Default: Blank

2.24.7 Accounting cycle

Define the time in seconds for the accounting cycle.

Telnet path: Setup/Public-Spot-Module

2.24.8 Page table

In addition to freely available web servers, you can define customized pages which your customers can access without having to log on.

The page table allows you to link certain pre-defined events with certain pages on your servers, so that when these events occur the standard pages are displayed.

Telnet path: Setup/Public-Spot-Module

2.24.8.1 Page

Name of the page that your customers can use without logging in.

Telnet path: /Setup/Public-Spot-Module/Page-Table/Page

2.24.8.2 URL

URL of the page that your customers can use without logging in.

SNMP ID: 224.8.2

Telnet path: /Setup/Public-Spot-Module/Page-Table/URL

Possible values:

- Max. 100 characters

Default: By default, different HTML pages stored on the device file system can be displayed, depending on the page chosen by the user.

2.24.8.3 Fallback

Enable or disable the fallback to the "on-board" page in case the Public Spot cannot display the user-defined URL.

Telnet path: /Setup/Public-Spot-Module/Page-Table/Fallback

Possible values:

- Yes
- No

Default: No

2.24.8.4 Type

Select the type of the page.

Telnet path: /Setup/Public-Spot-Module/Page-Table/Type

Possible values:

- Template
- Redirect

Default: Template

2.24.8.5 Loopback address

Enter a loopback address.

Telnet path: /Setup/Public-Spot-Module/Page-Table/Loopback-Addr.

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

2.24.8.6 Template cache

Using this parameter, you enable caching of Public Spot templates.

When configuring user-defined template pages on devices with sufficient memory (e.g., Public Spot gateways), you have the option to cache templates on the device. Caching improves the performance of the Public Spot module, particularly in large-scale scenarios where the device internally caches templates and the HTML pages that were generated from them.

Caching is possible for:

- Templates stored in the local file system
- Templates stored on external HTTP(S) servers with static URLs

Templates on external servers that are referenced with template variables are not cached on the system.

SNMP ID:

2.24.8.6

Telnet path:**Setup > Public-Spot-Module > Page-Table****Possible values:**

No

Yes

Default:

No

2.24.9 Roaming secret

When moving into the signal coverage area of another base station (roaming), it is necessary to login again. If you are located in the overlap area between two stations, you may even experience a regular change of connection between the two base stations. The task of the roaming secret is to allow Public Spot sessions to be passed between access points without the user having to login again.

Telnet path: /Setup/Public-Spot-Module/Roaming-Secret**Possible values:**

- Max. 32 characters

Default: Blank

2.24.12 Communication port

Here you set the port that the Public Spot uses to communicate with the clients associated with it.

Telnet path: /Setup/Public-Spot-Module/Communication-Port**Possible values:**

- Any valid port descriptor, max. 5 characters

Default: Blank

2.24.14 Idle timeout

If an idle timeout has been defined (either here or by RADIUS) the Public Spot terminates the connection if no data was received from the client within the specified interval.

Telnet path: Setup/Public-Spot-Module**Possible values:**

- Max. 10 characters

Default: 0

2.24.15 Port table

This table is used to activate or deactivate the authentication by Public Spot for the ports on the device.

Telnet path: /Setup/Public-Spot module/Port-Table

2.24.15.2 Port

Select the port for which you want to activate or deactivate authentication by the Public Spot.

Telnet path: /Setup/Public-Spot-Module/Port-Table/Port

Possible values:

- Choose from the device's ports, e.g. LAN-1

2.24.15.3 Authentication necessary

Activate or deactivate authentication by the Public Spot for the selected port.

Telnet path: /Setup/Public-Spot-Module/Port-Table/Authentication-Necessary

Possible values:

- Yes
- No

Default: No

2.24.16 Auto-cleanup user table

This item determines whether the user list is automatically cleaned up. Since the size of the user table is limited, outdated user accounts should be deleted as soon as possible.

Telnet path: Setup/Public-Spot-Module

Possible values:

- Yes
- No

Default: No

2.24.17 Provide server database

Here you can select whether the Public Spot provides the MAC address list via RADIUS.

Telnet path: /Setup/Public-Spot-Module/Provide-Server-Database

Possible values:

- Yes
- No

Default: No

2.24.18 Disallow multiple logins

Allows a single user account to login multiple times simultaneously.

Telnet path: Setup/Public-Spot-Module

Possible values:

- No
- Yes

Default: No



The multiple-login option must be deactivated if the RADIUS server is to monitor a time budget. The time budget can only be monitored if the user is running just one session at a time.

2.24.19 Add user wizard

This wizard in WEBconfig provides you with an easy way to create Public Spot user accounts. The wizard automatically generates a username and password and then presents a page for printing out with all the necessary credentials. This menu contains the settings for this wizard.

Telnet path: Setup/Public-Spot-Module

2.24.19.2 Username pattern

This item defines the format of the name of new user accounts.

Telnet path: Setup/Public-Spot-Module/Add-User-Wizard

Possible values:

- Max. 19 characters The string '%n' is a placeholder for a unique account number that is automatically generated by the Public Spot.

Default: user%n

2.24.19.3 Password length

Define the length of the password generated for a new account by the Public Spot Add-User wizard.

Telnet path: Setup/Public-Spot-Module/Add-User-Wizard

Possible values:

- 0 to 255

Default: 6

2.24.19.4 SSID

Enter the SSID that Public Spot Add-User wizard prints out on the form for the user.

SNMP ID: 224.19.4

Telnet path: Setup/Public-Spot-Module/Add-User-Wizard

English description: SSID

Possible values:

- Max. 32 alphanumeric characters

Default: Blank



If you leave this field blank, the Public Spot Add-User wizard fills out the form with the SSID of the first logical WLAN with an activated Public Spot.

2.24.19.5 Default runtime

In this table, you define the optional default runtimes as presented by the Public Spot Add-User wizard. The wizard offers these options when you create a user account.

Telnet path: Setup/Public-Spot-Module/Add-User-Wizard

2.24.19.5.1 Runtime

Select the runtime of a user account on the Public Spot.

Telnet path: /Setup/Public-Spot-Module/Default-Runtime

Possible values: Max. 5 characters

Default: Blank

2.24.19.5.2 Unit

Select the unit to be used for the runtime of a user account on the Public Spot.

Telnet path: /Setup/Public-Spot-Module/Default-Runtime

Possible values:

- Minute(s)
- Hour(s)
- Day(s)

Default: Hour(s)

2.24.19.6 Comment fields

In this table, you define the comment fields for the Public Spot Add-User wizard.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/Comment-Fields

2.24.19.6.1 Field name

The Public Spot Add-User wizard can print out up to 5 comments on the form. This item is used to set the names of the comment fields that are displayed by the wizard when creating the user accounts.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/Comment-Fields/Field-Name

Possible values:

- Max. 31 characters

Default: Blank

 Activate the printout of the comments with the option [2.24.19.8 Print-Comments-On-Voucher](#).

2.24.19.7 Default starting time

Here you select the starting time at which the voucher's runtime begins. By using the option to commence the runtime at the first login, you can print out a supply of vouchers in advance. The user can still use the full runtime.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/Default-Starting-time

Specify the default starting time here.

Possible values:

- Immediately
- First login

Default: First login

2.24.19.8 Print comments on voucher

This item activates or deactivates the printout of the comment fields on the voucher for a Public Spot user.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/Print-Comments-On-Voucher

Possible values:

- Yes
- No

Default: No

2.24.19.9 Maximal voucher validity period

This value defines the maximum validity period of the voucher in days.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/Maximal-Voucher-Validity-Period

Possible values:

- Max. 10 characters

Default: 365 days

 If you starting time for the voucher's runtime to 'first login' ([2.24.19.7 Default starting time](#)), the runtime for the vouchers will begin at some time in the future. The maximum validity period takes precedence over the runtime of the individual voucher. If the user activates the voucher, the runtime could potentially have expired already or could expire during the intended runtime.

2.24.19.10 Available expiry methods

Use this setting to determine which expiry methods are offered by the Public-Spot add-user wizard when creating new user accounts.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/Available-Expiry-Methods

Possible values:

- All methods: The wizard offers all of the available expiry methods.
- Current time method: The expiry method offered by the wizard is based on the current time. The runtime of a user account created with this method begins immediately when the user account is created.
- Login-time method: The expiry method offered by the wizard is based on the login time. The runtime of a user account created with this method begins when the user logs in to the Public Spot for the first time.

Default: All methods

 If you select the login-time method, the user account could feasibly expire before the user has logged in for the first time if this time is longer than the maximum voucher validity period ([2.24.19.9 Maximum-Voucher-Validity-Period](#)).

2.24.19.11 SSID table

This table contains the list of network names available for Public Spot users.

SNMP ID:

224.19.11

Telnet path:

Setup > Public Spot module > Add User Wizard > SSID table

2.24.19.11.1 Network name

Enter here the name of a logical WLAN (stored in the device) for which access is to be provided to Public Spot users by means of billable vouchers.

SNMP ID:

2.24.19.11.1

Telnet path:**Setup > Public Spot module > Add User Wizard > SSID table****Possible values:**

Maximum 32 alphanumerical characters

from ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,-./:;<=>?[\\]^_0123456789

Default

Blank

2.24.19.11.2 Default

Specifies the name of the wireless LAN as the default value. The Create Public Spot Account Wizard will automatically suggest this value in the list of available WLAN networks. If need be, you can change this value in the Wizard's input mask.

SNMP ID:

2.24.19.11.2

Telnet path:**Setup > Public Spot module > Add User Wizard > SSID table****Possible values:**

No

Yes

Default

No

2.24.19.12 User name case sensitive

This setting determines whether the name of the newly created Public Spot user is case-sensitive.

SNMP ID:

2.24.19.12

Telnet path:**Setup > Public-Spot-Module > Add-User-Wizard****Possible values:**

Yes

No

Default:

Yes

2.24.19.13 Hide case-sensitive checkbox

This setting determines whether the option for the case-sensitive input of user names is visible in the Public-Spot add-user wizard.

SNMP ID:

2.24.19.13

Telnet path:**Setup > Public-Spot-Module > Add-User-Wizard****Possible values:**

Yes

No

Default:

Yes

2.24.19.14.2 Max. concurrent logins table

With this table you can set the number of devices that can simultaneously access each account; this is done by entering one or several values. By entering different values (e.g. 1, 3, 4, 5) you can respond to the needs of different users or user groups.

SNMP ID:

2.24.19.14

Telnet path:**Setup > Public Spot module > Add User Wizard > Max-concurrent-logins-table****Possible values:**

Max. 5 numbers

Default:

0, 3, 10

Special values:

0 enables an unlimited number of logins for a single account.

2.24.19.14.1 Value

Using this entry you define a default value for the selection menu **Max-Concurrent-Logins**, which you can find in the setup wizard **Create Public Spot account**. The specified value describes the maximum number of devices which can be logged in at the same time using a single user account. The value 0 stands for "unlimited".

SNMP ID:

2.24.19.14.1

Telnet path:**Setup > Public Spot module > Add User Wizard > Max-concurrent-logins-table****Possible values:**

0 to 99999

Default:

2.24.19.15 Multi-Login

Using this setting you specify whether multiple login, which you create with the setup wizard **Create Public Spot account** or via web API (without entering variables/values) is allowed by default. In the setup wizard, for example, the option field **Multiple-Logins** is preselected by default.

SNMP ID:

2.24.19.15

Telnet path:

Setup > Public-Spot-Module > Add-User-Wizard

Possible values:

No

Yes

Default:

No

2.24.19.16 Hide-Multi-Login-Checkbox

Using this setting you hide the option field **Multi-Login** in the setup wizard **Create Public Spot account**.

SNMP ID:

2.24.19.16

Telnet path:

Setup > Public-Spot-Module > Add-User-Wizard

Possible values:

No

Yes

Default:

No

2.24.19.17 Bandwidth profiles

In this table you manage individual bandwidth profiles. Using a bandwidth profile you have the option to selectively restrict the bandwidth (uplink and downlink) that is available to Public Spot users when their accounts are created.

SNMP ID:

2.24.19.17

Telnet path:

Setup > Public-Spot-Module > Add-User-Wizard

2.24.19.17.1 Profile name

Enter the name for the bandwidth profile here.

SNMP ID:

2.24.19.17.1

Telnet path:**Setup > Public-Spot-Module > Add-User-Wizard > Bandwidth-Profile****Possible values:**

String, max. 255 characters

Default:**2.24.19.17.2 TX bandwidth**

Enter the maximum uplink bandwidth (in bps), which should be available to a Public Spot user. To limit the bandwidth, for example, to 1 Mbps, enter the value 1024.

SNMP ID:

2.24.19.17.2

Telnet path:**Setup > Public-Spot-Module > Add-User-Wizard > Bandwidth-Profile****Possible values:**

0 to 4294967295

Default:

0

2.24.19.17.3 RX bandwidth

Enter the maximum uplink bandwidth (in bps), which should be available to Public Spot users. To limit the bandwidth, for example, to 1 Mbps, enter the value 1024.

SNMP ID:

2.24.19.17.3

Telnet path:**Setup > Public-Spot-Module > Add-User-Wizard > Bandwidth-Profile****Possible values:**

0 to 4294967295

Default:

0

2.24.20 VLAN table

By default, all data is routed via the relevant interface. However if VLAN-ID tags are specified, the only data to be routed via the relevant interface is that tagged with the specified VLAN-ID. Only select VLAN-IDs here if you do not want all data packets to be routed via the corresponding interface.

Telnet path: Setup/Public-Spot-Module

2.24.20.1 VLAN-ID

Enter the VLAN ID here.

Telnet path: /Setup/Public-Spot-Module/Add-User-Wizard/VLAN-Table/VLAN-ID

Possible values:

- 0 to 4096

Default: Blank

2.24.21 Login page type

Here you select the protocol to be used by the Public Spot to display the login pages.

Telnet path: /Setup/Public-Spot-Module/Login-Page-Type

Possible values:

- HTTP
- HTTPS

Default: HTTP

2.24.22 Device hostname

Certificates are normally issued for DNS names, so the Public Spot must specify the certificate's DNS name as the destination and not an internal IP address. This name has to be resolved by the DNS server to provide the corresponding IP address of the Public Spot.

Telnet path: Setup/Public-Spot-Module

Possible values:

- Max. 31 characters

Default: Blank

2.24.23 MAC-Address-Table

This table contains the WLAN clients that can automatically authenticate to the Public Spot using the MAC address.

SNMP ID:

2.24.23

Telnet path:

Setup > Public-Spot

2.24.23.1 MAC address

MAC address of the WLAN client that can use automatic authentication.

SNMP ID:

2.24.23.1

Telnet path:

Setup > Public-Spot-Module > MAC-Address-Table

Possible values:

Valid MAC address, 12 characters

Default:

2.24.23.2 User name

User name of the WLAN client that can use automatic authentication. The Public Spot takes this name for the optional session accounting by means of RADIUS server.

SNMP ID:

2.24.23.2

Telnet path:

Setup > Public-Spot-Module > MAC-Address-Table

Possible values:

A name that is unique within this table; maximum 32 alphanumeric characters

Default:

2.24.23.3 Provider

The Public Spot takes this provider for the optional session accounting by means of RADIUS server.

SNMP ID:

2.24.23.3

Telnet path:

Setup > Public-Spot-Module > MAC-Address-Table

Possible values:

One of the RADIUS servers defined in the provider list.

Default:

2.24.24 MAC-Address-Check-Provider

The Public Spot uses this provider to authenticate the MAC address by means of RADIUS server.



If no provider is selected, no authentication of the MAC address by RADIUS server takes place. In this case, only those WLAN clients listed in the MAC address table can authenticate at the Public Spot without logging on.

SNMP ID:

2.24.24

Telnet path:

Setup > Public-Spot >

Possible values:

One of the RADIUS servers defined in the provider list.

Default:

2.24.25 MAC-Address-Check-Provider

If a MAC address authentication is rejected by the RADIUS server, the Public Spot saves this rejection for the lifetime defined here (in seconds). The Public Spot responds directly to further requests for the same MAC address, without forwarding it to the RADIUS server first.

SNMP ID:

2.24.25

Telnet path:**Setup > Public-Spot****Possible values:**

0 to 4294967295

Default:

60

2.24.26 Station table limit

You can increase the maximum number of clients up to 65,536.

SNMP ID:

224.26

Telnet path:**Setup > Public-Spot-Module > Station-Table-Limit****Possible values:**

16 to 65536

Default:

8.192

 While the device is operating, changes to the station table only come into immediate effect if the table has been extended. Restart the access point in order to immediately reduce the size of the station table.

2.24.30 Free server

Enter the IP address of the public page used by your Public Spot service. This page should provide information enabling the new user to contact you and register.

Telnet path: /Setup/Public-Spot-Module/Free-Server**Possible values:**

- Max. 64 characters

Default: Blank

2.24.31 Free networks

In addition to freely available web servers, you can define other networks which your customers can access without having to log on. As of LCOS version 8.80 you also have the option to enter the hostname using wildcards.

SNMP ID:

2.24.31

Telnet path:**Setup > Public-Spot-Module > Free -Networks**

2.24.31.1 Host name

With this input field in the **Free networks** table, you can define a server, network, or individual web pages, which customers may use without a login. Here you can enter either an IP-address or a host name, both of which allow the use of wildcards. This allows you to enter values such as "203.000.113.*", "google.??*" or "*.wikipedia.org". The table is dynamic and the display is adjusted according to the number of host names and IP addresses that you enter.

SNMP ID:

2.24.31.1

Telnet path:**Setup > Public-Spot-Module > Free-networks > Host-name****Possible values:**

Max. 64 Characters, including letters, numbers, hyphens, periods (.), and wildcards (?, *).

Default:

Blank

2.24.31.2 Mask

Enter the associated netmask here. If you wish to authorize just a single workstation with the previously specified IP address, enter 255.255.255.255 here. If you wish to authorize a whole IP network, enter the corresponding netmask.

SNMP ID:

2.24.31.2

Telnet path:**Setup > Public-Spot-Module > Free-networks > Mask****Possible values:**

Max. 15 characters

Default:

0.0.0.0

2.24.32 Free hosts minimum TTL

The configuration of the Public Spots can allow users to visit unlocked web pages, web servers or networks, free of charge and without requiring a login. The access point directs the visitors to the IP addresses corresponding to the host name. The access point saves the host names and the corresponding IP addresses in the state tables **Status > Public-Spot > Free-hosts** and **Status > Public-Spot > Free-networks**.

This value determines the time in seconds for which the addresses in the status table **Free hosts** are valid (TTL: "Time to live").

SNMP ID:

2.24.32

Telnet path:**Setup > Public-Spot-Module > Free-Hosts-Minimum-TTL****Possible values:**

Max. 10 characters

Special values:

0: The validity period is set by the duration in the DNS response (TTL).

Default:

300

2.24.33 Login-Text

The setting allows you to specify a custom text that the device inserts into the box on the login form of the Public Spot module's authentication page. To type umlauts, you should use their HTML equivalents (such as `ü` ; for `ü`), because the text is directly embedded in the Web page. You can also use HTML tags to structure and format the text. Example:

```
Herzlich Willkommen!<br/><i>Bitte füllen Sie das Formular aus.</i>
```

SNMP ID:

2.24.33

Telnet path:

Setup > Public-Spot-Module

Possible values:

Any string, max. 254 characters from

```
[0-9][A-Z][a-z] @{|}~!$%&'()+-./:;<=>?[\]^_.*`
```

Default:

2.24.34 WAN connection

The Public Spot module monitors the connection status of the remote station named here. If the WAN connection should fail, a corresponding message appears on the error page shown to unauthenticated users. This gives potential users information about the lack of network availability in advance.

If no remote station is named, the Public Spot module will not output connection errors on the error page. In case of a failure of the WAN connection, unauthenticated users will instead experience a connection timeout by their browser.

Already authenticated users, however, always receive an error message from their browser, irrespective of the error page.

SNMP ID:

2.24.34

Telnet path:

Setup > Public-Spot-Module

Possible values:

Valid name of a remote station, max. 16 characters

Default:

2.24.35 Print logo and header image

In the default settings, the device outputs a voucher with the header image "Hotspot" and the logo "Powered by LANCOM". You have the option of disabling these graphics directly on the device without having to upload a customized version of the voucher template without the graphics. If you disable the graphics, a text-only voucher is issued.

SNMP ID:

2.24.35

Telnet path:**Setup > Public-Spot-Module****Possible values:**

No

Yes

Default:

Yes

2.24.36 User must accept GTC

By enabling this parameter, certain modes of authentication require the user to authenticate and also acknowledge the general terms and conditions of use. In this case, the Public Spot login page displays an additional option, which prompts the user to accept the terms of use before registering and/or authenticating. Users who explicitly do not agree to these terms and conditions cannot login to the Public Spot.

The following login modes can be combined with an acknowledgment of the terms and conditions:

- User+password
- MAC+user+password
- E-mail
- E-mail2SMS



Remember to upload your custom page template to the device before you request a confirmation of the terms and conditions of use.

SNMP ID:

2.24.36

Telnet path:**Setup > Public-Spot-Module****Possible values:**

No

Yes

Default:

No

2.24.37 Print logout link

This parameter determines whether a voucher printout shows the URL for logging out from the Public Spot.



In order for the correct URL to appear on the voucher, the parameter **Device host name** (SNMP ID 2.24.22) must contain the value `logout`.

SNMP ID:

2.24.37

Telnet path:**Setup > Public-Spot-Module**

Possible values:

No

Yes

Default:

Yes

2.24.40 XML interface

Configure the XML interface here.

SNMP ID:

2.24.40

Telnet path:**Setup > Public-Spot-Module > XML-interface**

2.24.40.1 Operating

Enable the XML interface here.

SNMP ID:

2.24.40.1

Telnet path:**Setup > Public-Spot-Module > XML-interface****Possible values:**

Yes

No

Default:

No

2.24.40.2 Radius authentication

This item enables or disables authentication by a RADIUS server when using the XML interface of the Public Spot.



The additional authentication by RADIUS server is only active if the Public Spot's XML interface is enabled (see [XML interface](#)).

SNMP ID:

2.24.40.2

Telnet path:**Setup > Public-Spot-Module > XML-interface****Possible values:**

Yes: The Public Spot forwards the request to the internal RADIUS server, or a RADIUS re-direct transfers it via a realm to an external RADIUS server.

No: No additional authentication necessary

Default:

Yes

2.24.41 Authentication modules

In this menu option you define individual parameters for using the network login, and you specify how and with what parameters the authentication is performed and the login data is transmitted.

SNMP ID:

2.24.41

Telnet path:**Setup > Public-Spot-Module > Authentication-Module**

2.24.41.1 E-mail authentication

This menu specifies the settings for authentication to the network and transmission of the credentials. The latter is done by e-mail.

SNMP ID:

2.24.41.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication**

2.24.41.1.1 Limit e-mails per hour

Enter the maximum number of e-mails sent within one hour to Public-Spot users with login data.

SNMP ID:

2.24.41.1.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Limit-e-mails-per-Hour****Possible values:**

Max. 5 numbers

Default:

100

2.24.41.1.3 Subject

Enter the subject line of the e-mail that is sent.

The subject line may also contain the following control characters:

- `\n`: CRLF (carriage return, line feed)
- `\t`: Tabulator
- `\xy`: ASCII code of the corresponding character

 You can use these control characters in the subject line, as well as in the text content for e-mail or e-mail2SMS. If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

SNMP ID:

2.24.41.1.3

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Subject****Possible values:**

Max. 250 characters

Default:

Your Public Spot Account

2.24.41.1.4 Body

With this parameter you can specify the contents of the e-mail, where "\$SPotPasswd" is the variable for the generated password.

The body text may also contain the following control characters:

- \n: CRLF (carriage return, line feed)
- \t: Tabulator
- \xy: ASCII code of the corresponding character

 You can use these control characters in the subject line, as well as in the text content for e-mail or e-mail2SMS. If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

SNMP ID:

2.24.41.1.4

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Body****Possible values:**

Max. 500 characters

Default:

Your password for LANCOM Public Spot is \$SPotPasswd.

2.24.41.1.5 Maximum request attempts

With this parameter you specify how many different credentials can be requested for a MAC address within one day.

SNMP ID:

2.24.41.1.5

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Max-Request-Attempts**

Possible values:

Max. 5 numbers

Default:

3

2.24.41.1.6 Local e-mail address

Enter the sender e-mail address for the e-mail that is sent.

SNMP ID:

2.24.41.1.6

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Local-E-mail-Address

Possible values:

Valid e-mail address with a maximum of 150 characters.

Default:

Blank

2.24.41.1.7 Name

Enter the sender name for the e-mail that is sent.

SNMP ID:

2.24.41.1.7

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Real-Name

Possible values:

Max. 150 characters

Default:

Blank

2.24.41.1.8 Black-White-Domain-List

In this menu you have the possibility to add your own list of domains for e-mail providers as a "blacklist" or as a "whitelist". Set the menu to "blacklist", if you want to completely block the listed providers. Use "Whitelist" to generally allow the listed providers.

SNMP ID:

2.24.41.1.8

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Black-White-Domain-List

Possible values:

Blacklist

Whitelist

Default:

Blacklist

2.24.41.1.9 Domain-List

With this list, you can specify whether you want e-mails from certain e-mail providers to be generally accepted or rejected. Use the "Add" button to add individual providers to the list. With the *Black-White-Domain-List* you determine whether you accept or reject a provider.

 Please note that a Public Spot operating with an empty domain list will black-list (reject) all domains.

SNMP ID:

2.24.41.1.9

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Domain-List****Possible values:**

Valid e-mail domains (such as @hotmail.com) with a maximum of 150 characters.

Default:

Blank

2.24.41.1.9.1 Domain

Using this entry you define the e-mail domains that you allow or prohibit in the case of logins by your Public Spot users via e-mail. With the *Black-White-Domain-List* you determine whether you accept or reject a provider.

 Please note that a Public Spot operating with an empty domain list will black-list (reject) all domains.

SNMP ID:

2.24.41.1.9.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Domain-List****Possible values:**

Valid e-mail domains (such as @hotmail.com) with a maximum of 150 characters.

Default:

Blank

2.24.41.1.20 Name

This table is used to manage the different language variants for the sender names used by the Public Spot module in the e-mails containing the login credentials. If you do not specify any text for a language, the device automatically enters the internal default text.

SNMP ID:

2.24.41.1.20

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication****2.24.41.1.20.1 Language**

This parameter shows the language variant for the sender name.

SNMP ID:

2.24.41.1.20.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Real-Name****2.24.41.1.20.2 Content**

This parameter sets the sender name for the selected language.

SNMP ID:

2.24.41.1.20.2

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Real-Name****Possible values:**

Any string, max. 251 characters from

```
[0-9][A-Z][a-z]@{|}~!$%&'()+-./:;<=>?[\\]^_.*`
```

Default:**2.24.41.1.21 Body**

This table is used to manage the different language variants for the message text used by the Public Spot module for sending the login credentials via e-mail. If you do not specify any text for a language, the device automatically enters the internal default text.

SNMP ID:

2.24.41.1.21

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication****2.24.41.1.21.1 Language**

This parameter shows the language variant for the message text.

SNMP ID:

2.24.41.1.21.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Body**

2.24.41.1.21.2 Content

This parameter specifies the message text for the selected language. You can make use of a variety of variables and control characters. The variables are automatically populated with values when the Public Spot module sends the e-mail to the user.

The following **variables** are available:

\$PSpotPasswd

Placeholder for user-specific password for the Public Spot access.

\$PSpotLogoutLink

Placeholder for the logout URL of the Public Spot in the form `http://<IP address of the Public Spot>/authen/logout`. This URL allows users to logout of the Public Spot if, after a successful login, the session window (which also contains this link) was blocked by the browser or closed by the Public Spot user.

The following **control characters** are available:

\n

CRLF (carriage return, line feed)

\t

Tabulator

\<ASCII>

ASCII code of the corresponding character



If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

SNMP ID:

2.24.41.1.21.2

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Body

Possible values:

Any string, max. 251 characters from

```
[0-9][A-Z][a-z] @{|}~!$%&'()+-./:;<=>?[\\]^_.*`
```

Default:

2.24.41.1.22 Subject

This table is used to manage the different language variants for the subject line used by the Public Spot module in the e-mails containing the login credentials. If you do not specify any text for a language, the device automatically enters the internal default text.

SNMP ID:

2.24.41.1.22

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication

2.24.41.1.22.1 Language

This parameter shows the language variant for the subject line.

SNMP ID:

2.24.41.1.22.1

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Subject

2.24.41.1.22.2 Content

This parameter specifies the subject line for the selected language. You can make use of the following control characters.

\n

CRLF (carriage return, line feed)

\t

Tabulator

\<ASCII>

ASCII code of the corresponding character



If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

SNMP ID:

2.24.41.1.22.2

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail-Authentication > Subject

Possible values:

Any string, max. 251 characters from

```
[0-9][A-Z][a-z] @{|}~!$%&'()+-./:;<=>?[\]^_.*`
```

Default:

2.24.41.2 E-Mail2SMS authentication

This menu specifies the settings for authentication to the network and transmission of the credentials. The latter is done by SMS.

SNMP ID:

2.24.41.2

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication

2.24.41.2.1 Limit e-mails per hour

Enter the maximum number of e-mails sent within one hour to Public-Spot users with login data.

SNMP ID:

2.24.41.2.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Limit-e-mails-per-Hour****Possible values:**

Max. 5 numbers

Default:

100

2.24.41.2.3 Subject

Enter the subject line of the e-mail that is sent. Keep in mind any formatting specifications for the SMS gateway.

The subject line may also contain the following control characters:

- `\n`: CRLF (carriage return, line feed)
- `\t`: Tabulator
- `\xy`: ASCII code of the corresponding character

 You can use these control characters in the subject line, as well as in the text content for e-mail or e-mail2SMS. If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

You can use the following variables provided that the your e-mail2SMS gateways allows or requires them:

- `$PSpotUserMobileNr` for the user's mobile phone number
- `$PSpotPasswd` for the user's password generated by the Public Spot

 The Public Spot transmits the user's mobile phone number set with the variable `$PSpotUserMobileNr` without any leading zeros to the SMS gateway. If the SMS gateway expects a certain string for the country code (e. g. "00" or "+"), then enter this prefix in front of the variable.

SNMP ID:

2.24.41.2.3

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Subject****Possible values:**

Max. 250 characters

Default:Your password for LANCOM Public Spot is `$PSpotPasswd`.**2.24.41.2.4 Maximum request attempts**

With this parameter you specify how many different credentials can be requested for a MAC address within one day.

SNMP ID:

2.24.41.2.4

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Max-Request-Attempts

Possible values:

Max. 5 numbers

Default:

3

2.24.41.2.5 Local e-mail address

Enter the sender e-mail address for the e-mail that is sent.

SNMP ID:

2.24.41.2.5

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Local-E-mail-Address

Possible values:

Max. 150 characters

Default:

Blank

2.24.41.2.6 Name

Enter the sender name of the SMS.

SNMP ID:

2.24.41.2.6

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Real-Name

Possible values:

Max. 150 characters

Default:

Blank

2.24.41.2.12 Body

This parameter sets the contents of the sent e-mail. Keep in mind any formatting specifications for the SMS gateway.

The body text may also contain the following control characters:

- \n: CRLF (carriage return, line feed)
- \t: Tabulator
- \xy: ASCII code of the corresponding character

-
-  You can use these control characters in the subject line, as well as in the text content for e-mail or e-mail2SMS. If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

You can use the following variables provided that the your e-mail2SMS gateways allows or requires them:

- `$PSpotUserMobileNr` for the user's mobile phone number
- `$PSpotPasswd` for the user's password generated by the Public Spot

-
-  The Public Spot transmits the user's mobile phone number set with the variable `$PSpotUserMobileNr` without any leading zeros to the SMS gateway. If the SMS gateway expects a certain string for the country code (e. g. "00" or "+"), then enter this prefix in front of the variable.

SNMP ID:

2.24.41.2.12

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Body

Possible values:

Max. 512 characters

Default:

#Key#Route#From#

2.24.41.2.13 Gateway e-mail address

Here you enter the address of your e-mail2SMS gateway for sending the credentials via SMS message. Keep in mind any formatting specifications for the SMS gateway.

You can use the following variables provided that the your e-mail2SMS gateways allows or requires them:

- `$PSpotUserMobileNr` for the user's mobile phone number

SNMP ID:

2.24.41.2.13

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Gateway-e-mail-Address

Possible values:

Valid e-mail address of the gateway with maximum 150 characters. .

Default:

Blank

2.24.41.2.14 Allowed-Country-Codes

In this table you define the country codes that you allow in the case of a login by a Public Spot user via SMS (text message). A user can only have his login data sent to phone numbers with country codes that are included in this list.

SNMP ID:

2.24.41.2.14

Telnet path:

Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication

2.24.41.2.14.1 Name

Using this entry you assign a designation for the country code, for example, DE or Germany.

SNMP ID:

2.24.41.2.14.1

Telnet path:

Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication > Allowed-Country-Codes

Possible values:

String, max. 150 characters

Default:**2.24.41.2.14.2 Code**

Using this entry you assign the country code for the country that you want to add, for example, 0049 for Germany.

SNMP ID:

2.24.41.2.14.2

Telnet path:

Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication > Allowed-Country-Codes

Possible values:

Any valid country code, max. 5 characters

Default:

0

2.24.41.2.15 Send SMS

This parameter specifies how the device sends SMS text messages. You have a variety of choices, depending on the device type.

 To successfully deliver login credentials as a text message via a 3G/4G WWAN-enabled device, its internal SMS module must be set under **Setup > SMS**.

 SMS transmission is suitable for installations with a maximum throughput of 10 SMS per minute.

 In order to send login credentials via e-mail, a valid SMTP account must be set under **Setup > E-mail**.

SNMP ID:

2.24.41.2.15

Telnet path:

Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication

Possible values:**Send directly**

The credentials are sent as an SMS text message via the 3G/4G WWAN module in this device.

HTTP2SMS

The credentials are sent as an SMS text message via the 3G/4G WWAN module in another device

When registering with the Public Spot via SMS, you have the option of sending the access credentials via another LANCOM device equipped with a 3G/4G WWAN module. To use this option, you must store the address and the access data for the other device on the device that provides the Public Spot. In order to send the SMS, the Public Spot module logs on to the other device and uses a URL to initiate the transmission of the text message via the 3G/4G WWAN module in the other device.



Make sure that the SMS module on the other device is configured correctly. In addition, we recommended that you create an administrator without access rights (select **None**) and with just one function right, **Send SMS**.

SMS gateway

The access credentials are sent as an e-mail to an external E-Mail2SMS gateway, which then converts the e-mail to SMS.

Default:

SMS gateway

2.24.41.2.16 HTTP user name

With this parameter you specify the user name used by your device to authenticate at another LANCOM device.

SNMP ID:

2.24.41.2.16

Telnet path:

Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication

Possible values:

Max. 16 characters from [0-9][A-Z][a-z]@{|}~!\$%&'()+-./:;<=>?[\]^_.*`

Default:

empty

2.24.41.2.17 HTTP password

With this parameter you specify the password for the user name used by your device to authenticate at another LANCOM device.

SNMP ID:

2.24.41.2.17

Telnet path:

Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication

Possible values:

Max. 16 characters from [0-9][A-Z][a-z]@{|}~!\$%&'()+-./:;<=>?[\]^_.*`

Default:*empty***2.24.41.2.18 HTTP gateway address**

This parameter specifies the IP address of the other LANCOM device that is to be used for sending SMS.

SNMP ID:

2.24.41.2.18

Telnet path:**Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication****Possible values:**Valid IPv4/IPv6 address, max. 15 characters from `[0-9][A-F][a-f]:./`**Default:***empty***2.24.41.2.23 Name**

This table is used to manage the different language variants for the sender names used by the Public Spot module for sending the login credentials via e-mail2MSM. If you do not specify any text for a language, the device automatically enters the internal default text.

SNMP ID:

2.24.41.2.23

Telnet path:**Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication****2.24.41.2.23.1 Language**

This parameter shows the language variant for the sender name.

SNMP ID:

2.24.41.2.23.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Real-Name****2.24.41.2.23.2 Content**

This parameter sets the sender name for the selected language.

SNMP ID:

2.24.41.2.23.2

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Real-Name****Possible values:**

Any string, max. 251 characters from

`[0-9][A-Z][a-z]@[|}~!$%&'()+-./:;<=>?[\]^_.#*^`

Default:**2.24.41.2.24 Body**

This table is used to manage the different language variants for the message text used by the Public Spot module for sending the login credentials via e-mail2MSM. If you do not specify any text for a language, the device automatically enters the internal default text.

SNMP ID:

2.24.41.2.24

Telnet path:**Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication****2.24.41.2.24.1 Language**

This parameter shows the language variant for the message text.

SNMP ID:

2.24.41.2.24.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Body****2.24.41.2.24.2 Content**

This parameter specifies the message text for the selected language. You can make use of a variety of variables and control characters. The variables are automatically populated with values when the Public Spot module sends the e-mail to the SMS gateway.

The following **variables** are available:

\$PSpotPasswd

Placeholder for user-specific password for the Public Spot access.

\$PSpotLogoutLink

Placeholder for the logout URL of the Public Spot in the form `http://<IP address of the Public Spot>/authen/logout`. This URL allows users to logout of the Public Spot if, after a successful login, the session window (which also contains this link) was blocked by the browser or closed by the Public Spot user.

The following **control characters** are available:

\n

CRLF (carriage return, line feed)

\t

Tabulator

\<ASCII>

ASCII code of the corresponding character



If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

SNMP ID:

2.24.41.2.24.2

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Body****Possible values:**

Any string, max. 251 characters from

`[0-9][A-Z][a-z]@[]~!$%&'()+-./:;<=>?[\]^_.*``**Default:****2.24.41.2.25 Subject**

This table is used to manage the different language variants for the subject line used by the Public Spot module for sending the login credentials via e-mail2MSM. If you do not specify any text for a language, the device automatically enters the internal default text.

SNMP ID:

2.24.41.2.25

Telnet path:**Setup > Public-Spot-Module > Authentication-Modules > E-mail2SMS-Authentication****2.24.41.2.25.1 Language**

This parameter shows the language variant for the subject line.

SNMP ID:

2.24.41.2.25.1

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Subject****2.24.41.2.25.2 Content**

This parameter specifies the subject line for the selected language. You can make use of the following control characters.

\n

CRLF (carriage return, line feed)

\t

Tabulator

\<ASCII>

ASCII code of the corresponding character



If the e-mail2SMS provider requires a variable which contains a backslash ("\"), you have to prefix this with another "\". This prevents the transformation of the "\" by LCOS.

SNMP ID:

2.24.41.2.25.2

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > E-mail2SMS-Authentication > Subject

Possible values:

Any string, max. 251 characters from

```
[0-9][A-Z][a-z]@{ }~!$%&'()+-./:;<=>?[\]^_.*`
```

Default:**2.24.41.3 User-Template**

In this menu you manage the default values which the Public Spot uses to automatically create a user account if the login is made via e-mail, SMS (text message) or after confirming an agreement. The configurable parameters correspond closely to those of the setup wizard **Create Public Spot account**.

SNMP ID:

2.24.41.3

Telnet path:

Setup > Public-Spot-Module > Authentication-Module

2.24.41.3.2 Comment

Using this entry you specify a comment or informational text which the RADIUS server adds to an automatically created user account.

SNMP ID:

2.24.41.3.2

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > User-Template

Possible values:

String, max. 251 characters

Default:**2.24.41.3.3 Volume-Budget**

Using this entry you define the volume budget which automatically created users are assigned. A value of 0 disables the function.

SNMP ID:

2.24.41.3.3

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > User-Template

Possible values:

0 to 4294967295

Default:

0

2.24.41.3.4 Time-Budget

Using this entry you define the time budget which automatically created users are assigned. A value of 0 disables the function.

SNMP ID:

2.24.41.3.4

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > User-Template****Possible values:**

0 to 4294967295

Default:

0

2.24.41.3.5 Rel.-Expiry

Using this entry you define the relative expiry time of an automatically created user account (in seconds). The **Expiry-type** that you chose must include `relative` in order for this setting to work. The validity of the account terminates after the time period specified in this field from the time of the first successful login of the user.

SNMP ID:

2.24.41.3.5

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > User-Template****Possible values:**

0 to 4294967295

Default:

3600

2.24.41.3.6 Abs.-Expiry

Using this entry you define the absolute expiry time of an automatically created user account (in days). The **Expiry-type** that you chose must include `absolute` in order for this setting to work. The validity of the account terminates at the time specified in this field, calculated from the day of the creation of the account.

SNMP ID:

2.24.41.3.6

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > User-Template****Possible values:**

0 to 4294967295

Default:

365

2.24.41.3.7 Expiry-Type

Using this entry you define how an automatically created Public Spot user account expires. You can specify whether the validity period of a user account is absolute (e.g. expires on a set date) and/or relative (elapsed time since the first successful login). If you select both values, the expiry time depends on which case occurs first.

SNMP ID:

2.24.41.3.7

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > User-Template****Possible values:**

Absolute

Relative

Default:

Absolute, relative

2.24.41.3.8 Max-Concurrent-Logins

Using this entry you set the maximum number of devices which can concurrently access each automatically created account. The value 0 stands for "unlimited".

 In order for this setting to work, the parameter **Multiple-Login** must be enabled.

SNMP ID:

2.24.41.3.8

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > User-Template****Possible values:**

0 to 4294967295

Default:

1

2.24.41.3.9 Multiple-Login

Using this entry you enable or disable whether a user may login and logout multiple times to a Public Spot with an automatically created account, as long as their user account is valid. If you disable this entry, a user can only login or out of a Public Spot once. A repeated login is not possible even if the user account itself is still valid.

SNMP ID:

2.24.41.3.9

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > User-Template****Possible values:**

Yes

No

Default:

Yes

2.24.41.3.10 Tx-Limit

With this setting you limit the maximum transmission bandwidth (in kbps), which is available to the user. The value 0 disables the limit (unlimited bandwidth).

SNMP ID:

2.24.41.3.10

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > User-Template

Possible values:

0 to 4294967295

Default:

0

2.24.41.3.11 Rx-Limit

With this setting you limit the maximum receiving bandwidth (in kbps), which is available to the user. The value 0 disables the limit (unlimited bandwidth).

SNMP ID:

2.24.41.3.11

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > User-Template

Possible values:

0 to 4294967295

Default:

0

2.24.41.4 Login after consent agreement

In this menu, you specify the settings for automatic login and authentication via RADIUS.

SNMP ID:

2.24.41.4

Telnet path:

Setup > Public-Spot-Module > Authentication-Module

2.24.41.4.1 Maximum requests per hour

This entry indicates the maximum number of users per hour, which can automatically create an account on the device. Decrease this value to reduce performance degradation caused by an excessive number of users.

SNMP ID:

2.24.41.4.1

Telnet path:

Setup > Public-Spot-Module > Authentication-Module > Login-via-Agreement

Possible values:

0 to 65535

Default:

100

2.24.41.4.2 User accounts per day

This entry displays the number of accounts that a user can create on one day for the designated login mode. If this value is reached and the user session has expired, a user can not automatically register and get authenticated on the Public Spot on the specified day.

SNMP ID:

2.24.41.4.2

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > Login-via-Agreement****Possible values:**

0 to 65535

Default:

1

2.24.41.4.3 Username prefix

This entry contains the prefix which is added to the automatically generated Public Spot username, when it is automatically generated by the device in the login mode "No Authentication" (automatic login and authentication).

SNMP ID:

2.24.41.4.3

Telnet path:**Setup > Public-Spot-Module > Authentication-Module > Login-via-Agreement****Possible values:**

String, max. 10 characters

Default:

free

2.24.42 WISPr

This menu contains the WISPr settings.

SNMP ID:

2.24.42

Telnet path:**Setup > Public-Spot-Module****2.24.42.1 Operating**

Enable or disable the WISPr function for your device.

SNMP ID:

2.24.42.1

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

No

Yes

Default:

No

2.24.42.2 Location ID

Use this ID to assign a unique location number or ID for your device, for example, in the format `isocc=<ISO_Country_Code>,cc=<E.164_Country_Code>,ac=<E.164_Area_Code>,network=<SSID/ZONE>`

SNMP ID:

2.24.42.2

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

String, max. 255 characters, with the following restrictions:

Alphanumeric characters: `[0-9][A-Z][a-z]`special characters: `@{|}~!$%&'()+-./:;<=>?[\]^_`.`**Default:****2.24.42.3 Operator name**

Enter the name of the hotspot operator, e.g., `providerX`. This information helps the user to manually select an Internet service provider.

SNMP ID:

2.24.42.3

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

String, max. 255 characters, with the following restrictions:

Alphanumeric characters: `[0-9][A-Z][a-z]`special characters: `@{|}~!$%&'()+-./:;<=>?[\]^_`.`**Default:****2.24.42.4 Location name**

Describe the location of your device, e.g., `CafeX_Market3`. This helps to better identify a user in your hotspot.

SNMP ID:

2.24.42.4

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

String, max. 255 characters, with the following restrictions:

```
Alphanumeric characters: [0-9][A-Z][a-z]
special characters:      @{|}~!$%&'()+-./:;<=>?[\]^_`.
```

Default:**2.24.42.5 Login URL**

Enter the HTTPS address, that the WISPr client uses to transfer the credentials to your Internet service provider.

SNMP ID:

2.24.42.5

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

HTTPS URL, max. 255 characters

Default:**2.24.42.6 Logout URL**

Enter the HTTPS address that a WISPr client uses for logging off at your Internet service provider.

SNMP ID:

2.24.42.6

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

HTTPS URL, max. 255 characters

Default:**2.24.42.7 Disconnect login URL**

Enter the HTTPS address to which the device forwards a WISPr client if authentication fails.

SNMP ID:

2.24.42.7

Telnet path:**Setup > Public-Spot-Module > WISPr****Possible values:**

HTTPS URL, max. 255 characters

Default:

2.24.42.8 Maximum authentication errors

Enter the maximum number of failed attempts which the login page of your Internet service provider allows.

SNMP ID:

2.24.42.8

Telnet path:

Setup > Public-Spot-Module > WISPr

Possible values:

0 to 65535

Default:

5

2.24.50 Automatic re-login

Mobile WLAN clients (e.g., smart phones and tablet PCs) automatically log in to known WLAN networks (SSID) when they reenter the cell. In this case, many apps automatically and directly access web content using the web browser in order to request current data (such as e-mails, social networks, weather reports, etc.) In these cases, it is impractical to make the user manually log in to the Public Spot again in the browser.

With automatic re-login, the user only has to be identified on the Public Spot the first time that they are within the cell. After a temporary absence, the user can seamlessly use the Public Spot again.

The Public Spot records the manual login and logout as well as a re-login in the SYSLOG. It stores the same login data for a re-login that a user had employed for initial authentication.

 Please note that authentication only takes place using the MAC address when auto-re-login is enabled.

In this menu you configure the parameters for automatic re-login.

SNMP ID:

2.24.50

Telnet path:

Setup > Public-Spot-Module

2.24.50.1 Operating

Enable or disable the automatic re-login with this action.

 The authentication is only performed on the MAC address of the WLAN client when re-login is enabled. Since it can lead to security problems, re-login is disabled by default.

SNMP ID:

2.24.50.1

Telnet path:

Setup > Public-Spot-Module > Auto-Re-Login

Possible values:

Yes

No

Default:

No

2.24.50.2 Station table limit

You can increase the maximum number of clients that are allowed to use the re-login function to up to 65,536 participants.

 While the device is operating, the only changes to the station table that take immediate effect are the additions to it. Restart the access point in order to immediately reduce the size of the station table.

SNMP ID:

2.24.50.2

Telnet path:**Setup > Public-Spot-Module > Auto-Re-Login****Possible values:**

16 to 65536

Default:

8192

2.24.50.3 Exists timeout

This value indicates how long the Public Spot stores the credentials in the table of a WLAN client for a re-login. After this period (in seconds) has expired, the Public Spot user must log in again using the login page of the Public Spot in the browser.

 If a Public Spot user has a time quota that is smaller than the timeout interval set here, this parameter has no effect. An automatic re-login does not occur if the user has the status "unauthenticated".

SNMP ID:

2.24.50.3

Telnet path:**Setup > Public-Spot-Module > Auto-Re-Login****Possible values:**

Max. 10 characters

Default:

259200

2.24.60 Login text

This table is used to manage the login text.

The Public Spot module gives you the option to specify customized text, which appears on the login page inside the box of the registration form. This **login text** is stored in multiple languages, and the language which is issued depends on

the language settings of the user's Web browser. If you do not specify any individual login text for a language, the device falls back to the English login text (if available).

SNMP ID:

2.24.60

Telnet path:**Setup > Public-Spot-Module**

2.24.60.1 Language

This parameter indicates the language for the login text.

SNMP ID:

2.24.60.1

Telnet path:**Setup > Public-Spot-Module > Login-Text**

2.24.60.2 Content

This parameter specifies the login text for the selected language. To type umlauts, you should use their HTML equivalents (such as `ü` ; for `ü`), because the text is directly embedded in the Web page. You can also use HTML tags to structure and format the text. Example:

```
Welcome!  
<i>Please fill out the form.</i>
```

SNMP ID:

2.24.60.2

Telnet path:**Setup > Public-Spot-Module > Login-Text****Possible values:**

Any string, max. 254 characters from

```
[0-9][A-Z][a-z] @{|}~!$%&'()+-./:;<=>?[\]^_.*`
```

Default:

2.25 RADIUS

This menu contains the settings for the RADIUS server.

SNMP ID: 2.25**Telnet path:** /Setup

2.25.4 Authentication timeout

This value specifies how many milliseconds should elapse before retrying RADIUS authentication.

Telnet path: /Setup/RADIUS**Possible values:**

- Max. 10 characters

Default: 5000

2.25.5 Authentication retry

This value specifies how many authentication attempts are made in total before a Reject is issued.

Telnet path: /Setup/RADIUS

Possible values:

- Max. 10 characters

Default: 3

2.25.9 Backup query strategy

This value specifies how the device should handle unanswered queries from multiple RADIUS servers.

Telnet path: /Setup/RADIUS/Backup-Query-Strategy

Possible values:

- Block: The device first returns the maximum number of repeat queries to the first server before forwarding them to the backup server.
- Cyclic: The device sends unanswered queries to the configured servers by turns.

Default: Block

2.25.10 Server

This menu contains the settings for the RADIUS server.

Telnet path: /Setup/RADIUS

2.25.10.1 Authentication port

Specify here the port used by the authenticators to communicate with the RADIUS server in the access point.

Telnet path: /Setup/RADIUS/Server

Possible values:

- Max. 5 numbers

Default: 0

Special values: 0: Switches the RADIUS server off.

2.25.10.2 Clients

Clients that can communicate with the RADIUS server are entered in the clients table.

Telnet path: /Setup/RADIUS/Server

2.25.10.2.1 IP network

IP network (IP address range) of RADIUS clients for which the password defined in this entry applies.

Telnet path: /Setup/RADIUS/Server/Clients

Possible values:

- Valid IP address.

Default: Blank

2.25.10.2.2 Secret

Password required by the client for access to the RADIUS server in the LANCOM access point.

Telnet path: /Setup/RADIUS/Server/Clients

Possible values:

- Max. 32 characters

Default: Blank

2.25.10.2.3 IP netmask

IP network mask of the RADIUS client.

Telnet path: /Setup/RADIUS/Server/Clients

Possible values:

- Valid IP address.

Default: Blank

2.25.10.2.4 Protocol

Protocol for communication between the internal RADIUS server and the clients.

Telnet path: /Setup/RADIUS/Server/Clients

Possible values:

- RADSEC
- RADIUS
- all

Default: RADIUS

2.25.10.3 Forward servers

If you wish to use RADIUS forwarding, you have to specify further settings here.

Telnet path: /Setup/RADIUS/Server

2.25.10.3.1 Realm

String with which the RADIUS server identifies the forwarding destination.

SNMP ID:

2.25.10.3.1

Telnet path:

Setup > RADIUS > Server > Forward-Server

Possible values:

Max. 64 characters

Default:

Blank

2.25.10.3.2 IP address

IP address of the RADIUS server to which the request is to be forwarded.

Telnet path: /Setup/RADIUS/Server/Forward-Servers

Possible values:

- Valid IP address.

Default: 00.0.0

2.25.10.3.3 Port

Open port for communications with the forwarding server.

Telnet path: /Setup/RADIUS/Server/Forward-Servers

Possible values:

- Max. 10 characters

Default: 0

2.25.10.3.4 Secret

Password required for accessing the forwarding server.

Telnet path: /Setup/RADIUS/Server/Forward-Servers

Possible values:

- Max. 32 characters

Default: Blank

2.25.10.3.5 Backup

Alternative routing server that the RADIUS server forwards requests to when the first routing server is not reachable.

SNMP ID:

2.25.10.3.5

Telnet path:

Setup > RADIUS > Server > Forward-Server

Possible values:

Max. 64 characters

Default:

Blank

2.25.10.3.6 Loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

Telnet path: /Setup/RADIUS/Server/Forward-Servers

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

 If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used.

2.25.10.3.7 Protocol

Protocol for communication between the internal RADIUS server and the forwarding server.

Telnet path: /Setup/RADIUS/Server/Forward-Servers

Possible values:

- RADSEC
- RADIUS

Default: RADIUS

2.25.10.3.8 Acct.-IP-Address

Here you enter the IP address of the server to which the device forwards accounting data packets.

SNMP ID:

2.25.10.3.8

Telnet path:

Setup > RADIUS > Server > Forward-Server

Possible values:

Valid IPv4 address

Default:

0.0.0.0

2.25.10.3.9 Acct.-Port

Enter the port of the server to which the integrated RADIUS server forwards data packets for accounting.

SNMP ID:

2.25.10.3.9

Telnet path:

Setup > RADIUS > Server > Forward-Server

Possible values:

0 to 65535

Default:

0

2.25.10.3.10 Acct.-Secret

Enter the key (shared secret) for access to the accounting server here. Ensure that this key is consistent with that in the accounting server.

SNMP ID:

2.25.10.3.10

Telnet path:**Setup > RADIUS > Server > Forward-Servers****Possible values:**

Any key, max. 64 characters

Default:**2.25.10.3.11 Acct.-Loopback-Addr.**

Optionally enter a different address here (name or IP) to which the RADIUS forwarding accounting server sends its reply message.

By default, the server sends its replies back to the IP address of your device without having to enter it here. By entering an optional loopback address you change the source address and route used by the device to connect to the server. This can be useful, for example, when the server is available over different paths and it should use a specific path for its reply message.

SNMP ID:

2.25.10.3.11

Telnet path:**Setup > RADIUS > Server > Forward-Servers****Possible values:**

- Name of the IP network (ARF network), whose address should be used.
- INT for the address of the first Intranet
- DMZ for the address of the first DMZ



If an interface with the name "DMZ" already exists, the device will select that address instead.

- LB0...LB15 for one of the 16 loopback addresses or its name
- Any IPv4 address



If the sender address set here is a loopback address, these will be used **unmasked** on the remote client!

Default:**2.25.10.3.10 Acct.-Protocol**

Using this item you specify the protocol that the forwarding accounting server uses.

SNMP ID:

2.25.10.3.12

Telnet path:**Setup > RADIUS > Server > Forward-Server****Possible values:**RADIUS
RADSEC**Default:**

RADIUS

2.25.10.5 Default realm

This realm is used if the supplied username uses an unknown realm that is not in the list of forwarding servers.

SNMP ID:

2.25.10.5

Telnet path:

Setup > RADIUS > Server

Possible values:

Max. 64 characters

Default:

Blank

2.25.10.6 Empty realm

This realm is used when the specified username does not contain a realm.

SNMP ID:

2.25.10.6

Telnet path:

Setup > RADIUS > Server

Possible values:

Max. 64 characters

Default:

Blank

2.25.10.7 Users

In the following table, enter the data for the users that are to be authenticated by this server.

Telnet path: /Setup/RADIUS/Server/Users

Multiple logins

Allows a single user account to login multiple times simultaneously.

Possible values: Yes, No

Default: Yes



The multiple-login option must be deactivated if the RADIUS server is to monitor a time budget. The time budget can only be monitored if the user is running just one session at a time.

Expiry type

This option defines how the validity period is limited for a user account.

Possible values:

- Absolute: The validity of the user account terminates at a set time.
- Relative: The validity of the user account terminates a certain period of time after the first user login.

Default: Blank: The user account never expires, unless a predefined time or volume budget expires.

 The two options can be combined. In this case the user account expires when one of the two limiting values has been reached.

 The device must have a valid time in order for the device to work with user-account time budgets.

Abs. expiry

If "absolute" has been selected as the expiry type, the user account becomes invalid at the time defined by this value.

Possible values: Valid time information (date and time). Max. 20 characters from 0123456789/!:.Pp

Default: Blank

Special values: 0 switches off the monitoring of the absolute expiry time.

Rel. expiry

If "relative" has been selected as the expiry type, the user account becomes invalid after this time period has expired since the user logged in for the first time.

Possible values: Time span in seconds. Max. 10 characters from 0123456789

Default: 0

Special values: 0 switches off the monitoring of the relative expiry time.

Time budget

The maximum duration of access time for this user account. The user can use this duration of access time until a relative or absolute expiry time (if set) is reached.

Possible values: Time span in seconds. Max. 10 characters from 0123456789

Default: 0

Special values: 0 switches off the monitoring of the time budget.

Volume budget

The maximum data volume for this user account. The user can use this data volume until a relative or absolute expiry time (if set) is reached.

Possible values: Volume budget in Bytes. Max. 10 characters from 0123456789

Default: 0

Special values: 0 switches off the monitoring of data volume.

Comment

Comment on this entry.

Service type

The service type is a special attribute of the RADIUS protocol. The NAS (Network Access Server) sends this with the authentication request. The response to this request is only positive if the requested service type agrees with the user account service type.

Possible values:

- Framed: For checking WLAN MAC addresses via RADIUS or IEEE 802.1x.
- Login: For Public-Spot logins.
- Auth. only: For RADIUS authentication of dialup peers via PPP.
- Any

Default: Any

-
-  The number of entries permissible with the service type "any" or "login" is 64 or 256, depending on the model. This means that the table is not completely filled with entries for Public Spot access accounts (using the service type "Any") and it enables the parallel use of logins via 802.1x.

2.25.10.7.1 User name

User name.

Telnet path: /Setup/RADIUS/Server/Users

Possible values:

- Max. 48 characters

Default: Blank

2.25.10.7.2 Password

User password.

Telnet path: /Setup/RADIUS/Server/Users

Possible values:

- Max. 32 characters

Default: Blank

2.25.10.7.3 Limit authentication methods

This option allows you to place limitations on the authentication methods permitted for the user.

Telnet path: /Setup/RADIUS/Server/Users

Possible values:

- Any combination of the following values:
- PAP
- CHAP
- MSCHAP
- MSCHAPv2
- EAP
- All

Default: All

2.25.10.7.4 VLAN ID

Using this input field you assign the user an individual VLAN ID. After authentication by the RADIUS server, the individual VLAN ID overwrites a global VLAN ID that a user would otherwise obtain from the interface. The value 0 disables the assignment of an individual VLAN ID.

-
-  For technical reasons, the assignment of a VLAN ID requires a new address assignment by the DHCP server. As long as a client is not yet assigned a new address after successful authentication, the client is still in the previous (e.g., untagged) network. In order for clients to be transferred to the new network as quickly as possible, it is necessary to set the lease time of the DHCP server – in the setup menu **Setup > DHCP** – as short as possible. Possible values (in minutes) include, for example:

- **Max.-Validity-Minutes:** 2
- **Default-Validity-Minutes:** 1

Take into account that a strong reduction in global lease time can flood your network with DHCP messages, and when there is a larger number of users, it leads to an increased network load! Alternatively, you have the option of using a different DHCP server or allowing your users to manually request a new address by using their client. In the Windows command line this is done, for example, using the commands `ipconfig /release` and `ipconfig /renew`.



By assigning a VLAN-ID, the user loses his connection after the initial DHCP lease expires. The connection only remains stable as of the second lease, i.e. after successfully assigning the VLAN-ID.

SNMP ID:

2.24.42.8

Telnet path:

Setup > RADIUS > Server > Users

Possible values:

0 to 4094

Default:

4

2.25.10.7.5 Calling station ID mask

This mask is used to restrict the validity of the entry to certain IDs that are communicated by the calling station (wireless LAN client). When authenticating via 802.1x the calling station's MAC address is transmitted in ASCII format (capital letters only), with a hyphen separating pairs of characters (for example "00-10-A4-23-19-C0")

Telnet path: /Setup/RADIUS/Server/Users

Possible values:

- Max. 48 characters

Default: Blank

Special values: The wildcard * can be used to include whole groups of IDs and define them as mask.

2.25.10.7.6 Called station ID mask

This mask is used to restrict the validity of the entry to certain IDs that are communicated by the called station (access point's BSSID and SSID). When authenticating via 802.1x the called station's MAC address (BSSID) is transmitted in ASCII format (capital letters only), with a hyphen separating pairs of characters. The SSID is appended using a colon as separator (for example "00-10-A4-23-19-C0:AP1")

Telnet path: /Setup/RADIUS/Server/Users

Possible values:

- Max. 48 characters

Default: Blank

Special values: The wildcard * can be used to include whole groups of IDs and define them as mask. The mask "*:AP1*", for example, defines an entry that applies to a client in a radio cell with the name "AP1" irrespective of the access point that the client uses to log in. This allows the client to switch (roam) from one access point to the next while always using the same authentication data.

2.25.10.7.7 Tx limit

Limitation of bandwidth for RADIUS clients.

Telnet path: /Setup/RADIUS/Server/Users/Tx-Limit

Possible values:

- 0 to 4294967295 (2³²-1)

Default: 0

2.25.10.7.8 Rx limit

Limitation of bandwidth for RADIUS clients.

Telnet path: /Setup/RADIUS/Server/Users/Rx-Limit

Possible values:

- 0 to 4294967295 (2³²-1)

Default: 0

2.25.10.7.9 Multiple login

Allows or prohibits more than one parallel session with the same user ID. If parallel sessions are prohibited, the device rejects authentication requests for a user ID for which a session is already running in the active session accounting table. This is a prerequisite to enforce time and volume budgets.

Telnet path: /Setup/RADIUS/Server/Users/Multiple-Login

Possible values:

- Yes
- No

Default: Yes



The multiple-login option must be deactivated if the RADIUS server is to monitor a time budget. The time budget can only be monitored if the user is running just one session at a time.

2.25.10.7.10 Absolute expiry

If "absolute" has been selected as the expiry type, the user account becomes invalid at the time defined by this value.

Telnet path: /Setup/RADIUS/Server/Users/Abs.-Expiry

Possible values:

- Valid time information (date and time). Max. 20 characters from 0123456789/.

Default: 0

Special values: 0 switches off the monitoring of the absolute expiry time.

2.25.10.7.11 Time budget

The maximum duration of access time for this user account. The user can use this duration of access time until a relative or absolute expiry time (if set) is reached.

Telnet path: /Setup/RADIUS/Server/Users/Time-Budget

Possible values:

- Time span in seconds. Max. 10 characters from 0123456789

Default: 0

Special values: 0 switches off the monitoring of the time budget.

2.25.10.7.12 Volume budget

The maximum data volume for this user account. The user can use this data volume until a relative or absolute expiry time (if set) is reached.

Telnet path: /Setup/RADIUS/Server/Users/Volume-Budget

Possible values:

- Volume budget in Bytes. Max. 10 characters from 0123456789

Default: 0

Special values: 0 switches off the monitoring of data volume.

2.25.10.7.13 Expiry type

This option defines how the validity period is limited for a user account.

Telnet path: /Setup/RADIUS/Server/Users/Expiry-Type

Possible values:

- Absolute: The validity of the user account terminates at a set time.
- Relative: The validity of the user account terminates a certain period of time after the first user login.
- None: The user account never expires, unless a predefined time or volume budget expires.

Default: Absolute



The two options can be combined. In this case the user account expires when one of the two limiting values has been reached.



The device must have a valid time in order for the device to work with user-account time budgets.

2.25.10.7.14 Relative expiry

If "relative" has been selected as the expiry type, the user account becomes invalid after this time period has expired since the user logged in for the first time.

Telnet path: /Setup/RADIUS/Server/Users/Rel.-Expiry

Possible values:

- Time span in seconds. Max. 10 characters from 0123456789

Default: 0

Special values: 0 switches off the monitoring of the relative expiry time.

2.25.10.7.15 Comment

Comment on this entry.

Telnet path: LCOS Menu Tree/Setup/RADIUS/Server/Users/Comment

Possible values:

- Max. 64 characters

Default: Blank

2.25.10.7.16 Service type

The service type is a special attribute of the RADIUS protocol. The NAS (Network Access Server) sends this with the authentication request. The response to this request is only positive if the requested service type agrees with the user account service type. For example, the service type for Public Spot is 'Login' and for 802.1x 'Framed'.

Telnet path: /Setup/RADIUS/Server/Users/Service-Type

Possible values:

- Any
- Framed: For checking WLAN MAC addresses via RADIUS or IEEE 802.1x.
- Login: For Public-Spot logins.
- Auth. only: For RADIUS authentication of dialup peers via PPP.

Default: Any

 The number of entries permissible with the service type "any" or "login" is 64 or 256, depending on the model. This means that the table is not completely filled with entries for Public Spot access accounts (using the service type "Any") and it enables the parallel use of logins via 802.1x.

2.25.10.7.17 Case sensitive

This setting determines whether the RADIUS server handles the user name case-sensitive.

SNMP ID:

2.25.10.7.17

Telnet path:

Setup > RADIUS > Server > Users

Possible values:

Yes

No

Default:

Yes

2.25.10.7.18 WPA-Passphrase

Here you can specify the WPA passphrase with which users can login to the WLAN.

 The RADIUS server stores this passphrase in the user table. This enables a device which is connected to the LAN to operate as a central RADIUS server and use the benefits of LEPS (LANCOM Enhanced Passphrase Security).

SNMP ID:

2.25.10.7.18

Telnet path:

Setup > RADIUS > Server > Users

Possible values:

8 to 63 characters from the ASCII character set

Default:

2.25.10.7.19 Max-Concurrent-Logins

If you have enabled multiple logins, this parameter specifies how many clients can be concurrently logged in to this user account.

SNMP ID:

2.25.10.7.19

Telnet path:**Setup > RADIUS > Server > Users****Possible values:**

0 to 4294967295

Default:

0

2.25.10.7.20 Active

Using this parameter, you specifically enable or disable individual RADIUS user accounts. This makes it possible, for example, to disable individual accounts temporarily without deleting the entire account.

SNMP ID:

2.25.10.7.20

Telnet path:**Setup > RADIUS > Server > Users****Possible values:**

No

Yes

Default:

Yes

2.25.10.10 EAP

This menu contains the EAP settings.

Telnet path: /Setup/RADIUS/Server**2.25.10.10.1 Tunnel server**

This realm refers to the entry in the table of the forwarding server that is to be used for tunneled TTLS or PEAP requests.

Telnet path: /Setup/RADIUS/Server/EAP**Possible values:**

- Max. 24 characters

Default: Blank**2.25.10.10.2 TLS check username**

TLS authenticates the client via certificate only. If this option is activated, the RADIUS server additionally checks if the username in the certificate is contained in the RADIUS user table.

Telnet path: /Setup/RADIUS/Server/EAP**Possible values:**

- Yes
- No

Default: No

2.25.10.10.3 Reauthentication period

When the internal RADIUS server responds to a client request with a CHALLENGE (negotiation of authentication method not yet completed), the RADIUS server can inform the authenticator how long it should wait (in seconds) for a response from the client before issuing a new CHALLENGE.

Telnet path: /Setup/RADIUS/Server/EAP

Possible values:

- Max. 10 numbers

Default: 0

Special values: 0: No timeout is sent to the authenticator.

 The function is not supported by all authenticators.

2.25.10.10.4 Retransmit timeout

When the internal RADIUS server responds to a client request with an ACCEPT (negotiation of authentication method completed successfully), the RADIUS server can inform the authenticator how long it should wait (in seconds) before triggering repeat authentication of the client.

Telnet path: /Setup/RADIUS/Server/EAP

Possible values:

- Max. 10 numbers

Default: 0

Special values: 0: No timeout is sent to the authenticator.

 The function is not supported by all authenticators.

2.25.10.10.5 TTLS default tunnel method

Two authentication methods are negotiated when TTLS is used. A secure TLS tunnel is first negotiated using EAP. Then a second authentication method is negotiated in this tunnel. In each of these negotiating processes the server offers a method that the client can either accept (ACK) or reject (NAK). The the client rejects it, it sends the server a proposal for a method that it would like to use. If enabled in the server, the method proposed by the client is will be used. Otherwise the server breaks off negotiation.

This parameter is used to determine the method that the server offers to clients for authentication in the TLS tunnel. The value specified here can help to avoid rejected proposals and thus speed up the process of negotiation.

Telnet path: /Setup/RADIUS/Server/EAP

Possible values:

- None
- MD5
- GTC
- MSCHAPv2

Default: MD5

2.25.10.10.6 PEAP default tunnel method

Two authentication methods are negotiated when PEAP is used. A secure TLS tunnel is first negotiated using EAP. Then a second authentication method is negotiated in this tunnel. In each of these negotiating processes the server offers a method that the client can either accept (ACK) or reject (NAK). The the client rejects it, it sends the server a proposal for a method that it would like to use. If enabled in the server, the method proposed by the client is will be used. Otherwise the server breaks off negotiation.

This parameter is used to determine the method that the server offers to clients for authentication in the TLS tunnel. The value specified here can help to avoid rejected proposals and thus speed up the process of negotiation.

Telnet path: /Setup/RADIUS/Server/EAP

Possible values:

- None
- MD5
- GTC
- MSCHAPv2

Default: MSCHAPv2

2.25.10.10.7 Default method

This value specifies which method the RADIUS server should offer to the client outside of a possible TTLS/PEAP tunnel.

Telnet path: /Setup/RADIUS/Server/EAP

Possible values:

- None
- MD5
- GTC
- MSCHAPv2
- TLS
- TTLS
- PEAP

Default: MD5

2.25.10.10.8 Default MTU

Define the Maximum Transmission Unit to be used by the device as the default for EAP connections.

Telnet path: /Setup/RADIUS/Server/EAP/Default-MTU

Possible values:

- 100 to 1496 bytes

Default: 1036 bytes

2.25.10.10.9 Allow-Methods

Choose the Radius server and the method of EAP authentication.

SNMP ID:

2.25.10.10.9

Telnet path:

Setup > RADIUS > Server > EAP > Allow-Methods

2.25.10.10.9.1 Method

Choose the authentication method.

SNMP ID:

2.25.10.10.9.1

Telnet path:

Setup > RADIUS > Server > EAP > Allow-Methods

Possible values:

MD5

GTC

MSCHAPv2

TLS

TTLS

PEAP

Default:

MD5

2.25.10.10.9.2 Allow

Activate the respective EAP-TLS method for authentication.

SNMP ID:

2.25.10.10.9.2

Telnet path:

Setup > RADIUS > Server > EAP > Allow-Methods

Possible values:

On

Off

Internal-Only

Default:

On

2.25.10.10.10MSCHAPv2-Backend-Server

This setting lets you define an optional external RADIUS server to be used by the internal LCOS RADIUS server operating EAP-MSCHAPv2 (as is usual for example in a PEAP tunnel) to outsource the MS-CHAP v2 response check. This enable you to outsource the user database to an external RADIUS server that does not support EAP.



Note that the external RADIUS server must support at least MSCHAPv2 because CHAP leaves the actual password on the server.

SNMP ID:

2.25.10.10.10

Telnet path:**Setup > RADIUS > Server > EAP****Possible values:**

Valid DNS name or IP address of the server. Value range:

ABCDEFGHIJKLMNOPQRSTUVWXYZ{|}~!\$%&'()+-./:;<=>?[\]^_ .0123456789

Default:

Blank

2.25.10.11 Accounting port

Enter the port used by the RADIUS server to receive accounting information. Port '1813' is normally used.

Telnet path: /Setup/RADIUS/Server**Possible values:**

- Max. 4 numbers

Default: 0**Special values:** 0: Switches the use of this function off.**2.25.10.12 Accounting interim interval**

Enter the value that the RADIUS server should output as "Accounting interim interval" after successful authentication. Provided the requesting device supports this attribute, this value determines the intervals (in seconds) at which an update of the accounting data is sent to the RADIUS server.

Telnet path: /Setup/RADIUS/Server**Possible values:**

- Max. 4 numbers

Default: 0**Special values:** 0: Switches the use of this function off.**2.25.10.13 RADSEC port**

Enter the (TCP) port used by the server to accept accounting or authentication requests encrypted using RADSEC. Port 2083 is normally used.

Telnet path: /Setup/RADIUS/Server**Possible values:**

- Max. 5 numbers

Default: 0**Special values:** 0: Deactivates RADSEC in the RADIUS server.**2.25.10.14 Auto-cleanup user table**

With this feature enabled, the RADIUS server automatically deletes accounts from the Users table when the expiry date has passed.

Telnet path: /Setup/RADIUS/Server/Auto-Cleanup-User-Table**Possible values:**

- Yes
- No

Default: No

2.25.10.15 Allow-Status-Requests

Use this option to enable or disable the processing of RADIUS status requests. Using this requests the WLAN clients can check if a RADIUS server is available before sending requests for authentication or authorization. If this option is enabled, the RADIUS server in the device will respond to these requests.

Path Telnet: /Setup/RADIUS/Server

Possible values:

- yes
- no

Default: yes

2.26 NTP

This menu contains the NTP settings.

Telnet path: /Setup

2.26.2 Operating

Here you switch on the time server in your device for the local network. Other devices in the same network can then synchronize with the server via the network time protocol (NTP).

Telnet path: /Setup/NTP

Possible values:

- Yes
- No

Default: No

2.26.3 BC mode

Here you switch the time server in your device into the send mode. This mode regularly sends the current time to all devices or stations accessible via the local network.

Telnet path: /Setup/NTP

Possible values:

- Yes
- No

Default: No

2.26.4 BC interval

Here you set the time interval after which your device's time server sends the current time to all devices or stations accessible via the local network.

Telnet path: /Setup/NTP

Possible values:

- Max. 10 characters

Default: 64

2.26.7 RQ interval

Specify the time interval in seconds after which the internal clock of the device is re-synchronized with the specified time server (NTP).

Telnet path: /Setup/NTP**Possible values:**

- Max. 10 characters

Default: 86400

A connection may be established in order to access the time server. Please be aware that this may give rise to additional costs.

2.26.11 RQ address

Here you enter the time server that supplies the correct current time.

Telnet path: /Setup/NTP

2.26.11.1 RQ address

Enter the time servers (NTP) in the order in which you want to query them. The servers should be accessible via one of the existing interfaces. Caution: A connection may be established in order to access the time server. Please be aware that this may give rise to additional costs.

Telnet path: /Setup/NTP/RQ-Address**Possible values:**

- Max. 31 characters

Default: Blank

2.26.11.2 Loopback address

Here you can optionally configure a sender address to be used instead of the one used automatically for this destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Various forms of entry are accepted:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet.
- "DMZ" for the address of the first DMZ (Note: If there is an interface named "DMZ", its address will be taken).
- LBO... LBF for the 16 loopback addresses.
- Furthermore, any IP address can be entered in the form x.x.x.x.

Telnet path: /Setup/NTP/RQ-Address**Possible values:**

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet

- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

 If there is an interface called "DMZ", its address will be taken in this case).

2.26.12 RQ tries

Enter the number of times that synchronization with the time server should be attempted. Specifying a value of zero means that attempts will continue until a valid synchronization has been achieved.

Telnet path: /Setup/NTP

Possible values:

- Max. 10 characters

Default: 4

2.27 Mail

This menu contains the e-mail settings.

Telnet path: /Setup

2.27.1 SMTP server

Enter the name or the IP address for an SMTP server that you have access to. This information is required if your device is to inform you about certain events by e-mail.

Telnet path: /Setup/Mail

Possible values:

- Max. 31 characters

Default: Blank

 A connection may be established in order to send e-mail messages. Please be aware that this may give rise to additional costs.

2.27.2 SMTP port

Enter the number of the SMTP port of the aforementioned server for unencrypted e-mail transmission. The default value is 587.

SNMP ID:

2.27.2

Telnet path:

Setup > Mail

Possible values:

Max. 10 characters

Default:

587

2.27.3 POP3 server

The only difference between names of many POP3 servers and SMTP servers is the prefix. All you have to do is enter the same of your SMTP server and replace 'SMTP' with 'POP' or "POP3".

Telnet path: /Setup/Mail**Possible values:**

- Max. 31 characters

Default: Blank

2.27.4 POP3 port

Enter the number of the POP3 port of the aforementioned server for unencrypted mail. The default value is 110.

Telnet path: /Setup/Mail**Possible values:**

- Max. 10 characters

Default: 110

2.27.5 User name

Enter the name of the user who is to receive e-mail notifications at the aforementioned SMTP server.

Telnet path: /Setup/Mail**Possible values:**

- Max. 63 characters

Default: Blank

2.27.6 Password

Enter the password to be used to send e-mail notifications to the aforementioned SMTP server.

Telnet path: /Setup/Mail**Possible values:**

- Max. 31 characters

Default: Blank

2.27.7 E-mail sender

Enter here a valid e-mail address that your device is to use as a sender address for e-mailing notifications. This address is used by the SMTP servers to provide information in case of delivery problems. In addition, some servers check the validity of the sender e-mail address and deny delivery service if the address is missing, if the domain is unknown, or if the e-mail address is invalid.

Telnet path: /Setup/Mail**Possible values:**

- Max. 63 characters

Default: Blank

2.27.8 Send again (min)

In case of connection problems with the SMTP server, mails will be buffered here and repeated tries will be made to send them. This also applies for mails which cannot be delivered due to incorrect settings such as incorrect SMTP parameters or unknown recipients. Set the time after which an attempt will be made to re-submit buffered messages. Attempts are also made to re-submit each time a new e-mail is received.

Telnet path: /Setup/Mail

Possible values:

- Max. 10 characters

Default: 30

2.27.9 Hold time (hrs)

In case of connection problems with the SMTP server, mails will be buffered here and attempts to send them will be repeated. This also applies for mails which cannot be delivered due to incorrect settings such as incorrect SMTP parameters or unknown recipients. Set the maximum hold time for a message. Once this time has elapsed, all attempts to submit a certain message will be discontinued.

Telnet path: /Setup/Mail

Possible values:

- Max. 10 characters

Default: 72

2.27.10 Buffers

In case of connection problems with the SMTP server, mails will be buffered here and repeated tries will be made to send them. This also applies for mails which cannot be delivered due to incorrect settings such as incorrect SMTP parameters or unknown recipients. Set the maximum number of buffered messages. When this limit is exceeded, the oldest messages will be discarded to make room for incoming messages.

Telnet path: /Setup/Mail

Possible values:

- Max. 10 characters

Default: 100

2.27.11 Loopback address

Here you can optionally configure a sender address to be used instead of the one used automatically for this destination address. If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/Mail

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

 If there is an interface called "DMZ", its name will be taken in this case.

2.27.12 SMTP-use-TLS

Here you determine if and how the device encrypts the connection. The available values have the following meaning:

- **No:** No encryption. The device ignores any STARTTLS responses from the server.
- **Yes:** The device uses SMTPS, i.e. encryption is active from the connection establishment.
- **Preferred:** The connection establishment is not encrypted. If the SMTP server offers STARTTLS, the device will use encryption. This is the default setting.
- **Required:** The connection establishment is not encrypted. If the SMTP server does not offer STARTTLS, the device transmits no data.

SNMP ID:

2.27.12

Telnet path:

Setup > Mail

Possible values:

No

Yes

Preferred

Required

Default:

Preferred

2.27.13 SMTP authentication

Here you specify if and how the device authenticates at the SMTP server. The device's behavior depends on the server settings: If the server does not require authentication, the login occurs in any case. Otherwise, the device reacts according to the settings described below:

SNMP ID:

2.27.13

Telnet path:

Setup > Mail

Possible values:

None

Basically no authentication.

Plain text preferred

The authentication preferably occurs in plain text (PLAIN, LOGIN), if the server requires authentication. If it does not accept plain text authentication, the device uses secure authentication.

Encrypted

The authentication is done without transmitting the password (e.g., CRAM-MD5), if the server requires authentication. Plain text authentication does not take place.

Preferably encrypted

The authentication is preferably encrypted (e.g., CRAM-MD5), if the server requires authentication. If it does not accept secure authentication, the device uses plain text authentication.

Default:

Preferably encrypted

2.30 IEEE802.1x

This menu contains the settings for the IEEE802.1x protocol.

Telnet path: /Setup

2.30.3 Radius server

Authentication in all wireless LAN networks by a central RADIUS server (named DEFAULT) can be managed here. You can also define RADIUS servers that are dedicated to certain wireless LAN networks (instead of defining the passphrase for the logical wireless LAN network). Furthermore, a backup server can be specified for every RADIUS server.

Telnet path: /Setup/IEEE802.1x

2.30.3.1 Name

The name of the server.

Telnet path: /Setup/IEEE802.1x /RADIUS-Server

Possible values:

- Max. 16 characters

Default: Blank

2.30.3.2 IP address

IP address of the RADIUS server. The name 'DEFAULT' is reserved for all WLAN networks that use IEEE 802.1x for authentication and that do not have their own RADIUS server. Every WLAN that uses authentication by IEEE 802.1x can use its own RADIUS server after specifying appropriate values for 'Key1/Passphrase'.

Telnet path: /Setup/IEEE802.1x /RADIUS-Server

Possible values:

- Valid IP address.

Default: 00.0.0

2.30.3.3 Port

The port the RADIUS server.

Telnet path: /Setup/IEEE802.1x /RADIUS-Server

Possible values:

- Max. 10 characters

Default: 0

2.30.3.4 Secret

The secret used by the RADIUS server.

Telnet path: /Setup/IEEE802.1x /RADIUS-Server

Possible values:

- Max. 32 characters

Default: Blank

2.30.3.5 Backup

You can enter the name of a backup server for the specified RADIUS server. The backup server will be connected only if the specified RADIUS server is unavailable. The name of the backup server can be selected from the same table.

Telnet path: /Setup/IEEE802.1x /RADIUS-Server

Possible values:

- Max. 24 characters

Default: Blank

2.30.3.6 Loopback address

Here you can optionally configure a sender address to be used instead of the one used automatically for this destination address. If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/IEEE802.1x /RADIUS-Server

Possible values:

- Various forms of entry are accepted:
- Name of the IP networks whose addresses are to be used.
- "INT" for the address of the first intranet.
- "DMZ" for the address of the first DMZ

 If there is an interface called "DMZ", its address will be taken in this case.

- LBO – LBF for the 16 loopback addresses.
- Furthermore, any IP address can be entered in the form x.x.x.x.

Default: Blank

2.30.3.7 Protocol

Protocol for communication between the internal RADIUS server and the forwarding server.

Telnet path: /Setup/IEEE802.1x/RADIUS-Server/Protocol

Possible values:

- RADSEC
- RADIUS

Default: RADIUS

2.30.4 Ports

You should specify the login settings separately for each local network.

Telnet path: /Setup/IEEE802.1x

2.30.4.2 Port

The interface that this entry refers to.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- All of the interfaces available in the device.

Default: Blank

2.30.4.4 Re-authentication, max.

This parameter is a timer in the authentication state machine for IEEE 802.1x.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 3

 Changes to these parameters require expert knowledge of the IEEE 802.1x standard. Only make changes here if your system configuration absolutely requires them.

2.30.4.5 Max-Req

This parameter is a timer in the authentication state machine for IEEE 802.1x.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 3

 Changes to these parameters require expert knowledge of the IEEE 802.1x standard. Only make changes here if your system configuration absolutely requires them.

2.30.4.6 Tx period

This parameter is a timer in the authentication state machine for IEEE 802.1x.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 30

 Changes to these parameters require expert knowledge of the IEEE 802.1x standard. Only make changes here if your system configuration absolutely requires them.

2.30.4.7 Supp-Timeout

This parameter is a timer in the authentication state machine for IEEE 802.1x.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 30

 Changes to these parameters require expert knowledge of the IEEE 802.1x standard. Only make changes here if your system configuration absolutely requires them.

2.30.4.8 Server-Timeout

This parameter is a timer in the authentication state machine for IEEE 802.1x.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 30

 Changes to these parameters require expert knowledge of the IEEE 802.1x standard. Only make changes here if your system configuration absolutely requires them.

2.30.4.9 Quiet period

This parameter is a timer in the authentication state machine for IEEE 802.1x.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 60

 Changes to these parameters require expert knowledge of the IEEE 802.1x standard. Only make changes here if your system configuration absolutely requires them.

2.30.4.10 Re-authentication

Here you activate regular re-authentication. If a new authentication starts, the user remains registered during the negotiation. A typical value as a re-authentication interval is 3,600 seconds.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Yes
- No

Default: No

2.30.4.11 Re-authorization interval

A typical value as a re-authentication interval is 3,600 seconds.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Max. 10 characters

Default: 3600

2.30.4.12 Key transmission

Here you activate the regular generation and transmission of a dynamic WEP key.

Telnet path: /Setup/IEEE802.1x /Ports

Possible values:

- Yes
- No

Default: No**2.30.4.13 Key transmission interval**

A typical value as a key-transmission interval is 900 seconds.

Telnet path: /Setup/IEEE802.1x /Ports**Possible values:**

- Max. 10 characters

Default: 900

2.31 PPPoE

This menu contains the PPPoE settings.

Telnet path: /Setup

2.31.1 Operating

This switch enables and disables the PPPoE server.

Telnet path: /Setup/PPPoE-Server**Possible values:**

- Yes
- No

2.31.2 Name list

In the list of peers/ remote sites, define those clients that are permitted access by the PPPoE server and define further properties and rights in the PPP list or the firewall.

Telnet path: /Setup/PPPoE-Server

2.31.2.1 Peer

Here you can define a remote-station name for each client. The remote-site name must be used by the client as the PPP user name.

Telnet path: /Setup/PPPoE-Server/Name-List**Possible values:**

- Select from the list of defined peers.

Default: Blank

2.31.2.2 Short-hold time

Define the short-hold time for the PPPoE connection here.

Telnet path: /Setup/PPPoE-Server/Name-List**Possible values:**

- Max. 10 characters

Default: 0

2.31.2.3 MAC address

If a MAC address is entered, then the PPP negotiation is terminated if the client logs on from a different MAC address.

Telnet path: /Setup/PPPoE-Server/Name-List

Possible values:

- Max. 12 characters

Default: 000000000000

2.31.3 Service

The name of the service offered is entered under 'Service'. This enables a PPPoE client to select a certain PPPoE server that is entered for the client.

Telnet path: /Setup/PPPoE-Server

Possible values:

- Max. 32 characters

Default: Blank

2.31.4 Session-Limit

The 'Session limit' specifies how often a client can be logged on simultaneously with the same MAC address. Once the limit has been reached, the server no longer responds to the client queries that are received. Default value is '1', maximum value '99'. A Session limit of '0' stands for an unlimited number of sessions.

Telnet path: /Setup/PPPoE-Server

Possible values:

- 0 to 99

Default: 1

Special values: 0 switches the session limit off.

2.31.5 Ports

Here you can specify for individual ports whether the PPPoE server is active.

Telnet path: /Setup/PPPoE-Server

2.31.5.2 Port

Port for which the PPPoE server is to be activated/deactivated.

Telnet path: /Setup/PPPoE-Server/Ports

Possible values:

- Selects a port from the list of those available in the device.

2.31.5.3 Enable PPPoE

Activates or deactivates the PPPoE server for the selected port.

Telnet path: /Setup/PPPoE-Server/Ports

Possible values:

- Yes
- No

Default: Yes

2.32 VLAN

There are two important tasks when configuring the VLAN capabilities of the devices:

- Defining virtual LANs and giving each one a name, a VLAN ID, and allocating the interfaces
- For each interface, define how data packets with or without VLAN tags are to be handled

SNMP ID: 2.32**Telnet path:** /Setup

2.32.1 Networks

The network list contains the name of each VLAN, the VLAN ID and the ports. Simply click on an entry to edit it.

Telnet path: /Setup/VLAN

2.32.1.1 Name

The name of the VLAN only serves as a description for the configuration. This name is not used anywhere else.

Telnet path: /Setup/VLAN/Networks

2.32.1.2 VLAN-ID

This number uniquely identifies the VLAN.

Telnet path: /Setup/VLAN/Networks**Possible values:**

- 0 to 4096

Default: 0

2.32.1.4 Ports

Enter here the device interfaces that belong to the VLAN. For a device with a LAN interface and a WLAN port, ports that to be entered could include "LAN-1" and "WLAN-1". Port ranges are defined by entering tilde between the individual ports: "P2P-1~P2P-4".

Telnet path: /Setup/VLAN/Networks**Possible values:**

- Max. 251 characters

Default: Blank

The first SSID of the first wireless LAN module is WLAN-1, and further SSIDs are WLAN-1-2 to WLAN-1-8. If the device has two WLAN modules, the SSIDs are called WLAN-2 and WLAN-2-2 to WLAN-2-8.

2.32.1.5 LLDP-Tx-TLV-PPID

This setting specifies to which ports, which are members of this VLAN, the device is to propagate the membership via LLDP.

SNMP ID:

2.32.1.5

Telnet path:

Setup > VLAN > Networks

Possible values:

Comma-separated list of interface names (analogous to the names in the column **Ports**), max. 251 characters

Default:

2.32.1.6 LLDP-Tx-TLV-Name

This setting specifies to which ports, which are members of this VLAN, the device is to propagate the name of the VLAN via LLDP.

SNMP ID:

2.35.1.6

Telnet path:

Setup > VLAN > Networks

Possible values:

Comma-separated list of interface names (analogous to the names in the column **Ports**), max. 251 characters

Default:

2.32.2 Port table

The port table is used to configure each of the device's ports that are used in the VLAN. The table has an entry for each of the device's ports.

Telnet path: /Setup/VLAN

2.32.2.1 Port

The name of the port; this cannot be edited.

Telnet path: /Setup/VLAN/Port-Table

2.32.2.4 Allow all VLANs

This option defines whether tagged data packets with any VLAN ID should be accepted, even if the port is not a "member" of this VLAN.

Telnet path: /Setup/VLAN/Port-Table

Possible values:

- Yes
- No

Default: Yes

2.32.2.5 Port VLAN ID

This port ID has two functions:

- Untagged packets received at this port in 'Mixed' or 'Ingress-mixed' mode are assigned to this VLAN, as are all ingress packets received in 'Never' mode.
- In the 'Mixed' mode, this value determines whether outgoing packets receive a VLAN tag or not: Packets assigned to the VLAN defined for this port receive no VLAN tag; all others are given a VLAN tag.

Telnet path: /Setup/VLAN/Port-Table

Possible values:

- Max. 4 characters

Default: 1

2.32.2.6 Tagging mode

Controls the processing and assignment of VLAN tags at this port.

Telnet path: /Setup/VLAN/Port-Table

Possible values:

- **Never:** Outbound packets are not given a VLAN tag at this port. Incoming packets are treated as though they have no VLAN tag. If incoming packets have a VLAN tag, it is ignored and treated as though it were part of the packet's payload. Incoming packets are always assigned to the VLAN defined for this port.
- **Always:** Outgoing packets at this port are always assigned with a VLAN tag, irrespective of whether they belong to the VLAN defined for this port or not. Incoming packets must have a VLAN tag, otherwise they will be dropped.
- **Mixed:** Allows mixed operation of packets with and without VLAN tags at the port. Packets without a VLAN tag are assigned to the VLAN defined for this port. Outgoing packets are given a VLAN tag unless they belong to the VLAN defined for this port.
- **Ingress mixed:** Arriving (ingress) packets may or may not have a VLAN tag; outbound (egress) packets are never given a VLAN tag.

Default: Ingress mixed

2.32.2.7 Tx-LLDP-TLV-Port-VLAN

Activates or deactivates the port as LLDP-TLV-Port in this VLAN.

Telnet path: Setup/VLAN/Port-Table/Tx-LLDP-TLV-Port-VLAN

Possible values:

- Yes
- No

Default: Yes

2.32.4 Operating

You should only activate the VLAN module if you are familiar with the effects this can have.

Telnet path: /Setup/VLAN

Possible values:

- Yes
- No

Default: No

 Faulty VLAN settings may cause access to the device's configuration to be blocked.

2.32.5 Tag value

When transmitting VLAN tagged networks via provider networks that use VLAN themselves, providers sometimes use special VLAN tagging IDs. In order for VLAN transmission to allow for this, the Ethernet2 type of the VLAN tag can be set as a 16-bit hexadecimal value as 'tag value'. The default is '8100' (802.1p/q VLAN tagging) other typical values for VLAN tagging could be '9100' or '9901'.

Telnet path: /Setup/VLAN

Possible values:

- Max. 4 characters

Default: 8100

2.33 Voice-Call-Manager

This menu contains the settings for the Voice Call Manager.

SNMP ID: 2.33

Telnet path: /Setup

2.33.1 Operating

Switches the Voice Call Manager on / off

Telnet path: /Setup/Voice-Call-Manager

Possible values:

- Yes
- No

Default: No

2.33.2 General

This menu contains general settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager

2.33.2.1 Domain

Name of the domain in which the connected telephones and the LANCOM VoIP router are operated.

Terminal devices working in the same domain register as local subscribers at the LANCOM VoIP router and make use of the SIP proxy.

Terminal devices working with the other domain of an active SIP PBX line register themselves as subscribers at an upstream PBX.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- Max. 63 characters

Default: Internal

2.33.2.2 Overlap timeout

When dialing from an ISDN telephone, this time period is waited until the called number is considered to be complete and then sent to the call router.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- 0 to 99

Default: 6

Special values: 0: With a dial delay of '0', a '#' has to be entered at the end of the called number. Entering the '#' character after the called number manually reduces the dial delay.

2.33.2.3 Local authentication

The SIP proxy usually accepts a registration from all SIP users who register themselves with a valid domain. If local authentication is forced, only those subscribers who are saved in one of the user tables with relevant access information can register with the SIP proxy.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- No
- Yes

Default: No/Off

 Automatic registration without entering a password is restricted to the SIP users in the LAN. SIP users from the WAN and ISDN users must always be authenticated by a user entry with password.

2.33.2.4 Echo_Canceler

Activates the echo canceling of remote echoes. With an echo that is too strong, subscribers can hear their own voices after a short delay. Activating this option reduces the echo at the SIP gateway.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- On
- Off

Default: On

2.33.2.5 Outgoing packet reduction

For all SIP calls, sufficient bandwidth through the firewall is reserved as required by the audio codec being used (provided sufficient bandwidth is available). Here you can set how remaining data packets should be handled that are not part of SIP data streams in order to manage the firewall.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- PMTU: The subscribers of the data connection are informed that they should only send data packets up to a certain length (Path Maximum Transmission Unit, PMTU).
- Fragmentation: The LANCOM VoIP router reduces the data packets by fragmenting them to the required length.
- NONE: The length of the data packets is not changed by the VoIP operation.
- PMTU + Fragmentation

Default: NONE/PMTU reduction

2.33.2.6 Incoming packet reduction

Similar to the outgoing data packets, you configure how non-VoIP data packets are handled when bandwidth is reserved for SIP data.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- PMTU reduction: The subscribers of the data connection are informed that they should only send data packets up to a certain length (Path Maximum Transmission Unit, PMTU).
- No change: The length of the data packets is not changed by the VoIP operation.

Default: No change

2.33.2.7 Reduced packet size

This parameter specifies the packet size that should be used for PMTU adjustment or fragmentation while the SIP data have priority.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- 0 to 9999

Default: 576

2.33.2.8 ISDN gateway codecs

During connection establishment, the ISDN terminal devices negotiate which codecs are to be used to compress the voice data. Use the codec filter to restrict the codecs that are permitted and to permit only certain codecs.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- Hexadecimal value to display the permitted codecs.

Default: All available codecs

2.33.2.9 Country

The country setting determines the inband tones generated in the LANCOM device

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- Unknown
- Austria
- Belgium
- Switzerland
- Germany
- France
- Italy
- The Netherlands
- Spain
- Great Britain

Default: Unknown

2.33.2.11 ClnPartyNumType

This sets the type of the calling number (CallingPartyNumber) for outgoing numbers on an ISDN interface. This is necessary for PBXs and exchanges in some countries as these require a specific type.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- Subscriber
- Unknown
- National

Default: Subscriber(0)

2.33.2.12 Register time

This value specifies the re-registration time that is signaled to a SIP user locally

This function allows the VoIP client to be registered at shorter intervals, so as to detect more quickly when a VoIP client has been switched off, for example.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

- 60 to 3600

Default: 120

2.33.2.13 Convert canonicals

This item activates the conversion of canonical VoIP names.

Telnet path: /Setup/Voice Call Manager/General/Convert-Canonicals

Possible values:

- Yes
- No

Default: Yes

2.33.2.14 Symmetric RTP

This parameter switches off the strict checking of the RTP sender. In general, two-way communications take place between the two RTP socket addresses (IP: port), i.e. the media data sources (outgoing) are at the same time also media data sinks (incoming). The data flow is symmetric.

However, there are media servers which are implemented differently in that the RTP source and the RTP target do not have the same socket address. In these cases deactivate the "Symmetrical RTP" option.

Telnet path: /Setup/Voice-Call-Manager/General/Symmetric-RTP

Possible values:

- Yes
- No

Default: Yes

2.33.2.15 SIP-DSCP

This defines which DiffServ CodePoints (DSCP) the SIP packets (for call signaling) are to be marked with.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

BE, CS-0, CS-1, CS-2, CS-3, CS-4, CS-5, CS-6, CS-7, AF-11, AF-12, AF-13, AF-21, AF-22, AF-23, AF-31, AF-32, AF-33, AF-41, AF-42, AF-43, EF

BE/CS-0, CS-1, CS-2, CS-3, CS-4, CS-5, CS-6, CS-7, AF-11, AF-12, AF-13, AF-21, AF-22, AF-23, AF-31, AF-32, AF-33, AF-41, AF-42, AF-43, EF

Default: CS-1

 The option CS-1 is actually outdated now, but it is set as the default value to ensure backwards compatibility. Common values for modern VoIP installations are CS-3, AF-31 or AF-41. We recommend using CS-3, one of the most widespread settings on the market.

2.33.2.16 RTP-DSCP

This defines which DiffServ CodePoints (DSCP) the RTP packets (voice data stream) are to be marked with.

Telnet path: /Setup/Voice-Call-Manager/General

Possible values:

BE, CS-0, CS-1, CS-2, CS-3, CS-4, CS-5, CS-6, CS-7, AF-11, AF-12, AF-13, AF-21, AF-22, AF-23, AF-31, AF-32, AF-33, AF-41, AF-42, AF-43, EF

BE/CS-0, CS-1, CS-2, CS-3, CS-4, CS-5, CS-6, CS-7, AF-11, AF-12, AF-13, AF-21, AF-22, AF-23, AF-31, AF-32, AF-33, AF-41, AF-42, AF-43, EF

Default: EF

 With DSCP set to BE or CS-0 the packets are sent unmarked. Further information about DiffServ CodePoints is available in the Reference Manual under the section "QoS".

2.33.2.17 Lock minutes

Determines for how many minutes a SIP user will be blocked after authentication has failed due to incorrect login data.

SNMP ID:

233.2.17

Telnet path:

Setup > Voice-Call-Manager > General > Lock-Minutes

Possible values:

0 to 255 minutes

Special values:

0: Lock off

Default:

5

2.33.2.18 Login errors

This value specifies the number of failed attempts before a SIP user is locked for a certain time.

SNMP ID:

233.2.18

Telnet path:

Setup > Voice-Call-Manager > General > Login-Errors

Possible values:

0 to 255

Special values:

0: The first false login triggers the lock.

Default:

5

2.33.3 Users

This menu contains user settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager

2.33.3.1 SIP-User

This menu contains SIP user settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager/Users

2.33.3.1 Users

Depending on the model, different numbers of SIP users can be created. You cannot create more than the maximum number of users permitted; similarly, duplicate names or called numbers are not permitted.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User

 The domain that is used by the SIP subscriber is usually configured in the terminal equipment itself.

2.33.3.1.1.1 Number/Name

Telephone number of the SIP telephone or name of the user (SIP URI).

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Max. 20 characters

Default: Blank

2.33.3.1.1.2 Authentication name

Name for authentication at the SIP proxy, and also to any upstream SIP PBX when the user's domain is the same as the domain of a SIP PBX line. This name is required if registration is mandatory (e.g. when logging in to an upstream SIP PBX or when "Force local authentication" is set for local users).

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Max. 63 characters

Default: Blank

Special values: Blank: If nothing is entered here, the authentication is attempted using the SIP name (internal call number).

2.33.3.1.1.3 Secret

Password for authentication to the SIP proxy, and also to any upstream SIP PBX, when the user's domain is the same as the domain of a SIP PBX line. It is possible for users to log in to the local SIP proxy without authentication ("Force local authentication" is deactivated for SIP users) and where applicable to an upstream SIP PBX using a shared password ("Standard password" on the SIP PBX line).

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Max. 32 characters

Default: Blank

2.33.3.1.1.4 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Yes
- No

Default: On

2.33.3.1.1.5 Comment

Comment on this entry.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Max. 63 characters

Default: Blank

2.33.3.1.1.6 Device type

Type of device connected.

The type determines whether an analog connection should be converted into SIP T.38, where applicable. Selecting "Fax" or "Telephone/Fax" activates fax signal recognition that could result in an impairment of the connection quality for telephones. Therefore please select the corresponding type of device connected in order to ensure optimum quality.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Phone
- Fax
- Auto

Default: Phone

2.33.3.1.1.7 CLIR

Switches the transmission of the calling-line identifier on/off.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User/Users

Possible values:

- Yes: Transmission of the calling-line identifier is suppressed whatever the setting in the user's device.

- No: Transmission of the calling-line identifier is not suppressed in the device; the settings in the user's terminal device control the transmission of the calling-line identifier.

Default: No/Off

2.33.3.1.1.8 Access from WAN

This item determines whether and how SIP clients can register via a WAN connection.

SNMP ID:

2.33.3.1.1.8

Telnet path:

Setup > Voice-Call-Manager > Users > SIP-User > Users

Possible values:

Yes

No

VPN

Default:

No

2.33.3.1.2 Intern Cln Prefix

If an incoming internal call is directed to a SIP user, this prefix is added to the calling party ID, if available.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User

Possible values:

- Max. 15 numbers or *

Default: *

 A call is regarded as external if it comes from a "line". If this line is a SIP PBX line, then the call is only external if the incoming calling party ID is preceded by a "0". All other calls are regarded as internal.

2.33.3.1.3 Extern Cln Prefix

If an incoming external call is directed to a SIP user, this prefix is added to the calling party ID, if available.

Telnet path: /Setup/Voice-Call-Manager/User/SIP-User

Possible values:

- Max. 15 numbers or *

Default: Blank

2.33.3.2 ISDN user

This menu contains ISDN user settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager/Users

2.33.3.2.1 Interfaces

Here you select the interface that the ISDN user is connected to.

Telnet path: /Setup/Voice-Call-Manager/Users/ISDN-User

2.33.3.2.1.1 Name

Name of interface

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Interfaces

Possible values:

- ISDN

Default: ISDN

2.33.3.2.1.2 Interface

Interface to which the ISDN subscribers are connected.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Interfaces

Possible values:

- Selection from ISDN interfaces available e.g. S0-1 and S0-2

Default: Varies between models.

2.33.3.2.1.3 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Interfaces

Possible values:

- Yes
- No

Default: Yes/On

2.33.3.2.1.4 Comment

Comment on this entry.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Interfaces

Possible values:

- Max. 63 characters

Default: Blank

2.33.3.2 Users

Here you can define all local ISDN users (terminal devices). You can also specify the authentication data for SIP registration.

Telnet path: /Setup/Voice-Call-Manager/Users/ISDN-User

2.33.3.2.2.1 Number/Name

Internal number of the ISDN telephone or name of the user (SIP URI).

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 20 characters

Default: Blank

 By using the # character as a placeholder, entire groups of numbers (e.g. when using extension numbers at a point-to-point connection) can be addressed via a single entry. With the number '#' and the DDI '#', for example, extension numbers can be converted into internal telephone numbers without making any changes. With the call number '3#' and the DDI '#', for example, an incoming call for extension '55' is forwarded to the internal number '355', and for outgoing calls from the internal number '377', the extension number '77' will be used.

 User entries that use # characters to map user groups cannot be used for registration at an upstream PBX. This registration always demands a specific entry for the individual ISDN user.

2.33.3.2.2.2 Interface

ISDN interface that should be used to establish the connection.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- None, one or several available S0 buses.

Default: Depends on type of device.

2.33.3.2.2.3 MSN/DDI

Internal MSN that is used for this user on the internal ISDN bus.

MSN: Number of the telephone connection if it is a point-to-multipoint connection.

DDI (Direct Dialing in): Telephone extension number if the connection is configured as a point-to-point line.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 19 numbers and # characters

Default: Blank

 By using the # character as a placeholder, entire groups of call numbers, e.g. when using extension numbers, can be addressed via a single entry.

 User entries that use # characters to map user groups cannot be used for registration at an upstream PBX. This registration always demands a specific entry for the individual ISDN user.

2.33.3.2.2.4 Display name

Name for display on the telephone being called.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 32 alphanumerical characters

Default: Blank

2.33.3.2.2.5 Authentication name

Name for authentication at any upstream SIP PBX when the user's domain is the same as the domain of a SIP PBX line.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 63 characters

Default: Blank

 Only required when the user registers at an upstream SIP PBX.

2.33.3.2.2.6 Secret

Password for authentication as a SIP user at any upstream SIP PBX when the user's domain is the same as the domain of a SIP PBX line. It is possible for ISDN users to log in to an upstream SIP PBX using a shared password ("Standard password" on the SIP PBX line).

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 32 characters

Default: Blank

2.33.3.2.2.7 Domain

Domain of an upstream SIP PBX when the ISDN user is to be logged in as a SIP user. The domain must be configured for a SIP PBX line in order for upstream login to be performed.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 63 characters

Default: Blank

 Only required when the user registers at an upstream SIP PBX.

2.33.3.2.2.8 DialComplete

En-block dial detection allows the dialed number to be marked as complete (e.g. for speed dialing or repeat dialing) so that the call is established more quickly. Suffix dialing is not possible.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Auto: Block dialing is detected automatically (for example, with speed dial or repeat dialing), so that the call is established more quickly. Suffix dialing is not possible.
- Manual: No block dialing; the number can be marked as complete with '#' and the call can be initiated.

Default: Auto

 The number can be manually marked as complete with '#' and the call can be initiated.

2.33.3.2.2.9 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- No
- Yes

Default: Yes/On

2.33.3.2.2.10 Comment

Comment on this entry.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Max. 63 characters

Default: Blank

2.33.3.2.2.11 Device type

Type of device connected.

The type determines whether an analog connection should be converted into SIP T.38, where applicable. Selecting "Fax" or "Telephone/Fax" activates fax signal recognition that could result in an impairment of the connection quality for telephones. Therefore please select the corresponding type of device connected in order to ensure optimum quality.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Phone
- Fax
- Auto

Default: Phone

2.33.3.2.2.12 CLIR

Switches the transmission of the calling-line identifier on/off.

Telnet path: /Setup/Voice-Call-Manager/User/ISDN-User/Users

Possible values:

- Yes: Transmission of the calling-line identifier is suppressed whatever the setting in the user's device.
- No: Transmission of the calling-line identifier is not suppressed in the device; the settings in the user's terminal device control the transmission of the calling-line identifier.

Default: No/Off

2.33.3.2.3 Intern Cln Prefix

If an incoming internal call is directed to an ISDN user, this prefix is added to the calling party ID, if available. If a line prefix is defined, this is placed in front of the whole of the called number.

Telnet path: /Setup/Voice-Call-Manager/Users/ISDN-User

Possible values:

- Max. 15 numbers or *

Default: *

2.33.3.2.4 Extern Cln Prefix

If an incoming external call is directed to an ISDN user, this prefix is added to the calling party ID, if available. If a line prefix is defined, this is placed in front of the whole of the called number.

Telnet path: /Setup/Voice-Call-Manager/Users/ISDN-User

Possible values:

- Max. 15 numbers or *

Default: Blank

2.33.3.2.5 Internal dial tone

The dial tone determines the sound a user hears after lifting the receiver. The "internal dial tone" is the same as the tone that a user hears at a PBX without spontaneous outside-line access (three short tones followed by a pause). The "external dial tone" is thus the same as the tone that indicates an external line when the receiver is lifted (constant tone without any interruptions). If necessary, adapt the dial tone to the use for spontaneous outside-line access to simulate the behavior of an external connection.

Telnet path: /Setup/Voice-Call-Manager/Users/ISDN-User

Possible values:

- Yes
- No

Default: No, the external dial tone will be used.

2.33.3.4 Extensions

Here you can define extended user settings such as call waiting or call transfer.

Telnet path: /Setup/Voice-Call-Manager/Users

2.33.3.4.1 Name

The user settings apply to this telephone number or SIP-ID.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Max. 64 characters

Default: Blank

 Call forwarding can be set up for all local users (SIP, ISDN or analog).

2.33.3.4.2 User modifiable

This activates or deactivates the option for users to configure their settings via the telephone.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Yes
- No

Default: Yes

2.33.3.4.3 CFU active

Activates or deactivates the immediate forwarding of calls (CFU).

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Yes
- No

Default: No

2.33.3.4.4 CFU target

Target for immediate unconditional call forwarding

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Maximum 64 characters to designate local users, hunt groups or external phone numbers.

Default: Blank

2.33.3.4.5 CFNR active

Activates or deactivates the delayed forwarding of call (after waiting for no reply).

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Yes
- No

Default: No

2.33.3.4.6 CFNR target

Target for call forwarding no reply.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Maximum 64 characters to designate local users, hunt groups or external phone numbers.

Default: Blank

2.33.3.4.7 CFNR timeout

Wait time for call forwarding on no reply. After this time period the call is forwarded to the target number if the subscriber does not pick up the phone.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Max. 255 seconds

Default: 15 seconds

2.33.3.4.8 CFB active

Activates or deactivates call forwarding on busy.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Yes
- No

Default: No

2.33.3.4.9 CFB target

Target for call forwarding on busy.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions

Possible values:

- Maximum 64 characters to designate local users, hunt groups or external phone numbers.

Default: Blank**2.33.3.4.10 Active**

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions**Possible values:**

- On
- Off

Default: On**2.33.3.4.11 Busy-on-Busy**

Prevents a second call from being connected to a terminal device, irrespective of whether CW (call-waiting indication) is active on the device or not; i.e. there is no "call waiting" signal. The second caller hears an engaged tone. This also applies where an internal telephone number supports multiple logins and just one of the possible terminal devices is already in use.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions**Possible values:**

- Yes
- No

Default: No**2.33.3.4.12 CallForward-Set-CallingLine-Id**

Use this entry to set which phone number will be signaled when a call is forwarded (CF) - for example from CDIV - alternatively, you can enter your own phone number as a fixed setting.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions**Possible values:**

- Extension-ID:
- Calling-ID: Signals the incoming phone number. When the call is forwarded to a mobile phone, a subscriber will be able to identify the caller's original phone number.
- Custom-ID: Signals the phone number entered under /Setup/Voice-Call-Manager/Users/Extensions/Custom-ID.

Default: Extension-ID:**2.33.3.4.13 Custom ID**

Use this entry to set the phone number that will be used for signaling with call forwarding.

Telnet path: /Setup/Voice-Call-Manager/Users/Extensions**Possible values:**

- Maximum 64 characters

Default: Blank

This phone number will only be used if the parameter /Setup/Voice-Call-Manager/Users/Extensions/CF-Set-Cln-Id is set to "Custom-ID"

2.33.4 Lines

This menu contains line settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager

2.33.4.1 SIP provider

This menu contains SIP provider settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager/Lines

2.33.4.1.1 Line

The device uses these lines to register with other SIP remote stations (usually SIP providers or remote gateways at SIP PBXs). The connection is made either over the Internet or a VPN tunnel. Up to 16 SIP lines can be entered.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider

2.33.4.1.1.1 Name

Name of the line; may not be identical to another line that is configured in the device.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 16 characters

Default: Blank

2.33.4.1.1.2 Domain

SIP domain/realm of the upstream device. Provided the remote device supports DNS service records for SIP, this setting is sufficient to determine the proxy, outbound proxy, port and registrar automatically. This is generally the case for typical SIP provider services.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.1.1.3 Port

TCP/UDP port that the SIP provider uses as the target port for SIP packets.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Any available TCP/IP port.

Default: 5060

 This port has to be activated in the firewall for the connection to work.

2.33.4.1.1.4 User ID

Telephone number of the SIP account or name of the user (SIP URI).

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 characters

Default: Blank

This access data is used to register the line (single account, trunk, link, gateway), but not the individual local users with their individual registration details. If individual users (SIP, ISDN, analog) are to register with an upstream device using the data stored there or on the terminal device, then the line type "SIP PBX line" should be selected.

2.33.4.1.1.5 Authentication name

Name for authentication to the upstream SIP device (provider/SIP PBX).

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line**Possible values:**

- Max. 64 characters

Default: Blank

This access data is used to register the line (single account, trunk, link, gateway), but not the individual local users with their individual registration details. If individual users (SIP, ISDN, analog) are to register with an upstream device using the data stored there or on the terminal device, then the line type "SIP PBX line" should be selected.

2.33.4.1.1.6 Secret

The password for authentication at the SIP registrar and SIP proxy at the provider. For lines without (re-)registration, the password may be omitted under certain circumstances.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line**Possible values:**

- Max. 64 characters

Default: Blank**2.33.4.1.1.7 Outbound proxy**

The SIP provider's outbound proxy accepts all SIP signaling originating from the LANCOM device for the duration of the connection.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line**Possible values:**

- Max. 64 characters

Default: Blank

This field can remain empty unless the SIP provider specifies otherwise. The outbound proxy is then determined by sending DNS SRV requests to the configured SIP domain/realm (this is often not the case for SIP services in a corporate network/VPN, i.e. the value must be explicitly set).

2.33.4.1.1.8 CIn-Prefix

The call prefix is a number placed in front of the caller number (CLI; SIP "From:") for all incoming calls. This generates unique telephone numbers for return calls.

For example; a number can be added, which the call router analyzes (and subsequently removes) to select the line to be used for the return call.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 9 numbers

Default: Blank

2.33.4.1.1.9 Name

The effect of this field depends upon the mode set for the line:

If the line is set to "Single account" mode, all incoming calls on this line with this number as the target (SIP: "To") are transferred to the call router.

If the mode is set to "Trunk", the target number is determined by removing the trunk's switchboard number. If an error occurs, the call will be supplemented with the number entered in this field (SIP: "To") are transferred to the call router.

If mode is set to "Gateway" or "Link" the value entered in this field has no effect.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.1.1.10 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- On
- Off

Default: On

2.33.4.1.1.11 Comment

Comment on this entry

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.1.1.12 Codecs

While the connection is being established, the terminal equipment concerned negotiate which codecs are to be used to compress the voice data. Use the codec filter to restrict the codecs that are permitted and to permit only certain codecs.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Along with the widely available codecs, some models also support the following codec for the SIP gateway function:
- G.722 - 64 kbps (high-quality codec for ISDN to SIP an vice versa only)
- G.729 - 8 kbps (codec with higher compression for lower bandwidths)

- These codecs are available to the devices LANCOM 1722 VoIP, LANCOM 1723 VoIP, LANCOM 1724 VoIP and LANCOM 1823 VoIP, and also for all models with the LANCOM Advanced VoIP Option.

Default: All



If no common the codecs can be agreed upon, no connection is made.

2.33.4.1.1.13 Codec order

This parameter influences the order in which the codecs are presented during connection establishment.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider

Possible values:

- Unchanged: Leaves the order of the codecs unchanged
- BestQuality: Changes the order of the codecs that are offered to achieve the best voice quality possible.
- LowestBandwidth: Changes the order of the codecs that are offered to achieve the lowest bandwidth possible.

Default: Unchanged

2.33.4.1.1.14 Routing tag

Routing tag for selecting a certain route in the routing table for connections to this SIP provider.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 numbers

Default: 0

2.33.4.1.1.15 Display name

Name for display on the telephone being called.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 characters

Default: Blank



Normally this value should not be set as incoming calls have a display name set by the SIP provider, and outgoing calls are set with the local client or call source (which may be overwritten by the user settings for display name, if applicable). This settings is often used to transmit additional information (such as the original calling number when calls are forwarded) that may be useful for the person called. In the case of single-line SIP accounts, some providers require an entry that is identical to the display name defined in the registration details, or the SIP ID (e.g. T-Online). This access data is used to register the line (single account, trunk, link, gateway), but not the individual local users with their individual registration details. If individual users (SIP, ISDN, analog) are to register with an upstream device using the data stored there or on the terminal device, then the line type "SIP PBX line" should be selected.

2.33.4.1.1.16 Registrar

The SIP registrar is the point at the SIP provider that accepts the login with the authentication data for this account.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 64 characters

Default: Blank

-
-  This field can remain empty unless the SIP provider specifies otherwise. The registrar is then determined by sending DNS SRV requests to the configured SIP domain/realm (this is often not the case for SIP services in a corporate network/VPN, i.e. the value must be explicitly set).

2.33.4.1.1.17 Mode

This selection determines the operating mode of the SIP line.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- **Provider:** Externally, the line behaves like a typical SIP account with a single public number. The number is registered with the service provider, the registration is refreshed at regular intervals (when (re-)registration has been activated for this SIP provider line). For outgoing calls, the calling-line number is replaced (masked) by the registered number. Incoming calls are sent to the configured internal target number. Only one connection can exist at a time.
- **Trunk:** Externally, the line acts like an extended SIP account with a main external telephone number and multiple extension numbers. The SIP ID is registered as the main external number with the service provider and the registration is refreshed at regular intervals (when (re-)registration has been activated for this SIP provider line). For outgoing calls, the switchboard number acts as a prefix placed in front of each calling number (sender; SIP: "From:"). For incoming calls, the prefix is removed from the target number (SIP: "To:"). The remaining digits are used as the internal extension number. In case of error (prefix not found, target equals prefix) the call is forwarded to the internal target number as configured. The maximum number of connections at any one time is limited only by the available bandwidth.
- **Gateway:** Externally the line behaves like a typical SIP account with a single public number, the SIP ID. The number (SIP ID) is registered with the service provider and the registration is refreshed at regular intervals (when (re-)registration has been activated for this SIP provider line). For outgoing calls, the calling-line number (sender) is replaced (masked) by the registered number (SIP ID in SIP: "From:") and sent in a separate field (SIP: "Contact:"). For incoming calls the dialed number (target) is not modified. The maximum number of connections at any one time is limited only by the available bandwidth.
- **Link:** Externally, the line behaves like a typical SIP account with a single public number (SIP ID). The number is registered with the service provider, the registration is refreshed at regular intervals (when (re-)registration has been activated for this SIP provider line). For outgoing calls, the calling-line number (sender; SIP: "From:") is not modified. For incoming calls, the dialed number (target; SIP: modified). The maximum number of connections at any one time is limited only by the available bandwidth.

Default: Provider

-
-  The "Service provider" can be a server in the Internet, an IP PBX, or a voice gateway. Please observe the notices about 'SIP mapping'..

2.33.4.1.1.18 Refer forwarding

Call switching (connect call) between two remote subscribers can be handled by the device itself (media proxy) or it can be passed on to the exchange at the provider if both subscribers can be reached on this SIP provider line (otherwise the media proxy in the LANCOM device assumes responsibility for switching the media streams, for example when connecting between two SIP providers).

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- **Yes:** Switching is passed on to the provider.
- **No:** Switching is retained within the device.

Default: No

-
-  An overview of the main SIP providers supporting this function is available in the Support area of our Internet site.

2.33.4.1.1.19 Local port

This is the port used by the LANCOM proxy to communicate with the provider.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- 1 to 65536

Default: 0

Special values: 0: Dynamic port selection; the port is automatically selected from the pool of available port numbers.

 If line (re-)registration is deactivated, the local port has to be defined with a fixed value, and this also has to be entered at the provider end as the destination port (e.g. when using an unregistered trunk in the company VPN). This ensures that both ends can send SIP signaling.

2.33.4.1.1.20 (Re-)registration

This activates the (repeated) registration of the SIP provider line. Registration can also be used for line monitoring.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Yes
- No

Default: Yes

 To use (re-) registration, the line monitoring method must correspondingly be set to "Register" or "Automatic". Registration is repeated after the monitoring interval has expired. If the provider's SIP registrar suggests a different interval, the suggested value is used automatically.

2.33.4.1.1.21 Line-monitoring

Specifies the line monitoring method. Line monitoring checks if a SIP provider line is available. The Call Router can make use of the monitoring status to initiate a change to a backup line. The monitoring method sets the way in which the status is checked.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Auto: The method is set automatically.
- Disabled: No monitoring; the line is always reported as being available. This setting does not allow the actual line availability to be monitored.
- Register: Monitoring by means of register requests during the registration process. This setting also requires "(Re-)registration" to be activated for this line.
- Options: Monitoring via Options Requests. This involves regular polling of the remote station. Depending on the response the line is considered to be available or unavailable. This setting is well suited for e.g. lines without registration.

Default: Auto

2.33.4.1.1.22 Monitoring interval

The monitoring interval in seconds. This value affects the line monitoring with register request and also the option request. The monitoring interval must be set to at least 60 seconds. This defines the time period that passes before the monitoring method is used again. If (re-) registration is activated, the monitoring interval is also used as the time interval before the next registration.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line

Possible values:

- Max. 5 numbers

Default: 60**Special values:** Values less than 60 seconds are automatically set to 60 seconds.

 If the remote station responds to an option request with a different suggested value for the monitoring interval, this is accepted and subsequently applied.

2.33.4.1.1.23 Trusted

Specifies the remote station on this line (provider) as "Trusted Area". In this trusted area, the caller ID is not concealed from the caller, even if this is requested by the settings on the line (CLIR) or in the device. In the event of a connection over a trusted line, the Caller ID is first transmitted in accordance with the selected privacy policy and is only removed in the final exchange before the remote subscriber. This means, for example, that Caller ID can be used for billing purposes within the trusted area. This function is interesting for providers using a VoIP router to extend their own managed networks all the way to the connection for the VoIP equipment.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line**Possible values:**

- Yes: Trusted
- No: Not trusted

Default: Yes

 The function is not supported by all providers.

2.33.4.1.1.24 Privacy method

Specifies the method used for transmitting the caller ID in the separate SIP-header field.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line**Possible values:**

- None
- RFC3325: Using P-Preferred-Id/P-Asserted-Id
- IETF-Draft-Sip-Privacy-04: Using RPID (Remote Party ID)

Default: None**2.33.4.1.1.25 Remove FROM user type**

Select this option to remove the "user=phone" information from the From field for outgoing calls over a provider line. Some VoIP proxies do not process this information according to the standard and reject the call.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider/Line/remove-FROM-usertype**Possible values:**

- Yes
- No

Default: No**2.33.4.1.1.26 Trunk-Inc-Cld-In-ToHeader**

Using this setting you enable or disable the work-around for the case that the provider transmits the complete destination number (switchboard number + extension) not in the Request line but in the TO-URI, and the number in the "To" field

is not necessarily longer than the number in the Request line. You should leave this setting enabled to ensure compatibility with these providers.

SNMP ID:

2.33.4.1.1.26

Telnet path:**Setup > Voice-Call-Manager > Lines > SIP-Provider > Line****Possible values:**

No

Yes

Default:

Yes

2.33.4.1.2 Mapping

The entries made under SIP mapping establish a series of rules for number translation to SIP lines in the trunk or gateway mode. Up to 40 mapping rules can be entered.

A SIP line in trunk mode is used for mediating between internal numbers and the range of telephone numbers offered by a SIP account.

For incoming calls, the destination number (called party ID) is modified. The internal number is used if the called party ID matches with the external telephone number.

For outgoing calls, the calling party ID is modified. The external number is used if the calling party ID matches with the internal telephone number.

Telnet path: /Setup/Voice-Call-Manager/Lines/SIP-Provider**2.33.4.1.2.1 SIP provider**

Name of the line which is the target of the call number mapping.

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping**Possible values:**

- All defined SIP lines.

Default: Blank**2.33.4.1.2.2 Ext-number/name**

Call number within the range of those used by the SIP trunk account or upstream SIP PBX.

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping**Possible values:**

- Max. 64 characters

Default: Blank**2.33.4.1.2.3 Number/Name**

Telephone number in the range of the LANCOM VoIP router.

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping**Possible values:**

- Max. 64 characters

Default: Blank

2.33.4.1.2.4 Length

The value defines the number of digits required for a called number to be considered as complete. It only applies to SIP gateway lines with entries that end in a # symbol.

For an outgoing call, the external called number generated from this entry is automatically regarded as complete according to the defined number of numerals, and then forwarded. This process speeds up the dialing process. Alternatively, the called number is regarded as complete when:

The user concludes the dialed number with a # symbol, or

a precisely matching entry was found in the SIP mapping table without a # symbol, or

the wait time expires.

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping

Possible values:

- Max. 9 numbers

Default: 0

Special values: Setting the length of called number to '0' deactivates premature dialing from the length of called number.

2.33.4.1.2.5 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping

Possible values:

- On
- Off

Default: On

2.33.4.1.2.6 Comment

Comment on this entry

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.1.2.7 CLIR

The display of your telephone number is suppressed so the person called cannot see it.

Telnet path: /Setup/Voice Call Manager/Lines/SIP-provider/Mapping

Possible values:

- Yes
- No

Default: No

2.33.4.2 SIP-PBX

This menu contains SIP PBX settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager/Lines

2.33.4.2.1 SIP-PBX

These lines are used to configure connections to upstream SIP PBXs, which are usually connected via VPN. Up to 4 SIP PBXs can be entered.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX

2.33.4.2.1.1 Name

Name of the line; may not be identical to another line that is configured in the device.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 16 characters

Default: Blank

2.33.4.2.1.2 Domain

SIP domain/realm of the upstream SIP PBX.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.2.1.3 Port

TCP/UDP port of the upstream SIP PBX to which the LANCOM device sends the SIP packets.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Any available TCP/IP port.

Default: 5060

 This port has to be activated in the firewall for the connection to work.

2.33.4.2.1.4 Secret

Shared password for registering with the SIP PBX. This password is only required (a) when SIP subscribers have to log in to the PBX who have not been set up as SIP users with their own access data in the SIP user list or (b) when local SIP authentication is not forced. This means that SIP users can register with the LANCOM device without a password and can log in to the upstream SIP PBX with a shared password if the SIP user's domain is the same as the domain of a SIP PBX line.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.2.1.5 Outbound proxy

A SIP proxy receives requests from SIP clients and acts as a proxy while the connection is being established.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 64 characters

Default: Blank

 This field can remain empty unless the SIP provider specifies otherwise. The address of the proxy is resolved over the realm.

2.33.4.2.1.6 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- On
- Off

Default: On

2.33.4.2.1.7 Comment

Comment on this entry

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.2.1.8 CIn-Prefix

The call prefix is a number placed in front of the caller number (CLI; SIP "From:") for all incoming calls. This generates unique telephone numbers for return calls.

For example; a number can be added, which the call router analyzes (and subsequently removes) to select the line to be used for the return call.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 9 numbers

Default: Blank

2.33.4.2.1.9 Line prefix

With outgoing calls using this line, this prefix is placed in front of the calling number to create a complete telephone number that is valid for this line. With incoming calls this prefix is removed, if present.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 9 numbers

Default: Blank

2.33.4.2.1.10 Codecs

While the connection is being established, the terminal equipment concerned negotiate which codecs are to be used to compress the voice data. Use the codec filter to restrict the codecs that are permitted and to permit only certain codecs.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Along with the widely available codecs, some models also support the following codec for the SIP gateway function:
- G.722 - 64 kbps (high-quality codec for ISDN to SIP and vice versa only)
- G.729 - 8 kbps (codec with higher compression for lower bandwidths)
- These codecs are available to the devices LANCOM 1722 VoIP, LANCOM 1723 VoIP, LANCOM 1724 VoIP and LANCOM 1823 VoIP, and also for all models with the LANCOM Advanced VoIP Option.

Default: All

 If no common the codecs can be agreed upon, no connection is made.

2.33.4.2.1.11 Codec order

This parameter influences the order in which the codecs are presented during connection establishment.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- No optimization: Leaves the order of the codecs unchanged
- Best quality: Changes the order of the codecs that are offered to achieve the best voice quality possible.
- Minimum bandwidth: Changes the order of the codecs that are offered to achieve the lowest bandwidth possible.

Default: No optimization

2.33.4.2.1.12 Routing tag

Routing tag for selecting a certain route in the routing table for connections to this SIP PBX.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 64 numbers

Default: 0

2.33.4.2.1.13 Registrar

The SIP registrar is the point that accepts the login with the configured authentication data for this account in the SIP PBX.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 63 characters

Default: Blank

 This field can remain empty unless the SIP provider specifies otherwise. The address of the registrar is resolved over the realm.

2.33.4.2.1.14 Local port

This is the port used by the LANCOM proxy to communicate with the upstream SIP PBX.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- 1 to 65536

Default: 0

Special values: 0: Dynamic port selection; the port is automatically selected from the pool of available port numbers.

 If line (re-)registration is deactivated, the local port has to be defined with a fixed value, and this also has to be entered into the SIP PBX to ensure that both ends can send SIP signaling.

2.33.4.2.1.15 (Re-)registration

This activates the (repeated) registration of the SIP PBX line. Registration can also be used for line monitoring.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Yes
- No

Default: Yes

 To use (re-) registration, the line monitoring method must correspondingly be set to "Register" or "Automatic". Registration is repeated after the monitoring interval has expired. If the SIP registrar in the SIP PBX suggests a different interval, the suggested value is used automatically.

2.33.4.2.1.16 Line-monitoring

Specifies the line monitoring method. Line monitoring checks if a SIP PBX line is available. The Call Router can make use of the monitoring status to initiate a change to a backup line. The monitoring method sets the way in which the status is checked.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Auto: The method is set automatically.
- Disabled: No monitoring; the line is always reported as being available. This setting does not allow the actual line availability to be monitored.
- Register: Monitoring by means of register requests during the registration process. This setting also requires "(Re-)registration" to be activated for this line.
- Options: Monitoring via Options Requests. This involves regular polling of the remote station. Depending on the response the line is considered to be available or unavailable. This setting is well suited for e.g. lines without registration.

Default: Auto

2.33.4.2.1.17 Monitoring interval

The monitoring interval in seconds. This value affects the line monitoring with register request and also the option request. The monitoring interval must be set to at least 60 seconds. This defines the time period that passes before the monitoring method is used again. If (re-) registration is activated, the monitoring interval is also used as the time interval before the next registration.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Max. 5 numbers

Default: 60

Special values: Values less than 60 seconds are automatically set to 60 seconds.

 If the remote station responds to an option request with a different suggested value for the monitoring interval, this is accepted and subsequently applied.

2.33.4.2.1.18 Trusted

Specifies the remote station on this line (provider) as "Trusted Area". In this trusted area, the caller ID is not concealed from the caller, even if this is requested by the settings on the line (CLIR) or in the device. In the event of a connection over a trusted line, the Caller ID is first transmitted in accordance with the selected privacy policy and is only removed in the final exchange before the remote subscriber. This means, for example, that Caller ID can be used for billing purposes within the trusted area. This function is interesting for providers using a VoIP router to extend their own managed networks all the way to the connection for the VoIP equipment.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- Yes: Trusted
- No: Not trusted

Default: Yes

 Please note that not all providers support this function.

2.33.4.2.1.19 Privacy method

Specifies the method used for transmitting the caller ID in the separate SIP-header field.

Telnet path: /Setup/Voice-Call-Manager/Line/SIP-PBX/PBX

Possible values:

- None
- RFC3325: Using P-Preferred-Id/P-Asserted-Id
- IETF-Draft-Sip-Privacy-04: Using RPID (Remote Party ID)

Default: None

2.33.4.3 ISDN

The ISDN connections are configured over these lines. In addition to the physical ISDN line to be used, a telephone number translation is configured as well. This ensures the internal telephone number or SIP URL is converted to an external ISDN number.

Telnet path: /Setup/Voice-Call-Manager/Lines

2.33.4.3.1 Interfaces

This is where the lines to ISDN exchanges or PBX systems are configured (the router is the terminal device).

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN

2.33.4.3.1.1 Name

This name uniquely identifies the line. It may not be assigned to any other line.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Interfaces

Possible values:

- Max. 64 characters

Default: Blank

 Here you can, for example, enter the telephone number for a group that is to receive incoming calls. This allows you to flexibly control which telephones ring for incoming calls, or to transfer calls to a mobile phone number or answering machine after a certain time.

2.33.4.3.1.2 Interface

Interface to which the ISDN subscribers are connected.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Interfaces

Possible values:

- All available ISDN interfaces.

Default: Model dependent.

2.33.4.3.1.3 Domain

Domain in which the calls from/to the ISDN line are managed in LANCOM's SIP world.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Interfaces

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.3.1.4 CIn-Prefix

The call prefix is a number placed in front of the caller number (CLI; SIP "From:") for all incoming calls. This generates unique telephone numbers for return calls.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Interfaces

Possible values:

- Max. 9 numbers

Default: Blank

2.33.4.3.1.5 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Interfaces

Possible values:

- On
- Off

Default: On

2.33.4.3.1.6 Comment

Comment on this entry

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Interfaces

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.3.2 Mapping

ISDN mapping assigns external ISDN telephone numbers (MSN or DDI) to the telephone numbers that are used internally. You can enter up to 64 telephone number assignments.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN

2.33.4.3.2.1 MSN/DDI

External telephone number of the connection in the ISDN network.

For incoming calls that are directed to this number, the corresponding internal telephone number is entered as the destination number. For outgoing calls, this number is transmitted as the caller's number, unless this has been suppressed.

MSN: Number of the telephone connection

DDI (Direct Dialing in): Telephone extension number if the connection is configured as a point-to-point line.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Mapping

Possible values:

- Max. 19 numbers

Default: Blank

 By using the # character as a placeholder, entire groups of call numbers, e.g. when using extension numbers, can be addressed via a single entry.

2.33.4.3.2.2 Interface

ISDN interface(s) used for connecting terminal devices to the LANCOM VoIP router. These line have to be configured as ISDN-NT.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Mapping

Possible values:

- All available ISDN interfaces.

Default: Model dependent.

2.33.4.3.2.3 Number/Name

Internal telephone number of the ISDN telephone or name of the user (SIP URL).

For incoming calls, this is the SIP name or internal telephone number of the telephone to which the call from this interface is switched with the corresponding MSN/DDI. For outgoing calls, the SIP name is replaced by the MSN/DDI of the corresponding entry.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Mapping

Possible values:

- Max. 64 characters

Default: Blank

 By using the # character as a placeholder, entire groups of call numbers, e.g. when using extension numbers, can be addressed via a single entry.

2.33.4.3.2.4 CLIR

The display of your telephone number is suppressed so the person called cannot see it.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Mapping

Possible values:

- Yes
- No

Default: No

2.33.4.3.2.5 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Mapping

Possible values:

- On
- Off

Default: On

2.33.4.3.2.6 Comment

Comment on this entry

Telnet path: /Setup/Voice-Call-Manager/Line/ISDN/Mapping

Possible values:

- Max. 64 characters

Default: Blank

2.33.4.4 Predefined destination

Table with predefined special functions for the destination lines in the call routing entries.

Telnet path: /Setup/Voice-Call-Manager/Lines

2.33.4.4.1 Name

Predefined special functions for the destination lines in the call routing entries.

Telnet path: /Setup/Voice-Call-Manager/Line/Predef-Dest.

Possible values:

- REJECT highlights a blocked telephone number.
- USER forwards the call to local SIP, analog or ISDN subscribers.
- RESTART starts a new pass through the call routing table with the previously formed "number/name". The former "source line" is deleted.

Default: REJECT

USER

RESTART

2.33.4.5 Source filters

Table with predefined source lines to filter calls from local users.

Telnet path: /Setup/Voice-Call-Manager/Lines

2.33.4.5.1 Name

Predefined source lines to filter calls from local users.

Telnet path: /Setup/Voice-Call-Manager/Line/Source-Filters

Possible values:

- USER.ANALOG for calls from a local analog subscribers
- USER.ISDN for calls from a local ISDN subscriber
- USER.SIP for calls from a local SIP subscriber
- USER# for calls from a local subscriber in general

Default: USER.ANALOG

USER.ISDN

USER.SIP

USER#

2.33.5 Call router

This menu contains call router settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager

2.33.5.1 Call routing

Rules can be defined here for redirecting or rejecting calls to certain call targets or lines.

Telnet path: /Setup/Voice-Call-Manager/Call-Router

2.33.5.1.1 Called ID

The called party name or destination telephone number (without domain information) that is called.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Max. 64 characters

Default: Blank

Special values: The # character is used as a placeholder for any character strings. All characters in front of the # are removed, the remaining characters are used in the "Number/name" field instead of the # character to further establish the connection.

 Example: The call routing table contains entry '00049#' as the called number/name and '00#' as the number/name. For all calls with a preceding '0' for outside-line access and the complete dialing code for Germany, only the leading '0' for the outside-line access and the leading '0' for the local area dialing code are retained as the number/name; the country ID is removed. So '00049 2405 123456' becomes '0 02405 123456'.

2.33.5.1.2 Cld-Domain

This entry filters the called domain, the "Called Party Domain". The call router entry is only considered to match if the Called Party Domain for the call matches the domain that is entered here. If nothing is specified, any destination domain is accepted.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Analog

- ISDN
- The internal VoIP domains of the LANCOM VoIP router.
- All domains entered for the SIP and SIP-PBX lines.

Default: Blank

2.33.5.1.3 Calling-Id

This entry filters the calling number/name, the "calling party ID". It is specified as an internal number or as a national or international telephone number. The domain is not specified. No "0" or other character for a line ID is prefixed; the ID is used as if it comes from the line or from internal telephone calls.

The call router entry is only evaluated as matching if the Calling Party ID for the call matches the number that is entered here. After "#", any characters can be accepted.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Internal number
- National
- International call number.
- LOCAL restricts to internal telephone numbers (without a leading "0").
- EMPTY can be used for Calling Party IDs that are not specified.

Default: Blank

 If nothing is specified here, any Calling Party ID is accepted.

2.33.5.1.4 Cln-Domain

This entry filters the calling domain. The call router entry is only considered to match if the Calling Domain for the call matches the domain that is entered here. If nothing is specified, each calling domain is accepted.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Analog
- ISDN
- The internal VoIP domains of the LANCOM VoIP router.
- All domains entered for the SIP and SIP-PBX lines.

Default: Blank

 SIP telephones usually have several line keys, for which different domains can be configured. With this filter, telephone calls are handled depending on the selection that is made using different line keys.

2.33.5.1.5 Src-Line

This entry filters the source line. The call router entry is only considered to match if the source line for the call matches the line that is entered here. If nothing is specified, any calling line is accepted.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- USER.ANALOG for calls from a local analog subscribers
- USER.ISDN for calls from a local ISDN subscriber
- USER.SIP for calls from a local SIP subscriber
- USER# for calls from a local subscriber in general

- All ISDN, SIP and SIP-PBX lines that are entered.

Default: Blank

2.33.5.1.7 Destination-Id-1

This telephone number is used to continue with establishing the connection. If no connection can be established using this telephone number and the corresponding line, then the backup telephone numbers with their associated lines are used

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Max. 64 characters

Default: Blank

 At least one of the entries "Number/Name", "1st Backup No." or "2nd Backup No." must be filled in. They are evaluated in this sequence. A blank field is skipped.

2.33.5.1.8 Destination-Line-1

The connection is established using the destination line.

ISDN

All defined SIP lines.

The following special functions can be entered as a destination line:

REJECT highlights a blocked telephone number.

USER forwards the call to local SIP or ISDN subscribers.

RESTART starts a new pass through the call routing table with the previously formed "number/name". The former "source line" is deleted.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Analog
- ISDN
- All defined SIP lines.
- The following special functions can be entered as a destination line:
- REJECT highlights a blocked telephone number.
- USER forwards the call to local SIP, analog or ISDN subscribers.
- RESTART starts a new pass through the call routing table with the previously formed "number/name". The former "source line" is deleted.

Default: Blank

 This field has to be completed, otherwise the entry is not used.

2.33.5.1.9 Active

The routing entry can be activated, deactivated, or marked as a default entry. All calls that can be resolved using the first passes but not using the call routing table or local subscriber table are then automatically resolved using these default entries. You can use any destination name and destination domain; only the source filters that are set are considered

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Active
- Idle
- Default line

Default: Active**2.33.10.7.15 Comment**

Comment on this entry

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing**Possible values:**

- Max. 64 characters

Default: Blank**2.33.5.1.11 Dest-Id-2**

This telephone number is used to establish the connection further if nothing is entered in "number/name" or the corresponding "line" is not available. If no connection can be established using this 2nd call number and the relevant 2nd line, the 3rd call number and 3rd line will be used.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing**Possible values:**

- Max. 64 characters

Default: Blank**2.33.5.1.12 Dest-Line-2**

The connection is established using this line if the 2nd number is used to establish the connection. The same lines can be dialed as for "line".

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing**Possible values:**

- Analog
- ISDN
- All defined SIP lines.
- The following special functions can be entered as a destination line:
 - REJECT highlights a blocked telephone number.
 - USER forwards the call to local SIP, analog or ISDN subscribers.
 - RESTART starts a new pass through the call routing table with the previously formed "number/name". The former "source line" is deleted.

Default: Blank**2.33.5.1.13 Dest-Id-3**

Similar to the 2nd number.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing**Possible values:**

- Max. 64 characters

Default: Blank

2.33.5.1.14 Dest-Line-3

Similar to the 2nd line.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- Analog
- ISDN
- All defined SIP lines.
- The following special functions can be entered as a destination line:
 - REJECT highlights a blocked telephone number.
 - USER forwards the call to local SIP, analog or ISDN subscribers.
 - RESTART starts a new pass through the call routing table with the previously formed "number/name". The former "source line" is deleted.

Default: Blank

2.33.5.1.15 Priority

The Call Manager sorts all entries with the same priority automatically, so that the table can be processed through logically from top to bottom. With some entries, however, the sequence of the entries has to be specified (for the telephone number translation, for example). The entries with the highest priority are automatically sorted to the top.

Telnet path: /Setup/Voice-Call-Manager/Call-Router/Call-Routing

Possible values:

- 0 to 999

Default: 0

2.33.7 Groups

This menu contains user-group settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager

2.33.7.1 Groups

Groups are defined here that enable incoming calls to be automatically distributed to two or more subscribers.

Telnet path: /Setup/Voice-Call-Manager/Groups

2.33.7.1.1 Name

The hunt group is available under this telephone number or SIP-ID.

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- Max. 64 characters

Default: Blank

 The names of hunt groups may not coincide with the names of users (SIP, ISDN, analog).

2.33.7.1.2 Members

Comma-separated list of the members of the hunt group. Members can be users, hunt groups or external telephone numbers, and so there is no limit on scaling.

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- Users
- Hunt groups
- External telephone numbers

Default: Blank

 A hunt group may not contain itself or any parents in the hierarchical system—recursion through member entries is not possible. However, loops to parents in the structure can be set up via the 'Forwarding target'.

2.33.7.1.3 Distribution method

Sets the type of call distribution.

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- Simultaneous: The call is signaled to all group members at once. If a member picks up the call within the call-forwarding time, the call is no longer signaled to other group members. If nobody accepts the call within the forwarding time, then the call is switched to its forwarding target.
- Sequential: The call is directed to one member of the group after the other. If a group member does not accept the call within the forwarding time, then the call is switched to the next member of the group. If nobody in the group accepts the call within the forwarding time, then the call is switched to its forwarding target.

Default: Simultaneous

2.33.7.1.4 Forwarding time

If an incoming call is not picked up by a group member within the forwarding time, then the call is forwarded according to the distribution method selected:

In the case of simultaneous call distribution, the call is forwarded to the forwarding target.

In case of sequential call distribution, the call is forwarded to the next group member in line. If the group member is the last one in the sequence, then the call is redirected to its forwarding target.

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- Max. 255 seconds

Default: 15

Special values: 0 seconds. The call is forwarded immediately to the forwarding target (temporarily jumps a hunt group in a hierarchy).

 If all members of the group are busy or unavailable, then the call is redirected to the forwarding target without waiting for the forwarding-time to expire.

2.33.7.1.5 Forwarding target

If none of the group members accepts the call within the forwarding time, then the call is switched to the forwarding target entered here. Forwarding targets can be users, hunt groups or external telephone numbers. Only one forwarding target can be entered.

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- Users

- Hunt groups
- External telephone numbers

Default: Blank

 If no forwarding target is defined, then the call is rejected as soon as the member list has been worked through, or if all members are busy or unavailable.

The forwarding target only becomes active once the group's forwarding time has expired or if no members are available. Here, too, redirection to a higher level of the hunt-group structure is possible, unlike with the 'Members' entry.

2.33.7.1.6 Active

Activates or deactivates the entry.

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- On
- Off

Default: On

2.33.7.1.7 Comment

Comment on this entry

Telnet path: /Setup/Voice-Call-Manager/Groups/Groups

Possible values:

- Max. 64 characters

Default: Blank

2.33.8 Logging

This menu contains logging settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager

2.33.8.1 Call data records

This menu contains logging settings for the Voice Call Manager.

Telnet path: /Setup/Voice-Call-Manager/Logging

2.33.8.1.1 E-mail notification

You can optionally receive information about all of the calls made via the LANCOM VoIP router via e-mail. For every call which is connected (internal, external, incoming, outgoing), a message is generated containing information such as the source and target number, start-time and end-time of the call, etc.

Telnet path: /Setup/Voice-Call-Manager/Logging/Call-Data-Records

Possible values:

- On
- Off

Default: Off

 An SMTP account must be set up to make use of this function.

2.33.8.1.2 E-mail address

E-mail address for sending messages.

Telnet path: /Setup/Voice-Call-Manager/Logging/Call-Data-Records

Possible values:

- Valid e-mail address

Default: Blank

2.33.8.1.3 Syslog

You can also obtain information on all calls made over the LANCOM VoIP router using SYSLOG (facility: accounting; level: info). For every call which is connected (internal, external, incoming, outgoing), a message is generated containing information such as the source and target number, start-time and end-time of the call, etc.

Telnet path: /Setup/Voice-Call-Manager/Logging/Call-Data-Records

Possible values:

- On
- Off

Default: Off

 A syslog client must be set up to make use of this function.

2.34 Printer

This menu contains settings for the printer.

Telnet path: /Setup

2.34.1 Printer

You can adjust setting for the network printer here.

Telnet path: /Setup/Printer

2.34.1.1 Printer

Printer name.

Telnet path: /Setup/Printer/Printer

Possible values:

- Max. 10 characters

Default: *

2.34.1.2 RawIP port

This port can be used to accept print jobs over RawIP.

Telnet path: /Setup/Printer/Printer

Possible values:

- Max. 10 characters

Default: 9100

2.34.1.3 LPD port

This port can be used to accept print jobs over LDP.

Telnet path: /Setup/Printer/Printer

Possible values:

- Max. 10 characters

Default: 515

2.34.1.4 Operating

Activates or deactivates this entry.

Telnet path: /Setup/Printer/Printer

Possible values:

- Yes: The print server is active.
- No: The print server is not active.

Default: No

2.34.1.5 Bidirectional

This parameter enables or disables the bi-directional mode of the printer.

Telnet path: /Setup/Printer/Printer



The bidirectional model of the printer is intended exclusively for development and support purposes. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.34.1.6 Reset on open

If this option is activated the device will send a reset command to the printer before opening a printer session.

Telnet path: /Setup/Printer/Printer

Possible values:

- Yes
- No

Default: No



Activate this option if the connection to the printer does not work as expected.

2.34.2 Access list

Here you define the networks that have access to the printer.

Telnet path: /Setup/Printer

2.34.2.1 IP address

IP address of the network with clients requiring access to the printer.

Telnet path: Setup/Printer/Access-list

Possible values:

- Valid IP address.

Default: 00.0.0

2.34.2.2 IP netmask

Netmask of the permitted networks.

Telnet path: Setup/Printer/Access-list

Possible values:

- Valid IP address.

Default: 00.0.0

2.34.2.3 Routing tag

If you specify a routing tag for this access rule, the only packets that will be accepted have received the same tag in the firewall or they are from a network with the corresponding interface tag. If the routing tag is 0, access attempts from suitable IP addresses are accepted every time.

Telnet path: /Setup/Printer/Access-list/Rtg-tag

Possible values:

- Max. 5 characters

Default: Blank



It follows that the use of routing tags only makes sense in combination with the appropriate accompanying rules in the firewall or tagged networks.

2.35 ECHO server

This menu contains the configuration of the ECHO server.

Telnet path: /Setup

2.35.1 Operating

The echo server is used to monitor the line quality by measuring RTT and jitter.

Telnet path: /Setup/ECHO-Server

Possible values:

- Yes
- No

Default: No

2.35.2 Access table

This table defines the access rights for using the ECHO server.

Telnet path: /Setup/ECHO-Server

2.35.2.1 IP address

IP address of remote device.

Telnet path: /Setup/ECHO-server/Access-table

Possible values:

- Valid IP address.

2.35.2.2 Netmask

IP address of remote device.

Telnet path: /Setup/ECHO-server/Access-table

Possible values:

- Valid IP address.

2.35.2.3 Protocol

Protocol used for measuring.

Telnet path: /Setup/ECHO-server/Access-table

Possible values:

- None
- TCP
- UDP
- TCP+UDP

2.35.2.4 Operating

Activates or deactivates this entry in the table.

Telnet path: /Setup/ECHO-server/Access-table

Possible values:

- Yes
- No

Default: No

2.35.2.5 Comment

Comment on this entry.

Telnet path: /Setup/ECHO-server/Access-table

2.35.3 TCP timeout

If a TCP session to an ECHO server is inactive for 10 (default) seconds, the server disconnects. Normally TCP clears up "dormant" connections by itself, but this takes far longer.

Telnet path: /Setup/ECHO-Server

Possible values:

- Max. 10 characters

Default: 10

2.36 Performance monitoring

This menu contains the configuration of the performance monitoring.

Telnet path: /Setup

2.36.2 RttMonAdmin

This table displays information about the type of measurements.

Telnet path: /Setup/Performance-Monitoring

2.36.2.1 Index

Shared index for the measurement

Telnet path: /Setup/Performance-Monitoring/RttMonAdmin

2.36.2.4 Type

Measurement type.

Telnet path: /Setup/Performance-Monitoring/RttMonAdmin

2.36.2.6 Frequency

Time in milliseconds until the measurement is repeated. Is the only parameter that can be modified while the status is active. In this case only 0 is allowed in order to prevent further iterations.

Telnet path: /Setup/Performance-Monitoring/RttMonAdmin

2.36.2.7 Timeout

Measurement timeout in milliseconds. The timeout value must be smaller than the time until measurement is repeated.

Telnet path: /Setup/Performance-Monitoring/RttMonAdmin

2.36.2.9 Status

Measurement status

Telnet path: /Setup/Performance-Monitoring/RttMonAdmin

Possible values:

- **Active:** Measurement is in progress. This value can only be set if the Status value is Not_In_Service. No measurement parameters can be modified while the Status is active.
- **Not_In_Service:** All parameters required have been set; no measurement is currently in progress.
- **Not_Ready:** Not all parameters required have been set.
- **Create:** Create a table row. SNMP Set is used to create a table row by setting the desired index to Create. When configuration is performed from the menu system the Status must also first be set to Create. When a new table row is created, the appropriate rows in the other tables are created automatically.
- **Destroy:** Delete a table row. This is only possible when the status is not Active. The appropriate rows in the other tables are deleted automatically.

2.36.3 RttMonEchoAdmin

This table displays information about the the measurements.

Telnet path: /Setup/Performance-Monitoring

2.36.3.1 Protocol

Protocol to be used

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

2.36.3.2 Destination address

Address of the responder

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

Possible values:

- Valid IP address.

2.36.3.3 Packet size

Length of the measurement packets in bytes. Packets are padded out to the minimum length required by the measurement.

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

2.36.3.5 Destination port

Destination port. Currently ignored

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

2.36.3.17 Interval

Time between two measurement packets in milliseconds

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

2.36.3.18 Packet count

Number of measurement packets per measurement

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

2.36.3.255 Index

Shared index for the measurement

Telnet path: /Setup/Performance-Monitoring/RttMonEchoAdmin

2.36.4 RttMonStatistics

This table displays performance monitoring statistics.

Telnet path: /Setup/Performance-Monitoring

2.36.4.2 Completions

Number of measurements performed.

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.4 RTT-Count

Total number of RTT values determined

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.5 RTT-Sum

Sum of all RTT values determined

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.8 RTT-Min

Minimum roundtrip time in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.9 RTT-Max

Maximum roundtrip time in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.10 Jitter-Min-Pos-SD

Minimum positive jitter value from sender to responder in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.11 Jitter-Max-Pos-SD

Maximum positive jitter value from sender to responder in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.12 Jitter-Count-Pos-SD

Number of positive jitter values determined from sender to responder

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.13 Jitter-Sum-Pos-SD

Sum of all positive jitter values from sender to responder in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.16 Jitter-Min-Pos-DS

Minimum positive jitter value from responder to sender in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.17 Jitter-Max-Pos-DS

Maximum positive jitter value from responder to sender in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.18 Jitter-Count-Pos-DS

Number of positive jitter values determined from responder to sender

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.19 Jitter-Sum-Pos-DS

Sum of all positive jitter values from responder to sender in uSec

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.22 Jitter-Min-Neg-SD

Minimum negative jitter value from sender to responder in uSec, absolute value

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.23 Jitter-Max-Neg-SD

Maximum negative jitter value from sender to responder in uSec, absolute value

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.24 Jitter-Count-Neg-SD

Number of negative jitter values determined from sender to responder

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.25 Jitter-Sum-Neg-SD

Sum of all negative jitter values from sender to responder in uSec, absolute value

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.28 Jitter-Min-Neg-DS

Minimum negative jitter value from responder to sender in uSec, absolute value

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.29 Jitter-Max-Neg-DS

Maximum negative jitter value from responder to sender in uSec, absolute value

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.30 Jitter-Count-Neg-DS

Number of negative jitter values determined from responder to sender

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.31 Jitter-Sum-Neg-DS

Sum of all negative jitter values from responder to sender in uSec, absolute value

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.34 Packet-Loss-SD

Number of packets lost from sender to responder

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.35 Packet-Loss-DS

Number of packets lost from responder to sender

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.62 Average-Jitter

Average of all absolute jitter values

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.63 Average-Jitter-SD

Average of all absolute jitter values from sender to responder

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4.64 Average-Jitter-DS

Average of all absolute jitter values from responder to sender

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.36.4,255 Index

Shared index for the measurement

Telnet path: /Setup/Performance-Monitoring/RttMonStatistics

2.37 WLAN-Management

This menu is used to configure WLAN management for WLAN controllers.

2.37.1 AP configuration

This menu contains the settings for the access point configuration.

Telnet path: /Setup/WLAN-Management

Default: Blank

2.37.1.1 Network profiles

Here you define the logical WLAN networks for activation and operation via the associated access points (APs).

SNMP ID: 2.37.1.1

Telnet path: /Setup/WLAN-management/AP-configuration

2.37.1.1.1 Name

Name of the logical WLAN network under which the settings are saved. This name is only used for internal administration of logical networks.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Max. 31 ASCII characters

Default: Blank

2.37.1.1.2 Parent name

A LANCOM WLAN controller is capable of managing a large number of different access points at different locations. However, WLAN profiles include settings that are not equally suitable for every type of access point that can be managed. For example, there are differences between the country settings and the device properties.

In order to avoid having to maintain multiple redundant WLAN profiles to cater for different countries or device types, it is possible for the logical WLAN networks to "inherit" properties from other entries.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Max. 31 ASCII characters

Default: Blank**2.37.1.1.3 Local values**

Specifies which logical wireless LAN parameters are taken over during inheritance from the parent element. All non-inherited parameters can be set locally for this profile.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- Bit field as HEX number. Set bits specify the columns to be inherited. Select from the list of logical WLAN networks (GUI).

Default: All values are taken over from parent elements.**2.37.1.1.4 Operating**

Switches the logical WLAN on or off separately.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- On
- Off

Default: On**2.37.1.1.6 Encryption**

Selects the encryption method and, for WEP, the key length that is to be used to encrypt data packets on the WLAN.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- 802.11i-WPA-PSK
- 802.11i-WPA-802.1x
- WEP-104-bit
- WEP 40-bit
- WEP 104-bit 802.1x
- WEP 40-bit 802.1x
- None

Default: 802.11i-WPA-PSK (0)

Please consider that not all wireless cards support all encryption methods.

2.37.1.1.7 WPA1 session key type

Here you select the methods which are to be made available for generating WPA session keys and group key. There is a choice of the Temporal Key Integrity Protocol (TKIP), the Advanced Encryption Standard (AES), or both.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- TKIP/AES
- AES

- TKIP

Default: TKIP/AES

2.37.1.1.8 WPA version

Data in this logical WLAN will be encrypted with this WPA version.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- WPA1/2
- WPA1
- WPA2

Default: WPA1/2 (0)

2.37.1.1.9 Key

You can enter the key or passphrase as an ASCII character string. An option for WEP is to enter a hexadecimal number by adding a leading '0x'. The following lengths result for the formats used: Method, length WPA-PSK 8-63 ASCII characters WEP152 (128 bit) 16 ASCII or 32 HEX characters WEP128 (bit 104) 13 ASCII or 26 HEX characters WEP64 (bit 40) 5 ASCII or 10 HEX characters

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- ASCII character string or hexadecimal number

Default: Blank

2.37.109.1 Radio band

Selecting the frequency band determines whether the wireless LAN adapter operates in the 2.4 GHz or 5 GHz band, which in turn determines the available radio channels.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- 2.4GHz/5GHz
- 2.4GHz
- 5GHz

Default: 2.4GHz/5GHz

2.37.1.1.11 Continuation

The time in minutes that a managed-mode access point continues to operate in its current configuration.

The configuration is provided to the access point by the WLAN controller and is optionally stored in flash memory (in an area that is not accessible to LANconfig or other tools). Should the connection to the WLAN controller be interrupted, the access points will continue to operate with the configuration stored in flash for the time period entered here. The access point can also continue to work with this flash configuration after a local power outage.

If there is still no connection to the WLAN controller after this time period has expired then the flash configuration is deleted and the access point goes out of operation. As soon as the WLAN controller can be reached again, the configuration is transmitted again from the WLAN controller to the access point.

This option enables an access point to continue operating even if the connection to the WLAN controller is temporarily interrupted. Furthermore this represents an effective measure against theft as all security-related configuration parameters are automatically deleted after this time has expired.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- 0 to 9999

Default: 0

Special values: 0: Switches the WLAN module off the moment that the connection to the Controller is lost. With this setting, the configuration provided by the WLAN controller is not stored in flash memory but in RAM, meaning that a power outage causes the configuration to be lost immediately.

9999: Continues working indefinitely with the current configuration, even if the WLAN controller is permanently unavailable. The WLAN configuration in the flash memory is only deleted after a reset.

 All other WLAN network parameters correspond to those for the standard configuration of access points.

 If the access point establishes a backup connection to a secondary WLAN controller, then the countdown to the expiry of standalone operation is halted. The access point and its WLAN networks remain active as long as it has a connection to a WLAN controller.

 Please note that the configuration in flash memory is deleted only after expiry of the time for standalone operation, and not when the power is lost!

2.37.1.1.12 Min Tx rate

Normally the access point negotiates the data transmission speeds continuously and dynamically with the connected WLAN clients. The access point adjusts the transmission speeds to the reception conditions. As an alternative, you can set fixed values for the minimum transmission speed if you wish to prevent the dynamic speed adjustment.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- 1M
- 2M
- 5.5M
- 11M
- 6M
- 9M
- 12M
- 18M
- 24M
- 36M
- 48M
- 54M
- T-72M
- T-96M
- T-108M

Default: Auto

2.37.1.1.13 Max Tx rate

Normally the access point negotiates the data transmission speeds continuously and dynamically with the connected WLAN clients. The access point adjusts the transmission speeds to the reception conditions. As an alternative, you can set fixed value for the maximum transmission speed if you wish to prevent the dynamic speed adjustment.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- 1M
- 2M
- 5.5M
- 11M
- 6M
- 9M
- 12M
- 18M
- 24M
- 36M
- 48M
- 54M
- T-72M
- T-96M
- T-108M

Default: Auto

2.37.1.1.14 Basic rate

The defined broadcast rate should allow the slowest clients to connect to the WLAN even under poor reception conditions. A higher value should only be set here if all clients in this logical WLAN can be reached "faster".

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- 1M
- 2M
- 5.5M
- 11M
- 6M
- 9M
- 12M
- 18M
- 24M
- 36M
- 48M
- 54M
- T-72M
- T-96M
- T-108M

Default: 2M

2.37.1.1.15 11b preamble

Normally, the clients in 802.11b mode negotiate the length of the preamble with the access point. "Long preamble" should only be set when the clients require this setting to be fixed.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- Long

Default: Auto**2.37.1.1.16 MAC filter**

The MAC addresses of the clients allowed to associate with an access point are stored in the MAC filter list. The 'MAC filter' switch allows the use of the MAC filter list to be switched off for individual logical networks.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- Yes
- No

Default: No

 Use of the MAC filter list is required for logical networks in which the clients register via LEPS with an individual passphrase. The passphrase used by LEPS is also entered into the MAC filter list. The MAC filter list is always consulted for registrations with an individual passphrase, even if this option is deactivated.

2.37.1.1.17 Client-bridge support

Whereas address adjustment allows only the MAC address of a directly connected device to be visible to the access point, client-bridge support provides transparency; all MAC addresses of the LAN stations behind the client stations are transferred.

Furthermore, the three MAC addresses usual in client mode are not used for this operating mode (in this example for server, access point and client station), but rather four addresses as with point-to-point connections (the fourth is the MAC address of the station in the LAN of the client station). The fully transparent connection of a LAN to the client station allows targeted transmission of data packets in the WLAN and hence functions such as TFTP downloads, initiated by a broadcast.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- Yes: Activates client-bridge support for this logical WLAN.
- No: Deactivates client-bridge support for this logical WLAN.
- Exclusive: Only accepts clients that also support the client-bridge mode.

Default: No

 Client-bridge mode can only be used between two LANCOM devices.

2.37.1.1.18 Maximum stations

Here you set the maximum number of clients that may associate with this access point. Additional clients wanting to associate will be rejected.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles**Possible values:**

- 0 to 65535

Default: 0

2.37.1.1.19 SSID broadcast (for WLAN controllers only)

You can operate your wireless LAN either in public or private mode. A wireless LAN in public mode can be contacted by any mobile station in the area. Your wireless LAN is put into private mode by activating the closed network function. In this operation mode, mobile stations that do not know the network name (SSID) are excluded from taking part in the wireless LAN.

With the closed-network mode activated on the access point, WLAN clients that use an empty SSID or the SSID "ANY" are prevented from associating with your network.

The option **SSID broadcast** provides the following settings:

- **Yes:** The access point broadcasts the radio cell's SSID. When a client sends a probe request with an empty or incorrect SSID, the access point responds with the SSID of the radio cell (publicly visible WLAN).
- **No:** The access point does not broadcast the radio cell's SSID. When a client sends a probe request with an empty SSID, the device similarly responds with an empty SSID.
- **Tightened:** The access point does not broadcast the radio cell's SSID. When a client sends a probe request with a blank or incorrect SSID, the device does not respond.

 Simply suppressing the SSID broadcast does not provide adequate protection: When legitimate WLAN clients associate with the access point, this transmits the SSID in plain text so that it is briefly visible to all clients in the WLAN network.

 The "closed network" function for the access point is to be found under **Setup > Interfaces > WLAN > Network**. Please note: If the WLAN controller has the option **SSID broadcast** set to "No" (device does not broadcast the SSID), the access point sets its **closed network** option to "Yes", and vice versa. Only with the setting "Tightened" do both devices retain identical settings.

SNMP ID:

2.37.1.1.19

Telnet path:

Telnet path: Setup > WLAN-Management > AP-Configuration > Networkprofiles

Possible values:

No
Yes
Tightened

Default:

Yes

2.37.1.1.21 SSID

Define a unique SSID (the network name) for each of the logical wireless LANs required. Only WLAN clients that have the same SSID can register with this wireless network.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Max. 32 characters

Default: BLANK

2.37.1.1.22 Min. HT MCS

A specific MCS number denotes a unique combination from the modulation of the individual carriers (BPSK, QPSK, 16QAM, 64QAM), coding rate (i.e. proportion of error correction bits in the raw data) and number of spatial streams. 802.11n uses this term instead of the term "data rate" used in older wireless LAN standards because data rate is no longer an unambiguous description.

Selecting the MCS therefore specifies the minimum and maximum modulation parameters to be used. Within these limits, the appropriate MCS is selected when the connection is established depending on the current conditions and may be adapted during the connection if required. This also defines the maximum attainable data throughput. You can find a list with the values for the different MCS in the reference manual.

The first digit specifies the modulation parameters for one spatial stream, the second digit specifies the modulation parameters for two spatial streams.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- MCS-0/8
- MCS-1/9
- MCS-2/10
- MCS-3/11
- MCS-4/12
- MCS-5/13
- MCS-6/14
- MCS-7/15

Default: Auto

 In the default setting the station automatically selects the best possible MCS for each stream, based on the conditions of each channel. If interference arises during operation and the channel conditions change, for example due to movement of the transmitter or signal deterioration, the MCS is dynamically adjusted to suit the new conditions.

2.37.1.1.23 Max. HT MCS

A specific MCS number denotes a unique combination from the modulation of the individual carriers (BPSK, QPSK, 16QAM, 64QAM), coding rate (i.e. proportion of error correction bits in the raw data) and number of spatial streams. 802.11n uses this term instead of the term "data rate" used in older wireless LAN standards because data rate is no longer an unambiguous description.

Selecting the MCS therefore specifies the minimum and maximum modulation parameters to be used. Within these limits, the appropriate MCS is selected when the connection is established depending on the current conditions and may be adapted during the connection if required. This also defines the maximum attainable data throughput. You can find a list with the values for the different MCS in the reference manual.

The first digit specifies the modulation parameters for one spatial stream, the second digit specifies the modulation parameters for two spatial streams.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- MCS-0/8
- MCS-1/9
- MCS-2/10
- MCS-3/11

- MCS-4/12
- MCS-5/13
- MCS-6/14
- MCS-7/15

Default: Auto



In the default setting the station automatically selects the best possible MCS for each stream, based on the conditions of each channel. If interference arises during operation and the channel conditions change, for example due to movement of the transmitter or signal deterioration, the MCS is dynamically adjusted to suit the new conditions.

2.37.1.1.24 Short guard interval

This option is used to reduce the transmission pause between two signals from 0.8 μ s (default) to 0.4 μ s (short guard interval). This increases the effective time available for data transmission and thus the data throughput. However, the wireless LAN system becomes more liable to disruption that can be caused by interference between two consecutive signals.

The short guard interval is activated in automatic mode provided the operating conditions allow this. Alternatively the short guard mode can be switched off.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- No

Default: Auto

2.37.1.1.25 Maximum spatial streams

The spatial multiplexing function allows several separate data streams to be transmitted over separate antennas in order to increase data throughput. The use of this function is only recommended when the remote device can process the data streams with corresponding antennas.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Auto
- One
- Two

Default: Auto

Special values:

- **Auto:** With the 'Auto' setting all spatial streams that are supported by the wireless LAN module in question are used.

2.37.1.1.26 Send aggregates

Frame aggregation is used to combine several data packets (frames) into one large packet and transmit them together. This method serves to reduce the packet overhead, and the data throughput increases.

Frame aggregation is not suitable when working with mobile receivers or time-critical data transmissions such as voice over IP.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Yes

- No

Default: Yes

2.37.1.1.27 WPA2 session key types

Here you select the methods which are to be made available for generating WPA session keys and group key. There is a choice of the Temporal Key Integrity Protocol (TKIP), the Advanced Encryption Standard (AES), or both.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- TKIP/AES
- AES
- TKIP

Default: TKIP/AES

2.37.1.1.28 RADIUS accounting activated

This is where you can activate RADIUS accounting for this logical WLAN network.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Yes, No

Default: No

 The access points supporting the logical WLAN network as configured by the WLAN controller must have an LCOS firmware version 8.00 or higher.

2.37.1.1.30 VLAN mode

This item allows you to select the VLAN mode for this WLAN network (SSID).

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- tagged: The access point marks the packets of this SSID with the ID configured under [2.37.1.1.34 VLAN ID](#).
- untagged: The access point forwards the packets of this SSID without any VLAN ID.

Default: untagged

 The access point only uses the VLAN settings for the logical WLAN if you activate the VLAN module in the access point (in the physical WLAN parameters). The setting 'untagged' for a specific WLAN allows you to operate in a wireless LAN without VLAN, even if VLAN is otherwise activated.

2.37.1.1.32 Connect SSID to

Here you can select the logical interface used by the access point to transfer the payload data from this WLAN network (SSID).

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- LAN: The access point forwards payload data from this WLAN network via the bridge to its own local LAN interface. In this case, configure how the data packets are to be further processed by using appropriate routes directly on the access point, for example through a separate Internet connection.

- WLC-TUNNEL-1 to WLC-TUNNEL-x (model dependent): The access point forwards the payload data from this WLAN network via one of the virtual interfaces to the WLAN controller (WLC tunnel). In this case, configure how the data packets are to be further processed by using appropriate routes centrally on the WLAN controller, for example through a shared Internet connection.

Default: LAN

 Forwarding payload data from multiple SSIDs to the WLAN controller increases the CPU load and bandwidth demands of the central devices. Consider the performance requirements of central WLAN management that uses layer-3 tunneling.

 For each access point you can connect up to 7 SSIDs with a WLC tunnel. For each access point, the WLAN controller connects the WLC tunnel and its associated SSID to an available bridge group. Since one of the eight available bridge groups is reserved for other purposes, 7 bridge groups remain for assigning the WC-tunnel.

2.37.1.1.33 Inter-station traffic

Depending on the application, it may be required that the WLAN clients connected to an access point can—or expressly cannot—communicate with other clients. The setting that decides whether clients within an SSID can exchange data with one another has to be set separately for each logical WLAN.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Yes
- No

Default: Yes

2.37.1.1.34 VLAN ID

This item allows you to set the VLAN ID for this logical WLAN network. When the VLAN mode is set to 'tagged', the access point transmits the data from this WLAN network (SSID) with the VLAN ID set here.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- 2 to 4094

Default: 2

2.37.1.1.35 RADIUS profile

Here you enter the name of the RADIUS profile containing the information about the RADIUS server used for the authentication of the user data and the accounting of user activity.

SNMP ID: 2.37.1.1.35

Telnet path: /Setup/WLAN-Management/AP-Configuration/Networkprofiles

Possible values:

- Max. 16 characters

Default: Blank

2.37.1.1.36 Minimum client strength

This entry determines the threshold, in percentage, for the minimum signal strength for clients when logging on. If the client's signal strength is below this value, the access point stops sending probe responses and discards the client's requests.

A client with poor signal strength will not detect the access point and cannot associate with it. This ensures that the client has an optimized list of available access points, since the list does not contain any access points that would offer a weak connection at the client's current position.

SNMP ID:

2.37.1.1.36

Telnet path:**Setup > WLAN-Management > AP-Configuration > Network-Profiles****Possible values:**

max. 3 characters from 0 to 9

Default:

0

2.37.1.1.37 LDPC-activated

With this setting you enable LDPC for the corresponding logical network. LDPC (Low Density Parity Check) is a method to correct errors during data transmission. If you do not enable LDPC, your device uses the less effective Convolution Coding (CC) method which is defined for error correction in the IEEE 802.11n standard.



Access points in your network that do not support LDPC ignore this setting.

SNMP ID:

2.37.1.1.37

Telnet path:**Setup > WLAN-Management > AP-Configuration > Network-Profiles****Possible values:**

No

Yes

Default:

Yes

2.37.1.1.38 Min-Client-Strength

A WLAN installation at a location with a really large potential number of clients (e.g., a football stadium) has considerable throughput problems. In this type of scenario, a possible cause is a large percentage of overhead due to remote stations with a weak connection. If one of these stations is registered (associated), the access point can only send data to this station with a relatively low physical bit-rate – possibly with several repetitions per packet. Not only does this result in a weak connection for the user, it also places a load on the medium to the detriment of clients with stronger connections, which would otherwise make more effective use of the available bandwidth. It should be noted that unregistered remote stations can also negatively impact the throughput of the cell when attempting to find a network. Probe requests (search packets) of such clients must be directly and specifically answered by the AP after reception, e.g., they will be repeated until the client has confirmed receipt or the maximum number of repetitions is reached. The effect is worsened by the fact that these response packets are WLAN management packets, which are usually transmitted at the lowest available fixed bit rate as supported by the AP.

Although there is no way that an AP can prevent clients from sending probe requests, it can ignore them or simply not respond to them if they fall below a certain signal strength.

A configured **Min-Client-Strength** functions as follows:

- If a probe request with an appropriate SSID or a placeholder SSID is received, a response is only sent if it has at least the minimum signal strength. If not, it is silently discarded.
- If an authentication or registration request is received, which is below the configured signal strength, it will be rejected. Please note that this situation is rare, since the probe requests of such clients usually go unanswered anyway, and a client can only have found this AP using a passive search of its radio beacon.

This value is specified as a percentage. This specifies the ratio of the signal and noise levels (SNR). A percentage value of 100% means an SNR of 64 dB, smaller percentage values are correspondingly lower. The default value is 0, e.g., no clients are ignored.

SNMP ID:

2.37.1.1.38

Telnet path:**Setup > WLAN-Management > AP-Configuration > Network-Profiles****Possible values:**

0 to 255

Default:

0

2.37.1.1.39 IEEE802.11u network profile

This parameter specifies the name of 802.11u network profile which is to be assigned to the logical WLAN network.

SNMP ID:

2.37.1.1.39

Telnet path:**Setup > WLAN-Management > AP-Configuration > Network-Profiles****Possible values:****Name** from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles**, max. 32 characters**Default:****2.37.1.1.40 OKC**

Opportunistic key caching delegates the management of the WLAN client keys to a WLAN controller, or to a central switch, which manages all of the access points in the network. If a client logs on to an access point, the WLAN controller behind it works as an authenticator to manage the keys and send the PMK to the access point, which is ultimately received by the client. If the client moves to another cell, it uses this PMK and the MAC address of the new access point to calculate a PMKID. It then send this to the new access point in the hope that OKC is enabled there (therefore "opportunistic"). If the access point cannot handle the PMKID, then it negotiates an 802.11X authentication with the client in the usual manner.

A LANCOM access point can even perform OKC if the WLAN controller is temporarily unavailable. In this case, it stores the PMK and sends this to the WLAN controller when it becomes available again. Ultimately it sends the PMK to all of the access points in the network, which allows clients to use OKC to login after a change of radio cell.

This setting enables OKC on the access point that is being managed by the WLAN controller.

SNMP ID:

2.37.1.1.40

Telnet path:

Setup > WLAN-Management > AP-Configuration > Network-Profiles

Possible values:

Yes

No

Default:

Yes

2.37.1.2 Radio profiles

Here you define the physical WLAN parameters which apply to all of the logical WLAN networks that share a managed access point.

Telnet path: /Setup/WLAN-management/AP-configuration

2.37.1.2.1 Name

Unique name for this combination of physical WLAN parameters.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Max. 31 ASCII characters

Default: Blank

2.37.1.2.2 Parent name

A LANCOM WLAN controller is capable of managing a large number of different access points at different locations. However, WLAN profiles include settings that are not equally suitable for every type of access point that can be managed. For example, there are differences between the country settings and the device properties.

In order to avoid having to maintain multiple redundant WLAN profiles to cater for different countries or device types, it is possible for the physical WLAN parameters to "inherit" properties from other entries.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Max. 31 ASCII characters

Default: Blank

2.37.1.2.3 Local values

Specifies which physical wireless LAN parameters are taken over during inheritance from the parent element. All non-inherited parameters can be set locally for this profile.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Bit field as HEX number. Set bits specify the columns to be inherited. Select from the list of logical WLAN networks (GUI).

Default: All values are taken over from parent elements.

2.37.1.2.4 Country

The device needs to be set with the country where it is operating in order for the WLAN to use the parameters approved for the location.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Albania
- Argentina
- Australia
- Austria
- Bahrain
- Bangladesh
- Belarus
- Belgium
- Bosnia-Herzegovina
- Brazil
- Brunei-Daressalam
- Bulgaria
- Canada
- Chile
- China
- Colombia
- Costa-Rica
- Croatia
- Cyprus
- Czech Republic
- Denmark
- Ecuador
- Egalistan
- Egypt
- Estonia
- Finland
- France
- Germany
- Ghana
- Greece
- Guatemala
- Honduras
- Hong-Kong
- Hungary
- Iceland
- India
- Indonesia
- Ireland
- Israel
- Italy
- Japan
- Jordan
- South Korea

2 Setup

- Kuwait
- Latvia
- Lebanon
- Liechtenstein
- Lithuania
- Luxembourg
- Macao
- Macedonia
- Malaysia
- Malta
- Mexico
- Moldavia
- Morocco
- Netherlands
- New Zealand
- Nicaragua
- Norway
- Oman
- Pakistan
- Panama
- Paraguay
- Peru
- Philippines
- Poland
- Portugal
- Puerto-Rico
- Qatar
- Romania
- Russia
- Saudi Arabia
- Singapore
- Slovakia
- Slovenia
- South Africa
- Spain
- Sweden
- Switzerland
- Taiwan
- Tanzania
- Thailand
- Tunisia
- Turkey
- Uganda
- Ukraine
- United Arab Emirates
- Great Britain
- United States FCC
- Uruguay
- Venezuela

Default: Default

Special values: Default: Makes use of the encryption method defined in the 'Options' area.

2.37.1.2.5 Channel list

As standard the access points can use all of the channels permitted in the country of operation. To limit the selection to certain channel, the desired channels can be entered here as a comma-separated list. Ranges can also be defined (e.g. '7–9').

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Comma-separated list with max. 48 characters

Default: Blank

2.37.1.2.6 2.4-GHz mode

In the 2.4 GHz band, there are two different wireless standards: The IEEE 802.11b standard with a transmission speed of up to 11 Mbps and the IEEE 802.11g standard offering up to 54 Mbps. If 2.4 GHz is selected as the operating frequency, the transmission speed can be selected in addition.

The 802.11g/b compatibility mode offers the highest possible speeds and yet also offers the 802.11b standard so that slower clients are not excluded. In this mode, the WLAN card in the access point principally works with the faster standard and falls back on the slower mode should a client of this type log into the WLAN. In the '2Mbit compatible' mode, the access point supports older 802.11b cards with a maximum transmission speed of 2 Mbps.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- 11bg mixed
- 11b only
- 11g only
- 108Mbps
- 11bgn mixed
- 11gn mixed
- Greenfield

Default: 11bg mixed (0)



Please observe that clients supporting only the slower standards may not be able to register with the WLAN if the speeds set here are higher.

2.37.1.2.7 5GHz mode

Using two neighboring, vacant channels for wireless transmissions can increase the transfer speeds in Turbo Mode up to 108 Mbps.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Normal
- 108Mbps
- 11an mixed
- Greenfield

Default: Normal

2.37.1.2.8 Subbands

In the 5-GHz band, it is also possible to select a subband, which is linked to certain radio channels and maximum transmission powers.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Band-1
- Band-2
- Band-3
- Band-1+2
- Band-1+3
- Band-2+3
- Band-1+2+3

Default: Band-1+2+3 (0)

2.37.1.2.9 QoS

With the extension to the 802.11 standard, 802.11e, Quality of Service can be provided for transfers via WLAN. Among others, 802.11e supports the prioritization of certain data-packet types. This extension is an important basis for the use of voice applications in WLANs (Voice over WLAN, VoWLAN). The WiFi alliance certifies products that support Quality of Service according to 802.11e, and refer to WMM (WiFi Multimedia, formerly known as WME or Wireless Multimedia Extension). WMM defines four categories (voice, video, best effort and background) which make up separate queues to be used for prioritization. The 802.11e standard sets priorities by referring to the VLAN tags or, in the absence of these, by the DiffServ fields of IP packets. Delay times (jitter) are kept below 2 milliseconds, a magnitude which is inaudible to the human ear. 802.11e controls access to the transfer medium with EDCF, the Enhanced Distributed Coordination Function.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Yes
- No

Default: No

 Priorities can only be set if the WLAN client and the access point both support 802.11e or WMM, and also if the applications are able to mark the data packets with the corresponding priorities.

2.37.1.2.10 DTIM period

This value defines the number of beacons which are collected before multicasts are broadcast. Higher values enable longer client sleep intervals, but worsen the latency times.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- 0 to 255

Default: 0

2.37.1.2.11 Background scan

In order to identify other access points within the device's local radio range, the LANCOM Wireless router can record the beacons received (management frames) and store them in the scan table. Since this recording occurs in the background in addition to the access points' "normal" radio activity, it is called a "background scan".

If a value is entered here, the LANCOM wireless router searches the active band for currently unused frequencies to find available access points. This value is the time interval between search cycles.

LANCOM wireless routers in access point mode normally use the background scan function for rogue AP detection. This scan interval should correspond to the time span within which rogue access points should be recognized, e.g. 1 hour.

Conversely, LANCOM wireless routers in client mode generally use the background scan function to improve mobile WLAN client roaming. In order to achieve fast roaming, the scan time is limited here, for example, to 260 seconds.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- 0 to 4294967296

Default: 0

Special values: 0: When the background scan time is '0' the background scanning function is deactivated.

2.37.1.2.12 Antenna gain

Where the transmission power of an antennae exceeds the levels permitted in the country of operation, the power must be attenuated accordingly.

The field 'Antenna gain' is for the gain of the antenna minus the actual cable loss. This value for true antenna gain is dynamically used to calculate and emit the maximum permissible power with regards to other parameters such as country, data rate and frequency band.

In contrast to this, the entry in the field 'Tx power reduction' causes a static reduction in the power by the value entered, and ignores the other parameters. .

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Minus 128 to 127

Default: 0

2.37.1.2.13 Tx power reduction

In contrast to antenna gain, the entry in the field 'Tx power reduction' causes a static reduction in the power by the value entered, and ignores the other parameters.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- 0 to 255

Default: 0

 The transmission power reduction simply reduces the emitted power. The reception sensitivity (reception antenna gain) remains unaffected. This option is useful, for example, where large distances have to be bridged by radio when using shorter cables. The reception antenna gain can be increased without exceeding the legal limits on transmission power. This leads to an improvement in the maximum possible range and, in particular, the highest possible data transfer rates.

2.37.1.2.16 Indoor-only operation

You can specify whether indoor-operation only is to be allowed.

Telnet path: /Setup/WLAN-Management/AP-Configuration/WLAN-Module-2-Default/Indoor-Only-Operation

Possible values:

- Yes

- No

Default: No

2.37.1.2.17 Activate VLAN module of managed APs

Use this item to activate or deactivate the VLAN module in the managed access points. If VLAN is switched off, all VLAN settings in the logical network are ignored.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- Yes
- No

Default: No

2.37.1.2.18 Management VLAN mode

VLAN mode for the management network. VLAN is only used if the VLAN module in the access point is enabled. The management network can be operated untagged even if VLAN is activated.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- untagged: The access point's management packets are not marked with a VLAN ID.
- tagged: The access point's management packets are marked with the VLAN ID that is configured in this radio profile as the management VLAN ID.

Default: untagged

2.37.1.2.14 Management VLAN ID

VLAN ID for the management network. The management VLAN ID is used for tagging the management network which is used for communications between the WLAN controller and the access points. VLAN is only used if the VLAN module in the access point is enabled. The management network can be operated without tagging even if VLAN is enabled by selecting the corresponding setting for the management VLAN mode. The VLAN ID '1' is reserved internally for this.

Telnet path: /Setup/WLAN management/AP-Configuration/Radioprofiles

Possible values:

- 2 to 4094

Default: 2

2.37.1.2.20 Report seen clients

This entry determines whether the access point should report clients detected in the WLAN network.

SNMP ID:

2.37.1.2.20

Telnet path:

Setup > WLAN-Management > AP-Configuration > Radioprofiles

Possible values:

Yes
No

Default:

Yes

2.37.1.2.21 Client steering

This entry determines whether the access point should enable band steering.

SNMP ID:

2.37.1.2.21

Telnet path:**Setup > WLAN-Management > AP-Configuration > Radioprofiles****Possible values:**

Yes

No

Default:

No

2.37.1.2.22 Preferred band

This entry determines the frequency band that the access point preferably should direct the WLAN client.

SNMP ID:

2.37.1.2.22

Telnet path:**Setup > WLAN-Management > AP-Configuration > Radioprofiles****Possible values:**

5GHz

2.4GHz

Default:

5GHz

2.37.1.2.23 Probe request ageout in seconds

This entry determines the length of time in seconds that the access point should store a WLAN client's connection. When this time expires, the access point deletes the entry from the table.



This value should be set to a low value if you are using clients in the WLAN that frequently switch from dual-band to single-band mode.

SNMP ID:

2.37.1.2.23

Telnet path:**Setup > WLAN-Management > AP-Configuration > Radioprofiles**

Possible values:

max. 10 characters from 0 to 9

Special values:

0: The access point immediately considers seen probe requests as invalid.

Default:

120

2.37.1.3 Common profiles

Here you define entire WLAN profiles that summarize all of the WLAN settings which can be used on the managed APs. This includes for example up to 16 logical WLAN networks and a set of physical WLAN parameters.

Telnet path: /Setup/WLAN-management/AP-configuration

2.37.1.3.1 Name

Name of the profile under which the settings are saved.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Commonprofiles

Possible values:

- Max. 31 ASCII characters

Default: Blank

2.37.1.3.2 Networks

List of the logical WLAN networks that are assigned via this profile.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Commonprofiles

Possible values:

- Max. 251 ASCII characters, multiple values separated by commas.

Default: Blank



From this list, access points use only the first eight entries that are compatible with their own hardware. This means that eight WLAN networks for purely 2.4-GHz operations and eight for purely 5-GHz operations can be defined in a profile. Consequently, each LANCOM access point—be it a model offering 2.4-GHz or 5-GHz support—can choose from a maximum of eight logical WLAN networks.

2.37.1.3.3 AP parameters

A set of physical parameters to be used by the access point WLAN modules.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Commonprofiles

Possible values:

- Select from the list of physical WLAN parameters (GUI) or max. 31 ASCII characters

Default: Blank

2.37.1.3.4 Controller

A list of WLAN controllers that the access points should attempt to connect with. The access point starts searching for a WLAN controller with a broadcast. Defining alternative WLAN controllers is worthwhile when a broadcast cannot reach all WLAN controllers (e.g. if the WLAN controller is located in another network).

Telnet path: /Setup/WLAN-Management/AP-Configuration/Commonprofiles

Possible values:

- IP addresses, multiple values separated by commas. Maximum 159 characters, i.e. 9 to 10 entries depending on the length of the IP addresses.

Default: Blank

2.37.1.3.6 IEEE802.11u-General

These parameters specify the name of the location profile that you want to apply for the WLAN profile (i.e. this common profile).

SNMP ID:

2.37.1.3.6

Telnet path:

Setup > WLAN-Management > AP-Configuration > Commonprofiles

Possible values:

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General**, max. 32 characters

Default:

2.37.1.4 Access points

Here you define the access points that are to be managed from this WLAN Controller (WLC). At the same time you assign the WLAN profile to the AP.

Telnet path: /Setup/WLAN-management/AP-configuration

2.37.1.4.1 MAC address

MAC address of the access point

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Valid MAC address

Default: Blank

Special values: FFFFFFFFFF: Defines the default configuration

2.37.1.4.2 Name

Name of the access point in managed mode.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Max. 16 ASCII characters

Default: Blank

2.37.1.4.3 Location

Location of the access point in managed mode.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Max. 251 ASCII characters

Default: Blank

2.37.1.4.4 Profile

This entry sets the WLAN profile that is to be used by this access point.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Select from the list of defined WLAN profiles, max. 31 ASCII characters.

Default: Blank

2.37.1.4.6 Control connection encryption

Encryption of communications over the control channel. Without encryption the control data is exchanged as plain text. In both cases authentication is by certificate.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- default
- DTLS
- No

Default: Default

Special values: Default: Makes use of the encryption method defined in the 'Options' area.

2.37.1.4.7 WLAN module 1

Frequency of the first WLAN module. This parameter can also be used to deactivate the WLAN module.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- default
- 2.4 GHz
- 5 GHz
- Off

Default: Default

Special values: Default: Makes use of the encryption method defined in the 'Options' area.

2.37.1.4.8 WLAN module 2

Frequency of the second WLAN module. This parameter can also be used to deactivate the WLAN module.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- default
- 2.4 GHz
- 5 GHz
- Off

Default: Default

Special values: Default: Makes use of the encryption method defined in the 'Options' area.

2.37.1.4.9 Module 1 channel list

The radio channel selects a portion of the conceivable frequency band for data transfer.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Comma-separated list with max. 48 characters

Default: Blank

 In the 2.4-GHz band, two separate wireless networks must be at least three channels apart to avoid interference.

2.37.1.4.10 Module 2 channel list

The radio channel selects a portion of the conceivable frequency band for data transfer.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Comma-separated list with max. 48 characters

Default: Blank

 In the 2.4-GHz band, two separate wireless networks must be at least three channels apart to avoid interference.

2.37.1 Operating

Activates or deactivates this entry.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Yes
- No

Default: Yes

2.37.1.4.12 IP address

Static IP address for the AP if DHCP cannot be /should not be used.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Valid IP address.

Default: Blank

2.37.1.4.13 Netmask

Static netmask if DHCP cannot be /should not be used.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Valid IP address.

Default: Blank

 Cannot be configured with LANconfig

2.37.1.4.14 Gateway

Static IP address of the gateway if DHCP cannot be /should not be used.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Valid IP address.

Default: Blank

 Cannot be configured with LANconfig

2.37.1.4.15 Allow 40MHz

A wireless LAN module normally uses a frequency range of 20 MHz in which data to be transmitted is modulated to the carrier signals. 802.11a/b/g use 48 carrier signals in a 20MHz channel. The use of double the frequency range of 40 MHz means that 96 carrier signals can be used, resulting in a doubling of the data throughput.

802.11n can use 52 carrier signals in one 20 MHz channel for modulation and up to 108 in a 40 MHz channel. The use of the 40 MHz option for 802.11n therefore means a performance gain of more than double.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Auto
- No

Default: Auto

2.37.1.4.16 Antenna mask

LANCOM access points with 802.11 support can use up to three antennas for transmitting and receiving data. Depending on the application the use of the antennas can be set.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- 1+2+3: When using the device in access point mode to connect wireless LAN clients it is generally recommended to use all three antennas in parallel in order to achieve good network coverage.
- 1+3: Antenna ports 1 and 3 are used for 2 parallel data streams for example in point to point connections with an appropriate dual slant antenna. The third antenna port is deactivated.
- 1: For applications with only one antenna (for example an outdoor application with just one antenna) the antenna is connected to port 1 and ports 2 and 3 are deactivated
- Auto: Automatic antenna selection

Default: Auto

Special values: Auto: The "Auto" setting means that all available antennas are used.

2.37.1.4.17 AP intranet

This references a line in the AP intranet table.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- Max. 31 ASCII characters

Default: Blank**2.37.1.4.18 Manage firmware**

This allows the automatic firmware upload to be disabled for this AP. This is also automatically disabled by the controller in the case of certain errors. The reason for automatic deactivation is displayed in the column "Manage firmware additional information".

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points**Possible values:**

- Yes
- No

Default: Yes

 Cannot be configured with LANconfig**2.37.1.4.19 Manage firmware additional information**

This allows the automatic firmware upload to be disabled for this AP. This is also automatically disabled by the controller in the case of certain errors. The reason for automatic deactivation is displayed in the column "Manage firmware additional information".

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points**Possible values:**

- Blank
- Disabled_due_to_error_during_update
- Disabled_by_manual_upload

Default: Blank

 Cannot be configured with LANconfig**2.37.1.4.20 Module 1 ant. gain**

This item allows you to specify the antenna gain factor (in dBi) minus attenuation of the cable and (if applicable) lightning protection. Based on this, and depending on the country where the system is operated and the frequency band, the base station calculates the maximum permitted transmission power.

If the field is left blank, the default setting defined in the configuration profile of relevant WLAN profile will be used.

Transmission power can be reduced to a minimum of 0.5 dBm in the 2.4-GHz band or 6.5 dBm in the 5-GHz band. This limits the maximum value that can be added to 17.5 dBi in the 2.4-GHz band and 11.5 dBi in the 5-GHz band. Please ensure that your combination of antenna, cable and lightning-protection complies with the legal requirements of the country where the system is operated.

The receiver's sensitivity is unaffected by this.

Example: AirLancer O-18a: Antenna gain: 18dBi, cable attenuation: 4dB --> Value to be entered = 18dBi - 4dB = 14dBi.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access Points/Module-1-Ant.-Gain**Possible values:**

- 0 to 999 dBi

Default: Blank

 The current transmission power is displayed by the device's web interface or by telnet under 'Status->WLAN statistics->WLAN parameters->Transmission power' or with LANconfig under 'System information->WLAN card->Transmission power'.

2.37.1.4.20 Module 2 ant. gain

This item allows you to specify the antenna gain factor (in dBi) minus attenuation of the cable and (if applicable) lightning protection. Based on this, and depending on the country where the system is operated and the frequency band, the base station calculates the maximum permitted transmission power.

If the field is left blank, the default setting defined in the configuration profile of relevant WLAN profile will be used.

Transmission power can be reduced to a minimum of 0.5 dBm in the 2.4-GHz band or 6.5 dBm in the 5-GHz band. This limits the maximum value that can be added to 17.5 dBi in the 2.4-GHz band and 11.5 dBi in the 5-GHz band. Please ensure that your combination of antenna, cable and lightning-protection complies with the legal requirements of the country where the system is operated.

The receiver's sensitivity is unaffected by this.

Example: AirLancer O-18a: Antenna gain: 18dBi, cable attenuation: 4dB --> Value to be entered = 18dBi - 4dB = 14dBi.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access Points/Module-2-Ant.-Gain

Possible values:

- 0 to 999 dBi

Default: Blank

 The current transmission power is displayed by the device's web interface or by telnet under 'Status->WLAN statistics->WLAN parameters->Transmission power' or with LANconfig under 'System information->WLAN card->Transmission power'.

2.37.1.4.22 Module 1 TX reduct.

If you use an antenna with a high amplification factor, you can use this entry to attenuate the transmission power of your base station to the transmission power permitted in your country in the frequency band in question.

If the field is left blank, the default setting defined in the configuration profile of relevant WLAN profile will be used.

Transmission power can be reduced to a minimum of 0.5 dBm in the 2.4-GHz band or 6.5 dBm in the 5-GHz band. This limits the maximum value that can be added to 17.5 dBi in the 2.4-GHz band and 11.5 dBi in the 5-GHz band. Please ensure that your combination of antenna, cable and lightning-protection complies with the legal requirements of the country where the system is operated.

The receiver's sensitivity is unaffected by this.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- 0 to 999 dBi

Default: Blank

 The current transmission power is displayed by the device's web interface or by telnet under 'Status->WLAN statistics->WLAN parameters->Transmission power' or with LANconfig under 'System information->WLAN card->Transmission power'.

2.37.1.4.22 Module 2 TX reduct.

If you use an antenna with a high amplification factor, you can use this entry to attenuate the transmission power of your base station to the transmission power permitted in your country in the frequency band in question.

If the field is left blank, the default setting defined in the configuration profile of relevant WLAN profile will be used.

Transmission power can be reduced to a minimum of 0.5 dBm in the 2.4-GHz band or 6.5 dBm in the 5-GHz band. This limits the maximum value that can be added to 17.5 dBi in the 2.4-GHz band and 11.5 dBi in the 5-GHz band. Please ensure that your combination of antenna, cable and lightning-protection complies with the legal requirements of the country where the system is operated.

The receiver's sensitivity is unaffected by this.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Access-Points

Possible values:

- 0 to 999 dBi

Default: Blank

 The current transmission power is displayed by the device's web interface or by telnet under 'Status->WLAN statistics->WLAN parameters->Transmission power' or with LANconfig under 'System information->WLAN card->Transmission power'.

2.37.1.5 WLAN module 1 default

Frequency of the first WLAN module. This parameter can also be used to deactivate the WLAN module.

Telnet path: /Setup/WLAN-management/AP-configuration

Possible values:

- 2.4GHz
- 5GHz
- Off

Default: 2.4GHz

2.37.1.6 WLAN module 2 default

Frequency of the second WLAN module. This parameter can also be used to deactivate the WLAN module.

Telnet path: /Setup/WLAN-management/AP-configuration

Possible values:

- 2.4GHz
- 5GHz
- Off

Default: 5GHz

2.37.1.7 Control connection encryption default

Encryption of communications over the control channel. Without encryption the control data is exchanged as plain text. In both cases authentication is by certificate.

Telnet path: /Setup/WLAN-management/AP-configuration

Possible values:

- DTLS
- No

Default: DTLS (1)

2.37.1.8 Country default

The country in which the access points are to be operated. This information is used to define country-specific settings such as the permitted channels, etc.

Telnet path: /Setup/WLAN-management/AP-configuration

Possible values:

- Albania
- Argentina
- Australia
- Austria
- Bahrain
- Bangladesh
- Belarus
- Belgium
- Bosnia-Herzegovina
- Brazil
- Brunei-Daressalam
- Bulgaria
- Canada
- Chile
- China
- Colombia
- Costa-Rica
- Croatia
- Cyprus
- Czech Republic
- Denmark
- Ecuador
- Galistan
- Egypt
- Estonia
- Finland
- France
- Germany
- Ghana
- Greece
- Guatemala
- Honduras
- Hong-Kong
- Hungary
- Iceland
- India
- Indonesia
- Ireland
- Israel
- Italy
- Japan

- Jordan
- South Korea
- Kuwait
- Latvia
- Lebanon
- Liechtenstein
- Lithuania
- Luxembourg
- Macao
- Macedonia
- Malaysia
- Malta
- Mexico
- Moldavia
- Morocco
- Netherlands
- New Zealand
- Nicaragua
- Norway
- Oman
- Pakistan
- Panama
- Paraguay
- Peru
- Philippines
- Poland
- Portugal
- Puerto-Rico
- Qatar
- Romania
- Russia
- Saudi Arabia
- Singapore
- Slovakia
- Slovenia
- South Africa
- Spain
- Sweden
- Switzerland
- Taiwan
- Tanzania
- Thailand
- Tunisia
- Turkey
- Uganda
- Ukraine
- United Arab Emirates
- Great Britain
- United States FCC

- Uruguay
- Venezuela

Default: Germany (276)

2.37.1.9 MAC address

If necessary, define IP parameter profiles here for use in the access point table if certain access points have IP addresses that were not assigned by DHCP.

Telnet path: /Setup/WLAN-management/AP-configuration

2.37.1.9.1 Name

Name of the intranet where APs are operated. This name is only used for internal administration of intra-networks.

Possible values:

- Max. 31 ASCII characters

Default: Blank

2.37.1.9.2 Parent name

A LANCOM WLAN controller is capable of managing a large number of different access points at different locations. However, WLAN profiles include settings that are not equally suitable for every type of access point that can be managed. For example, there are differences between the country settings and the device properties.

In order to avoid having to maintain multiple redundant WLAN profiles, it is possible for the intranets to "inherit" selected properties from other entries.

Possible values:

- Max. 31 ASCII characters

Default: Blank

2.37.1.9.3 Local values

Specifies which intranet parameters are taken over during inheritance from the parent element. All non-inherited parameters can be set locally for this profile.

Possible values:

- Bit field as HEX number. Set bits specify the columns to be inherited. Select from the list of intranets (GUI).

Default: 0

2.37.1.9.4 Domain name

Domain name used by the access point when resolving WLC addresses.

Possible values:

- Max. 63 ASCII characters

Default: Blank

2.37.1.9.5 Netmask

Static netmask if DHCP cannot be /should not be used.

Possible values:

- Valid IP address.

Default: Blank

2.37.1.9.6 Gateway

Static IP address of the gateway if DHCP cannot be /should not be used.

Possible values:

- Valid IP address.

Default: Blank

2.37.1.9.7 Primary DNS server

Static IP address of the first DNS server if DHCP cannot be /should not be used.

Possible values:

- Valid IP address.

Default: Blank

2.37.1.9.8 Secondary DNS server

Static IP address of the second DNS server if DHCP cannot be /should not be used.

Possible values:

- Valid IP address.

Default: Blank

2.37.1.10 Predef. intranets

This table lists the predefined AP intranets.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Predef.-Intranets

 The settings for the predefined intranets are used exclusively for internal communications between the device and LANconfig. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.37.1.10.1 Name

This is the name of the predefined AP intranet.

Telnet path: /Setup/WLAN-Management/AP-Configuration/WLAN-Module-2-Default/Name

 The settings for the predefined intranets are used exclusively for internal communications between the device and LANconfig. Do not alter the pre-set values for these parameters. An irregular configuration may cause the devices to behave unexpectedly during operations.

2.37.1.12 DSCP for control packets

This item allows you to set the prioritization of control packets by DiffServ (Differentiated Services).

Telnet path: /Setup/WLAN-management/AP-configuration

Possible values:

- Best effort
- Assured-Forwarding-11
- Assured-Forwarding-12
- Assured-Forwarding-13

- Assured-Forwarding-21
- Assured-Forwarding-22
- Assured-Forwarding-23
- Assured-Forwarding-31
- Assured-Forwarding-32
- Assured-Forwarding-33
- Assured-Forwarding-41
- Assured-Forwarding-42
- Assured-Forwarding-43
- Expedited forwarding

Default: Best effort

2.37.1.13 DSCP for data packets

This item allows you to set the prioritization of data packets by DiffServ (Differentiated Services).

Telnet path: /Setup/WLAN-management/AP-configuration

Possible values:

- Best effort
- Assured-Forwarding-11
- Assured-Forwarding-12
- Assured-Forwarding-13
- Assured-Forwarding-21
- Assured-Forwarding-22
- Assured-Forwarding-23
- Assured-Forwarding-31
- Assured-Forwarding-32
- Assured-Forwarding-33
- Assured-Forwarding-41
- Assured-Forwarding-42
- Assured-Forwarding-43
- Expedited forwarding

Default: Best effort

2.37.1.14 Multicast networks

This table contains the settings for the transmission of CAPWAP multicast packets over the bridge interfaces.

When a WLAN controller receives a broadcast or multicast packet from a network belonging to a certain SSID, it has to forward this packet to all access points that work with that SSID. The WLAN controller has two ways to reach all of these access points:

- The WLAN controller copies the packet and sends it as a unicast to the relevant access points. The replication of packets increases the CPU load on the controller and the necessary bandwidths, which negatively impacts performance especially of WAN connections.
- The WLAN controller sends the packet as a multicast. In this case, a single packet only has to be transmitted. However, multicast packets sent from a controller only reach those access points in its own broadcast domain. Access points at the other end of a routed WAN link cannot receive multicast packets from the controller.



The forwarding of multicast packets depends on the routers operated on the WAN route.

The WLAN controller regularly sends keep-alive multicast packets to the multicast group. If an access point responds to these packets, the controller is able to reach this access point with multicast packets. For all other access points, the controller copies the multicast packets it receives and sends them as a unicast to the appropriate access points.

If the transmission of CAPWAP multicast packets has been activated and a valid multicast IP address with port has been defined for the bridge interface, the device forwards the incoming broadcast and multicast packets as a multicast to this address.

To ensure that the information about associated WLAN clients and their multicast group memberships is kept up to date even when they switch between access points, devices operating multicast simultaneously activate IGMP snooping for continuous updates to the information on multicast structure.

In applications featuring multiple WLAN controllers, multicast packets can lead to loops. In order to avoid loops due to multicasts when using the bridge, the WLAN controller applies the following measures:

- The WLAN controller ignores CAPWAP multicast packets. When working with a WLC data tunnel, the controller sends these packets as unicasts.
- The WLAN controller does not forward packets that carry a CAPWAP multicast address as the recipient.
- The WLAN controller automatically enables IGMP snooping on all managed access points if CAPWAP works with multicast.

2.37.1.14.1 Bridge interface

This item allows you to select a bridge interface for the multicast settings.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Multicast-Networks

Possible values:

- Select one of the defined bridge interfaces

2.37.1.14.2 Operating

This option activates or disables the use of CAPWAP multicast packets for this bridge interface.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Multicast-Networks

Possible values:

- Yes
- No

Default: No

2.37.1.14.3 Multicast address

Use this item to select an IP address to which the device sends CAPWAP multicast packets for the selected bridge interface.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Multicast-Networks

Possible values:

- Maximum 15 characters to define a valid IP address

Default: 233.252.124.1 to 233.252.124.32 (IP addresses from the unassigned range)

2.37.1.14.4 Multicast port

This item allows you to select a port for transmitting CAPWAP multicast packets over the selected bridge interface.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Multicast-Networks

Possible values:

- Maximum 5 numbers to define a valid port number

Default: 20000 to 20031

2.37.1.14.5 Loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/WLAN-Management/AP-Configuration/Multicast-Networks

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

Default: 00.0.0



If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used. Name of a loopback address.

2.37.1.17 IEEE802.11u

The tables and parameters in this menu are used to make all settings for connections according to IEEE 802.11u and Hotspot 2.0. With the use of profiles, these settings can be assigned the access points connected to the WLAN controller.

SNMP ID:

2.37.1.17

Telnet path:

Setup > WLAN-Management > AP-Configuration

2.37.1.17.1 Network profiles

The table **Network profiles** is the highest administrative level for 802.11u and Hotspot 2.0. It gives you the option of turning the functions for every profile on or off, to assign child profile lists (such as those for ANQP or HS20), or to make general settings.

SNMP ID:

2.37.1.17.1

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u

2.37.1.17.1.1 Name

This parameter specifies the name of the 802.11u profile. You will subsequently assign this profile to a logical wireless network in the table **Setup > WLAN-Management > AP-Configuration > Network-profiles** under **802.11u network profile**.

SNMP ID:

2.37.1.17.1.1

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles

Possible values:

String, max. 32 characters

Default:**2.37.1.17.1.2 Operating**

Enable or disable support for connections according to IEEE 802.11u at the appropriate interface. If you enable support, the device sends the interworking element in beacons/probes for the interface or for the associated SSID, respectively. This element is used as an identifying feature for IEEE 802.11u-enabled connections: It includes, for example, the Internet bit, the ASRA bit, the HESSID, and the location group code and the location type code. These individual elements use 802.11u-enabled devices as the first filtering criteria for network detection.

SNMP ID:

2.37.1.17.1.2

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-profiles

Possible values:

Yes

No

Default:

No

2.37.1.17.1.3 Hotspot2.0

Enable or disable the support for Hotspot 2.0 according to the Wi-Fi Alliance® at the appropriate interface. Hotspot 2.0 extends the IEEE standard 802.11u with additional network information, which stations can request using an ANQP request. These include, for example, the operator-friendly name, the connection capabilities, operating class and WAN metrics. Using this additional information, stations are in a position to make an even more selective choice of Wi-Fi network.

 The prerequisite for this function is that support for connections according to IEEE 802.11u is enabled.

SNMP ID:

2.37.1.17.1.3

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles

Possible values:

Yes

No

Default:

No

2.37.1.17.1.4 Internet

Select whether the Internet bit is set. Over the Internet-bit, all stations are explicitly informed that the Wi-Fi network allows Internet access. Enable this setting if services other than internal services are accessible via your device.

SNMP ID:

2.37.1.17.1.4

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles****Possible values:**

Yes

No

Default:

No

2.37.1.17.1.5 Network type

Select a network type from the available list which most closely describes the Wi-Fi network behind the selected interface.

SNMP ID:

2.37.1.17.1.5

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles****Possible values:**

- **Private**: Describes networks which are blocked to unauthorized users. Select this type, for example, for home networks or corporate networks where access is limited to employees.
- **Private-GuestAcc**: Similar to **Private**, but with guest access for unauthorized users. Select this type, for example, for corporate networks where visitors may use the Wi-Fi network in addition to employees.
- **Public-Charge**: Describes public networks that are accessible to everyone and can be used for a fee. Information about fees may be available through other channels (e.g.: IEEE 802.21, HTTP/HTTPS or DNS forwarding). Select this type, for example, for hotspots in shops or hotels that offer fee-based Internet access.
- **Public-Free**: Describes public networks that are accessible to everyone and for which no fee is payable. Select this type, for example, for hotspots in public, local and long-distance transport, or for community networks where Wi-Fi access is an included service.
- **Personal-Dev**: In general, it describes networks that connect wireless devices. Select this type, for example, for digital cameras that are connected to a printer via WLAN.
- **Emergency**: Describes networks that are intended for, and limited to, emergency services. Select this type, for example, for connected ESS or EBR systems.
- **Experimental**: Describes networks that are set up for testing purposes or are still in the setup stage.
- **Wildcard**: Placeholder for previously undefined network types.

Default:

Private

2.37.1.17.1.6 Asra

Select whether the ASRA bit (Additional Step Required for Access) is set. Using the ASRA bit explicitly informs all stations that further authentication steps are needed to access the Wi-Fi network. Enable this setting if you have, for example, set up online registration, additional authentication, or a consent form for your terms of use on your web site.

 Please remember to specify a forwarding address in the **Network authentication types** table for the additional authentication and/or **WISPr** for the Public Spot module if you set the ASRA bit.

SNMP ID:

2.37.1.17.1.6

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles****Possible values:**

Yes

No

Default:

No

2.37.1.17.1.7 HESSID type

Specify which HESSID is provided by the device to the access points for the homogeneous ESS.

A homogeneous ESS is defined as a group of a specific number of access points, which all belong to the same network. The MAC address of a connected access point (its BSSID), or the MAC address of the WLC, serves as a globally unique identifier (HESSID). The SSID can not be used as an identifier in this case, because different network service providers can have the same SSID assigned in a hotspot zone, e.g., by common names such as "HOTSPOT".

SNMP ID:

2.37.1.17.1.7

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles****Possible values:**

- **Auto:** Based on its own MAC address, the device generates a common HESSID for all access points that belong to the network profile.
- **User:** Manually assign an HESSID for all access points that belong to the network profile.
- **None:** The connected access points are not assigned an HESSID.

Default:

Auto

2.37.1.17.1.8 HESSID MAC

If you selected the setting `user` for the **HESSID-type**, enter the HESSID of your homogeneous ESS as a 6-octet MAC address. For the HESSID, select the BSSID for any access point in your homogeneous ESS, or the MAC address of your WLC, in capital letters and without separators, e.g., `008041AEFD7E` for the MAC address `00:80:41:ae:fd:7e`.

 If an access point is not present in multiple homogeneous ESS's, the HESSID is identical for all of its interfaces.

SNMP ID:

2.37.1.17.1.8

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles

Possible values:

MAC address in capital letters and without separators

Default:

000000000000

2.37.1.17.1.10 ANQP profile

Using this parameter, you specify a valid ANQP profile that you want to use for the 802.11u profile.

SNMP ID:

2.37.1.17.1.10

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles

Possible values:

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles**, max. 32 characters

Default:**2.37.1.17.1.12 HS20 profile**

Using this parameter, you specify a valid Hotspot 2.0 or HS20 profile that you want to use for the 802.11u profile.

SNMP ID:

2.37.1.17.1.10

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles

Possible values:

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Hotspot2.0-Profiles**, max. 32 characters

Default:**2.37.1.17.2 ANQP profiles**

Using this table you manage the profile lists for IEEE802.11u and ANQP. IEEE802.11u profiles offers you the ability to group certain ANQP elements and to independently assign logical WLAN interfaces in the table **Network profiles**. These elements include, for example, information about your OIs, domains, roaming partners and their authentication methods. Some of the elements are located in other profile lists.

SNMP ID:

2.37.1.17.2

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u

2.37.1.17.2.1 Name

Assign a name for the ANQP 2.0 profile here. You specify this name later in the table **Network profiles** under **ANQP profile**.

SNMP ID:

2.37.1.17.2.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles****Possible values:**

String, max. 32 characters

Default:

2.37.1.17.2.2 Include-in-Beacon-OUI

Organizationally Unique Identifier, abbreviated as OUI, simplified as OI. As the hotspot operator, you enter the OI of the roaming partner with whom you have agreed a contract. If you are the hotspot operator as well as the service provider, enter the OI of your roaming consortium or your own OI. A roaming consortium consists of a group of service providers which have entered into mutual agreements regarding roaming. In order to get an OI, this type of consortium – as well as an individual service provider – must register with IEEE.

It is possible to specify up to 3 parallel OIs, in case you, as the operator, have roaming agreements with several partners. Multiple OIs can be provided in a comma-separated list, such as 00105E, 00017D, 00501A.



This device transmits the specified OI(s) in its beacons. If a device should transmit more than 3 OIs, these can be configured under **Additional-OUI**. However, additional OIs are not transferred to a station until after the GAS request. They are not immediately visible to the stations!

SNMP ID:

2.37.1.17.2.2

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles****Possible values:**

OI, max. 65 characters. Multiple OIs can be provided in a comma-separated list.

Default:

2.37.1.17.2.3 Additional-OUI

Enter the OI(s) that the device also sends to a station after a GAS request. Multiple OIs can be provided in a comma-separated list, such as 00105E, 00017D, 00501A.

SNMP ID:

2.37.1.17.2.3

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles****Possible values:**

OI, max. 65 characters. Multiple OIs can be provided in a comma-separated list.

Default:**2.37.1.17.2.4 Domain-List**

Enter one or more domains that are available to you as a hotspot operator. Multiple domain names are separated by a comma separated list, such as `providerX.org, provx-mobile.com, wifi.mnc410.provX.com`. For subdomains it is sufficient to specify only the highest qualified domain name. If a user configured a home provider on his device, e.g., `providerX.org`, this domain is also assigned to access points with the domain name `wi-fi.providerX.org`. When searching for suitable hotspots, a station always prefers a hotspot from his home provider in order to avoid possible roaming costs.

SNMP ID:

2.37.1.17.2.4

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles****Possible values:**

OI, max. 65 characters. Multiple OIs can be provided in a comma-separated list.

Default:**2.37.1.17.2.5 NAI-Realm-List**

Enter a valid NAI realm profile in this field.

SNMP ID:

2.37.1.17.2.5

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles****Possible values:****Name** from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > NIA-Realms**, max. 65 characters Multiple names can be provided in a comma-separated list.**Default:****2.37.1.17.2.6 Cellular-List**

Enter a valid cellular network profile in this field.

SNMP ID:

2.37.1.17.2.6

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles****Possible values:****Name** from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Cellular-Network-Information-List**, max. 65 characters Multiple names can be provided in a comma-separated list.

Default:

2.37.1.17.2.7 Network-Auth-Type-List

Enter one or more valid authentication parameters in this field.

SNMP ID:

2.37.1.17.2.7

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles

Possible values:

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Authentication-Type**, max. 65 characters Multiple names can be provided in a comma-separated list.

Default:

2.37.1.17.3 Hotspot2.0 profiles

Using this table you manage the profile lists for the Hotspot 2.0. Hotspot 2.0 profiles enable you to group certain ANQP elements (from the Hotspot 2.0 specification) and to independently assign these to logical WLAN interfaces in the table **Network-Profiles** under **HS20-Profile**. These include, for example, the operator-friendly name, the connection capabilities, operating class and WAN metrics. Some of the elements are located in other profile lists.

SNMP ID:

2.37.1.17.3

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u

2.37.1.17.3.1 Name

Assign a name for the Hotspot 2.0 profile here. You specify this name later in the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Profiles** under **HS20-Profile**.

SNMP ID:

2.37.1.17.3.1

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Hotspot2.0-Profiles

Possible values:

String, max. 32 characters

Default:

2.37.1.17.3.2 Operator name

Enter a valid profile for hotspot operators in this field.

SNMP ID:

2.37.1.17.3.2

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Hotspot2.0-Profiles

Possible values:

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Operator-List**, max. 65 characters

Default:**2.37.1.17.3.3 Connection capabilities**

Enter one or more valid entries for the connection capabilities in this field. Before joining a network, stations use the information stored in this list to determine whether your hotspot even allows the required services (e.g., Internet access, SSH, VPN). For this reason, the fewest possible entries should be entered with the status "unknown".

SNMP ID:

2.37.1.17.3.3

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Hotspot2.0-Profiles

Possible values:

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Connection-Capability**, max. 250 characters Multiple names can be provided in a comma-separated list.

Default:**2.37.1.17.3.4 Operating class**

Enter the code for the global operating class of the managed access point. Using the operating class, you inform a station on which frequency bands and channels an access point is available. Example:

- 81: Operation at 2.4 GHz with channels 1-13
- 116: Operation at 40 MHz with channels 36 and 44

Please refer to the IEEE standard 802.11-2012, Appendix E, Table E-4, for the operating class that corresponds to an access point: Global operating classes, available at standards.ieee.org.

SNMP ID:

2.37.1.17.3.4

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Hotspot2.0-Profiles

Possible values:

Operating class code, max. 32 characters

Default:**2.37.1.17.4 Network authentication type**

Using this table, you manage addresses to which the device forwards stations for an additional authentication step after the station has been successfully authenticated by the hotspot operator or any of its roaming partners. Only one forwarding entry is allowed for each authentication type.

You specify the name for the Network Authentication Type Profile later in the table **ANQP profiles** under **Network-Auth-Type-List**.

SNMP ID:

2.37.1.17.4

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u****2.37.1.17.4.1 Name**

Assign a name for the table entry, e.g., `Accept Terms and Conditions`.

SNMP ID:

2.37.1.17.4.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Authentication-Type****Possible values:**

String, max. 32 characters

Default:**2.37.1.17.4.2 Network-Auth-Type**

Choose the context from the list, which applies before forwarding.

SNMP ID:

2.37.1.17.4.2

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Authentication-Type****Possible values:**

- `Accept-Terms-Cond`: An additional authentication step is set up that requires the user to accept the terms of use.
- `Online-Enrollment`: An additional authentication step is set up that requires the user to register online first.
- `Http-Redirection`: An additional authentication step is set up to which the user is forwarded via HTTP.
- `DNS-Redirection`: An additional authentication step is set up to which the user is forwarded via DNS.

Default:`Accept-Terms-Cond`**2.37.1.17.4.3 Redirect-URL**

Enter the address to which the device forwards stations for additional authentication.

SNMP ID:

2.37.1.17.4.3

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Network-Authentication-Type**

Possible values:

URL, max. 65 characters

Default:**2.37.1.17.5 Cellular network information list**

Using this table, you manage the profile lists for the cellular networks. With these lists you have the ability to group certain ANQP elements. These include the network and country codes of the hotspot operator and its roaming partners. Based on the information stored here, stations with SIM or USIM cards use this list to determine if the hotspot operator belongs to their cellular network company or has a roaming agreement with their cellular network company.

In the setup menu you use the **ANQP-Profiles** table to assign this list to an ANQP profile.

SNMP ID:

2.37.1.17.5

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u****2.37.1.17.5.1 Name**

Assign a name for the cellular network profile, such as an abbreviation of the network operator in combination with the cellular network standard used. You specify this name later in the table **ANQP profiles** under **Cellular-List**.

SNMP ID:

2.37.1.17.5.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Cellular-Network-Information-List****Possible values:**

String, max. 32 characters

Default:**2.37.1.17.5.2 Country-Code**

Enter the Mobile Country Code (MCC) of the hotspot operator or its roaming partners, consisting of 2 or 3 characters, e.g., 262 for Germany.

SNMP ID:

2.37.1.17.5.2

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Cellular-Network-Information-List****Possible values:**

Valid MCC, max. 3 characters

Default:**2.37.1.17.5.3 Network-Code**

Enter the Mobile Network Code (MNC) of the hotspot operator or its roaming partners, consisting of 2 or 3 characters.

SNMP ID:

2.37.1.17.5.3

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Cellular-Network-Information-List****Possible values:**

Valid MNC, max. 32 characters

Default:**2.37.1.17.6 Venue-Name**

In this table, enter general information about the location of an access point.

In the event of a manual search, additional details on the Venue information help a user to select the correct hotspot. If more than one operator (e.g., multiple cafés) in a single hotspot zone uses the same SSID, the user can clearly identify the appropriate location using the venue information.

SNMP ID:

2.37.1.17.6

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u****2.37.1.17.6.1 Name**

Enter a name for the list entry in the table. This name will be used to reference the site information from other tables.

SNMP ID:

2.37.1.17.6.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Venue-Name****Possible values:**

String, max. 65 characters

Default:**2.37.1.17.6.2 Language**

Select the language in which you store information about the location.

SNMP ID:

2.37.1.17.6.2

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Venue-Name****Possible values:**None
English
Deutsch
Chinese

2 Setup

Spanish
French
Italian
Russian
Dutch
Turkish
Portuguese
Polish
Czech
Arabian

Default:

None

2.37.1.17.6.3 Venue-Name

Enter a short description of the location of your device for the selected language.

SNMP ID:

2.37.1.17.6.3

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Venue-Name

Possible values:

String, max. 65 characters

Default:**2.37.1.17.7 NAI-Realms**

Using this table you manage the profile lists for the NAI realms. With these lists you have the ability to group certain ANQP elements. These include the realms of the hotspot operator and its roaming partners, as well as the associated authentication methods and parameters. Stations use the information stored in this list to determine whether they have the hotspot operator or one of its roaming partners have valid credentials.

In the setup menu you use the **ANQP-Profiles** table to assign this list to an ANQP profile.

SNMP ID:

2.37.1.17.7

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u

2.37.1.17.7.1 Name

Assign a name for the NAI realm profile, such as the name of the service provider or service to which the NAI realm belongs. You specify this name later in the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > ANQP-Profiles** under **NAI-Realm-List**.

SNMP ID:

2.37.1.17.7.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > NAI-Realms****Possible values:**

String, max. 32 characters

Default:**2.37.1.17.7.2 NAI-Realm**

Enter the realm for the Wi-Fi network. The identification of the NAI realm consists of the username and a domain, which can be extended using regular expressions. The syntax for an NAI realm is defined in IETF RFC 2486 and, in the simplest case, is <username>@<realm>, for user746@providerX.org, and therefore the corresponding realm is providerX.org.

SNMP ID:

2.37.1.17.7.2

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > NAI-Realms****Possible values:**

String, max. 32 characters

Default:**2.37.1.17.7.3 EAP-Method**

Select a language for the NAI realm from the list. EAP stands for the authentication profile (Extensible Authentication Protocol), followed by the corresponding authentication procedure

SNMP ID:

2.37.1.17.7.3

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > NAI-Realms****Possible values:**

- **None:** Select this setting when the relevant NAI realm does not require authentication.
- **EAP-TLS:** Authentication using Transport Layer Security (TLS). Select this setting when authentication via the relevant NAI realm is performed by a digital certificate installed by the user.
- **EAP-SIM:** Authentication via the Subscriber Identity Module (SIM). Select this setting when authentication via the relevant NAI realm is performed by the GSM Subscriber Identity Module (SIM card) of the station.
- **EAP-TTLS:** Authentication via Tunneled Transport Layer Security (TTLS). Select this setting when authentication via the relevant NAI real is performed using a username and password. For security reasons, the connection is tunneled for this method.
- **EAP-AKA:** Authentication using Authentication and Key Agreement (AKA). Select this setting when authentication via the relevant NAI realm is performed by the UMTS Subscriber Identity Module (USIM card) of the station.

Default:

None

2.37.1.17.7.4 Auth-Parameter-List

In this field, enter the appropriate authentication parameters for the EAP method using a comma-separated list, e.g., for EAP-TLS `NonEAPAuth.MSCHAPV2,Credential.UserPass` or for EAP-TLS `Credentials.Certificate`.

SNMP ID:

2.37.1.17.7.4

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > NAI-Realms****Possible values:**

Name from the table **Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Auth-Parameter**, max. 65 characters Multiple names can be provided in a comma-separated list.

Default:

2.37.1.17.8 Operator-List

Using this table you manage the plain text name of the hotspot operator. An entry in this table offers you the ability to send a user-friendly operator name to the stations, which they can then display instead of the realms. However, whether they actually do that depends on their implementation.

SNMP ID:

2.37.1.17.8

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u**

2.37.1.17.8.1 Name

Assign a name for the entry, such as an index number or combination of operator-name and language.

SNMP ID:

2.37.1.17.8.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Operator-List****Possible values:**

String, max. 32 characters

Default:

2.37.1.17.8.2 Language

Select a language for the hotspot operator from the list.

SNMP ID:

2.37.1.17.8.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Operator-List****Possible values:**

None

English
Deutsch
Chinese
Spanish
French
Italian
Russian
Dutch
Turkish
Portuguese
Polish
Czech
Arabian

Default:

None

2.37.1.17.8.3 Operator name

Enter the plain text name of the hotspot operator.

SNMP ID:

2.37.1.17.8.3

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Operator-List

Possible values:

String, max. 65 characters

Default:**2.37.1.17.9 General**

This table is used to manage the general settings for IEEE 802.11u/Hotspot 2.0.

On a standalone access point, these settings exist in the form of separate parameters. On a WLAN controller, these parameters are summarized into tables, which are subsequently assigned to the managed access points by means of the WLAN profile (the **Common profiles** table).

SNMP ID:

2.37.1.17.9

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u

2.37.1.17.9.1 Name

Assign a name for the general settings profile here. You specify this name later in the table **Setup > WLAN-Management > AP-Configuration > Common-Profiles** under **Hotspot2.0-General** an.

SNMP ID:

2.37.1.17.9.1

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General****Possible values:**

String, max. 32 characters

Default:**2.37.1.17.9.2 Link-Status**

Using this entry, you specify the connectivity status of your device to the Internet.

SNMP ID:

2.37.1.17.9.2

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General****Possible values:**

- **Auto:** The device determines the status value for this parameter automatically
- **Link-Up:** The connection to the Internet is established.
- **Link-Down:** The connection to the Internet is interrupted.
- **Link-Test:** The connection to the Internet is being established or is being checked.

Default:

Auto

2.37.1.17.9.3 Downlink-Speed

Using this entry, you enter the nominal value for the maximum receiving bandwidth (downlink) that is available to a client logged in to your hotspot. The bandwidth itself can be defined using the Public Spot module.

SNMP ID:

2.37.1.17.9.3

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General****Possible values:**

0 to 4294967295, in Kbit/s

Default:

0

2.37.1.17.9.4 Uplink-Speed

Using this entry you can enter the nominal value for the maximum transmission bandwidth (uplink) that is available to a client logged in to your hotspot. The bandwidth itself can be defined using the Public Spot module.

SNMP ID:

2.37.1.17.9.4

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General

Possible values:

0 to 4294967295, in Kbit/s

Default:

0

2.37.1.17.9.5 IPv4-Addr-Type

Using this entry you inform an IEEE802.11u-capable station whether the address it receives after successful authentication on the operator's Hotspot is of type IPv4.

SNMP ID:

2.37.1.17.9.5

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General

Possible values:**Not-Available**

IPv4 address type is not available.

Public-Addr-Available

Public IPv4 address is available.

Port-Restr-Addr-Avail

Port-restricted IPv4 address is available.

Single-Nat-Priv-Addr-Avail

Private, single NAT-masked IPv4 address is available.

Double-Nat-Priv-Addr-Avail

Private, double NAT-masked IPv4 address is available.

Port-Restr-Single-Nat-Addr-Avail

Port-restricted IPv4 address and single NAT-masked IPv4 address is available.

Port-Restr-Double-Nat-Addr-Avail

Port-restricted IPv4 address and double NAT-masked IPv4 address is available.

Availability-not-known

The availability of an IPv4 address type is unknown.

Default:

Single-Nat-Priv-Addr-Avail

2.37.1.17.9.6 IPv6-Addr-Type

Using this entry you inform an IEEE802.11u-capable station whether the address it receives after successful authentication on the operator's Hotspot is of type IPv6.

SNMP ID:

2.37.1.17.9.6

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General

Possible values:**Not-Available**

IPv6 address type is not available.

Available

IPv6 address type is available.

Availability-not-known

The availability of an IPv6 address type is unknown.

Default:

Not-Available

2.37.1.17.9.7 Venue-Group

The venue group describes the environment where you set up the access point. You define them globally for all languages. The possible values, which are set by the venue group code, are specified in the 802.11u standard.

SNMP ID:

2.37.1.17.9.7

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General

Possible values:

- Unspecified: Unspecified
- Assembly: Assembly
- Business: Business
- Educational: Educational:
- Factory-and-Industry: Factory and industry
- Institutional: Institutional
- Mercantile: Commerce
- Residential: Residence hall
- Storage: Warehouse
- Utility-and-Miscellaneous: Utility and miscellaneous
- Vehicular: Vehicular
- Outdoor: Outdoor

Default:

Unspecified

2.37.1.17.9.8 Venue-Type

Using the location type code (venue type), you have the option to specify details for the location group. These values are also specified by the standard. The possible type codes can be found in the following table.

SNMP ID:

2.37.1.17.9.8

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General

Possible values:**Table 11: Overview of possible values for venue groups and types**

Venue group	Code = Venue type code
Unspecified	
Assembly	<ul style="list-style-type: none"> ■ 0 = unspecified assembly ■ 1 = stage ■ 2 = stadium ■ 3 = passenger terminal (e.g., airport, bus station, ferry terminal, train station) ■ 4 = amphitheater ■ 5 = amusement park ■ 6 = place of worship ■ 7 = convention center ■ 8 = library ■ 9 = museum ■ 10 = restaurant ■ 11 = theater ■ 12 = bar ■ 13 = café ■ 14 = zoo, aquarium ■ 15 = emergency control center
Business	<ul style="list-style-type: none"> ■ 0 = unspecified business ■ 1 = doctor's office ■ 2 = bank ■ 3 = fire station ■ 4 = police station ■ 6 = post office ■ 7 = office ■ 8 = research facility ■ 9 = law firm
Educational:	<ul style="list-style-type: none"> ■ 0 = unspecified education ■ 1 = primary school ■ 2 = secondary school ■ 3 = college
Factory and industry	<ul style="list-style-type: none"> ■ 0 = unspecified factory and industry ■ 1 = factory
Institutional	<ul style="list-style-type: none"> ■ 0 = unspecified institution ■ 1 = hospital ■ 2 = long-term care facility (e.g., nursing home, hospice) ■ 3 = rehabilitation clinic ■ 4 = organizational association ■ 5 = prison
Commerce	<ul style="list-style-type: none"> ■ 0 = unspecified commerce ■ 1 = retail store ■ 2 = food store ■ 3 = auto repair shop

Venue group	Code = Venue type code
	<ul style="list-style-type: none"> ■ 4 = shopping center ■ 5 = gas station
Halls of residence	<ul style="list-style-type: none"> ■ 0 = unspecified residence hall ■ 1 = private residence ■ 2 = hotel or motel ■ 3 = student housing ■ 4 = guesthouse
Warehouse	<ul style="list-style-type: none"> ■ 0 = unspecified warehouse
Utility and miscellaneous	<ul style="list-style-type: none"> ■ 0 = unspecified service and miscellaneous
Vehicular	<ul style="list-style-type: none"> ■ 0 = unspecified vehicle ■ 1 = passenger or transport vehicles ■ 2 = aircraft ■ 3 = bus ■ 4 = ferry ■ 5 = ship or boat ■ 6 = train ■ 7 = motorcycle
Outdoor	<ul style="list-style-type: none"> ■ 0 = unspecified outdoor ■ 1 = municipal Wi-Fi network (wireless mesh network) ■ 2 = city park ■ 3 = rest area ■ 4 = traffic control ■ 5 = bus stop ■ 6 = kiosk

Default:

0

2.37.1.17.9 Venue-Name

Use this field to specify one or more valid list entries from the table **Venue Name** in order to identify the location of the device. The parameter considers all list entries that match the venue name specified here.

SNMP ID:

2.37.1.17.9.9

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > General

Possible values:

Name from the table Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Venue-Name, max. 32 characters Multiple names can be provided in a hash-separated (#) list.

Default:**2.37.1.17.10 Auth-Parameter**

This table contains a set list of possible authentication parameters for the NAI realms, as referenced by a comma-separated list in the table **NAI realms** in the input field **Auth parameter**.

Table 12: Overview of possible authentication parameters

Parameters	Sub-parameters	Comment
NonEAPAuth.		Identifies the protocol that the realm requires for phase 2 authentication:
	PAP	Password Authentication Protocol
	CHAP	Challenge Handshake Authentication Protocol, original CHAP implementation, specified in RFC 1994
	MSCHAP	Implementation of Microsoft CHAP V1, specified in RFC 2433
	MSCHAPV2	Implementation of Microsoft CHAP V2, specified in RFC 2759
Credentials.		Describes the type of authentication that the realm accepts:
	SIM	SIM card
	USIM	USIM card
	NFCSecure	NFC chip
	HWToken*	Hardware token
	SoftToken*	Software token
	Certificate	Digital certificate
	UserPass	Username and password
	None	No credentials required
TunnelEAPCredentials.*		
	SIM*	SIM card
	USIM*	USIM card
	NFCSecure*	NFC chip
	HWToken*	Hardware token
	SoftToken*	Software token
	Certificate*	Digital certificate
	UserPass*	Username and password
	Anonymous*	Anonymous login

*) The specific parameter or sub-parameter is reserved for future uses within the framework of Passpoint™ certification, but currently is not in use.

SNMP ID:

2.37.1.17.10

Telnet path:**Setup > WLAN-Management > AP-Configuration > IEEE802.11u****2.37.1.17.10.1 Name**

This entry displays the name of the authentication parameters that you referenced as a comma-separated list in the table **NAI-Realms** in the input field **Auth-Parameter**.

SNMP ID:

2.37.1.17.10.1

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Auth-Parameter

2.37.1.17.11 Connection capability

This table contains a set list of possible connection capabilities, as referenced by a comma-separated list in the table **Hotspot2.0 profiles** in the input field **Connection-Capabilities**. Possible status values for each of these services are 'closed' (-C), 'Open' (-O) or 'unknown' (-U):

SNMP ID:

2.37.1.17.11

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u

2.37.1.17.11.1 Name

This entry displays the name of the connection capability that you referenced as a comma-separated list in the table **Hotspot2.0-Profiles** in the input field **Connection-Capabilities**.

SNMP ID:

2.37.1.17.11.1

Telnet path:

Setup > WLAN-Management > AP-Configuration > IEEE802.11u > Connection-Capability

2.37.5 CAPWAP port

Port number for the CAPWAP service

Telnet path: /Setup/WLAN-Management

Possible values:

- 0 to 65535

Default: 1027



Cannot be configured with LANconfig

2.37.6 Autoaccept AP

Enables the WLAN controller to provide all new access points with a configuration, even those not in possession of a valid certificate.

Enables the WLAN controller to provide a certificate to all new access points without a valid certificate. One of two conditions must be fulfilled for this:

- A configuration is entered into the AP table for the access point under its MAC address.
- The option 'Automatically provide APs with the default configuration' is enabled.

Telnet path: /Setup/WLAN-Management

Possible values:

- Yes
- No

Default: No

 Combining the settings for auto-accept and default configuration can cater for a variety of different situations for the setup and operation of access points:

Auto accept ON, default configuration ON: Rollout phase: Use this combination only if you can be sure that no unintended access points are connected with the LAN and thus accepted into the WLAN infrastructure.

Auto accept ON, default configuration OFF: Controlled rollout phase: Use this combination if you have entered all of the approved access points into the AP table along with their MAC addresses, assuming that these are to be automatically accepted into the WLAN infrastructure.

Auto accept OFF, default configuration OFF: Normal operation: No new access points will be accepted into the WLAN infrastructure without the administrator's approval.

2.37.7 Accept AP

Do command to accept new APs. The MAC address must be specified as a parameter. Optionally, a profile name can be specified after the MAC address.

Telnet path: /Setup/WLAN-Management

Possible values:

- Syntax: Do accept-AP [-c] <WTP-MAC> [<Profile>]
- -c: Do not generate config entry

Default: Blank

2.37.8 Provide default configuration

This enables the WLAN controller to assign a default configuration to every new (i.e. those without a valid certificate) even even if no explicit configuration has been stored for it. In combination with auto-accept, the WLAN controller can accept all managed-mode access points which are found in the WLAN infrastructure managed by it (up to the maximum number of access points that can be managed by one).

Telnet path: /Setup/WLAN-Management

Possible values:

- Yes
- No

Default: No

 This option can also lead to the acceptance of unintended access points into the WLAN infrastructure. For this reason this option should only be activated during the start-up phase when setting up a centrally managed WLAN infrastructure.

2.37.9 Disconnect AP

Do command to disconnect APs. The MAC address must be specified as a parameter.

Telnet path: /Setup/WLAN-Management

Possible values:

- Syntax: Do Disconnect-AP <WTP-MAC>

Default: Blank

2.37.10 Notification

This menu contains the configuration of the notification system of the WLAN management.

Telnet path: /Setup/WLAN-Management

2.37.10.1 E-mail

Activates notification by e-mail.

Telnet path: /Setup/WLAN-Management/Notification

Possible values:

- Yes
- No

Default: No

2.37.10.2 Syslog

Activates notification by SYSLOG.

Telnet path: /Setup/WLAN-Management/Notification

Possible values:

- Yes
- No

Default: No

2.37.10.3 E-mail receiver

Information about events in the WLAN controller is sent to this e-mail address.

Telnet path: /Setup/WLAN-Management/Notification

Possible values:

- Valid e-mail address with up to 63 ASCII characters

Default: Blank



An SMTP account must be set up to make use of e-mail messaging.

2.37.10.4 Advanced

Here you define the events that you wish to be informed of.

Telnet path: /Setup/WLAN-Management/Notification

2.37.10.4.1 Name

Selects the events that trigger notification.

Telnet path: /Setup/WLAN-Management/Notification/Advanced

Possible values:

- E-mail
- Syslog

Default: Blank

Special values: Value is fixed

2.37.10.4.2 Active radios

Activates notification about active access points.

Telnet path: /Setup/WLAN-Management/Notification/Advanced

Possible values:

- Yes
- No

Default: No

2.37.10.4.3 Missing AP

Activates notification about lost access points.

Telnet path: /Setup/WLAN-Management/Notification/Advanced

Possible values:

- Yes
- No

Default: No

2.37.10.4.4 New AP

Activates notification about new access points.

Telnet path: /Setup/WLAN-Management/Notification/Advanced

Possible values:

- Yes
- No

Default: No

2.37.10.5 Send SNMP trap for station table event

Here you specify when you receive information about events relating to entries in the station table.

Telnet path: /Setup/WLAN management/Notification/Send-SNMP-Trap-for-Station-Table-Event

Possible values:

- Add/remove_entry
- All_events

Default: Add/remove_entry

2.37.19 Start automatic radio field optimization

Launches RF optimization automatically. Optimization may be limited to one AP by specifying its MAC address as a parameter.

Telnet path: /Setup/WLAN-Management

Possible values:

- Syntax: Do start-automatic-radio-field-optimization [<WTP-MAC>]

Default: Blank

2.37.20 Access list

You can limit the data traffic between the wireless LAN and your local network by activating MAC address checks for individual logical WLAN networks. Enter all of the stations which are to be able to access these logical networks into the following table.

Telnet path: /Setup/WLAN-Management

2.37.20.1 MAC address

Enter the MAC address of a station.

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- Valid MAC address

Default: Blank



Every network card has its own MAC address that is unique in the world. The address is a 12-character hexadecimal number (e.g. 00A057010203). This address can generally be found printed on the network card.

2.37.20.2 Name

You can enter any name you wish and a comment for any station.

This enables you to assign MAC addresses more easily to specific stations or users.

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- Max. 32 characters

Default: Blank

2.37.20.3 Comment

Comment on this entry

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- Max. 30 characters

Default: Blank

2.37.20.4 WPA passphrase

Here you may enter a separate passphrase for each physical address (MAC address) that is used in a 802.11i/WPA/AES-PSK-secured network. If no separate passphrase is specified for this MAC address, the passphrases stored in the '802.11i/WEP' area will be used for each logical wireless LAN network.

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- ASCII character string with a length of 8 to 63 characters

Default: Blank

Special values: 0



This field has no significance for networks secured by WEP.

2.37.20.5 Tx limit

Bandwidth restriction for registering WLAN clients. A client communicates its own settings to the base station when logging in. The base station uses these values to set the minimum bandwidth.

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- 0 to 65535 kbps

Default: 0

Special values: 0: No limit

 The significance of the Rx and Tx values depends on the device's operating mode. In this case, as an access point, Rx stands for "Send data" and Tx stands for "Receive data".

2.37.20.6 Rx limit

Bandwidth restriction for registering WLAN clients.

A client communicates its own settings to the base station when logging in. The base station uses these values to set the minimum bandwidth.

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- 0 to 65535 kbps

Default: 0

Special values: 0: No limit

 The significance of the Rx and Tx values depends on the device's operating mode. In this case, as an access point, Rx stands for "Send data" and Tx stands for "Receive data".

2.37.20.7 VLAN-ID

This VLAN ID is assigned to packets that are received from the client with the MAC address entered here.

Telnet path: /Setup/WLAN-Management/Access-List

Possible values:

- 0 to 4096

Default: 0

2.37.27 Central firmware management

This menu contains the configuration of central firmware management.

Telnet path: /Setup/WLAN-Management

2.37.27.11 Firmware repository URL

Directory where the latest firmware files are stored

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- URL in the form Server/Directory or http://Server/Directory

Default: Blank

2.37.27.12 Script repository URL

The path to the directory with the script files.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- URL in the form Server/Directory or http://Server/Directory

Default: Blank

2.37.27.13 Update firmware and script information

Launches an update process for the available firmware and script information

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- Syntax: Do update-firmware-and-script-information

 Do command

2.37.27.14 Maximum number of loaded firmwares

Maximum number of firmware versions in memory

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- 1 to 10

Default: 5

2.37.27.15 Firmware version management

Table with device type, MAC address and firmware version for the precise control of the firmware files in use.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

2.37.27.15.2 Device

Select here the type of device that the firmware version specified here is to be used for.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management/Firmware-Version-Management

Possible values:

- All, or a selection from the list of available devices.

Default: All devices

2.37.27.15.3 MAC address

Select here the device (identified by its MAC address) that the firmware version specified here is to be used for.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management/Firmware-Version-Management

Possible values:

- Valid MAC address

Default: Blank

2.37.27.15.4 Version

Firmware version that is to be used for the devices or device types specified here.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management/Firmware-Version-Management

Possible values:

- Firmware version in the form X.XX

Default: Blank

2.37.27.16 Script management

Table with the name of the script file and a WLAN profile for allocating the script to a WLAN profile.

Configuring a wireless router and access point in the "Managed" mode is handled via WLAN profiles. A script can be used for setting those detailed parameters in managed devices that are not handled by the pre-defined parameters in a WLAN profile. Distribution is also handled by WLAN profiles to ensure that the wireless routers and access points with the same WLC configuration also use the same script.

As only one script file can be defined per WLAN profile, versioning is not possible here. However, when distributing a script to a wireless router or access point, an MD5 checksum of the script file is saved. This checksum allows the WLAN Controller to determine whether the script file has to be transmitted again in case a new or altered script has the same file name.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

2.37.27.16.1 Profile

Select here the WLAN profile that the script file specified here should be used for.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management/Script-Management

Possible values:

- Select from the list of defined WLAN profiles, maximum 31 ASCII characters.

Default: Blank

2.37.27.16.2 Name

Name of the script file to be used.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management/Script-Management

Possible values:

- File name in the form *.lcs, max. 63 ASCII characters

Default: Blank

2.37.27.18 Reboot updated APs

Reboot updated APs.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- Syntax: Do Reboot-updated-APs

 Do command

2.37.27.25 Firmware loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- Name of a defined IP network.
- 'INT' for the IP address in the first network with the setting 'Intranet'.
- 'DMZ' for the IP address in the first network with the setting 'DMZ'.
- Name of a loopback address.
- Any other IP address.

Default: Blank

 If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used.

2.37.27.26 Script loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

Telnet path: /Setup/WLAN-Management/Central-Firmware-Management

Possible values:

- Name of a defined IP network.
- 'INT' for the IP address in the first network with the setting 'Intranet'.
- 'DMZ' for the IP address in the first network with the setting 'DMZ'.
- Name of a loopback address.
- Any other IP address.

Default: Blank

 If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used.

2.37.30 Synchronizing WTP password

Activating this function sets the main device password for the access point each time it registers. This ensures that the password is synchronized with that of the WLAN controller. If this function is deactivated, the main device password will only be set if the access point has no password when it registers. Once a password is set, it will not be overwritten.

Telnet path: /Setup/WLAN-Management/Synchronizing-WTP-Password

Possible values:

- Yes
- No

Default: Yes

2.37.31 Interval for status table cleanup

The WLAN controller regularly cleans up the status tables for the background scans and for the wireless clients. During this cleanup, the WLAN controller removes all entries that are older than the interval in minutes defined here.

Telnet path: /Setup/WLAN-Management/Interval-for-status-table-cleanup

Possible values:

- Max. 11 numerical characters

Default: 1440 minutes

2.37.32 License count

This value indicates the current number of licenses for the WLAN controller that you can use on this device.

Telnet path: /Setup/WLAN-Management/License-Count

 This value is for your information only. You cannot change it.

2.37.33 License limit

This value indicates the maximum possible number of licenses for the WLAN controller that you can use on this device.

Telnet path: /Setup/WLAN-Management/License-limit

 This value is for your information only. You cannot change it.

2.37.34 WLC cluster

This menu contains the settings for the data connections and status connections between multiple WLAN controllers.

Telnet path: /Setup/WLAN-Management

2.37.34.2 WLC data tunnel active

This option activates or disables the use of data tunnels between multiple WLAN controllers.

Telnet path: /Setup/WLAN-Management**Possible values:**

- Yes
- No

Default: No

2.37.34.3 Static WLC list

This table is used to define additional WLAN controllers as remote sites to which a connection can be established. The controller initially establishes a control tunnel to this remote site. If you have activated the option for the data tunnel, the controller then automatically establishes a data tunnel to this remote site.

Telnet path: /Setup/WLAN-Management/WLC-Cluster

 The two WLAN controllers can only establish a data tunnel when the devices meet the following requirements:

- You have defined the respective remote sites in both devices.
- Both controllers have a certificate from the same CA.

2.37.34.3.1 IP address

This item defines the IP address of another WLAN controller to which this controller can establish a data tunnel.

Telnet path: /Setup/WLAN-Management/WLC-Cluster/Static-WLC-List

-
-  The two WLAN controllers can only establish a data tunnel when the devices meet the following requirements:
- For both devices you have defined the respective remote sites, either statically or using the automatic search.
 - Both controllers have a certificate from the same CA.

2.37.34.3.2 Loopback address

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/WLAN-Management/WLC-Cluster/Static-WLC-List

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LB0 to LBF for the 16 loopback addresses
- Any valid IP address

Default: 00.0.0

-
-  If the list of IP networks or loopback addresses contains an entry named 'DMZ' then the associated IP address will be used. Name of a loopback address.

2.37.34.3.3 Port

Here you define the port over which the configured controller can establish a data tunnel to the further WLAN controllers.

SNMP ID:

2.37.34.3.3

Telnet path:

Setup > WLAN-Management > WLC-Cluster > Static-WLC-List

Possible values:

0 to 65535

Default:

0

2.37.34.4 WLC discovery

This table allows you to enable or disable the automatic search for further WLCs separately for each IP network.

Telnet path: /Setup/WLAN-Management/WLC-Cluster

2.37.34.4.1 Network

Select one of the IP networks defined in the device, in which you want to automatically search for additional WLAN controllers.

Telnet path: /Setup/WLAN-Management/WLC-Cluster/WLC-Discovery

Possible values:

- Select from the list of defined IP networks (maximum 16 characters).
- No

Default: INTRANET: no, DMZ: no

2.37.34.4.2 Operating

Use this option to enable or disable the automatic search for other WLAN controllers in the selected IP network.

Telnet path: /Setup/WLAN-Management/WLC-Cluster/WLC-Discovery

Possible values:

- Yes
- No

Default: INTRANET: yes, DMZ: no

 The automatic search for other WLAN controllers is one way of establishing the data tunnel between two WLCs. If you disable this option, the WLAN controller cannot automatically establish a data channel to another WLC over this network, even if the use of data tunnels in general has been enabled. As an alternative, you can define the remote sites in the static WLC list.

2.37.34.4.3 Port

Here you define the port used to enable the automatic search for further WLAN controllers for the selected IP network.

SNMP ID:

2.37.34.4.3

Telnet path:

Setup > WLAN-Management > WLC-Cluster > WLC-Discovery

Possible values:

0 to 65535

Default:

0

2.37.35 RADIUS server profiles

By default, the WLAN controller forwards requests for account and access administration to the RADIUS server. In order for the access points to contact the RADIUS server directly, you define the necessary RADIUS profiles in this table. When setting up logical wireless networks (SSIDs), you have the option of choosing a separate RADIUS profile for each SSID.

SNMP ID: 2.37.35

Telnet path: /Setup/WLAN-Management

2.37.35.1 Name

Name of the RADIUS profile. This name is used to reference the RADIUS profile in the logical WLAN settings.

SNMP ID: 2.30.3.1

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Max. 16 characters

Default: Blank

2.37.35.2 Account IP

IP address of the RADIUS server that carries out the accounting of user activities. In the default setting with the IP address of 0.0.0.0, the access point sends RADIUS requests to the WLAN controller.

SNMP ID: 2.37.35.2

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.37.35.3 Account port

Port of the RADIUS server that carries out the accounting of user activities.

SNMP ID: 2.37.35.3

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Max. 5 numbers

Default: 1813

2.37.35.4 Account secret

Password for the RADIUS server that carries out the accounting of user activities.

SNMP ID: 2.37.35.4

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Max. 32 characters

Default: Blank

2.37.35.5 Account loopback

Here, you can optionally configure a sender address for the RADIUS server that carries out the accounting of user activities. This is used instead of the sender address otherwise selected automatically for the destination address. If you have configured loopback addresses, you can specify them here as sender address.

SNMP ID: 2.37.35.5

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Various forms of entry are accepted:
- Name of the IP networks whose addresses are to be used.
- "INT" for the address of the first intranet.
- "DMZ" for the address of the first DMZ

 If there is an interface called "DMZ", its address will be taken in this case.

- LBO... LBF for the 16 loopback addresses.
- Furthermore, any IP address can be entered in the form x.x.x.x.

Default: Blank

2.37.35.6 Account protocol

Protocol for communication between the access point and the RADIUS server that carries out the accounting of user activities.

SNMP ID: 2.37.35.6

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- RADSEC
- RADIUS

Default: RADIUS

2.37.35.7 Access IP

IP address of the RADIUS server that authenticates user data. In the default setting with the IP address of 0.0.0.0, the access point sends RADIUS requests to the WLAN controller.

SNMP ID: 2.37.35.7

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Valid IP address.

Default: 0.0.0.0

2.37.35.8 Access port

Port of the RADIUS server that authenticates user data.

SNMP ID: 2.37.35.8

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Max. 5 numbers

Default: 1812

2.37.35.9 Access secret

Password for the RADIUS server that authenticates user data.

SNMP ID: 2.37.35.9

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Max. 32 characters

Default: Blank

2.37.35.10 Access loopback

Here, you can optionally configure a sender address for the RADIUS server that authenticates user data. This is used instead of the sender address otherwise selected automatically for the destination address. If you have configured loopback addresses, you can specify them here as sender address.

SNMP ID: 2.37.35.10

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Various forms of entry are accepted:
- Name of the IP networks whose addresses are to be used.
- "INT" for the address of the first intranet.
- "DMZ" for the address of the first DMZ

 If there is an interface called "DMZ", its address will be taken in this case.

- LBO... LBF for the 16 loopback addresses.
- Furthermore, any IP address can be entered in the form x.x.x.x.

Default: Blank

2.37.35.11 Access protocol

Protocol for communication between the access point and the RADIUS server that authenticates the user data.

SNMP ID: 2.37.35.11

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- RADSEC
- RADIUS

Default: RADIUS

2.37.35.12 Backup

Name of the backup RADIUS profile. This name is used to reference the backup RADIUS profile in the logical WLAN settings. The WLAN controller uses the settings from the backup RADIUS profile when the primary RADIUS server for authentication or accounting does not respond to queries.

SNMP ID: 2.30.3.12

Telnet path: /Setup/WLAN-Management/RADIUS-Server-Profiles

Possible values:

- Max. 16 characters

Default: Blank

2.38 LLDP

This submenu contains the configuration options relating to the Link Layer Discovery Protocol (LLDP). The options are similar to the configuration options according to LLDP MIB. If the information contained here is not sufficient, you can find more details in the IEEE 802.1AB standard.

 To find out whether a specific device supports LLDP, refer to the corresponding data sheet.

SNMP ID:

2.38

Telnet path:

Setup > LLDP

2.38.1 Message TX interval

This value defines the interval in seconds for the regular transmission of LLDPDUs by the device.

! If the device detects changes to the LLDP information during an interval, the device can send additional LLDP messages. The *Tx delay* parameter defines the maximum frequency of LLDP messages caused by these changes.

! The device also uses this *Message TX interval* for calculating the hold time for received LLDP messages with the help of the *Message TX hold multiplier*,

SNMP ID:

2.38.1

Telnet path:

Setup > LLDP > Message-TX-interval

Possible values:

0 to 65535 seconds

Default:

30

2.38.2 Message TX hold multiplier

This value is used to calculate the time in seconds after which the device discards the information received with LLDP messages (hold time or time to live – TTL). The device calculates this value as the product of the *Message TX hold multiplier* specified here and the current *Message TX interval*:

Hold time = *Message TX hold multiplier* × *Message TX interval*

The default settings result in a hold time for received LLDP messages of 120 seconds.

SNMP ID:

2.38.2

Telnet path:

Setup > LLDP > Message-TX-Hold-Multiplier

Possible values:

0 to 99

Default:

4

2.38.3 Reinit delay

This value defines the time the device suppresses transmission of LLDPDUs despite the LLDP being activated.

SNMP ID:

2.38.3

Telnet path:

Setup > LLDP > Reinit-Delay

Possible values:

0 to 99 seconds

Default:

2

2.38.4 Tx delay

In principle the device sends LLDP messages in the interval set under *Message TX interval*. If the device detects changes to the LLDP information during an interval, the device can send additional LLDP messages.

The value set here defines the maximum frequency in seconds, in which the device uses LLDP messages. Thus the default value of 2 seconds causes the device to send LLDP messages once every 2 seconds, even if the device has detected multiple changes in the meantime.

SNMP ID:

2.38.4

Telnet path:**Setup > LLDP > Tx-Delay****Possible values:**

0 to 9999 seconds

Default:

2

2.38.5 Notification interval

This value specifies the time interval until the device sends notifications of changes to the remote station tables. The value defines the smallest time period between notifications. Thus the default value of 5 seconds causes the device to send messages at most once every 5 seconds, even if the device has detected multiple changes in the meantime.

SNMP ID:

2.38.5

Telnet path:**Setup > LLDP > Notification-Interval****Possible values:**

0 to 9999 seconds

Default:

5

2.38.6 Ports

This table includes all port-dependent configuration options. The table index is a string, specifically the interface/port name.

SNMP ID:

2.38.6

Telnet path:

Setup > LLDP > Ports

2.38.6.1 Name

The name of the port or interface

SNMP ID:

2.38.6.1

Telnet path:

Setup > LLDP > Ports > Name

Possible values:

Depending on the interfaces, e.g., LAN-1, WLAN-1

2.38.6.2 Admin status

Specifies whether PDU transfer and/or reception is active or inactive on this port. This parameter can be set individually for each port.

SNMP ID:

2.38.6.2

Telnet path:

Setup > LLDP > Ports > Admin-Status

Possible values:

Off

TX only

RX only

Rx/Tx

Default:

Off

2.38.6.3 Notification

Use this to set whether changes in an MSAP remote station for this port are reported to possible network management systems.

SNMP ID:

2.38.6.3

Telnet path:

Setup > LLDP > Ports > Notifications

Possible values:

No

Yes

Default:

No

2.38.6.4 Admin status

Specify the quantity of the optional standard TLVs that will be transmitted to the PDUs.

SNMP ID:

2.38.6.4

Telnet path:**Setup > LLDP > Ports > TLVs****Possible values:**

Port description

System name

System description

System properties

None

Default:

Port description

2.38.6.6 TLVs-802.3

Specify the quantity of the optional standard TLVs-802.3 that will be transmitted to the PDUs.

SNMP ID:

2.38.6.6

Telnet path:**Setup > LLDP > Ports > TLVs-802.3****Possible values:**

PHY config status

Power via MDI

Link aggregation

Max frame size

None

Default:

PHY config status

2.38.6.7 Maximum neighbors

This parameter specifies the maximum number of LLDP neighbors.

SNMP ID:

2.38.6.7

Telnet path:**Setup > LLDP > Ports > Max-Neighbors****Possible values:**

0 to 65535

Default:

0

2.38.6.8 Update source

This parameter specifies the optional sources for LLDP updates.

SNMP ID:

2.38.6.8

Telnet path:**Setup > LLDP > Ports > Update-Source****Possible values:**

Auto

LLDP only

Other only

Both

Default:

Auto

2.38.6.9 TLVs-LCS

These settings define the quantity of the optional standard LCS TLVs that the device sends to PDUs.

SNMP ID:

2.38.6.9

Telnet path:**Setup > LLDP > Ports > TLVs-LCS****Possible values:**

SSID

Radio channel

PHY type

None

Default:

SSID

2.38.7 Management addresses

In this table, enter the management address(es) that the device transmits via LLDPDUs. Management addresses take their names from the TCP/IP network list. The device only transfers the network and management addresses in this table for the LLDPDUs. A network from this list has the option of using the port list to limit the wider disclosure of the individual device addresses.

SNMP ID:

2.38.7

Telnet path:**Setup > LLDP > Management-Addresses**

Defining address bindings limits the disclosure of management addresses regardless of the settings in the port lists. The device only reports a network that is connected to an interface. This is irrespective of the settings of the port list.

2.38.7.1 Network name

The name of the TCP/IP network, as entered in the TCP-IP network list.

SNMP ID:

2.38.7.1

Telnet path:**Setup > LLDP > Management-Addresses > Network-Name****Possible values:**

Max. 16 alphanumeric characters

Default:

Blank

2.38.7.2 Port list

The list of interfaces and ports belonging to the corresponding management address.

SNMP ID:

2.38.7.2

Telnet path:**Setup > LLDP > Management-Addresses > Port-List****Possible values:**

>Comma-separated list of ports, max 251 alphanumeric characters, e.g., LAN-1 or WLAN-1. Use wildcards to specify a group of ports (e.g., "*" _ "*").

Default:

Blank

2.38.8 Protocol

This table contains the LLDP port settings for the spanning-tree and rapid-spanning-tree protocols.

SNMP ID:

2.38.8

Telnet path:**Setup > LLDP > Protocols****2.38.8.1 Protocol**

This parameter sets the protocol for which the LLDP ports are enabled.

SNMP ID:

2.38.8.1

Telnet path:**Setup > LLDP > Protocols > Protocol****Possible values:**

Spanning-Tree

Rapid-Spanning-Tree

Default:

Spanning-Tree, Rapid-Spanning-Tree

2.38.8.2 Port list

This value describes the ports, which the LLDP uses with the associated protocol (spanning-tree or rapid-spanning-tree).

SNMP ID:

2.38.8.2

Telnet path:**Setup > LLDP > Protocols > Port-List****Possible values:**

>Comma-separated list of ports, max 251 alphanumeric characters, e.g., LAN-1 or WLAN-1. Use wildcards to specify a group of ports (e.g., "*"_*").

Default:

Blank

2.38.9 Immediate delete

This parameter enables or disables the direct deletion of LLDPDUs.

SNMP ID:

2.38.9

Telnet path:**Setup > LLDP > Immediate-Deletion****Possible values:**

Yes

No

Default:

Yes

2.38.10 Operating

This parameter enables or disables the use of LLDP.

SNMP ID:

2.38.10

Telnet path:

Setup > LLDP > Operating

Possible values:

Yes

No

Default:

Yes

2.39 Certificates

This menu contains the configuration of the certificates.

Telnet path: /Setup

2.39.1 SCEP client

This menu contains the configuration of the SCEP client.

Telnet path: /Setup/Certificates

2.39.1.1 Operating

Switches SCEP on or off.

Telnet path: /Setup/Certificates/SCEP-Client

Possible values:

- Yes
- No

Default: No

Special values: No

2.39.1.2 CA certificate-update before expiration

Preparation time in days for the timely retrieval of new RA/CA certificates.

Telnet path: /Setup/Certificates/SCEP-Client

Possible values:

- Max. 10 characters

Default: Blank

2.39.1.3 CA certificate-update before expiration

Preparation time in days for the timely retrieval of new RA/CA certificates.

Telnet path: /Setup/Certificates/SCEP-Client

Possible values:

- Max. 10 characters

Default: 3

2.39.1.7 Certificates

Here you can configure certificates or add new ones.

Telnet path: /Setup/Certificates/SCEP-Client

2.39.1.7.1 Name

The certificate's configuration name.

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 16 characters

Default: Blank

2.39.1.7.2 CADN

Distinguished name of the CA. With this parameter the CAs are assigned to system certificates (and vice versa) on the one hand. On the other hand this parameter is also important for evaluating whether received or available certificates match with the configuration.

You can also use reserved characters by using a preceding backslash ("\"). The supported reserved characters are:

- Comma (",")
- Slash ("/")
- Plus ("+")
- Semicolon (";")
- Equals ("=")

You can also use the following internal LCOS variables:

- %% inserts a percent sign.
- %f inserts the version and the date of the firmware currently active in the device.
- %r inserts the hardware release of the device.
- %v inserts the version of the loader currently active in the device.
- %m inserts the MAC address of the device.
- %s inserts the serial number of the device.
- %n inserts the name of the device.
- %l inserts the location of the device.
- %d inserts the type of the device.

SNMP ID: 2.39.1.7.2

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 251 characters

Default: Blank

2.39.1.7.3 Subject

Distinguished name of the subject of the requester.

You can also use reserved characters by using a preceding backslash ("\"). The supported reserved characters are:

- Comma (",")
- Slash ("/")
- Plus ("+")
- Semicolon (";")
- Equals ("=")

You can also use the following internal LCOS variables:

- %% inserts a percent sign.
- %f inserts the version and the date of the firmware currently active in the device.
- %r inserts the hardware release of the device.
- %v inserts the version of the loader currently active in the device.
- %m inserts the MAC address of the device.
- %s inserts the serial number of the device.
- %n inserts the name of the device.
- %l inserts the location of the device.
- %d inserts the type of the device.

SNMP ID: 2.39.1.7.3

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 251 characters

Default: Blank

2.39.1.7.4 Challenge password

Password (for the automatic issue of device certificates on the SCEP server).

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 251 characters

Default: Blank

2.39.1.7.5 SubjectAltName

Further information about the requester, e.g. domain or IP address.

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 251 characters

Default: Blank

2.39.1.7.6 Key usage

Any comma-separated combination of: digitalSignature, nonRepudiation, keyEncipherment, dataEncipherment, keyAgreement, keyCertSign, cRLSign, encipherOnly, decipherOnly, critical (possible but not recommended)

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 251 characters

Default: Blank

2.39.1.7.7 Device certificate keylength

The length of the key to be generated for the device itself.

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- 31 or better

Default: 0

2.39.1.7.8 Application

Indicates the intended application of the specified certificates. The certificates entered here are only queried for the corresponding application.

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- VPN

Default: VPN

2.39.1.7.9 Extended key usage

Any comma-separated combination of: Critical, serverAuth, clientAuth, codeSigning, emailProtection, timeStamping, msCodeInd, msCodeCom, msCTLSign, msSGC, msEFS, nsSGC, 1.3.6.1.5.5.7.3.18 for WLAN controllers, 1.3.6.1.5.5.7.3.19 for access points in managed mode

Telnet path: /Setup/Certificates/SCEP-client/Certificates

Possible values:

- Max. 251 characters

Default: Blank

2.39.1.8 Reinitialization

Starts the manual reinitialization of the SCEP parameters. As with the standard SCEP initialization, the necessary RA and CA certificates are retrieved from the CA and stored within the file system in the LANCOM Wireless such that they are not yet ready for use in VPN operations. If the available system certificate fits to the retrieved CA certificate, then the system certificate, CA certificate and the device's private key can be used for VPN operations. If the existing system certificates do not fit to the retrieved CA certificate, then the next step is for the SCEP server to submit a new certificate request. Only once a new system certificate that fits to the retrieved CA certificate has been issued and retrieved can the system certificate, CA certificate and the device's private key can be used for VPN operations.

Telnet path: /Setup/Certificates/SCEP-Client

2.39.1.9 Update

Manually triggers a request for a new system certificate, irrespective of the remaining validity period (lease). A new key pair is generated at the same time.

Telnet path: /Setup/Certificates/SCEP-Client

2.39.1.10 Clear SCEP file system

Starts a clean-up of the SCEP file system.

Deleted are: RA certificates, pending certificate requests, new and inactive CA certificates, new and inactive private keys.

Retained are: System certificates currently in use for VPN operations, associated private keys, and the CA certificates currently in use for VPN operations.

Telnet path: /Setup/Certificates/SCEP-Client

2.39.1.11 Retry after error interval

Interval in seconds between retries after errors of any type.

Telnet path: /Setup/Certificates/SCEP-Client

Possible values:

- Max. 10 characters

Default: 22

2.39.1.12 Check pending requests interval

Interval in seconds for checks on outstanding certificate requests.

Telnet path: /Setup/Certificates/SCEP-Client

Possible values:

- Max. 10 characters

Default: 101

2.39.1.13 Trace level

The output of trace messages for the SCEP client trace can be restricted to contain certain content only. The specified value defines the amount of detail of the packets in the trace.

Telnet path: /Setup/Certificates/SCEP-Client

Possible values:

- All: All trace messages, including information and debug messages
- Reduced: Error and alert messages only
- Only errors: Error messages only

Default:

All

2.39.1.14 CAs

This table is used to define the available CAs.

Telnet path: /Setup/Certificates/SCEP-Client/CAs

2.39.1.14.1 Name

Enter a name that identifies this configuration.

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/Name

Possible values: Max. 16 alphanumeric characters

Default: Blank

2.39.1.14.2 URL

This is where the enrollment URL is entered. The router must contact the certificate authority (CA) to request a certificate. The URL required tends to differ from one provider to another, and it is commonly specified in the documentation of the CA. Example: `http://postman/certsrv/mscep/mscep.dll`

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/URL

Possible values:

- Max. 251 alphanumeric characters

Default: Blank

2.39.1.14.3 DN

The distinguished name must be entered here. With this parameter the CAs are assigned to system certificates (and vice versa) on the one hand. On the other hand this parameter is also important for evaluating whether received or available certificates match with the configuration. Separated by commas or forward slashes, this is a list where the name, department, state and country can be specified for the gateway. The following are examples of how an entry might appear: `CN=myCACN, DC=mscep, DC=ca, C=DE, ST=berlin, O=myOrg /CN=LANCOM CA/O=LANCOM SYSTEMS/C=DE`

You can also use reserved characters by using a preceding backslash ("\"). The supported reserved characters are:

- Comma (",")
- Slash ("/")
- Plus ("+")
- Semicolon (";")
- Equals ("=")

You can also use the following internal LCOS variables:

- %% inserts a percent sign.
- %f inserts the version and the date of the firmware currently active in the device.
- %r inserts the hardware release of the device.
- %v inserts the version of the loader currently active in the device.
- %m inserts the MAC address of the device.
- %s inserts the serial number of the device.
- %n inserts the name of the device.
- %l inserts the location of the device.
- %d inserts the type of the device.

SNMP ID: 2.39.1.14.3

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/DN

Possible values:

- Max. 251 alphanumeric characters

Default: Blank

2.39.1.14.4 Encryption algorithm

The encryption algorithm is specified here as used by the SCEP protocol (Simple Certificate Enrollment Protocol). This algorithm has to be supported by the Certificate Authority (CA) and by the client. Three methods are available:

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/Enc-Alg

Possible values:

- **DES** - Data-Encryption-Standard: The DES algorithm uses a 64-bit key. This is the SCEP standard encryption. DES is an algorithm developed by the National Bureau of Standards (NBS) in the USA. The DES algorithm uses a 64-bit key which allows combinations of a substitution cipher, transposition cipher and exclusive-OR (XOR) operations. The 64-bit block size consists of an effective key length of 56 bits and 8 parity bits. The algorithm is based on the Lucifer cipher. This method was published in 1974, became a standard known as ANSI X3.92-1981, and is also specified by the ISO as ISO 8227. It has been in use for a number of years where sensitive data is found, such as in the capital markets and on Smartcards, and can be described as an international quasi-standard.
- **3DES** - Triple DES: This is an improved method of DES encryption using 2 keys of 64-bits in length.
- **BLOWFISH**: The BLOWFISH algorithm works with a variable key length of between 32 and 448 bits. It is a fast and highly secure algorithm. It has major advantages over other symmetrical methods such as DES and 3DES. Blowfish, developed by Bruce Schneier in 1993, is a symmetrical encryption method with a fast and highly secure algorithm, in particular in combination with 32-bit computers. This method works with a 64-bit block length and a variable key length of between 32 and 448 bits. Blowfish is highly efficient, works with XOR links and additions on 32-bit words. It is viewed as secure and offers big advantages over other symmetrical methods such as DES and 3DES.
- **AES128**: The Advanced Encryption Standard (AES) has a variable block size of 128, 192 or 256 bits and a variable key length of 128, 192 or 256 bits, providing a very high level of security.

Default: des



If possible you should employ one of the last two methods (3DES or BLOWFISH) as long as these are supported by the CA and all clients. The default value here is DES encryption to ensure interoperability.

2.39.1.14.5 Identifier

An additional identifier can be specified here. This value is required by some web servers to identify the CA.

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/Identifier

Possible values:

- Max. 251 alphanumeric characters

Default: Blank

2.39.1.14.6 CA signature algorithm

Here you select the signature algorithm used by the Certificate Authority (CA) to sign the certificate. This method must be supported by the CA and the certificate recipient (client) as the client uses this signature to check the integrity of the certificate. Two cryptographic hash functions are relatively widespread:

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/CA-Signature-Algorithm

Possible values:

- **MD5** (default) - Message Digest Algorithm 5 generates a 128-bit hash value. MD5 was developed in 1991 by Ronald L. Rivest. The results reveal no conclusive information about the key. This method takes a message of any length to generate a 128-bit message digest, which is attached to the unencrypted message. The recipient compares the message digest with that determined from the information.
- **SHA1** - Secure Hash Algorithm 1 generates a 160-bit hash value. These are used to calculate a unique checksum for any data. Generally this data makes up messages. It is practically impossible to come across two messages with exactly the same SHA value. The length of the hash value in the SHA algorithm is 160 bits.

Default: Off

2.39.1.14.7 RA auto. approve

With this option, new requests are signed with this assuming that a system certificate is available. The option must be activated both at the client and at the Certificate Authority (CA server). In this case the client is authenticated at the CA by the certificate alone and without exchange of a challenge password.

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/RA-autoapprove

Possible values:

- Yes
- No

Default: No

2.39.1.14.8 CA fingerprint algorithm

Here you select the fingerprint algorithm that the Certificate Authority (CA) uses to calculate the signature's fingerprint. This method must be supported by the CA and the client.

The fingerprint is a hash value of data (key, certificate, etc.), i.e. a short number string that can be used to check the integrity of the data.

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/CA-Fingerprint-Algorithm

Possible values:

- No
- **MD5** (default) - Message Digest Algorithm 5 generates a 128-bit hash value.
- **SHA1** - Secure Hash Algorithm 1 generates a 160-bit hash value.

Default: Off

2.39.1.14.9 CA fingerprint

The CA fingerprint can be entered here. This is a hash value that is produced by the fingerprint algorithm. This hash value can be used to check the authenticity of the received CA certificate (if a CA fingerprint algorithm is a requirement). Possible delimiters are: ':' '-' ',' ''

Telnet path: /Setup/Certificates/SCEP-client/Certificates/CA-fingerprint

Possible values:

- Max. 59 alphanumeric characters

Default: Blank

2.39.1.14.11 Loopback address

Enter a loopback address.

Telnet path: /Setup/Certificates/SCEP-Client/Certificates/Loopback-Addr.

Possible values: Max. 16 characters

Default: Blank

2.39.2 SCEP-CA

This menu contains the settings for SCEP-CA.

Telnet path: /Setup/Certificates/SCEP-Client

2.39.2.1 SCEP operating

Activates or deactivates the SCEP client.

Telnet path: /Setup/Certificates/SCEP-CA/SCEP-Operating

Possible values:

- Yes
- No

Default: No

2.39.2.2 CA certificates

This menu contains the settings for CA certificates.

Telnet path: /Setup/Certificates/SCEP-Client/CAs

2.39.2.2.1 CA distinguished name

The distinguished name must be entered here. With this parameter the CAs are assigned to system certificates (and vice versa) on the one hand. On the other hand this parameter is also important for evaluating whether received or available certificates match with the configuration. Separated by commas or forward slashes, this is a list where the name, department, state and country can be specified for the gateway. The following are examples of how an entry might appear: CN=myCACN, DC=mscep, DC=ca, C=DE, ST=berlin, O=myOrg /CN=LANCOM CA/O=LANCOM SYSTEMS/C=DE

Telnet path: /Setup/Certificates/SCEP-CA/CA certificates/CA-Distinguished-Name

Possible values:

- Max. 251 characters

Default: Blank

2.39.2.2.3 Alternative name

An alternative 'Subject Name' can be entered here.

Examples: Critical, DNS:host.company.de IP:10.10.10.10 DNS:host.company.de, IP:10.10.10.10
UFQDN:email:name@company.de

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Alternative-name

2.39.2.2.4 RSA key length

The key length must be entered here. This value specifies the length of new keys in bits.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/RSA-key-length

Possible values:

- 1024
- 2048
- 3072
- 4096
- 8192

Default: 2048



The time taken for calculation depends on the performance available from the system; the greater the number of bits, the longer it takes.

2.39.2.2.5 Validity period

Here you enter the certificate's validity period in days.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Validity-Period

Possible values:

- Max. 5 numerical characters

Default: 1100

2.39.2.2.6 CA certificate update before

Enter the time period for the 'Update before expiry' in days.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Validity-Period

Possible values:

- Max. 2 numerical characters

Default: 4

2.39.2.2.8 RA distinguished name

The distinguished name must be entered here. With this parameter the CAs are assigned to system certificates (and vice versa) on the one hand. On the other hand this parameter is also important for evaluating whether received or available certificates match with the configuration. Separated by commas or forward slashes, this is a list where the name, department, state and country can be specified for the gateway. The following are examples of how an entry might appear: CN=myCACN, DC=mscep, DC=ca, C=DE, ST=berlin, O=myOrg /CN=LANCOM CA/O=LANCOM SYSTEMS/C=DE

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/RA-Distinguished-Name

Possible values:

- Max. 251 characters

Default: Blank

2.39.2.2.9 Create new CA certificates

Run this command if you have changed the configuration of the CA.

The CA only creates new certificates automatically when the old ones have expired or none are available. If you decide to change the key length, the name, or other values of the CA certificate, this command enables you to recreate the corresponding certificate files.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Create-new-CA-certificates

2.39.2.2.10 Create PKCS12 backup files

To restore the CA or RA, the relevant root certificates with private keys will be required that are generated automatically when the WLAN Controller is started.

To ensure that this confidential information remains protected even when exported from the device, it is initially stored to a password-protected PCKS12 container.

The command "Create-PKCS12-Backup-Files" starts the export. Enter the passphrase when prompted to enter a parameter.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Create-PKCS12-Backup-Files

2.39.2.2.11 Restore certificates from backup

In case of a backup event, this command restores the two PKCS12 files with their respective root certificates and the private keys from the CA and/or RA.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Restore-certificates-from-Backup

2.39.2.3 Encryption algorithm

The encryption algorithm is specified here as used by the SCEP protocol (Simple Certificate Enrollment Protocol). This algorithm has to be supported by the Certificate Authority (CA) and by the client.

Telnet path: /Setup/Certificates/SCEP-CA/Encryption-Algorithm

Possible values:

- DES: Data Encryption Standard: The DES algorithm uses a 64-bit key. This is the SCEP standard encryption.
- 3DES: Triple DES: This is an improved method of DES encryption using 2 keys of 64-bits in length.
- BLOWFISH: The BLOWFISH algorithm works with a variable key length of between 32 and 448 bits. It is a fast and highly secure algorithm. It has major advantages over other symmetrical methods such as DES and 3DES.
- AES128: The Advanced Encryption Standard (AES) has a variable block size of 128, 192 or 256 bits and a variable key length of 128, 192 or 256 bits, providing a very high level of security.

Default: DES

2.39.2.4 RA auto-approve

With this option, new requests are signed with this assuming that a system certificate is available. The option must be activated both at the client and at the Certificate Authority (CA server). In this case the client is authenticated at the CA by the certificate alone and without exchange of a challenge password.

Telnet path: /Setup/Certificates/SCEP-CA/RA-Autoapprove

Possible values:

- Yes
- No

Default: Yes

2.39.2.5 Client certificates

This menu contains the settings for client certificates.

Telnet path: /Setup/Certificates/SCEP-Client/Certificates

2.39.2.5.1 Validity period

Here you determine the validity period of the certificate in days.

Telnet path: /Setup/Certificates/SCEP-CA/CA-certificates/Validity-Period

Possible values:

- Max. 5 numerical characters

Default: 365

2.39.2.5.3 Challenge passwords

This table provides an overview of the challenge passwords.

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/Validity-Period

2.39.2.5.3.1 Index

Enter the index for the challenge password here.

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/Validity-Period/Index

Possible values:

- Max. 10 numerical characters

Default: Blank**2.39.2.5.3.2 Subject distinguished name**

The distinguished name must be entered here. With this parameter the CAs are assigned to system certificates (and vice versa) on the one hand. On the other hand this parameter is also important for evaluating whether received or available certificates match with the configuration. Separated by commas or forward slashes, this is a list where the name, department, state and country can be specified for the gateway. The following are examples of how an entry might appear: CN=myCACN, DC=mscep, DC=ca, C=DE, ST=berlin, O=myOrg /CN=LANCOM CA/O=LANCOM SYSTEMS/C=DE

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/Challenge-Passwords/Subject-Distinguished-Name**Possible values:**

- Max. 251 characters

Default: Blank**2.39.2.5.3.3 MAC address**

Enter the MAC address of the client whose password is to be managed by the challenge-password table.

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/Validity-Period/MAC-Address**Possible values:**

- Maximum 12 alphanumeric characters

Default: Blank**2.39.2.5.3.4 Challenge**

Enter the challenge (password) for the client here.

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/Validity-Period/Challenge**Possible values:**

- Maximum 16 alphanumeric characters

Default: Blank**2.39.2.5.3.5 Validity**

Enter the validity period of passwords in days.

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/Validity-Period/Validity-Period**Possible values:**

- Max. 5 characters

Default: 365 days**2.39.2.5.4 General challenge password**

An additional 'password' can be entered here, which is transmitted to the CA. This can be used by default to authenticate revocation requests. If CAs operate Microsoft-SCEP (mscep), the one-time passwords issued by the CA can be entered here for the authentication of requests.

Telnet path: /Setup/Certificates/SCEP-CA/Client-Certificates/General-Challenge-Password**Possible values:**

- Max. 16 characters

Default: XuL[ksKcC3+'%PA2

2.39.2.6 Signature algorithm

Here you select the signature algorithm used by the Certificate Authority (CA) to sign the certificate. This method must be supported by the CA and the certificate recipient (client) as the client uses this signature to check the integrity of the certificate. Two cryptographic hash functions are relatively widespread.

Telnet path: /Setup/Certificates/SCEP-CA/Signature-Algorithm

Possible values:

- No
- **SHA1** - Secure Hash Algorithm 1 generates a 160-bit hash value. These are used to calculate a unique checksum for any data. Generally this data makes up messages. It is practically impossible to come across two messages with exactly the same SHA value. The length of the hash value in the SHA algorithm is 160 bits.
- **MD5** (default) - Message Digest Algorithm 5 generates a 128-bit hash value. MD5 was developed in 1991 by Ronald L. Rivest. The results reveal no conclusive information about the key. This method takes a message of any length to generate a 128-bit message digest, which is attached to the unencrypted message. The recipient compares the message digest with that determined from the information.

Default: Off

2.39.2.7 Fingerprint algorithm

Here you select the fingerprint algorithm that the Certificate Authority (CA) uses to calculate the signature's fingerprint. This method must be supported by the CA and the client. The fingerprint is a hash value of data (key, certificate, etc.), i.e. a short number string that can be used to check the integrity of the data.

Telnet path: /Setup/Certificates/SCEP-CA/Fingerprint-Algorithm

Possible values:

- MD5: Message Digest Algorithm 5 generates a 128-bit hash value
- SHA1: Secure Hash Algorithm 1 generates a 160-bit hash value

Default: MD5

2.39.2.8 Certificate revocation lists

This item contains the certificate revocation lists.

Telnet path: /Setup/Certificates/SCEP-CA/Certificate-Revocation-Lists

2.39.2.8.1 Update interval

Enter here the update interval in seconds for creating a new CRL. The lower limit for this is 600 seconds. .

Telnet path: /Setup/Certificates/SCEP-CA/Certificate-Revocation-Lists/CRL-Update-Interval

Possible values:

- Max. 63 numerical characters

Default: 86,400

2.39.2.8.2 CRL distribution point hostname

Enter here the update interval in seconds for creating a new CRL. The lower limit for this is 600 seconds.

Telnet path: /Setup/Certificates/SCEP-CA/Certificate-Revocation-Lists/CRL-Distribution-Point-Hostname

Possible values:

- Max. 63 numerical characters

Default: 600

2.39.2.8.3 Create new CRL

Normally, the CA automatically creates a new certificate revocation list (CRL) when the old CRL expires or when the contents of the CRL changes (due to SCEP operations).

Run this command if you have revoked a certificate in the certificate status list.

Telnet path: /Setup/Certificates/SCEP-CA/Certificate-Revocation-Lists/Create-New-CRL

2.39.2.9 Reinitialize

Use this command to reinitialize the CA. The device checks the configuration and the certificates, and if necessary it updates the corresponding values and files.

Run this command when the CA is not running because of a configuration error. This initiates a new check after a change of configuration.

Telnet path: /Setup/Certificates/SCEP-CA/Reinitialize

2.39.2.10 Notification

This menu contains the settings for the notification of events relating to certificates.

Telnet path: /Setup/Certificates/SCEP-CA/Logging

2.39.2.10.1 E-mail

The setting here determines whether a notification is sent when an event occurs.

Telnet path: /Setup/Certificates/SCEP-CA/Logging/E-Mail

Possible values:

- No
- Yes

Default: No

2.39.2.10.2 Syslog

This item activates the logging function based on notifications via Syslog.

Telnet path: /Setup/Certificates/SCEP-CA/Logging/Syslog

Possible values:

- No
- Yes

Default: No



To make use of this function, the Syslog client in the device needs to be configured accordingly.

2.39.2.10.1 E-mail receiver

Here you enter the e-mail address to which a notification is sent when an event occurs.

Telnet path: /Setup/Certificates/SCEP-CA/Logging/E-Mail

Possible values:

- Maximum 63 alphanumerical characters

Default: Blank

2.39.2.10.4 Send backup reminder

If this function is activated, a reminder about the need to make a backup is sent automatically to the e-mail address entered here.

Telnet path: /Setup/Certificates/SCEP-CA/Logging/Send-Backup-Reminder

Possible values:

- No
- Yes

Default: No

2.39.3 CRLs

This menu contains the configuration of the CRLs.

Telnet path: /Setup/Certificates

2.39.3.1 Operating

Enabled: During the certificate check, the CRL (if available) will be considered as well.

Telnet path: /Setup/Certificates/CRLs

Possible values:

- Yes
- No

Default: No

 If this option is activated but no valid CRL is available (e.g. if the server can't be reached), then all connections will be rejected and existing connections will be interrupted.

2.39.3.4 Update before expiry

The point in time prior to expiry of the CRL when the new CRL can be loaded. This value is increased by a random value to prevent server overload from multiple simultaneous queries. Once within this time frame, any coinciding regular planned updates will be stopped.

Telnet path: /Setup/Certificates/CRLs

Possible values:

- Max. 10 characters

Default: 300

 If the first attempt to load the CRL fails, new attempts are made at regular short intervals.

2.39.3.5 Prefetch period

The time period after which periodic attempts are made to retrieve a new CRL. Useful for the early retrieval of CRLs published at irregular intervals. The entry '0' disables regular retrieval.

Telnet path: /Setup/Certificates/CRLs

Possible values:

- Max. 10 characters

Default: 0

 If with regular updates the CRL cannot be retrieved, no further attempts will be started until the next regular attempt.

2.39.3.6 Validity exceedance

Even after expiry of the CRL, certificate-based connections will continue to be accepted for the period defined here. This tolerance period can prevent the unintentional rejection or interruption of connections if the CRL server should be temporarily unavailable.

Telnet path: /Setup/Certificates/CRLs

Possible values:

- Max. 10 characters

Default: 0

Special values: Within the time period defined here, even certificates in the CRL which have expired can still be used to maintain or establish a connection.

 In the time period defined here, even expired certificates can be used to maintain or re-establish a connection.

2.39.3.7 Refresh CRL now

Reads the current CRL from the URL specified in the root certificate, or from the alternative URL (if this function is set up).

Telnet path: /Setup/Certificates/CRLs

2.39.3.8 Alternative URL table

This table contains the list of alternative URLs.

The address where a certificate revocation list (CRL) can be collected is normally defined in the certificate (as `crldistributionpoint`). LCOS has a table where alternative CRLs can be specified. After a system start the CRLs are automatically collected from these URLs. These are used in addition to the lists offered by the certificates.

Telnet path: /Setup/Certificates/CRLs/Alternative-URL-Table

2.39.3.8.1 Alternative URL

Here you enter the alternative URL where a CRL can be collected.

Telnet path: /Setup/Certificates/CRLs/Alternative-URL-Table/Alternative-URL

Possible values:

- Any valid URL with max. 251 characters.

Default: Blank

2.39.3.9 Loopback address

Here you can optionally define a sender address for display to the recipient instead of the automatically generated address.

Telnet path: /Setup/Certificates/CRLs/Loopback-Address

Possible values:

- Name of the IP network whose address should be used

- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO – LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

 If there is an interface called "DMZ", its address will be taken if you have selected "DMZ".

2.39.6 OCSP client

This menu contains the settings for the OCSP client.

Telnet path: /Setup/Certificates

2.39.6.1 CA profile table

This table contains information on the Certificate Authorities (CAs), whose certificates are evaluated by the OCSP client by sending a request to an OCSP responder.

Telnet path: /Setup/Certificates/OCSP-Client

2.39.6.1.1 Profile name

Enter here the name of a CA profile to be used by the OCSP client for a particular CA.

SNMP ID:

2.39.6.1.1

Telnet path:

Setup > Certificates > OCSP-Client > Ca-Profile-Table

Possible values:

Maximum 32 alphanumerical characters

Default:

2.39.6.1.2 CA-DN

Enter the distinguished name of the CA, whose certificates are evaluated by the OCSP client with this profile name.

SNMP ID:

2.39.6.1.2

Telnet path:

Setup > Certificates > OCSP-Client > Ca-Profile-Table

Possible values:

Maximum 251 alphanumerical characters

Default:

2.39.6.1.3 Prefer AIA

Certificates used for establishing VPN connections optionally include the URL of the relevant OCSP responder in the field Authority Info Access (AIA). This item defines whether the OCSP client prefers to use the URL from this entry in the CA profile table or the URL from the AIA field, if available.

SNMP ID:

2.39.6.1.2

Telnet path:**Setup > Certificates > OCSP-Client > Ca-Profile-Table****Possible values:**

- **No:** The OCSP client always uses the URL from this CA-profile table entry and ignores the URL in the AIA field.
- **Yes:** The OCSP client uses the URL from the AIA field (if specified) and ignores the URL from this CA profile table entry.

Default:

No

2.39.6.1.4 Responder profile name

This item selects the responder profile used by the OCSP client to evaluate certificates from this CA.



If the field for the responder profile name is left empty, the machine evaluates the certificates from the CA defined here not with OCSP, but with the help of a CRL.

SNMP ID:

2.39.6.1.2

Telnet path:**Setup > Certificates > OCSP-Client > Ca-Profile-Table****Possible values:**

Select from the list of profile names in the table [2.39.6.2 Responder profile table](#), maximum 32 alphanumeric characters

Default:**2.39.6.1.5 Source interface**

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

SNMP ID:

2.39.6.1.5

Telnet path:**Setup > Certificates > OCSP-Client > Ca-Profile-Table****Possible values:**

- Name of the IP network (ARF network), whose address should be used.
- `INT` for the address of the first Intranet
- `DMZ` for the address of the first DMZ



If the list of IP networks or loopback addresses contains an entry named 'DMZ', then the associated IP address will be used instead.

- `LB0...LB15` for one of the 16 loopback addresses or its name

- Any IPv4 address

 If the sender address set here is a loopback address, these will be used **unmasked** on the remote client!

Default:

0.0.0.0

2.39.6.1.6 Certificate evaluation

This item defines how the device behaves if certificate evaluation fails. During connection establishment, the OCSP client first queries the OCSP responder about the validity of the certificate. If the certificate is about to expire, the OCSP client automatically repeats the query about the validity before the certificate expires.

 If necessary, you can log and review the results of certificate evaluation by the OCSP responder with SYSLOG, SNMP traps and relevant traces.

SNMP ID:

2.39.6.1.6

Telnet path:

Setup > Certificates > OCSP-Client > Ca-Profile-Table

Possible values:

- **Strict:** If the OCSP responder reports that the certificate used during connection establishment is not valid, the device does not establish a connection to the remote site. If during an ongoing connection the OCSP responder does not confirm a new request in good time before the certificate's expiry, the device will cut the connection.
- **Loose:** If the OCSP responder reports that the certificate used during connection establishment is not valid, the device will still establish a connection to the remote site. Even if during an ongoing connection the OCSP responder does not confirm a new request in good time before the certificate's expiry, the device will not cut the connection.

Default:

Strict

2.39.6.1.7 Syslog events

The OCSP client can optionally generate SYSLOG messages with information on the results of certificate checks by the OCSP responder.

SNMP ID:

2.39.6.1.7

Telnet path:

Setup > Certificates > OCSP-Client > Ca-Profile-Table

Possible values:

- **Yes:** The OCSP client generates SYSLOG messages
- **No:** The OCSP client does not generate SYSLOG messages

Default:

Yes

2.39.6.2 Responder profile table

This table contains information on the Certificate Authorities (CAs), whose certificates are evaluated by the OCSP client by sending a request to an OCSP responder.

SNMP ID:

2.39.6.2

Telnet path:

Setup > Certificates > OCSP-Client

2.39.6.2.1 Profile name

Enter here the name of an OCSP-responder profile to be referenced by the OCSP client in the CA profile table.

SNMP ID:

2.39.6.2.1

Telnet path:

Setup > Certificates > OCSP-Client > Responder-Profile-Table

Possible values:

Maximum 32 alphanumerical characters

Default:

2.39.6.2.2 URL

Enter the URL for the OCSP client to access the OCSP responder.

SNMP ID:

2.39.6.2.2

Telnet path:

Setup > Certificates > OCSP-Client > Responder-Profile-Table

Possible values:

Valid URL with a maximum of 251 alphanumeric characters

Default:

2.40 GPS

This item contains the GPS settings.

Telnet path: /Setup/GPS

2.40.1 Operating

Activate or deactivate the GPS function here. You can activate the GPS module independently of the location verification function, for example to monitor the current positional coordinates with LANmonitor.

SNMP ID:

2.40.1

Telnet path:**Setup > GPS****Possible values:**

No

Yes

Default:

No

2.41 UTM

You can adjust the UTM settings here.

SNMP ID: 2.41**Telnet path:** /Setup/

2.41.2 Content filter

The settings for the content filter are located here.

Telnet path: /Setup/UTM/

2.41.2.1 Operating

This is where you can activate the content filter.

Telnet path: /Setup/UTM/Content-Filter/Operating**Possible values:**

- Yes: Activates the content filter.
- No: Deactivates the content filter.

Default:

- No

2.41.2.2 Global settings

NEW

The global settings for the content filter are located here.

Telnet path: /Setup/UTM/Content-Filter/

2.41.2.2.1 Admin e-mail

An SMTP client must be defined if you wish to use the e-mail notification function. You can use the client in the device, or another client of your choice.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

No e-mail will be sent if no e-mail recipient is defined,.

2.41.2.2.5 Action on error

This is where you can determine what should happen when an error occurs. For example, if the rating server cannot be contacted, this setting either allows the user to surf without restrictions or access to the web is blocked entirely.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Block, pass

Default: Block

2.41.2.2.6 Action on license exceedance

This is where you can determine what should happen when the licensed number of users is exceeded. Users are identified by their IP address. The system keeps count of the IP addresses that connect via the LANCOM Content Filter. When the eleventh user establishes a connection with a 10-user license, no further checking is performed by the LANCOM Content Filter. Depending on this setting, the unlicensed user can either surf the web without restrictions, or access to the web is blocked entirely.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Block, pass

Default: Block

 The users of the content filter are automatically removed from the user list when no connection has been made from the IP address concerned via the content filter for 24 hours.

2.41.2.2.6 Action on license expiration

The license to use the LANCOM Content Filter is valid for a certain period. You will be reminded of the license expiry date 30 days, one week and one day before it actually expires (at the e-mail address configured in LANconfig: Log & Trace > General).

This is where you can specify what should happen when the license expires (i.e. block everything or allow everything through). After the license expires, this setting either allows the user to surf the web without restrictions, or access to the web is blocked entirely.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Block, pass

Default: Block

2.41.2.2.9 Notification

This is where you define how you wish to receive notification of specific events. Notification can be made by e-mail, SNMP or SYSLOG. You can specify that messages for different events should be output in different ways.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/

Error:

- For SYSLOG: Source "System", priority "Alarm".
- Default: SYSLOG notification

License exceedance:

- For SYSLOG: Source "Admin", priority "Alarm".
- Default: E-MAIL, SNMP and SYSLOG notification

License expiry:

- For SYSLOG: Source "Admin", priority "Alarm".
- Default: E-MAIL, SNMP and SYSLOG notification

Override:

- For SYSLOG: Source "Router", priority "Alarm".
- Default: No notification

Proxy limit:

- For SYSLOG: Source "Router", priority "Info".
- Default: SYSLOG notification

2.41.2.2.9.1 Cause

Here you choose one of the predefined values for the cause for notification.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Notification

2.41.2.2.9.2 E-mail

You can specify whether you want to receive notification by e-mail here.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Notification

Possible values:

- Yes
- No

Default: Differs according to the cause.

2.41.2.2.9.3 SNMP

You can specify whether you want to receive notification by SNMP here.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Notification

Possible values:

- Yes, No

Default: Differs according to the cause.

2.41.2.2.9.4 Syslog

You can specify whether you want to receive notification by SYSLOG here.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Notification

Possible values:

- Yes
- No

Default: Differs according to the cause.

2.41.2.2.10 Block text

This is where you can define text to be displayed when blocking occurs. Different blocking texts can be defined for different languages. The display of blocking text is controlled by the language setting transmitted by the browser (user agent).

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

2.41.2.2.10.1 Language

Entering the appropriate country code here ensures that users receive all messages in their browser's preset language. If the country code set in the browser is found here, the matching text will be displayed.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Block-Text

You can add any other language.

Examples of the country code:

- de-DE: German-Germany
- de-CH: German-Switzerland
- de-AT: German-Austria
- en-GB: English-Great Britain
- en-US: English-USA

 The content filter processes only the first part of the country code to the '-', i.e. "en", "en-GB" and "en-US" are identical to the content filter. The content filter is not case-sensitive. If the country code set in the browser is not found in this table, or if the text stored under that country code is deleted, the predefined default text ("default") will be used. You can modify the default text.

Possible values:

10 alphanumerical characters

Default:

Blank

2.41.2.2.10.2 Text

Enter the text that you wish to use as blocking text for this language.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Block-Text

Possible values:

- 254 alphanumerical characters

Default:

Blank

Special values:

You can also use special tags for blocking text if you wish to display different pages depending on the reason why the web site was blocked (e.g. forbidden category or entry in the blacklist).

The following tags can be used as tag values:

- <CF-URL/> for the forbidden URL
- <CF-HOST/> or <CF-DOMAIN/> displays the host or the domain for the allowed URL. The tags are of equal value and their use is optional.
- <CF-CATEGORIES/> for the list of categories why the web site was blocked
- <CF-PROFILE/> for the profile name
- <CF-DURATION/> displays the override duration in minutes.
- <CF-OVERRIDEURL/> for the URL used to activate the URL (this can be integrated in a simple <a> tag or in a button)
- <CF-LINK/> adds a link for activating the override
- <CF-BUTTON/> for a button for activating the override

You can use a tag with attributes to display or hide parts of the HTML document: <CF-IF att1 att2> ... </CF-IF>.

Possible attributes are:

- **BLACKLIST:** If the site was blocked because it is in the profile blacklist
- **FORBIDDEN:** If the site was blocked due to one of its categories
- **CATEGORY:** When the override type is "Category" and the override was successful
- **ERR:** If an error has occurred.

Since there are separate text tables for the blocking page and the error page, this tag only makes sense if you have configured an alternative URL to show on blocking.

- **OVERRIDEOK:** If users have been allowed an override (in this case, the page should display an appropriate button)

If several attributes are defined in one tag, the section will be displayed if at least one of these conditions is met. All tags and attributes can be abbreviated to the first two letters (e.g. CF-CA or CF-IF BL). This is necessary as the blocking text may only contain a maximum of 254 characters.

Example:

- `<CF-URL/>` is blocked because it matches the categories `<CF-CA/>`.`</p><p>`Your content profile is `<CF-PR/>`.`</p><p>``<CF-IF OVERRIDEOK>``</p><p>``<CF-BU/>``</CF-IF>`

 The tags described here can also be used in external HTML pages (alternative URLs to show on blocking).

2.41.2.2.11 URL to show on blocking

This is where you can enter the address of an alternative URL. If access is blocked, the URL entered here will be displayed instead of the requested web site. You can use this external HTML page to display your company's corporate design, for example, or to perform functions such as JavaScript routines, etc. You can also use the same HTML tags here as used in the blocking text. If you do not make any entry here, the default page stored in the device will be displayed..

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Valid URL address

Default: Blank

2.41.2.2.12 Loopback to use on blocking

This is where you can configure an optional sender address for the blocked URL to be used instead of the one that would normally be automatically selected for this target address. If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ (Note: If there is an interface named "DMZ", its address will be taken).
- LBO ... LBF for the 16 loopback addresses
- GUEST
- Any IP address in the form x.x.x.x

Default: Blank

 The sender address specified here is used unmasked for every remote station.

2.41.2.2.13 Override active

This is where you can activate the override function and make further related settings.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Yes, No

Default: No

2.41.2.2.14 Override duration

The override duration can be restricted here. When the period expires, any attempt to access the same domain and/or category will be blocked again. Clicking on the override button once more allows the web site to be accessed again for the duration of the override and, depending on the settings, the administrator will be notified once more.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/

Possible values:

- 1-1440 (minutes)
- Max. 4 characters

Default: 5 minutes

2.41.2.2.15 Override type

This is where you can set the type of override. It can be allowed for the domain, for the category of web site to be blocked, or for both.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Category: For the duration of the override, all URLs are allowed that fall under the affected categories (as well as those which would already have been allowed even without the override).
- Domain: For the duration of the override all URLs in this domain are allowed, irrespective of the categories they belong to.
- Category-and-Domain: For the duration of the override, all URLs are allowed that belong to this domain and also to the allowed categories. This is the highest restriction.

Default: Category-and-Domain

2.41.2.2.17 Save to flashrom

Activate this option for the category statistics to be stored to the flash ROM.

This ensures that the data are not lost even if the device is switched off or suffers a power outage.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Save-to-Flashrom

Possible values:

- Yes: Activates storage to the flash ROM.
- No: Deactivates storage to the flash ROM.

Default: No

2.41.2.2.19 Error text

This is where you can define text to be displayed when an error occurs.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

2.41.2.2.19.1 Language

Entering the appropriate country code here ensures that users receive all messages in their browser's preset language. If the country code set in the browser is found here, the matching text will be displayed.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Error-Text

You can add any other language.

Examples of the country code:

- de-DE: German-Germany
- de-CH: German-Switzerland
- de-AT: German-Austria
- en-GB: English-Great Britain
- en-US: English-USA

 The content filter processes only the first part of the country code to the '-', i.e. "en", "en-GB" and "en-US" are identical to the content filter. The content filter is not case-sensitive. If the country code set in the browser is not found in this table, or if the text stored under that country code is deleted, the predefined default text ("default") will be used. You can modify the default text.

Possible values:

10 alphanumerical characters

Default:

Blank

2.41.2.2.19.2 Text

Enter the text that you wish to use as error text for this language.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Error-Text

Possible values:

254 alphanumerical characters

Default:

Blank

Special values:

You can also use HTML tags for the error text.

The following empty element tags can be used as tag values:

- <CF-URL/> for the forbidden URL
- <CF-HOST/> or <CF-DOMAIN/> displays the host or the domain for the forbidden URL. The tags are of equal value and their use is optional.
- <CF-DURATION/> displays the override duration in minutes.
- <CF-PROFILE/> for the profile name
- <CF-ERROR/> for the error message

You can use a tag with attributes to display or hide parts of the HTML document: <CF-IF att1 att2> ... </CF-IF>.

Possible attributes are:

- CHECKERROR: The error occurred while checking the URL
- OVERRIDEERROR: The error occurred while approving an override

Example:

<CF-URL/> is blocked because an error has occurred:</p><p><CF-ERROR/>

<CF-URL>: Blocked URL <CF-HOST> or <CF-DOMAIN>: Host part of the blocked URL <CF-PROFILE>: User content-filter profile <CF-DURATION>: Override time in minutes <CF-ERROR>: Error message <CF-IF> to </CF-IF>: Conditional evaluation of the following parameters with the logical OR: CHECKERROR: The error occurred while checking the URL (as earlier) OVERRIDE ERROR: The error occurred while approving an override

2.41.2.2.20 Override text

This is where you can define text that is displayed to users confirming an override.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

2.41.2.2.20.1 Language

Entering the appropriate country code here ensures that users receive all messages in their browser's preset language. If the country code set in the browser is found here, the matching text will be displayed.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Override-Text

You can add any other language.

Examples of the country code:

- de-DE: German-Germany
- de-CH: German-Switzerland
- de-AT: German-Austria
- en-GB: English-Great Britain
- en-US: English-USA

 The content filter processes only the first part of the country code to the '-', i.e. "en", "en-GB" and "en-US" are identical to the content filter. The content filter is not case-sensitive. If the country code set in the browser is not found in this table, or if the text stored under that country code is deleted, the predefined default text ("default") will be used. You can modify the default text.

Possible values:

10 alphanumerical characters

Default:

Blank

2.41.2.2.20.2 Text

Enter the text that you wish to use as override text for this language.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Override-Text

Possible values:

- 254 alphanumerical characters

Default:

Blank

Special values:

You can also use HTML tags for blocking text if you wish to display different pages depending on the reason why the web site was blocked (e.g. forbidden category or entry in the blacklist).

The following tags can be used as tag values:

- <CF-URL/> for the originally forbidden URL that is now allowed

- `<CF-CATEGORIES/>` for the list of categories that have now been allowed as a result of the override (except if domain override is specified).
- `<CF-BUTTON/>` displays an override button that forwards the browser to the original URL.
- `<CF-BUTTON/>` displays an override link that forwards the browser to the original URL.
- `<CF-HOST/>` or `<CF-DOMAIN/>` displays the host or the domain for the allowed URL. The tags are of equal value and their use is optional.
- `<CF-ERROR/>` generates an error message in the event that the override fails.
- `<CF-DURATION/>` displays the override duration in minutes.

You can use a tag with attributes to display or hide parts of the HTML document: `<CF-IF att1 att2> ... </CF-IF>`.

Attributes can be:

- **BLACKLIST:** If the site was blocked because it is in the profile blacklist
- **FORBIDDEN:** If the site was blocked due to one of its categories
- **CATEGORY:** When the override type is "Category" and the override was successful
- **DOMAIN:** When the override type is "Domain" and the override was successful
- **BOTH:** When the override type is "Category-and-Domain" and the override was successful
- **ERROR:** When the override fails
- **OK:** When either **CATEGORY** or **DOMAIN** or **BOTH** are applicable

If several attributes are defined in one tag, the section should be displayed if at least one of these conditions is met. All tags and attributes can be abbreviated to the first two letters (e.g. `CF-CA` or `CF-IF BL`). This is necessary as the blocking text may only contain a maximum of 254 characters.

Example:

```
<CF-IF CA BO>The categories <CF-CAT/> are</CF-IF><CF-IF BO> in the domain <CF-DO/></CF-IF><CF-IF DO>The
domain <CF-DO/> is</CF-IF><CF-IF OK> released for <CF-DU/> minutes.</p><p><CF-LI/></CF-IF><CF-IF ERR>Override
error:</p><p><CF-ERR/></CF-IF>
```

2.41.2.2.23 Snapshot

This is where you can activate the content filter snapshot and determine when and how often it should be taken. The snapshot copies the category statistics table to the last snapshot table, overwriting the old contents of the snapshot table. The category statistics values are then reset to 0.

Telnet path: `/Setup/UTM/Content-Filter/Global-Settings`

2.41.2.2.23.1 Active

This is where you can activate the content filter snapshot and determine when and how often it should be taken. The snapshot copies the category statistics table to the last snapshot table, overwriting the old contents of the snapshot table. The category statistics values are then reset to 0.

Telnet path: `/Setup/UTM/Content-Filter/Global-Settings/Snapshot/Active`

Possible values:

- Yes: Activates the snapshot.
- No: Deactivates the snapshot.

Default:

- Yes

2.41.2.2.23.2 Type

Here you decide whether the snapshot should be taken monthly, weekly or daily.

Telnet path: `/Setup/UTM/Content-Filter/Global-Settings/Snapshot`

Possible values

Monthly, weekly, daily

Default:

Monthly

2.41.2.2.23.3 Time

If you require a daily snapshot, then enter here the time of day for the snapshot in hours and minutes.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Snapshot

Possible values:

- Max. 5 characters
- Format HH:MM

Default:

00:00

2.41.2.2.23.4 Day

For monthly snapshots, set the day of the month when the snapshot should be taken.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Snapshot

Possible values:

Max. 2 characters

Default:

1

 It is advisable to select a number between 1 and 28 in order to ensure that it occurs every month.

2.41.2.2.23.5 Weekday

For weekly snapshots, set the day of the week when the snapshot should be taken.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Snapshot

Possible values:

Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday

Default: Sunday

2.41.2.2.24 Proxy connections limit

This setting is for the maximum allowable number of simultaneous proxy connections. This limits the load that can be placed on the system. A notification is sent if this number should be exceeded.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Proxy-Connections-Limit

Possible values:

- 0 to 999999 connections

Default: Varies from device to device

2.41.2.2.25 Processing timeout in ms

Specifies the maximum time in milliseconds that the proxy can take for processing. A timeout error page is displayed if this time is exceeded.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings/Processing-Timeout-in-ms

Possible values:

- 0 to 999999 milliseconds

Default:

- 3000 milliseconds

Special values:

- The value 0 sets no time limit. Values less than 100 milliseconds make no sense.

2.41.2.2.21 URL to show on error

This is where you can enter an alternative URL. In the event of an error, the URL entered here will be displayed instead of the usual web site. You can use this external HTML page to display your company's corporate design, for example, or to perform functions such as JavaScript routines, etc. You can also use the same tags here as used in the override text. If you do not make any entry here, the default page stored in the device will be displayed..

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

Possible values:

- Valid URL address

Default: Blank

2.41.2.2.21 Loopback to use on error

This is where you can configure an optional sender address for the error URL to be used instead of the one that would normally be automatically selected for this target address. If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/UTM/Content-Filter/Global-Settings

English description: Loopback-To-Use-On-Override

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ (Note: If there is an interface named "DMZ", its address will be taken).
- LBO ... LBF for the 16 loopback addresses
- GUEST
- Any IP address in the form x.x.x.x

Default: Blank

 The sender address specified here is used unmasked for every remote station.

2.41.2.2.28 Loopback to rating server

This setting gives you the option to specify the loopback address used by the device to connect to the rating server. If you have configured loopback addresses, you can specify them here as sender address.

By default, the server sends its replies back to the IP address of your device without having to enter it here. By entering an optional loopback address you change the source address and route used by the device to connect to the server. This

can be useful, for example, when the server is available over different paths and it should use a specific path for its reply message.

SNMP ID:

2.41.2.2.28

Telnet path:

Setup > UTM > Content-Filter > Global-Settings

Possible values:

- Name of the IP network (ARF network), whose address should be used.
- INT for the address of the first Intranet
- DMZ for the address of the first DMZ

 If an interface with the name "DMZ" already exists, the device will select that address instead.

- LB0...LBF for one of the 16 loopback addresses or its name
- Any IPv4 address

 If the sender address set here is a loopback address, these will be used **unmasked** on the remote client!

Default:**2.41.2.3 Profiles**

The profile settings for the content filter are located here.

2.41.2.3.1 Profiles

This is where you can create content filter profiles that are used to check web sites for prohibited content. A content filter profile always has a name and, for various time periods, it activates the desired category profile and, optionally, a blacklist and a whitelist.

Telnet path: /Setup/UTM/Content-Filter/Profiles

In order to provide different configurations for the various timeframes, several content-filter profile entries are created with the same name. The content filter profile is thus made up of the sum of all entries with the same name.

The firewall refers to this content-filter profile.

 Please note that you must make corresponding settings in the firewall in order to use the profiles in the LANCOM Content Filter.

2.41.2.3.1.1 Name

Enter the name of the content filter profile to be used for referencing in the firewall.

Telnet path: /Setup/UTM/Content-Filter/Profiles

Possible values:

- Name of a profile
- Maximum 31 characters

Default:

Blank

2.41.2.3.1.2 Timeframe

Select the timeframe for the content filter profile. The timeframes "ALWAYS" and "NEVER" are predefined. You can configure other timeframes under: /Setup/Time/Timeframe.

A content-filter profile may have several lines with different timeframes.

Telnet path: /Setup/UTM/Content-Filter/Profiles

Possible values:

- Always
- Never
- Name of a timeframe profile
- Maximum 31 characters

Default: Blank



If timeframes overlap when multiple entries are used for a content filter profile, all pages contained in one of the active entries will be blocked for that period of time. If a period remains undefined when several entries are used for a content filter profile, access to all web sites is unchecked for this period.

2.41.2.3.1.3 Whitelist

Select the whitelist that applies to this content filtering profile. Enter a new name or select an existing entry from the whitelist table.

Telnet path: /Setup/UTM/Content-Filter/Profiles

Possible values:

- Name of an existing whitelist
- Maximum 31 characters

Default: Blank

2.41.2.3.1.4 Blacklist

Select the blacklist that applies to this content filtering profile. Enter a new name or select an existing entry from the blacklist table.

Telnet path: /Setup/UTM/Content-Filter/Profiles

Possible values:

- Name of an existing blacklist
- Maximum 31 characters

Default: Blank

2.41.2.3.1.5 Category profile

Select the category profile that applies to this content filtering profile. Enter a new name or select an existing entry from the table of category profiles.

Telnet path: /Setup/UTM/Content-Filter/Profiles

Possible values:

- Name of a category profile
- Maximum 31 characters

Default: Blank

2.41.2.3.2 Whitelists

This is where you can configure web sites to which access is to be allowed.

Telnet path: /Setup/UTM/Content-Filter/Profiles

 Entries for the allowed web sites may contain up to 252 characters. To define longer whitelist entries, a number of entries can use a special, shared name. Enter the name of the whitelist followed by a # character and any suffix. For example, you create three whitelist entries called "MyWhitelist#1", "MyWhitelist#2" and "MyWhitelist#3". In the content filtering profile, you can reference this extended whitelist with the name "MyWhitelist".

2.41.2.3.2.1 Name

Enter the name of the whitelist for referencing from the content-filter profile.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Whitelists

Possible values:

- Name of a whitelist
- Maximum 31 characters

Default:

Blank

2.41.2.3.2.2 Whitelist

This is where you can configure web sites which are to be checked locally and then accepted.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Whitelists

Possible values:

- Valid URL address(es)
- Maximum 252 characters

The following wildcard characters may be used:

- * for any combination of more than one character (e.g. www.lancom.* encompasses the web sites www.lancom.de, www.lancom.eu, www.lancom.es, etc.)
- ? for any one character (e.g. www.lancom.e* encompasses the web sites www.lancom.eu, www.lancom.es)

 Please enter the URL without the leading http://. Please note that in the case of many URLs a forward slash is automatically added as a suffix to the URL, e.g. www.mycompany.de/. For this reason it is advisable to enter the URL as: www.mycompany.de*.

Individual URLs are separated by a blank.

Default:

Blank

2.41.2.3.3 Blacklists

This is where you can configure those web sites that are to be blocked.

Telnet path: /Setup/UTM/Content-Filter/Profiles

 Entries for the forbidden web sites may contain up to 252 characters. To define longer blacklist entries, a number of entries can use a special, shared name. Enter the name of the blacklist followed by a # character and any suffix. For example, you create three blacklist entries called "MyBlacklist#1", "MyBlacklist#2" and "MyBlacklist#3". In the content filtering profile, you can reference this extended blacklist with the name "MyBlacklist".

2.41.2.3.3.1 Name

Enter the name of the blacklist for referencing from the content-filter profile.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Blacklists

Possible values:

- Blacklist name
- Maximum 31 characters

Default:

Blank

2.41.2.3.3.2 Blacklist

Access to the URLs entered here will be forbidden by the blacklist.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Blacklists

Possible values:

- Valid URL address(es)
- Maximum 252 characters

The following wildcard characters may be used:

- * for any combination of more than one character (e.g. www.lancom.* encompasses the web sites www.lancom.de, www.lancom.eu, www.lancom.es, etc.)
- ? for any one character (e.g. www.lancom.e* encompasses the web sites www.lancom.eu, www.lancom.es)



Please enter the URL without the leading http://. Please note that in the case of many URLs a forward slash is automatically added as a suffix to the URL, e.g. www.mycompany.de/. For this reason it is advisable to enter the URL as: www.mycompany.de*.

Individual URLs are separated by a blank.

Default:

Blank

2.41.2.3.4 Category profiles

Here you create a category profile and determine which categories or groups should be used to rate web sites for each category profile. You can allow or forbid the individual categories or activate the override function for each group.

Telnet path: /Setup/UTM/Content-Filter/Profiles

2.41.2.3.4.1 Name

The name of the category profile for referencing from the content-filter profile is entered here.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

Possible values:

- Name of a category profile
- Maximum 31 characters

Default:

Blank

2.41.2.3.4.100 Unknown

Here you can specify how the content filter is to treat URLs that are unknown to the rating server, and thus are as yet uncategorized.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

Possible values:

Allowed, forbidden, override

Default: Allowed



The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

2.41.2.3.4.101 Pornography/Erotic/Sex

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.103 Swimwear/Lingerie

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.104 Shopping

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.105 Auctions/Classified_Ads

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.106 Governmental/Non-Profit_Organizations

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.108 Cities/Regions/Countries

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.109 Education

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.110 Political_Parties

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.111 Religion/Spirituality

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.113 Illegal_Activities

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.114 Computer_Crime/Warez/Hacking

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.115 Political_Extreme/Hate/Discrimination

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.117 Violence/Extreme

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.118 Gambling/Lottery

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.119 Computer_Games

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.120 Toys

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.121 Cinema/Television/Social_Media

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.122 Recreational_Facilities/Theme_Parks

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.123 Arts/Museums/Theaters

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.124 Music/Radio_Broadcast

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.125 Literature/Books

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.126 Humor/Cartoons

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.127 News/Magazines

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.128 Webmail/Unified_Messaging

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.129 Chat

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.130 Blogs/Bulletin_Boards

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.131 Mobile_Telephony

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.132 Digital_Postcards

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.133 Search_Engines/Web_Catalogs/Portals

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.134 Software/Hardware

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.135 Communication_Services

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.136 IT_Security/IT_Information

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.137 Web_Site_Translation

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.138 Anonymous_Proxies

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.139 Illegal_Drugs

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.140 Alcohol/Tobacco

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.143 Dating/Networks

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.144 Restaurants/Entertainment_Venues

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,144

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.145 Travel

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,145

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.146 Fashion/Cosmetics/Jewelry

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,146

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.147 Sports

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,147

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.148 Architecture/Construction/Furniture

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,148

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.149 Environment/Climate/Pets

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,149

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.150 Personal_Web_Sites

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,150

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.151 Job_Search

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,151

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.152 Finance/Investment

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,152

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.150 Banking

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,154

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.155 Vehicles

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,155

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.156 Weapons/Military

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,156

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.157 Medicine/Health/Self-Help

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,157

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.158 Abortion

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,158

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.160 Spam_URLs

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,160

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.161 Malware

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,161

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.162 Phishing_URLs

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,162

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.163 Instant_Messaging

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,163

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.167 General_Business

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,167

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.174 Banner_Advertisements

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,174

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.180 Web_Storage

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

SNMP ID: 2.41.2.3.4,180

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Allowed

2.41.2.3.4.181 Command/Control server

For each main category and the associated sub-categories, it is possible to define whether the URLs are to be allowed, forbidden or allowed with override only.

Telnet path: /Setup/UTM/Content-Filter/Profiles/Category-Profiles

The category profile must subsequently be assigned to a content-filter profile (together with a timeframe) to become active.

Possible values:

Allowed, forbidden, override

Default:

Forbidden

2.42 ADSL

Asymmetrical Digital Subscriber Line - transmission process for high-speed data transmission over normal telephone lines. With ADSL, transmissions (downstream) of up to 6 Mbps can be implemented over normal telephone lines; for bidirectional transmission there is a second frequency band with transmission speeds of up to 640 kbps (upstream) - hence the name "asymmetric".

Telnet path: /Setup

2.42.1 Trace mode

The trace mode determines whether values issued by the ADSL trace also include internal status values (extended) or the line status (simple) only.

Telnet path: /Setup/ADSL/Trace-Mode

Possible values:

- Simple
- Extended

Default: Extended

 The default value is 'Simple' as of firmware version 8.20.

2.42.3 Line failures

This parameter specifies the maximum allowed number of line failures.

Line failures and monitoring time ([2.42.4 Monitoring-Time\(h\)](#)) are part of the ADSL-auto mode. Together they indicate how many line failures are allowed within a certain time to accept a line code as functional and stable.

In case of line failures, the first loss of sync is not counted if it occurs within the first minute. If the permitted number of line failures exceeds the monitoring period, the device selects another line code.

Telnet path: /Setup/ADSL/Line-failures

Possible values:

- Max. 2 numerical characters

Default: 1

 If you set the line code in the configuration, the device ignores this setting.

2.42.4 Monitoring time (h)

This parameter specifies the monitoring time in hours.

Line failures ([2.42.3 Line-Failures](#)) and monitoring time are a part of the ADSL-auto mode. Together they indicate how many line failures are allowed within a certain time to accept a line code as functional and stable.

In case of line failures, the first loss of sync is not counted if it occurs within the first minute. If the permitted number of line failures exceeds the monitoring period, the device selects another line code.

Telnet path: /Setup/ADSL/Monitoring-Time(h)

Possible values:

- Max. 5 numerical characters

Default: 24

 If you set the line code in the configuration, the device ignores this setting.

2.52 COM-Ports

This menu contains the configuration of the COM ports.

SNMP ID: 2.52

Telnet path: /Setup

2.52.1 Devices

The serial interfaces in the LANCOM can be used for various applications, for example for the COM port server or as a WAN interface. The Devices table allows individual serial devices to be assigned to certain applications.

Telnet path: /Setup/COM-Ports

2.52.1.1 Device type

Selects a serial interface from the list of those available in the device.

Telnet path: /Setup/COM-Ports/Devices

Possible values:

- All available serial interfaces.

Default: Outband

2.52.1.4 Service

Activation of the port in the COM port server.

Telnet path: /Setup/COM-Ports/Devices

Possible values:

- WAN
- COM-port server

Default: WAN

2.52.2 COM-port server

This menu contains the configuration of the COM-port server.

Telnet path: /Setup/COM-Ports

2.52.2.1 Operational

This table activates the COM port server at a port of a certain serial interface. Add an entry to this table to start a new instance of the COM port server. Delete an entry to stop the corresponding server instance.

Telnet path: /Setup/COM-Ports/COM-Port-Server

2.52.2.1.1 Device type

Selects a serial interface from the list of those available in the device.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Device-Type

Possible values:

- All available serial interfaces.

Default: Outband

2.52.2.1.2 Port number

Some serial devices such as the CardBus have more than one serial port. Enter the port number that is to be used for the COM port server on the serial interface.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Device-Type

Possible values:

- Max. 10 characters

Default: 0

Special values: 0 for serial interfaces with just one port, e.g. outband.

2.52.2.1.4 Operating

Activates the COM port server on the selected port of the selected interface.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Device-Type

Possible values:

- Yes
- No

Default: No

2.52.2.2 COM-port settings

This table contains the settings for data transmission over the serial interface.

Please note that all of these parameters can be overwritten by the remote site if the RFC2217 negotiation is active. Current settings can be viewed in the status menu.

Telnet path: /Setup/COM-Ports/COM-Port-Server

2.52.2.2.1 Device type

Selects a serial interface from the list of those available in the device.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- All available serial interfaces.

Default: Outband

2.52.2.2.2 Port number

Some serial devices such as the CardBus have more than one serial port. Enter the port number that is to be used for the COM port server on the serial interface.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- Max. 10 characters

Default: 0

Special values: 0 for serial interfaces with just one port, e.g. outband.

2.52.2.2.4 Bit rate

Bitrate used on the COM port

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- 110 to 230400

Default: 9600

2.52.2.2.5 Data bits

Number of data bits.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- 7
- 8

Default: 8

2.52.2.2.6 Parity

The checking technique used on the COM port.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- None
- Even
- Odd

Default: None

2.52.2.2.7 Stop bits

Number of stop bits.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- 1
- 2

Default: 1

2.52.2.2.8 Handshake

The data-flow control used on the COM port.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- none
- RTS/CTS

Default: RTS/CTS

2.52.2.2.9 Ready condition

The ready condition is an important property of any serial port. The COM port server transmits no data between the serial port and the network if the status is not "ready". Apart from that, in the client mode the act of switching between the ready and not-ready status is used to establish and terminate TCP connections. The readiness of the port can be checked in two different ways. In DTR mode (default) only the DTR handshake is monitored. The serial interface is considered to be ready for as long as the DTR line is active. In data mode, the serial interface is considered to be active for as long as it receives data. If no data is received during the timeout period, the port reverts to its not-ready status.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- DTR
- Data

Default: DTR

2.52.2.2.10 Ready data timeout

The timeout switches the port back to the not-ready status if no data is received. This function is deactivated when timeout is set to zero. In this case the port is always ready if the data mode is selected.

Telnet path: LCOS Menu Tree/Setup/COM-Ports/COM-Port-Server/COM-Port-Settings

Possible values:

- Max. 10 characters

Default: 0

Special values: 0 switches the Ready-data-timeout off.

2.52.2.3 Network settings

This table contains all settings that define the behavior of the COM port in the network.

Please note that all of these parameters can be overwritten by the remote site if the RFC2217 negotiation is active. Current settings can be viewed in the status menu.

Telnet path: /Setup/COM-Ports/COM-Port-Server

2.52.2.3.1 Device type

Selects a serial interface from the list of those available in the device.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- All available serial interfaces.

Default: Outband

2.52.2.3.2 Port number

Some serial devices such as the CardBus have more than one serial port. Enter the port number that is to be used for the COM port server on the serial interface.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Max. 10 characters

Default: 0

Special values: 0 for serial interfaces with just one port, e.g. outband.

2.52.2.3.4 TCP mode

Each instance of the COM port server in server mode monitors the specified listen port for incoming TCP connections. Just one active connection is permitted per instance. All other connection requests are refused. In client mode, the instance attempts to establish a TCP connection via a defined port to the specified remote site, as soon as the port is ready. The TCP connection is closed again as soon as the port becomes unavailable. In both cases a LANCOM closes any open connections when the device is restarted.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Server
- Client

Default: Server

2.52.2.3.5 Listen port

The TCP port where the COM port in TCP server mode expects incoming connections.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Max. 10 characters

Default: 0

2.52.2.3.6 Connect host name

The COM port in TCP client mode establishes a connection to this host as soon as the port is in "Ready" status.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- DNS-Name
- IP address

Default: Blank

2.52.2.3.7 Connect port

The COM port in TCP client mode uses this TCP port to establish a connection as soon as the port is in "Ready" state.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Max. 10 characters

Default: 0

2.52.2.3.8 Loopback address

The COM port can be reached at this address. This is its own IP address that is given as the source address when establishing connections. This is used to define the IP route to be used for the connection.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Max. 16 characters

Default: Blank

2.52.2.3.9 RFC2217 extensions

The RFC2217 extensions can be activated for both TCP modes. With these extensions activated, the LANCOM uses the IAC DO COM-PORT-OPTION sequence to signal that it will accept Telnet control sequences. The COM port subsequently works with the corresponding options; the configured default values are overwritten. The port also attempts to negotiate the local echo and line mode for Telnet. Using the RFC2217 extensions with incompatible remote sites is not critical. Unexpected characters may be displayed at the remote site. A side effect of using the RFC2217 extensions may be that the port regularly carries out an alive check as Telnet NOPs are transmitted to the remote site.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Yes
- No

Default: Yes

2.52.2.3.10 Newline conversion

Here you select the character to be output by the serial port when binary mode is activated.

This setting is independent of the application communicating via the serial port. If the port is connected to another LANCOM device, you can either enter CRLF here or just CR. This is because the outband interface of these devices expects a "carriage return" for the automatic determination of data-transfer speed. However, some Unix applications interpret CRLF as a prohibited double line feed character. In these cases enter either CR or LF.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- CRLF
- CR
- LF

Default:CRLF

 This setting is only relevant if binary mode is deactivated for this port.

2.52.2.3.12 TCP retransmit timeout

Maximum time for the retransmission timeout. This timeout defines the the interval between checking TCP-connection status and reporting the result to the application using the TCP connection.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- 0 to 99 seconds
- Maximum 2 characters

Special values:

- 0 activates the RFC 1122 default value (60 seconds).

Default:

- 0
-

 The maximum duration of the TCP-connection check is the product of TCP-retransmit-count and TCP-retry-count. The TCP application is only informed after the timeout for all attempts has expired. With the default values of 60 seconds timeout and max. 5 attempts, it can take up to 300 seconds before the application is informed about an inactive TCP connection.

2.52.2.3.13 TCP retry count

The maximum number of attempts for checking TCP-connection status and reporting the result to the application using the TCP connection.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- 0 to 9
- Maximum 1 characters

Special values:

- 0 activates the RFC 1122 default value (5 attempts).

Default:

- 0
-

 The maximum duration of the TCP-connection check is the product of TCP-retransmit-count and TCP-retry-count. The TCP application is only informed after the timeout for all attempts has expired. With the default values of 60 seconds timeout and max. 5 attempts, it can take up to 300 seconds before the application is informed about an inactive TCP connection.

2.52.2.3.14 TCP keepalive

The RFC 1122 sets down a method of checking the availability of TCP connections, called TCP keepalive. An inactive transmitter queries the receive status from the remote station. If the TCP session to the remote site is available, then the remote responds with its receive status. If the TCP session to the remote site is not available, then the query is repeated for as long as it takes for the remote to respond with its receive status (after which a longer interval comes into play). As long as the basic connection functions, but the TCP session to the remote station is not available, then the remote station sends an RST packet which triggers the establishment of the TCP session by the requesting application.

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Inactive: TCP keepalive is not used.
- Active: TCP keepalive is active; only RST packets cause the disconnection of TCP sessions.
- Proactive: TCP keepalive is active, but the request for the receive status from the remote site is only repeated for the number of times defined under "TCP retry count". If this number of requests expires without a response with the receive status, then the TCP sessions is classified as "not available" and the application is informed. If an RST packet is received during the wait time, the TCP session will be disconnected prematurely.

Default:

- Inactive

 The setting "active" is recommended for server applications.

2.52.2.3.15 TCP keepalive interval

This value defines the interval between sending requests for receive status if the first request is not affirmed. The associated timeout is defined as being interval/3 (max. 75 sec.).

Telnet path: /Setup/COM-Ports/COM-Port-Server/Network-Settings

Possible values:

- Maximum 10 characters.

Default:

- 0

Special values:

- 0 activates the RFC 1122 default values (interval 7200 seconds, timeout 75 seconds).

2.52.2.3.16 Binary-Mode

Using this setting you specify whether the device forwards serial data in binary format and therefore without CR/LF adjustment (CR/LF = carriage return/line feed). Since binary mode can cause problems with some serial remote stations, you should maintain the default **Auto**.

SNMP ID:

2.52.2.3.16

Telnet path:

Setup > COM-Ports > COM-Port-Server > Network-Settings

Possible values:

Auto: For data transmission, the COM-port server initially switches to ASCII mode; however, it uses telnet options to negotiate with the remote station whether it can switch to binary mode.

Yes: For data transmission, the COM port server switches to binary mode and does not use the telnet options to negotiate this with the remote station.

No: For data transmission, the COM port server switches to ASCII mode and does not use the telnet options to negotiate this with the remote station.

Default:

Auto

2.52.3 WAN

This menu contains the configuration of the Wide Area Network (WAN).

Telnet path: /Setup/COM-Ports

2.52.3.1 Devices

The table with WAN devices is a status table only. All Hotplug devices (connected via USB or CardBus) enter themselves into this table.

Telnet path: /Setup/COM-Ports/WAN

2.52.3.1.1 Device type

List of serial interfaces available in the device.

Telnet path: /Setup/COM-Ports/WAN/Devices

Possible values:

- All available serial interfaces.

2.52.3.1.3 Operating

Status of connected device.

Telnet path: /Setup/COM-Ports/WAN/Devices

Possible values:

- Yes
- No

2.53 Temperature monitor

The settings for the temperature monitor are located here.

Telnet path: /Setup/Temperature-Monitor

2.53.1 Upper-limit degrees

When the temperature set here is exceeded, the device sends an SNMP trap of the type "trpTempMonOverTemp".

Telnet path: /Setup/Temperature-Monitor/Upper-Limit-Degrees

Possible values:

- 0 – 127 ° Celsius

Default: 70

2.53.2 Lower-limit degrees

When the temperature drops below that set here, the device sends an SNMP trap of the type "trpTempMonUnderTemp".

Telnet path: /Setup/Temperature-Monitor/Upper-Limit-Degrees

Possible values:

- 0 – 127 ° Celsius

Default: 0

2.54 TACACS

2.54.2 Authorization

WEBconfig: /Setup/Tacacs+

WEBconfig English: LCOS Menu Tree/Setup/TACACS+

Activates authorization via TACACS+ server. If TACACS+ authorization is activated, all authorization data is transmitted via TACACS+ protocol to the configured TACACS+ server.

Possible values: Activated, deactivated

Default: Deactivated

 TACACS+ authorization will only activate if the defined TACACS+ server is available. If TACACS+ authorization is activated, the TACACS+ server will be queried for authorization each time a user enters a command. Data traffic during configuration will increase correspondingly. Also, the user rights must be defined in the TACACS+ server.

2.54.3 Accounting

WEBconfig: /Setup/Tacacs+

Activates accounting via TACACS+ server. If TACACS+ accounting is activated, all accounting data is transmitted via TACACS+ protocol to the configured TACACS+ server.

Possible values: Activated, deactivated

Default: Deactivated

 TACACS+ accounting will only activate if the defined TACACS+ server is available.

2.54.6 Shared secret

WEBconfig: /Setup/Tacacs+

The password for encrypting the communications between NAS and TACACS+ servers.

Possible values: 31 alphanumerical characters

Default: Blank

 The password must be entered identically into the LANCOM and the TACACS+ server. We recommend that you do not operate TACACS+ without encryption.

2.54.7 Encryption

WEBconfig: /Setup/Tacacs+

WEBconfig English: LCOS Menu Tree/Setup/TACACS+

Activates or deactivates the encryption of communications between NAS and TACACS+ servers.

Possible values:

- Activated
- Deactivated

Default: Activated



We recommend that you do not operate TACACS+ without encryption. If encryption is activated here, the password for encryption entered here must match with the password on the TACACS+ server.

2.54.9 Server

Two servers can be defined to work with TACACS+ functions. One server acts as a backup in case the other one fails. When logging in via telnet or WEBconfig, the user can select the server to be used.

This menu contains the settings for TACACS servers.

Telnet path: /Setup/Tacacs+

2.54.9.1 Server address

Address of the TACACS+ server to which requests for authentication, authorization and accounting are to be forwarded.

Telnet path: /Setup/Tacacs+/Server/Server-Address

Possible values:

- Valid DNS resolvable name or valid IP address.

Default: Blank

2.54.9.2 Loopback address

Optionally you can configure a loopback address here.

Telnet path: /Setup/Tacacs+/Server/Loopback-Address

Possible values:

- Name of the IP networks whose address should be used
- "INT" for the address of the first intranet
- "DMZ" for the address of the first DMZ
- LBO to LBF for the 16 loopback addresses
- Any valid IP address

Default: Blank

2.54.9.3 Compatibility mode

TACACS+ servers are available as open-source or commercial versions, each of which works with different messages. The compatibility mode enables the processing of messages from free TACACS+ servers.

Telnet path: /Setup/Tacacs+/Server/Compatibility-Mode

Possible values:

- Activated

- Deactivated

Default: Deactivated

2.54.10 Fallback to local users

WEBconfig: /Setup/Tacacs+

WEBconfig English: LCOS Menu Tree/Setup/TACACS+

Should the defined TACACS+ server be unavailable, it is possible to fallback to local user accounts on the LANCOM. This allows for access to the device even if the TACACS+ connection should fail, e.g. when deactivating the usage of TACACS+ or for correcting the configuration.

Possible values: Allowed, prohibited

Default: Allowed

 The fallback to local user accounts presents a security risk if no root password is set for the LANCOM. For this reason, TACACS+ authentication with fallback to local user accounts can only be activated if a root password has been set. If no root password is set, access to the device configuration can be blocked for security reasons if no connection is available to the TACACS+ server. In this case, the device may have to be reset to its factory settings in order to regain access to the configuration.

2.54.11 SNMP-GET requests authorization

WEBconfig: /Setup/Tacacs+

WEBconfig English: LCOS Menu Tree/Setup/TACACS+

This parameter allows the regulation of the behavior of LANCOM devices with regard to SNMP access in order to reduce the number of TACACS+ sessions required for authorization. Authentication via the TACACS+ server remains necessary if authentication for TACACS+ is activated generally.

Possible values:

- `only_for_SETUP_tree`: With this setting, authorization via TACACS+ server is only required for SNMP access via the setup branch of LCOS.
- `All`: With this setting, authorization by TACACS+ server will be carried out for every SNMP access. In case of regular request for status information, for example, the load on the TACACS+ server will increase significantly.
- `None`: With this setting, authorization by TACACS+ server will not be carried out for SNMP accesses.

Default: `only_for_SETUP_tree`

2.54.12 SNMP-GET requests accounting

WEBconfig: /Setup/Tacacs+

WEBconfig English: LCOS Menu Tree/Setup/TACACS+

Numerous network management tools use SNMP for requesting information from network devices. LANmonitor also uses SNMP to access the LANCOM devices to display information about current connections, etc., or to execute actions such as disconnecting a connection. SNMP can be used to configure devices. For this reason TACACS+ requires authentication for SNMP access requests. Since LANmonitor regularly queries these values, a large number of unnecessary TACACS+ connections would be established. If authentication, authorization and accounting by TACACS+ are activated, then each request would initiate three sessions with the TACACS+ server.

This parameter allows the regulation of the behavior of LANCOM devices with regard to SNMP access in order to reduce the number of TACACS+ sessions required for accounting. Authentication via the TACACS+ server remains necessary if authentication for TACACS+ is activated generally.

 Entering a read-only community under /Setup/SNMP also enables authentication by TACACS+ to be deactivated for LANmonitor. The read-only community defined here is then entered into LANmonitor as a user name.

Possible values:

- `only_for_SETUP_tree`: With this setting, accounting via TACACS+ server is only required for SNMP access via the setup branch of LCOS.
- `All`: With this setting, accounting by TACACS+ server will be carried out for every SNMP access. In case of regular request for status information, for example, the load on the TACACS+ server will increase significantly.
- `None`: With this setting, accounting by TACACS+ server will not be carried out for SNMP accesses.

Default: `only_for_SETUP_tree`

2.54.13 Bypass-Tacacs-for-CRON/Scripts/Action-table

You can activate or deactivate the bypassing of TACACS+ authorization and TACACS+ accounting for various actions.

Telnet path: /Setup/Tacacs+

Possible values:

- `Activated`
- `Deactivated`

Default: `Deactivated`

 Please observe that this option influences the TACACS+ function for the entire system. Be sure that you restrict the use of CRON, the action tables, and scripts only to an absolutely trustworthy circle of administrators!

2.54.14 Include value into authorization request

If you deactivate this function, then TACACS + only checks the rights of the user on login. When entering values, the device no longer checks whether the user has permission to change certain values.

Telnet path: /Setup/Tacacs+/Include-value-into-authorization

Possible values:

- `Activated`: When values are submitted, TACACS + checks whether the user has the right to make these changes
- `Deactivated`: TACACS + checks the identity of the user only on login

Default: `Activated`

2.56 Autoload

This menu is used to configure the automatic uploading of firmware or configurations from external data media.

Telnet path: /Setup/Autoload

2.56.1 Firmware and loader

This option activates the automatic loading of loader and/or firmware files from a connected USB medium.

Telnet path: /Setup/Autoload/Firmware-and-loader

Possible values:

- `Inactive`: Automatic loading of loader and/or firmware files is deactivated.

- Active: Automatic loading of loader and/or firmware files is activated. When a USB medium is mounted, a suitable loader and/or firmware file is uploaded to the device. The USB medium is mounted when it is plugged into the USB connector on the device, or when it is restarted.
- If-unconfigured Automatic loading of loader and/or firmware files is only activated when the device has its factory settings. A configuration reset can be used to return the device to its factory settings at any time.

Default:

- If-unconfigured

 This option is set to "inactive" in the Security Settings Wizard or the Basic Settings Wizard.

2.56.2 Configuration and script

This option activates the automatic loading of configuration and/or script files from a connected USB medium.

Telnet path: /Setup/Autoload/Config-and-script

Possible values:

- Inactive: Automatic loading of configuration and/or script files is deactivated.
- Active: Automatic loading of configuration and/or script files is activated. When a USB medium is mounted, a suitable configuration and/or script file is uploaded to the device. The USB medium is mounted when it is plugged into the USB connector on the device, or when it is restarted.
- If-unconfigured Automatic loading of configuration and/or script files is only activated when the device has its factory settings. A configuration reset can be used to return the device to its factory settings at any time.

Default:

- If-unconfigured

 This option is set to "inactive" in the Security Settings Wizard or the Basic Settings Wizard.

 A device can be fed with an undesirable configuration by resetting it to its factory settings and inserting a prepared USB data media. To prevent this you have to deactivate the reset switch.

2.59 WLAN management

This menu is used to configure the WLAN management.

2.59.1 Static WLC configuration

Use this table to define the preferred wireless LAN controllers (WLCs) that this managed access point should contact. This setting is not required if the access point and WLC are located in the same IP network.

This setting is only relevant if at least one of the device's WLAN interfaces is switched to the 'Managed' operating mode.

Telnet path: /Setup/WLAN-Management/Static-WLC-Configuration

2.59.1.1 IP address

This is where the name of the CAPWAP service is defined that is used to trigger the WLAN controller via the DNS server.

The name is preset, so you do not need to change anything here. However, this parameter does offer the option of using the CAPWAP service of other manufacturers.

Telnet path: /Setup/WLAN-Management/Static-WLC-Configuration/IP-Address

Possible values:

- Valid IP address or resolvable name of a WLC controller

Default: WLC address**2.59.1.2 Port**

The port to be used for communication with the WLAN controller is set here.

Telnet path: /Setup/WLAN-Management/Static-WLC-Configuration/Port**Possible values:**

- Valid port descriptor

Default: 1027**2.59.1.3 Loopback address**

This is where you can configure an optional sender address to be used instead of the one otherwise automatically selected for the destination address.

If you have configured loopback addresses, you can specify them here as sender address.

Telnet path: /Setup/WLAN-Management/Static-WLC-Configuration/Loopback-Addr.**Possible values:**

- Name of the IP networks whose addresses are to be used.
- "INT" for the address of the first intranet.
- "DMZ" for the address of the first DMZ (Note: If there is an interface named "DMZ", its address will be taken).
- LBO ... LBF for the 16 loopback addresses.
- Furthermore, any IP address can be entered in the form x.x.x.x.

Default: Blank

 The sender address specified here is used **unmasked** for every remote station.

2.59.120 Log entries

This parameter defines the maximum number of log entries for the device.

Telnet path: /Setup/WLAN-Management/Log-Entries**Possible values:**

- 0 to 9999

Default: 200**2.60 Autoload**

This menu is used to set up the automatic uploading of firmware, configurations or scripts from external data media or from a URL.

SNMP ID: 2.60**Telnet path:** /Setup/Autoload

2.60.1 Network

This menu is used to configure the automatic uploading of firmware, configurations or scripts over the network.

The settings made in this area are used when the commands LoadFirmware, LoadConfig or LoadScript are invoked from the command line. These commands upload firmware, configurations or scripts to the device using the TFTP or HTTP(S) client.

Telnet path: /Setup/Autoload/Network

 Loading firmware, configurations or scripts using the TFTP or HTTP(S) client can only succeed if the URL required to load the relevant file is fully configured and the URL is accessible when the command is executed. Alternatively, the URL can be entered as a parameter when the command is executed.

 The values for Condition, URL and Minimum-Version set under /Setup/Autoload/Network constitute default values. These values are only used in cases where no other appropriate parameters are entered when the commands LoadFirmware, LoadConfig or Load Script are invoked on the command line.

2.60.1.1 Firmware

This menu is used to configure the automatic uploading of firmware over the network.

Telnet path: /Setup/Autoload/Network/Firmware

2.60.1.1.1 Condition

This is where you select the condition under which the firmware specified under /Setup/Autoload/Network/Firmware/URL will be uploaded when the command LoadFirmware is executed.

Telnet path: /Setup/Autoload/Network/Firmware

Possible values:

- Unconditionally: The firmware will always be uploaded to and executed from the memory location of the inactive firmware. This setting deactivates version checking and the firmware specified will be uploaded in every case.
- If different: The firmware is uploaded to and executed from the memory location for the inactive firmware if it is of a different version to the firmware active in the device and the inactive firmware. If the specified firmware is of the same version as one of the two existing firmware versions, then the firmware will not be uploaded. The LoadFirmware command compares the firmware version (e.g. "8.10"), the release code (e.g. "RU1") and the file date.
- If newer: The firmware is uploaded and executed only if it is newer than the firmware currently active in the device. The firmware is only uploaded to the memory location for the inactive firmware if it is newer than the active and inactive firmware versions on the device. If the specified firmware is older than one of the two existing firmware versions, then it will not be uploaded.

Default: Unconditionally

 If the command LoadFirmware is executed twice in succession with the setting "unconditionally", both memory locations will contain the same firmware version.

2.60.1.1.2 Minimum version

Specify the minimum version of the firmware to be loaded over the network.

Telnet path: /Setup/Autoload/Network/Minimum-Version

Possible values:

- Max. 14 characters

Default: Blank

 Firmware versions with a lower version number will be ignored.

2.60.1.1.3 URL

Specify the URL of the firmware that is to be uploaded over the network using the LoadFirmware command.

Telnet path: /Setup/Autoload/Firmware/URL

Possible values:

- Max. 127 characters beginning with "tftp://", "http://" or "https://"

Default: Blank

 The TFTP or HTTP(S) client loads the file entered here only if the LoadFirmware command is entered without a URL as a parameter. A specific file at a known location can be loaded by entering its URL as a parameter.

2.60.1.2 Configuration

This menu is used to configure the automatic uploading of a configuration over the network.

Telnet path: /Setup/Autoload/Network/Configuration

2.60.1.2.1 Condition

This is where you select the condition under which the configuration specified under /Setup/Autoload/Network/Configuration/URL will be uploaded when the device is started.

Telnet path: /Setup/Autoload/Network/Configuration

Possible values:

- Unconditionally: The configuration will always be uploaded.
- If different: The configuration will only be uploaded if it has a different version number than the configuration that is currently active in the device.

Default: Unconditionally

2.60.1.2.2 URL

Specify the URL of the configuration that is to be uploaded over the network using the LoadConfig command.

Telnet path: /Setup/Autoload/Configuration/URL

Possible values:

- Max. 127 characters beginning with "tftp://", "http://" or "https://"

Default: Blank

 The TFTP or HTTP(S) client loads the file entered here only if the LoadConfig command is entered without a URL as a parameter. A specific file at a known location can be loaded by entering its URL as a parameter.

2.60.1.3 Script

This menu is used to configure the automatic uploading of a script over the network.

Telnet path: /Setup/Autoload/Network/Script

2.60.1.3.1 Condition

This is where you select the condition under which the script specified under /Setup/Autoload/Network/Configuration/URL will be uploaded when the command LoadScript is executed.

Telnet path: /Setup/Autoload/Network/Script

Possible values:

- **Unconditionally:** The script will always be executed. This setting deactivates the checksum comparison and the specified script will always be uploaded unconditionally. In this case, the LoadScript command does not change the checksum for the most recently executed scripts as stored in the device.
- **If different:** The script will only be executed if it differs from the last executed script. The difference to the last executed script is determined using a checksum. For this the complete script is always uploaded. The LoadScript command then compares the checksum of the uploaded script with the checksum of the last executed script stored in the device. When the script is executed, the LoadScript command updates the checksum stored in the device.

Default: Unconditionally

2.60.1.3.2 URL

Specify the URL of the script that is to be uploaded over the network using the LoadScript command.

Telnet path: /Setup/Autoload/Script/URL

Possible values:

- Max. 127 characters beginning with "ftp://", "http://" or "https://"

Default: Blank

 The TFTP or HTTP(S) client loads the file entered here only if the LoadScript command is entered without a URL as a parameter. A specific file at a known location can be loaded by entering its URL as a parameter.

2.60.1.4 TFTP client

This menu contains the configuration for the TFTP client.

Telnet path: /Setup/Autoload/Network/TFTP-Client

2.60.1.4.1 Bytes per hashmark

This setting determines the number of bytes successfully loaded by the TFTP client after which a hash sign (#) is output on the command line when running LoadFirmware, LoadConfig or LoadScript. The TFTP client uses these hash marks to produce a progress bar when uploading firmware, configurations or scripts.

Telnet path: /Setup/Autoload/Network/TFTP-Client

Possible values:

- 4 characters

Default: 8192

 This value is used only when loading with TFTP, not HTTP or HTTPS. With HTTP or HTTPS a hash mark is displayed at least every 100ms to display progress.

2.60.3 License

Information on the license is collected here.

SNMP ID: 2.60.3

Telnet path: /Setup/Autoload/License

2.60.3.1 URL

SNMP ID:

2.60.3.1

Telnet path:**Setup > Autoload > License****Possible values:**

Any valid URL with max. 127 characters.

Default:

http://www2.lancom.de/newoptionreg.nsf/RegOpt

2.60.3.2 Loopback address

Optionally enter a different address here (name or IP) to send the reply message to the license server.

By default, the server sends its replies back to the IP address of your device without having to enter it here. By entering an optional loopback address you change the source address and route used by the device to connect to the server. This can be useful, for example, when the server is available over different paths and it should use a specific path for its reply message.

SNMP ID:

2.60.3.2

Telnet path:**Setup > Autoload > Network > Config****Possible values:**

- Name of the IP network (ARF network), whose address should be used.
- INT for the address of the first Intranet
- DMZ for the address of the first DMZ



If an interface with the name "DMZ" already exists, the device will select that address instead.

- LB0...LBF for one of the 16 loopback addresses or its name
- Any IPv4 address



If the sender address set here is a loopback address, these will be used **unmasked** on the remote client!

Default:

2.60.3.10 Company

Enter the license owner's company here.

SNMP ID: 2.60.3.10**Telnet path:** /Setup/Autoload/License

2.60.3.11 Last name

Enter the license owner's last name here.

SNMP ID: 2.60.3.11**Telnet path:** /Setup/Autoload/License

2.60.3.12 First name

Enter the license owner's first name here.

SNMP ID: 2.60.3.12

Telnet path: /Setup/Autoload/License

2.60.3.13 Street and number

Enter the license owner's street and door number here.

SNMP ID: 2.60.3.13

Telnet path: /Setup/Autoload/License

2.60.3.14 Post code

Enter the license owner's post code here.

SNMP ID: 2.60.3.14

Telnet path: /Setup/Autoload/License

2.60.3.15 City

Enter the license owner's city here.

SNMP ID: 2.60.3.15

Telnet path: /Setup/Autoload/License

2.60.3.16 Country

Enter the license owner's country here.

SNMP ID: 2.60.3.16

Telnet path: /Setup/Autoload/License

2.60.3.17 E-mail address

Enter the license owner's e-mail address here.

SNMP ID: 2.60.3.17

Telnet path: /Setup/Autoload/License

2.60.56 USB

This menu is used to configure the automatic uploading of firmware or configurations from external data media.

Telnet path: /Setup/Autoload/USB

2.60.56.1 Firmware and loader

This option activates the automatic loading of loader and/or firmware files from a connected USB medium. Save the required loader and/or firmware files in the "Firmware" directory located in the root directory of the connected USB media.

Telnet path: /Setup/Autoload/USB

Possible values:

- Inactive: Automatic loading of loader and/or firmware files is deactivated.

- Active: Automatic loading of loader and/or firmware files is activated. When a USB medium is mounted, a suitable loader and/or firmware file is uploaded to the device. The USB medium is mounted when it is plugged into the USB connector on the device, or when it is restarted.
- If-unconfigured Automatic loading of loader and/or firmware files is only activated when the device has its factory settings. A configuration reset can be used to return the device to its factory settings at any time.

Default:

- If-unconfigured

 This option is set to "inactive" in the Security Settings Wizard or the Basic Settings Wizard.

2.60.56.2 Configuration and script

This option activates the automatic loading of configuration and/or script files from a connected USB medium. Save the required configuration and/or script files in the "Config" directory located in the root directory of the connected USB media.

Telnet path: /Setup/Autoload/USB

Possible values:

- Inactive: Automatic loading of configuration and/or script files is deactivated.
- Active: Automatic loading of configuration and/or script files is activated. When a USB medium is mounted, a suitable configuration and/or script file is uploaded to the device. The USB medium is mounted when it is plugged into the USB connector on the device, or when it is restarted.
- If-unconfigured Automatic loading of configuration and/or script files is only activated when the device has its factory settings. A configuration reset can be used to return the device to its factory settings at any time.

Default:

- If-unconfigured

 This option is set to "inactive" in the Security Settings Wizard or the Basic Settings Wizard.

 A device can be fed with an undesirable configuration by resetting it to its factory settings and inserting a prepared USB data media. To prevent this you have to deactivate the reset switch.

2.63 Packet capture

This menu contains the settings for recording network data traffic via LCOScap and RPCAP.

SNMP ID:

2.63

Telnet path:

Setup > Packet-Capture

2.63.1 LCOSCap operating

This setting activates the LCOSCAP function.

SNMP ID:

263.1

Telnet path:**Setup > Packet-Capture > LCOSCap-Operating****Possible values:**

Yes

No

Default:

Yes

2.63.2 LCOSCap port

This setting specifies the port used by LCOSCAP.

SNMP ID:

263.2

Telnet path:**Setup > Packet-Capture > LCOSCap-Port****Possible values:**

5 characters from '0123456789'

Default:

41.047

2.63.11 RPCap-Operating

This setting activates RPCAP. RPCAP is a protocol that is supported by (the Windows version of) Wireshark with which Wireshark can directly address the device. This makes the detour via a capture file unnecessary. In Wireshark you address the RPCAP interface using the sub-menu "Remote interfaces".

SNMP ID:

2.63.11

Telnet path:**Setup > Packet-Capture****Possible values:**

Yes

No

Default:

No

2.63.12 RPCap-Port

This setting specifies the port used by RPCAP.

2 Setup

SNMP ID:

2.63.12

Telnet path:**Setup > Packet-Capture****Possible values:**

0 to 65535

Default:

2002

2.64 PMS interface

You make all settings for the PMS interface (PMS = property management system) using the tables and parameters in this menu.

SNMP ID:

2.64

Telnet path:**Setup**

2.64.1 Operating

Enable or disable the PMS interface for the device.

SNMP ID:

2.64.1

Telnet path:**Setup > PMS-Interface****Possible values:**

No

Yes

Default:

No

2.64.2 PMS type

Identifies the protocol used by your property management system. Currently, only support for hotel property management systems from Micros Fidelio is available.

SNMP ID:

2.64.2

Telnet path:**Setup > PMS-Interface**

Possible values:

TCP/IP

Default:

TCP/IP

2.64.3 PMS server IP address

Enter the IPv4 address of your PMS server.

SNMP ID:

2.64.3

Telnet path:**Setup > PMS-Interface****Possible values:**

IPv4 address

Default:

No

2.64.4 Loopback address

Optionally enter a different address here (name or IP) to send the reply message to the PMS server. By default, the PMS server sends its replies back to the IP address of your device without having to enter it here.

SNMP ID:

2.64.4

Telnet path:**Setup > PMS-Interface****Possible values:**

- Name of the IP network (ARF network), whose address should be used.
- INT for the address of the first Intranet
- DMZ for the address of the first DMZ



If an interface with the name "DMZ" already exists, the device will select that address instead.

- LB0...LBF for one of the 16 loopback addresses or its name
- Any IPv4 address



If the sender address set here is a loopback address, these will be used **unmasked** on the remote client!

Default:

2.64.5 PMS port

Enter the TCP port where your PMS server is accessible.

SNMP ID:

2.64.5

Telnet path:**Setup > PMS-Interface****Possible values:**

0 to 65535

Default:

0

2.64.6 Separator

Using this entry you configure the separator that your PMS uses to transfer data records to an API. The Micros Fidelio specification, e.g., uses the pipe symbol by default (|, hex 7C).



You should not change this value if at all possible. An incorrect separator can lead to your PMS being unable to read the transmitted data records, and the PMS interface not working!

SNMP ID:

2.64.6

Telnet path:**Setup > PMS-Interface****Possible values:**

String, max. 1 characters

Default:

|

2.64.7 Character set

Choose the character used by the PMS to transmit your guests' surnames to the device.

SNMP ID:

2.64.7

Telnet path:**Setup > PMS-Interface****Possible values:**

CP850

W1252

Default:

CP850

2.64.8 Currency

If you offer fee-based Internet access, select the currency that you use to bill the time quotas that you offer (time quotas are set up using the tariff table). This unit is also displayed on the portal page. Please note that this currency must match the one on the PMS server.

SNMP ID:

2.64.8

Telnet path:**Setup > PMS-Interface****Possible values:**

CENT

PENNY

Default:

CENT

2.64.9 Rate

If you offer fee-based Internet access, you manage the tariff rates for accounting using this table.

SNMP ID:

2.64.9

Telnet path:**Setup > PMS-Interface**

2.64.9.1 Rate

Enter the rate for the time quota, for example, 1. Combined with the unit, the value is, for example, 1 hour.

SNMP ID:

2.64.9.1

Telnet path:**Setup > PMS-Interface > Rate****Possible values:**

0 to 9999999999999999999

Default:

2.64.9.2 Unit

Select the unit for the time quota from the list.

SNMP ID:

2.64.9.2

Telnet path:**Setup > PMS-Interface > Rate****Possible values:**

Hour(s)

Day(s)

Minute(s)

 Please note that frequent writing operations to this memory will reduce the lifetime of your device.

SNMP ID:

2.64.10.2

Telnet path:**Setup > PMS-Interface > Accounting****Possible values:**

0 to 4294967295 seconds

Default:

15

2.64.10.3 Clean-up accounting table period

Using this entry you configure the interval that the device uses to clean up expired sessions from the internal accounting table in the status menu. If the value is 0, automatic clean-up is disabled.

SNMP ID:

2.64.10.3

Telnet path:**Setup > PMS-Interface > Accounting****Possible values:**

0 to 4294967295 seconds

Default:

60

2.64.10.4 Update accounting table period

Using this entry you configure the interval that the device uses to update the internal accounting table in the status menu. If the value is 0, the update is disabled and the status table does not display any values.

SNMP ID:

2.64.10.4

Telnet path:**Setup > PMS-Interface > Accounting****Possible values:**

0 to 4294967295 seconds

Default:

15

2.64.11 Login form

In this menu you make specific settings for the PMS for the login/portal pages which are displayed to your guests in case of unauthorized access attempts on the hotspot.

SNMP ID:

2.64.11

Telnet path:**Setup > PMS-Interface****2.64.11.1 PublicSpot login form**

Enable or disable whether the portal page displays the Public Spot's own login screen. If you disable this setting, Public Spot users that use a combination of username and password as credentials (e.g., predefined or users with vouchers) can no longer login to the device.

SNMP ID:

2.64.11.1

Telnet path:**Setup > PMS-Interface > Login-Form****Possible values:**

No

Yes

Default:

No

2.64.11.2 PMS login form

Choose the login page to be displayed by the portal page for your PMS interface.

SNMP ID:

2.64.11.2

Telnet path:**Setup > PMS-Interface > Login-Form****Possible values:**

- **Free-of-charge:** Choose this option if you offer your hotel guests free Internet access. Your hotel guests will still be required to authenticate on the hotspot on the portal page with their username, room number and, if required, an additional ID in order to prevent access to the Internet by unauthorized users.
- **Subject to charge:** Choose this option if you offer your hotel guests fee-based Internet access. Your hotel guests will be required to authenticate on the hotspot on the portal page with their username, room number and select a tariff.
- **free-VIP:** Select this setting, if you want to offer your otherwise fee-based Internet access free of charge to VIPs. Although your VIPs see the login screen for fee-based access, they will not be billed any fees.

Default:

Free-of-charge

2.64.11.3 Fidelio free additional check

Select the additional ID that a hotel guest uses – in addition to their username and room number – to authenticate on the Public Spot if you offer free Internet access. If you select `No-Check`, the device does not check for an additional ID.

SNMP ID:

2.64.11.3

Telnet path:

Setup > PMS-Interface > Login-Form

Possible values:

none
Reservation number
Arrival date
Departure date
First name
Profile number

Default:

none

2.64.11.4 Fedelio charge additional check

Select the additional ID used by a hotel guest – in addition to their username and room number – to authenticate on the Public Spot if you offer fee-based Internet access. If you select `No-Check`, the device does not check for an additional ID.

SNMP ID:

2.64.11.4

Telnet path:

Setup > PMS-Interface > Login-Form

Possible values:

none
Reservation number
Arrival date
Departure date
First name
Profile number

Default:

Reservation number

2.64.11.5 Fedelio free VIP additional check

Select the additional ID used by a VIP – in addition to their username and room number – to authenticate on the Public Spot if you offer your VIPs free Internet access. If you select `No-Check`, the device does not check for an additional ID.

SNMP ID:

2.64.11.5

Telnet path:**Setup > PMS-Interface > Login-Form****Possible values:**

none

Reservation number

Arrival date

Departure date

First name

Profile number

Default:

none

2.64.11.6 Free VIP status

In this table, you locally manage the VIP categories from your PMS.

SNMP ID:

2.64.11.6

Telnet path:**Setup > PMS-Interface > Login-Form**

2.64.11.6.1 Status

Enter the VIP category from your PMS for the members that you want to provide with free Internet access.

For example, if you set up three VIP statuses (VIP1, VIP2, VIP3) for your PMS server, but you only want to offer hotel guests in category VIP2 free Internet access, enter the corresponding ID here.

SNMP ID:

2.64.11.6.1

Telnet path:**Setup > PMS-Interface > Login-Form > Free-Of-Charge-VIP-Status****Possible values:**

String, max. 20 characters

Default:

2.64.12 Guest name case sensitive

Enable or disable whether the device checks the last name for capitalization (case sensitively) against the name of the guest in the PMS database during login. If this setting is enabled, the guest's Public Spot access is rejected if the spelling and capitalization of his name does not match that transferred by the hotel.

SNMP ID:

2.64.12

Telnet path:**Setup > PMS-Interface****Possible values:**

No

Yes

Default:

Yes

2.64.13 Multi-login

Enable or disable this if you want to allow a hotel guest to use the same credentials to login to the hotspot with multiple devices.

SNMP ID:

2.64.13

Telnet path:**Setup > PMS-Interface****Possible values:**

No

Yes

Default:

No

2.70 IPv6

This menu contains the settings for IPv6.

SNMP ID:

2.70

Telnet path:**Setup > IPv6**

2.70.1 Tunnel

Use this setting to manage the tunneling protocols to provide access to the IPv6 Internet via an IPv4 Internet connection.

SNMP ID:

2.70.1

Telnet path:**Setup > IPv6 > Tunnel****2.70.1.1 6in4**

The table contains the settings for the 6in4 tunnel.

SNMP ID:

2.70.1.1

Telnet path:**Setup > IPv6 > Tunnel > 6in4****2.70.1.1.1 Peer name**

Contains the name of the 6in4 tunnel.

SNMP ID:

2.70.1.1.1

Telnet path:**Setup > IPv6 > Tunnel > 6in4 > Peer-Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.1.1.2 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules.

SNMP ID:

2.70.1.1.2

Telnet path:**Setup > IPv6 > Tunnel > 6in4 > Rtg-Tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.1.1.3 Gateway address

Contains the IPv4 address of the remote 6in4 gateway.

 The 6in4 tunnel is only set up if the gateway can be reached by ping at this address.

SNMP ID:

2.70.1.1.3

Telnet path:**Setup > IPv6 > Tunnel > 6in4 > Gateway-Address****Possible values:**

IP address in IPv4 notation, max. 64 characters

Default:

Blank

2.70.1.1.4 IPv4 routing tag

Here you define the routing tag that the device uses to determine the route to the associated remote gateway. The IPv4 routing tag specifies which tagged IPv4 route is to be used for the data packets to reach their destination address. The following destination addresses can be entered:

- 6to4 anycast address
- 6in4 gateway address
- 6rd border relay address

SNMP ID:

2.70.1.1.4

Telnet path:**Setup > IPv6 > Tunnel > 6in4 > IPv4-Rtg-tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.1.1.5 Gateway IPv6 address

Contains the IPv6 address of the remote tunnel endpoint on the intermediate network, for example, "2001:db8::1".

SNMP ID:

2.70.1.1.5

Telnet path:**Setup > IPv6 > Tunnel > 6in4 > Gateway-IPv6-Address****Possible values:**

IPv6 address with max. 43 characters

Default:

Blank

2.70.1.1.6 Local-IPv6-Address

Contains the local IPv6 address of the device on the intermediate network, for example "2001:db8::2/64".

SNMP ID:

2.70.1.1.6

Telnet path:

Setup > IPv6 > Tunnel > 6in4 > Local-IPv6-Address

Possible values:

Max. 43 characters

Default:

Blank

2.70.1.1.7 Routed IPv6 prefix

Contains the prefix that is routed from the remote gateway to the local device and that is to be used in LAN, e. g. "2001:db8:1:1::/64" or "2001:db8:1::/48".

SNMP ID:

2.70.1.1.7

Telnet path:

Setup > IPv6 > Tunnel > 6in4 > Routed-IPv6-Prefix

Possible values:

Max. 43 characters

Default:

Blank

2.70.1.1.8 Firewall

If the global firewall is enabled for IPv6 interfaces, you can disable the firewall for an individual tunnel interface here. To enable the firewall globally for all interfaces, select **IPv6 firewall/QoS enabled** in the menu **Firewall/QoS > General**.



Disabling the firewall globally means that the firewall is disabled for all interfaces, even if you enable this option.

SNMP ID:

2.70.1.1.8

Telnet path:

Setup > IPv6 > Tunnel > 6in4 > Firewall

Possible values:

Yes

No

Default:

Yes

2.70.1.2 6rd border relay

A LANCOM router can operate as a 6rd client or as a 6rd border relay. A 6rd client or 6rd CE router (customer edge router) connects to an Internet service provider via a WAN connection and propagates the 6rd prefix to clients on the LAN. A 6rd border relay operates in the provider's network and connects 6rd clients to the IPv6 network. Thus a 6rd border relay is used when an IPv6 connection is to be provided to 6rd routers.

SNMP ID:

2.70.1.2

Telnet path:**Setup > IPv6 > Tunnel > 6rd-Border-Relay**

2.70.1.2.1 Peer name

Contains the name of the 6rd border relay tunnel.

SNMP ID:

2.70.1.2.1

Telnet path:**Setup > IPv6 > Tunnel > 6rd-Border-Relay > Peer-Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.1.2.2 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules.

SNMP ID:

2.70.1.2.2

Telnet path:**Setup > IPv6 > Tunnel > 6rd-Border-Relay > Rtg-Tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.1.2.3 IPv4 loopback address

Set the IPv4 loopback address, i.e. the address where the device operates as a 6rd border relay.

SNMP ID:

2.70.1.2.3

Telnet path:

Setup > IPv6 > Tunnel > 6rd-Border-Relay > IPv4-Loopback-Address

Possible values:

Max. 16 characters

Default:

Blank

2.70.1.2.4 6rd prefix

Defines the prefix used by this border relay for the 6rd domain, e. g. 2001:db8:/32. This prefix must also be configured on all associated 6rd clients.

SNMP ID:

2.70.1.2.4

Telnet path:

Setup > IPv6 > Tunnel > 6rd-Border-Relay > 6rd-Prefix

Possible values:

Max. 24 characters as a prefix of an IPv6 address with up to four blocks of four hexadecimal digits each

Default:

Blank

2.70.1.2.5 IPv4 mask length

Defines the number of significant bits of IPv4 addresses that are identical within a 6rd domain. With mask length "0" there are no identical bits. In this case, the entire IPv4 address is used to generate the delegated 6rd prefix.

The provider sets the mask length.

Example: The IPv4 address of the device is "192.168.1.99" (in hexadecimal: "c0a8:163"). In this case, the following are examples of possible combinations:

6rd domain	Mask length	6rd prefix
2001:db8::/32	0	2001:db8:c0a8:163::/64
2001:db8:2::/48	16	2001:db8:2:163::/64
2001:db8:2:3300::/56	24	2001:db8:2:3363::/64

SNMP ID:

2.70)

Telnet path:

Setup > IPv6 > Tunnel > 6rd-Border-Relay > IPv4-Mask-Length

Possible values:

Max. 2 numbers in the range 0 – 32

Default:

0: The device uses the full IPv4 address.

2.70.1.2.6 DHCPv4 propagate

If you enable this function, the 6rd border relay distributes the prefix via DHCPv4 if the DHCPv4 client requests it.

 If you do not enable this feature, you must manually configure the required 6rd settings for the 6rd clients.

SNMP ID:

2.70.1.2.6

Telnet path:

Setup > IPv6 > Tunnel > 6rd-Border-Relay > DHCPv4-Propagate

Possible values:

Yes

No

Default:

No

2.70.1.2.7 Firewall

If the global firewall is enabled for IPv6 interfaces, you can disable the firewall for an individual tunnel interface here. To enable the firewall globally for all interfaces, select **IPv6 firewall/QoS enabled** in the menu **Firewall/QoS > General**.

 Disabling the firewall globally means that the firewall is disabled for all interfaces, even if you enable this option.

SNMP ID:

2.70.1.2.7

Telnet path:

Setup > IPv6 > Tunnel > 6rd-Border-Relay > Firewall

Possible values:

Yes

No

Default:

Yes

2.70.1.3 6rd

The table contains the settings for the 6rd tunnel.

SNMP ID:

2.70.1.3

Telnet path:

Setup > IPv6 > Tunnel > 6rd

2.70.1.3.1 Peer name

Contains the name of the 6rd tunnel.

SNMP ID:

2.70.1.3.1

Telnet path:**Setup > IPv6 > Tunnel > 6rd > Peer-Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.1.3.2 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules.

SNMP ID:

2.70.1.3.2

Telnet path:**Setup > IPv6 > Tunnel > 6rd > Rtg-Tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.1.3.3 Border relay address

Contains the IPv4 address of the 6rd border relay.

SNMP ID:

2.70.1.3.3

Telnet path:**Setup > IPv6 > Tunnel > 6rd4 > Border-Relay-Address****Possible values:**

IPv4 address with max. 64 characters

Default:

Blank

2.70.1.3.4 IPv4 routing tag

Here you define the routing tag that the device uses to determine the route to the associated remote gateway. The IPv4 routing tag specifies which tagged IPv4 route is to be used for the data packets to reach their destination address. The following destination addresses can be entered:

- 6to4 anycast address
- 6in4 gateway address

- 6rd border relay address

SNMP ID:

2.70.1.3.4

Telnet path:**Setup > IPv6 > Tunnel > 6rd > IPv4-Rtg-tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.1.3.5 6rd prefix

Contains the prefix used by the provider for 6rd services, e. g. 2001:db8::/32.

 If the 6rd prefix is assigned through DHCPv4, you have to enter "::/32" here.

SNMP ID:

2.70.1.3.5

Telnet path:**Setup > IPv6 > Tunnel > 6rd > 6rd-Prefix****Possible values:**

Max. 24 characters

Default:

Blank

2.70.1.3.6 IPv4 mask length

Defines the number of significant bits of IPv4 addresses that are identical within a 6rd domain. With mask length "0" there are no identical bits. In this case, the entire IPv4 address is used to generate the delegated 6rd prefix.

The provider sets the mask length.

Example: The IPv4 address of the device is "192.168.1.99" (in hexadecimal: "c0a8:163"). In this case, the following are examples of possible combinations:

6rd domain	Mask length	6rd prefix
2001:db8::/32	0	2001:db8:c0a8:163::/64
2001:db8:2::/48	16	2001:db8:2:163::/64
2001:db8:2:3300::/56	24	2001:db8:2:3363::/64

SNMP ID:

2.70.1.3.6

Telnet path:**Setup > IPv6 > Tunnel > 6rd > IPv4-Mask-Length**

Possible values:

Max. 2 numbers in the range 0 – 32

Default:

0

2.70.1.3.7 Firewall

If the global firewall is enabled for IPv6 interfaces, you can disable the firewall for an individual tunnel interface here. To enable the firewall globally for all interfaces, select **IPv6 firewall/QoS enabled** in the menu **Firewall/QoS > General**.

 Disabling the firewall globally means that the firewall is disabled for all interfaces, even if you enable this option.

SNMP ID:

2.70.1.3.7

Telnet path:

Setup > IPv6 > Tunnel > 6rd4 > Firewall

Possible values:

Yes

No

Default:

Yes

2.70.1.4 6to4

The table contains the settings for the 6to4 tunnel.

 Connections through a 6to4 tunnel work with relays that are selected by the IPv4 Internet provider's backbone. The device administrator has no influence on relay selection. Furthermore, the selected relay can change without the administrator knowing about it. For this reason, connections via a 6to4 tunnels are suitable **for test purposes only**. In particular, avoid using 6to4-tunnel data connections for productive systems or for the transmission of confidential data.

SNMP ID:

2.70.1.4

Telnet path:

Setup > IPv6 > Tunnel > 6to4

2.70.1.4.1 Peer name

Contains the name of the 6to4 tunnel.

SNMP ID:

2.70.1.4.1

Telnet path:

Setup > IPv6 > Tunnel > 6to4 > Peer-Name

Possible values:

Max. 16 characters

Default:

Blank

2.70.1.4.2 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules.

SNMP ID:

2.70.1.4.2

Telnet path:

Setup > IPv6 > Tunnel > 6to4 > Rtg-Tag

Possible values:

Max. 5 characters in the range 0 – 65535

Default:

0

2.70.1.4.3 Gateway address

Contains the IPv4 address of the 6to4 relay or 6to4 gateway. Default value is the anycast address "192.88.99.1". In general, you can leave this address unchanged as it will always give you access to the closest 6to4 relay on the Internet.

 The 6to4 tunnel is only set up if the gateway can be reached by ping at this address.

SNMP ID:

2.70.1.4.3

Telnet path:

Setup > IPv6 > Tunnel > 6to4 > Gateway-Address

Possible values:

IPv4 address with max. 64 characters

Default:

192.88.99.1

2.70.1.4.4 IPv4 routing tag

Here you define the routing tag that the device uses to determine the route to the associated remote gateway. The IPv4 routing tag specifies which tagged IPv4 route is to be used for the data packets to reach their destination address. The following destination addresses can be entered:

- 6to4 anycast address
- 6in4 gateway address
- 6rd border relay address

SNMP ID:

2.70.1.4.4

Telnet path:**Setup > IPv6 > Tunnel > 6to4 > IPv4-Rtg-tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.1.4.5 Firewall

If the global firewall is enabled for IPv6 interfaces, you can disable the firewall for an individual tunnel interface here. To enable the firewall globally for all interfaces, select **IPv6 firewall/QoS enabled** in the menu **Firewall/QoS > General**.



Disabling the firewall globally means that the firewall is disabled for all interfaces, even if you enable this option.

SNMP ID:

2.70.1.4.5

Telnet path:**Setup > IPv6 > Tunnel > 6to4 > Firewall****Possible values:**

Yes

No

Default:

Yes

2.70.2 Router advertisement

These settings are used to manage the router advertisements, which are used to announce the device's availability as a router to the network.

SNMP ID:

2.70.2

Telnet path:**Setup > IPv6 > Router-Advertisement****2.70.2.1 Prefix options**

The table contains the settings for IPv6 prefixes for each interface.

SNMP ID:

2.70.2.1

Telnet path:

Setup > IPv6 > Router-Advertisement > Prefix-Options

2.70.2.1.1 Interface name

Defines the name of the logical interface.

SNMP ID:

2.70.2.1.1

Telnet path:

Setup > IPv6 > Router-Advertisements > Prefix-Options > Interface-Name

Possible values:

Max. 16 characters

Default:

Blank

2.70.2.1.2 Prefix

Enter the prefix that is transmitted with the router advertisements, e. g. "2001:db8::/64".

The length of the prefix must always be exactly 64 bits ("/64"), or else the clients will not be able to generate their own addresses by adding their "interface identifier" (64 bits long).



If you wish to automatically use the prefix issued by the provider, then configure "::/64" here and enter the name of the corresponding WAN interface in the field **PD-Source**.

SNMP ID:

2.70.2.1.2

Telnet path:

Setup > IPv6 > Router-Advertisements > Prefix-Options > Prefix

Possible values:

Max. 43 characters

Default:

Blank

2.70.2.1.3 Subnet ID

Here you set the subnet ID that is to be combined with the prefix issued by the provider.

If the provider assigns the prefix "2001:db8:a::/48", for example, and you assign the subnet ID "0001" (or "1" for short), then the router advertisement on this interface is given the prefix "2001:db8:a:0001::/64".

The maximum subnet length with a 48-bit long, delegated prefix is 16 bits (65,536 subnets of "0000" to "FFFF"). With a delegated prefix of "/56", the maximum subnet length is 8 bits (256 subnets of "00" to "FF").



In general, the subnet ID "0" is used when the WAN IPv6 address is compiled automatically. For this reason you should start with "1" when assigning subnet IDs for LANs.

SNMP ID:

2.70.2.1.3

Telnet path:**Setup > IPv6 > Router-Advertisements > Prefix-Options > Subnet-ID****Possible values:**

Max. 19 characters

Default:

1

2.70.2.1.3 Adv.-OnLink

Indicates whether the prefix is "on link".

SNMP ID:

2.70.2.1.3

Telnet path:**Setup > IPv6 > Router-Advertisements > Prefix-Options > Adv.-OnLink****Possible values:**

Yes

No

Default:

Yes

2.70.2.1.5 Adv.-Autonomous

Indicates whether a host can use the prefix for a "Stateless Address Autoconfiguration". If this is the case, it can connect directly to the Internet.

SNMP ID:

2.70.2.1.5

Telnet path:**Setup > IPv6 > Router-Advertisements > Prefix-Options > Adv.-Autonomous****Possible values:**

Yes

No

Default:

Yes

2.70.2.1.6 PD sourceUse the name of the interface that receives a prefix issued by the provider. This prefix is combined with the string entered in the field **Prefix** to form a subnet that announces router advertisements (DHCPv6 prefix delegation).

SNMP ID:

2.70.2.1.6

Telnet path:**Setup > IPv6 > Router-Advertisements > Prefix-Options > PD-Source****Possible values:**

Max. 16 characters

Default:

Blank

2.70.2.1.7 Advertise preferred lifetime

Defines the time in milliseconds for which an IPv6 address is to be "Preferred". The client also uses this lifetime for its generated IPv6 address. If the lifetime of the prefix has expired, the client no longer uses the corresponding IPv6 address. Is the "preferred lifetime" of an address expires, it will be marked as "deprecated". This address is then used only by already active connections until those connections end. Expired addresses are no longer available for new connections.

SNMP ID:

2.70.2.1.7

Telnet path:**Setup > IPv6 > Router-Advertisements > Prefix-Options > Adv.-Pref.-Lifetime****Possible values:**

Max. 10 numbers in the range 0 – 2147483647

Default:

604800

2.70.2.1.8 Adv.-Valid-Lifetime

Defines the time in seconds, after which the validity of an IPv6 address expires. Expired addresses are no longer available for new connections.

SNMP ID:

2.70.2.1.8

Telnet path:**Setup > IPv6 > Router-Advertisements > Prefix-Options > Adv.-Valid-Lifetime****Possible values:**

Max. 10 numbers in the range 0 – 2147483647

Default:

2592000

2.70.2.1.9 DecrementLifetimes

If this option is enabled, the preferred and valid lifetime of the prefix in the router advertisements are automatically counted down over time or extended. The preferred and valid lifetimes of the prefix in the router advertisements are synchronized with the times from the delegated prefix as retrieved from the WAN. If the prefix from the provider is not

updated, then the preferred and valid lifetimes are counted down to 0, and thus expire. As soon as the device updates the lifetimes of the delegated prefix from the WAN, then the prefix in the router advertisements is extended again. If this option is disabled, the preferred and valid lifetime from the delegated prefix are applied statically, but they are not reduced or extended. This parameter has no effect on tunneled WAN connections (6to4, 6in4 and 6rd), because in this case the prefixes are not retrieved by DHCPv6 prefix delegation, and thus they have no lifetimes. Here, the statically-configured preferred and valid lifetimes from the prefix are applied. This parameter also has no effect if the value for PD source is left empty, because in this case there is no synchronization with the delegated WAN prefix.

SNMP ID:

2.70.2.1.9

Telnet path:**Setup > IPv6 > Router-Advertisement > Prefix-Options****Possible values:**

Yes

No

Default:

Yes

2.70.2.2 Interface options

The table contains the settings for the IPv6 interfaces.

SNMP ID:

2.70.2.2

Telnet path:**Setup > IPv6 > Router-Advertisements > Interface-Options**

2.70.2.2.1 Interface name

Defines the name of the logical interface to be used for sending router advertisements.

SNMP ID:

2.70.2.2.1

Telnet path:**Setup > IPv6 > Router-Advertisements > Interface-Options > Interface-Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.2.2.2 Send adverts

Enables the periodic transmission of router advertisements and the response to router solicitations.

SNMP ID:

2.70.2.2.2

Telnet path:

Setup > IPv6 > Router-Advertisement > Interface-Options > Send-Adverts

Possible values:

Yes

No

Default:

Yes

2.70.2.2.3 Min. RTR interval

Defines in seconds the minimum time allowed between the transmission of consecutive unsolicited multicast router advertisements. **Min-RTR-Interval** and **Max-RTR-Interval** form a time space within which the device sends a router advertisement at random.

SNMP ID:

2.70.2.2.3

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Min-RTR-Interval

Possible values:

Min. 3 seconds

Max. $0.75 * \text{Max-RTR-Interval}$

Max. 10 numbers

Default:

$0.33 * \text{Max-RTR-Interval}$ (if **Max-RTR-Interval** ≥ 9 seconds)

Max-RTR-Interval (if **Max-RTR-Interval** < 9 seconds)

2.70.2.2.4 Max. RTR interval

Defines in seconds the maximum time allowed between the transmission of consecutive unsolicited multicast router advertisements. **Min-RTR-Interval** and **Max-RTR-Interval** form a time space within which the device sends a router advertisement at random.

SNMP ID:

2.70.2.2.4

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Max-RTR-Interval

Possible values:

Min. 4 seconds

Max. 1800 seconds

Max. 10 numbers

Default:

600 seconds

2.70.2.2.5 Managed flag

Sets the "Managed address configuration" flag in the router advertisement.

Setting this flag causes the clients to configure all addresses via "Stateful Autoconfiguration" (DHCPv6). In this case the clients also automatically retrieve other information, such as DNS server addresses.

SNMP ID:

2.70.2.2.5

Telnet path:**Setup > IPv6 > Router-Advertisements > Interface-Options > Managed-Flag****Possible values:**

Yes

No

Default:

No

2.70.2.2.6 Other config flag

Sets the "Other configuration" flag in the router advertisement.

If this flag is set, the device instructs the clients to retrieve additional information (but not the addresses for the client) such as DNS server addresses via DHCPv6.

SNMP ID:

2.70.2.2.6

Telnet path:**Setup > IPv6 > Router-Advertisements > Interface-Options > Other-Config-Flag****Possible values:**

Yes

No

Default:

Yes

2.70.2.2.7 Link MTU

Here you set the valid MTU for the corresponding link.

SNMP ID:

2.70.2.2.7

Telnet path:**Setup > IPv6 > Router-Advertisements > Interface-Options > Link-MTU****Possible values:**

Max. 5 numbers in the range 0 – 99999

Default:

1500

2.70.2.2.8 Reachable time

Specifies the time in seconds for which the router is considered to be reachable.

The default value of "0" means that the router advertisements have no specifications for reachable time.

SNMP ID:

2.70.2.2.8

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Reachable-Time

Possible values:

Max. 10 numbers in the range 0 – 2147483647

Default:

0

2.70.2.2.10 Hop limit

Defines the maximum number of routers to be used to forward a data packet. One router corresponds to one "hop".

SNMP ID:

2.70.2.2.10

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Hop-Limit

Possible values:

Max. 5 numbers in the range 0 – 255

Default:

0: No hop limit defined

2.70.2.2.11 Default lifetime

Specifies the time in seconds for which the router is considered to be reachable in the network.

 If this value is set to **0**, the operating system will not use this router as the default router.

SNMP ID:

2.70.2.2.11

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Def.-Lifetime

Possible values:

Max. 10 numbers in the range 0 – 2147483647

Default:

1800

2.70.2.2.12 Default router mode

Defines how the device advertises itself as the default gateway or router.

The settings have the following functions:

- **Auto:** As long as a WAN connection exists, the router sends a positive router lifetime in the router advertisement messages. The result is that a client uses this router as the default gateway. If there is no WAN connection, the router sets the router lifetime to "0". A client then stops using this router as the default gateway. This behavior is compliant with RFC 6204.
- **Always:** The router lifetime is always positive—i. e. greater than "0"—irrespective of the WAN connection status.
- **Never:** The router lifetime is always "0".

SNMP ID:

2.70.2.2.12

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Default-Router-Mode

Possible values:

Auto

Always

Never

Default:

Auto

2.70.2.2.13 Router preference

Defines the preference of this router. Clients enter this preference into their local routing tables.

SNMP ID:

2.70.2.2.13

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options > Router-Preference

Possible values:

Low

Medium

High

Default:

Medium

2.70.2.2.14 RTR-Time

Specifies the time in seconds between successive transmissions of neighbor-solicitation messages to a neighbor if the address is being resolved or the accessibility is being tested.

SNMP ID:

2.70.2.2.14

Telnet path:

Setup > IPv6 > Router-Advertisements > Interface-Options

Possible values:

0 to 4294967295

Default:

0

2.70.2.3 Route options

The table contains the settings for the route options.

SNMP ID:

2.70.2.3

Telnet path:**Setup > IPv6 > Router-Advertisement > Route-Options**

2.70.2.3.1 Interface name

Defines the name of the interface that this route option applies to.

SNMP ID:

2.70.2.3.1

Telnet path:**Setup > IPv6 > Router-Advertisement > Route-Options > Interface-Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.2.3.2 Prefix

Set the prefix for this route. This should not exceed 64 bits in length if it is to be used for auto-configuration.

SNMP ID:

2.70.2.3.2

Telnet path:**Setup > IPv6 > Router-Advertisement > Route-Options > Prefix****Possible values:**

IPv6 prefix with max. 43 characters, e.g. 2001:db8::/64

Default:

Blank

2.70.2.3.3 Route lifetime

Set how long in seconds the route should remain valid.

SNMP ID:

2.70.2.3.3

Telnet path:**Setup > IPv6 > Router-Advertisement > Route-Options > Route-Lifetime****Possible values:**

Max. 5 numbers in the range 0 – 65335

Default:

0: No route lifetime specified

2.70.2.3.4 Route preference

This parameter specifies the priority of an advertised route. A router receiving a router advertisement with two routes of different preference will choose the route with the higher priority.

SNMP ID:

2.70.2.3.4

Telnet path:**Setup > IPv6 > Router-Advertisement > Route-Options > Route-Preference****Possible values:**

Low

Medium

High

Default:

Medium

2.70.2.5 RDNSS options

This table contains the settings of RDNSS extension (recursive DNS server).



This function is not currently supported by Windows. Propagation of a DNS server, where required, is performed via DHCPv6.

SNMP ID:

2.70.2.5

Telnet path:**Setup > IPv6 > Router-Advertisements > RDNSS-Options****2.70.2.5.1 Interface name**

Name of the interface used by the device to announce information about the IPv6 DNS server in router advertisements.

SNMP ID:

2.70.2.5.1

Telnet path:

Setup > IPv6 > Router-Advertisements > RDNSS-Options

Possible values:

Max. 16 characters

Default:

Blank

2.70.2.5.2 Primary DNS

IPv6 address of the first IPv6 DNS server (recursive DNS server, RDNSS, according to RFC6106) for this interface.

SNMP ID:

2.70.2.5.2

Telnet path:

Setup > IPv6 > Router-Advertisements > RDNSS-Options

Possible values:

Valid IPv6 address

Default:

Blank

2.70.2.5.3 Secondary DNS

IPv6 address of the secondary IPv6 DNS server for this interface.

SNMP ID:

2.70.2.5.3

Telnet path:

Setup > IPv6 > Router-Advertisements > RDNSS-Options

Possible values:

Valid IPv6 address

Default:

Blank

2.70.2.5.4 DNS search list

This parameter defines which DNS search list the device propagates on this logical network.

SNMP ID:

2.70.2.5.4

Telnet path:

Setup > IPv6 > Router-Advertisements > RDNSS-Options

Possible values:

Internal: If you select this option, the device propagates either the DNS search list from the internal DNS server or the domain of this logical network. The domain is configured under **Setup > DNS > Domain**.

WAN: If you select this option, the device propagates the DNS search list from the provider (e.g. provider-xy.com) for this logical network. This feature is available only if the prefix list is connected to the corresponding WAN interface under **Receive prefix from**.

Default:

Internal enabled, WAN disabled.

2.70.2.5.5 Lifetime

Defines the time in seconds for which a client may use this DNS server for name resolution.

SNMP ID:

2.70.2.5.5

Telnet path:

Setup > IPv6 > Router-Advertisements > RDNSS-Options

Possible values:

- Max. 5 numbers in the range 0 – 65535
- 0: Discontinuation

Default:

900

2.70.3 DHCPv6

This menu contains the DHCPv6 settings.

SNMP ID:

2.70.3

Telnet path:

Setup > IPv6 > DHCPv6

2.70.3.1 Server

This menu contains the DHCP server settings for IPv6.

SNMP ID:

2.70.3.1

Telnet path:

Setup > IPv6 > DHCPv6 > Server

2.70.3.1.2 Address pools

If distribution of the DHCPv6 server is to be stateful, this table defines an address pool.

SNMP ID:

2.70.3.1.2

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pool****2.70.3.1.2.1 Address pool name**

Specify the name of the address pool here.

SNMP ID:

2.70.3.1.2.1

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pools > Address-Pool-Name****Possible values:**

Maximum 31 characters

Default:

Blank

2.70.3.1.2.2 Start address pool

Here you specify the first address in the pool, e. g. "2001:db8::1"

SNMP ID:

2.70.3.1.2.2

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pools > Start-Address-Pool****Possible values:**

Maximum 39 characters

Default:

Blank

2.70.3.1.2.3 End address pool

Here you specify the last address in the pool, e. g. "2001:db8::9"

SNMP ID:

2.70.3.1.2.3

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pools > End-Address-Pool****Possible values:**

Maximum 39 characters

Default:

Blank

2.70.3.1.2.5 Preferred lifetime

Here you specify the time in seconds that the client should treat this address as "preferred". After this time elapses, a client classifies this address as "deprecated".

SNMP ID:

2.70.3.1.2.5

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pools > Pref.-Lifetime****Possible values:**

Maximum 10 characters.

Default:

3600

2.70.3.1.2.6 Valid lifetime

Here you specify the time in seconds that the client should treat this address as "valid".

SNMP ID:

2.70.3.1.2.6

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pools > Valid-Lifetime****Possible values:**

Maximum 10 characters.

Default:

86400

2.70.3.1.2.7 PD source

Name of the WAN interface from which the client should use the prefix to form the address or prefix.

SNMP ID:

2.70.3.1.2.7

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Address-Pools****Possible values:**

Maximum 16 characters

Default:

Blank

2.70.3.1.3 PD pools

In this table, you specify the prefixes that the DHCPv6 server delegates to other routers.

SNMP ID:

2.70.3.1.3

Telnet path:**Setup > IPv6 > DHCPv6 > Server > PD-Pools****2.70.3.1.3.1 PD pool name**

Specify the name of the PD pool here.

SNMP ID:

2.70.3.1.3.1

Telnet path:**Setup > IPv6 > DHCPv6 > Server > PD-Pools > PD-Pool-Name****Possible values:**

Maximum 31 characters

Default:

Blank

2.70.3.1.3.2 Start PD pool

Here you specify the first prefix for delegation in the PD pool, e. g. "2001:db8:1100::"

SNMP ID:

2.70.3.1.3.2

Telnet path:**Setup > IPv6 > DHCPv6 > Server > PD-Pools > Start-PD-Pool****Possible values:**

Maximum 39 characters

Default:

Blank

2.70.3.1.3.3 End PD pool

Here you specify the last prefix for delegation in the PD pool, e. g. "2001:db8:FF00::"

SNMP ID:

2.70.3.1.3.3

Telnet path:**Setup > IPv6 > DHCPv6 > Server > PD-Pools > End-PD-Pool****Possible values:**

Maximum 39 characters

Default:

Blank

2.70.3.1.3.4 Prefix length

Here you set the length of the prefixes in the PD pool, e. g. "56" or "60"

SNMP ID:

2.70.3.1.3.4

Telnet path:

Setup > IPv6 > DHCPv6 > Server > PD-Pools > Prefix-Length

Possible values:

Maximum 3 characters.

Default:

56

2.70.3.1.3.5 Preferred lifetime

Here you specify the time in seconds that the client should treat this prefix as "preferred". After this time elapses, a client classifies this address as "deprecated".

SNMP ID:

2.70.3.1.3.5

Telnet path:

Setup > IPv6 > DHCPv6 > Server > PD-Pools > Pref.-Lifetime

Possible values:

Maximum 10 characters.

Default:

3600

2.70.3.1.3.6 Valid lifetime

Here you specify the time in seconds that the client should treat this prefix as "valid".

SNMP ID:

2.70.3.1.3.6

Telnet path:

Setup > IPv6 > DHCPv6 > Server > PD-Pools > Valid-Lifetime

Possible values:

Maximum 10 characters.

Default:

86400

2.70.3.1.3.7 PD source

Name of the WAN interface from which the client should use the prefix to form the address or prefix.

SNMP ID:

2.70.3.1.3.7

Telnet path:**Setup > IPv6 > DHCPv6 > Server > PD-Pools****Possible values:**

Maximum 16 characters

Default:

Blank

2.70.3.1.4 Interface list

This table is used to configure the basic settings of the DHCPv6 server, and to specify which interfaces they apply to.

SNMP ID:

2.70.3.1.4

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List****2.70.3.1.4.1 Interface name or relay**

Name of the interface on which the DHCPv6 server is working, for example "INTRANET"

SNMP ID:

2.70.3.1.4.1

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List > Interface-Name****Possible values:**

Selection from the list of LAN interfaces defined in the device; max. 39 characters

Default:

Blank

2.70.3.1.4.2 Active

Activates or deactivates the DHCPv6 server.

SNMP ID:

2.70.3.1.4.2

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List > Operating****Possible values:**

No

Yes

Default:

Yes

2.70.3.1.4.3 Primary DNS

IPv6 address of the primary DNS server.

SNMP ID:

2.70.3.1.4.3

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List > Primary-DNS****Possible values:**

IPv6 address with max. 39 characters

Default:

::

2.70.3.1.4.4 Secondary DNS

IPv6 address of the secondary DNS server.

SNMP ID:

2.70.3.1.4.4

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List > Secondary-DNS****Possible values:**

IPv6 address with max. 39 characters

Default:

Blank

2.70.3.1.4.5 Address pool name

Here you specify the address pool that the devices uses for this interface.



If the DHCPv6 server operates 'stateful' addresses distribution, you must enter the corresponding addresses into the table **Setup > IPv6 > DHCPv6 > Server > Address-Pools**.

SNMP ID:

2.70.3.1.4.5

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List > Address-Pool-Name****Possible values:**

Maximum 31 characters

Default:

Blank

2.70.3.1.4.6 PD pool name

Determine the prefix-delegation pool that the devices is to use for this interface.

 If the DHCPv6 server is to delegate prefixes to other routers, you must enter the corresponding prefixes in the table **Setup > IPv6 > DHCPv6 > Server > PD-Pools**.

SNMP ID:

2.70.3.1.4.6

Telnet path:

Setup > IPv6 > DHCPv6 > Server > Interface-Liste > PD-Pool-Name

Possible values:

Maximum 31 characters

Default:

Blank

2.70.3.1.4.7 Rapid commit

With rapid commit activated, the DHCPv6 server responds directly to a solicit message with a reply message.

 The client must explicitly include the rapid commit option in its solicit message.

SNMP ID:

2.70.3.1.4.7

Telnet path:

Setup > IPv6 > DHCPv6 > Server > Interface-Liste > Rapid-Commit

Possible values:

No

Yes

Default:

No

2.70.3.1.4.8 Preference

Where multiple DHCPv6 servers are operated on the network, the preference parameter gives you the control over which server the clients will use. The primary server requires a higher preference value than the backup server.

SNMP ID:

2.70.3.1.4.8

Telnet path:

Setup > IPv6 > DHCPv6 > Server > Interface-Liste > Preference

Possible values:

0 to 255

Default:

0

2.70.3.1.4.9 Renew time

This specifies the time in seconds when the client should contact the server again (using a renew message) to extend the address/prefix received from the server. The parameter is also called T1.

SNMP ID:

2.70.3.1.4.9

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List****Possible values:**

0 to 255

Default:

0 (automatic)

2.70.3.1.4.10 Rebind time

This specifies the time when the client should contact any server (using a rebind message) to extend its delegated address/prefix. The rebind event occurs only if the client receives no answer its renew request. The parameter is also called T2.

SNMP ID:

2.70.3.1.4.10

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List****Possible values:**

0 to 255

Default:

0 (automatic)

2.70.3.1.4.11 Unicast address

Unicast address of the DHCP server. The DHCP server uses this address in the server unicast option to allow the client to communicate with to the server via unicast messages. By default, multicast is used.

SNMP ID:

2.70.3.1.4.11

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Interface-List****Possible values:**

Valid unicast address

Default:

Blank

2.70.3.1.4.12 DNS search list

This parameter defines which DNS search list is sent to the clients by the DNS server.

SNMP ID:

2.70.3.1.4.12

Telnet path:

Setup > IPv6 > DHCPv6 > Server > Interface-List

Possible values:

None: The DNS server distributes no search lists to the clients.

Internal: Indicates whether the DNS search list or the own domain for this logical network should be inserted from the internal DNS server, e.g., "internal". The own domain can be configured under IPv4 > DNS > General settings.

WAN: Specifies whether the DNS search list sent by the provider (e.g., provider-xy.de) is announced in this logical network. This feature is available only if the prefix list is connected to the corresponding WAN interface under Receive prefix from.

Default:

Internal

2.70.3.1.4.13 Reconfigure

Each IPv6 address or IPv6 prefix has a default life time assigned by the server. At certain intervals, a client asks the server to renew its address (called renew/rebind times).

However, if the WAN prefix changes, for example, due to disconnection and reconnection of an Internet connection or a request for a new prefix (Deutsche Telekom Privacy feature), the server has no way to inform the network devices that the prefix or address has changed. This means that a client is still using an old address or an old prefix, and can no longer communicate with the Internet.

The reconfigure feature allows the DHCPv6 server to require the clients in the network to request a renewal of leases / bindings.

SNMP ID:

2.70.3.1.4.13

Telnet path:

Setup > IPv6 > DHCPv6 > Server > Interface-List

Possible values:

Off: Disables the reconfigure function

Prohibit: Clients that have used the Reconfigure Option in queries are rejected by the server and are not assigned an address, prefix or other options.

Allow: If the client sets the Reconfigure Option in queries, the server negotiates the necessary parameters with the client in order to start a reconfiguration at a later time.

Force: Clients have to set the Reconfigure Option in queries, otherwise the client rejects these clients. This mode is makes sense when you want to ensure that the server only serves clients which support Reconfigure. This ensure that all clients can use Reconfigure to update their addresses, prefixes, or other information at a later point in time.

Default:

Off

2.70.3.1.5 Limit-Confirm-To-Clients-With-Addresses

Using this setting you configure the behavior of the DHCPv6 server when it receives a confirm message from a client that does not yet have an IP address assigned to it. With the setting **no**, the server answers the message with a "Not-on-link" status; with the setting **yes**, it doesn't even answer.

 This parameter is only required for development tests and is not relevant for normal operations. Never change this default setting!

SNMP ID:

2.70.3.1.5

Telnet path:**Setup > IPv6 > DHCPv6 > Server****Possible values:**

Yes

No

Default:

No

2.70.3.1.6 Reservations

If you want to assign fixed IPv6 addresses to clients or fixed prefixes to routers, you can define a reservation for each client in this table.

SNMP ID:

2.70.3.1.6

Telnet path:**Setup > IPv6 > DHCPv6 > Server**

2.70.3.1.6.1 Interface name or relay

Name of the interface on which the DHCPv6 server is working, for example "INTRANET". Alternatively, you can also enter the IPv6 address of the remote relay agent.

SNMP ID:

2.70.3.1.6.1

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Reservations****Possible values:**

Selection from the list of LAN interfaces defined in the device; max. 39 characters

Default:

Blank

2.70.3.1.6.2 Address or PD prefix

IPv6 address or PD prefix that you want to assign statically.

SNMP ID:

2.70.3.1.6.2

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Reservations****Possible values:**

Maximum 43 characters

Default:

Blank

2.70.3.1.6.3 Client ID

DHCPv6 unique identifier (DUID) of the client.

DHCPv6 clients are no longer identified with their MAC addresses like DHCPv4 clients, they are identified with their DUID instead. The DUID can be read from the respective client, for example, on Windows with the shell command `ipconfig /all` or in WEBconfig under **Status > IPv6 > DHCPv6 > Client > Client ID**.

For devices working as a DHCPv6 server, the client IDs for clients that are currently using retrieved IPv6 addresses are to be found under **Status > IPv6 > DHCPv6 > Server > Address bindings**, and retrieved IPv6 prefixes are under **Status > IPv6 > DHCPv6 > Server > PD bindings**.

LANmonitor displays that client IDs under **DHCPv6 server**.

SNMP ID:

2.70.3.1.6.3

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Reservations****Possible values:**

Maximum 96 characters

Default:

Blank

2.70.3.1.6.5 Preferred lifetime

Here you specify the time in seconds that the client should treat this prefix as "preferred". After this time elapses, a client classifies this address as "deprecated".

SNMP ID:

2.70.3.1.6.5

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Reservations****Possible values:**

Maximum 10 characters.

Default:

3600

2.70.3.1.6.6 Valid lifetime

Here you specify the time in seconds that the client should treat this prefix as "valid".

 If you use a prefix from a WAN interface for dynamic address formation, you cannot configure values for preferred lifetime and valid lifetime. In this case, the device automatically determines the values that apply to the prefix delegated by the provider.

SNMP ID:

2.70.3.1.6.6

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Reservations****Possible values:**

Maximum 10 characters.

Default:

86400

2.70.3.1.6.7 PD source

Name of the WAN interface from which the client should use the prefix to form the address or prefix.

SNMP ID:

2.70.3.1.6.7

Telnet path:**Setup > IPv6 > DHCPv6 > Server > Reservations****Possible values:**

Maximum 16 characters

Default:

Blank

2.70.3.2 Client

This menu contains the DHCP client settings for IPv6.

SNMP ID:

2.70.3.2

Telnet path:**Setup > IPv6 > DHCPv6 > Client**

2.70.3.2.1 Interface list

This table determines the behavior of the DHCPv6 client.

 Normally client behavior is controlled by the auto-configuration.

SNMP ID:

2.70.3.2.1

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List****2.70.3.2.1.1 Interface name**

Specify the name of the interface that the DHCPv6 client operates on. These may be LAN interfaces or WAN interfaces (remote stations), such as "INTRANET" or "INTERNET".

SNMP ID:

2.70.3.2.1.1

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List > Interface-Name****Possible values:**

Selection from the list of LAN interfaces defined in the device; max. 16 characters

Default:

Blank

2.70.3.2.1.2 Operating

Here you specify if and how the device enables the client. Possible values are:

- **Autoconf:** The device waits for router advertisements, and then starts the DHCPv6 client. This option is the default setting.
- **Yes:** The device starts the DHCPv6 client as soon as the interface is active, without waiting for router advertisements.
- **No:** The DHCPv6 client is disabled on this interface. Even if the device receives router advertisements, it will not start the client.

SNMP ID:

2.70.3.2.1.2

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List > Operating****Possible values:**

Autoconf

No

Yes

Default:

Autoconf

2.70.3.2.1.3 Request DNS

Here you specify whether the client should query the DHCPv6 server for DNS servers.

 You must enable this option in order for the device to obtain information about a DNS server.

SNMP ID:

2.70.3.2.1.3

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List > Request-DNS****Possible values:**

No

Yes

Default:

Yes

2.70.3.2.1.4 Request address

Here you specify whether the client should query the DHCPv6 server for an IPv6 address.

 Only activate this option if addresses configured by the DHCPv6 server via this interface are stateful, i. e. not distributed by 'SLAAC'.

SNMP ID:

2.70.3.2.1.4

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List > Request-Address****Possible values:**

No

Yes

Default:

Yes

2.70.3.2.1.5 Request PD

Here you specify whether the client should request the DHCPv6 server for an IPv6 prefix. Activating this option is only necessary if the device itself functions as a router and redistributes these prefixes. This option is enabled by default on WAN interfaces in order for the DHCPv6 client to request a prefix from the provider for use in its local network. This option is disabled by default on LAN interfaces because devices in a local network are more likely to function as clients rather than as routers.

SNMP ID:

2.70.3.2.1.5

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List > Request-PD****Possible values:**

No

Yes

Default:

No

2.70.3.2.1.6 Rapid commit

When rapid commit is activated, the client attempts to obtain an IPv6 address from the DHCPv6 server with just two messages. If the DHCPv6 server is configured correspondingly, it immediately responds to this solicit message with a reply message.

SNMP ID:

2.70.3.2.1.6

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List > Rapid-Commit****Possible values:**

No

Yes

Default:

Yes

2.70.3.2.1.7 Send-FQDN

With this setting you specify whether the client should send its device name using the FQDN option (Fully Qualified Domain Name) or not.

SNMP ID:

2.70.3.2.1.7

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List****Possible values:**

Yes

No

Default:

Yes

2.70.3.2.1.8 Accept-Reconf

With this setting you specify whether the client of the corresponding interface can negotiate a Reconfigure with the DHCPv6 server.

If you enable this setting, you allow a DHCP server to send a reconfigure message to a client. On its part, the client answers the server with renew or rebind. In the response to this renew or rebind, the server can then assign the client a new IPv6 address or IPv6 prefix, or prolong it.

You can find further information about dynamic reconfiguration in the Reference Manual under "Reconfigure" in the IPv6 section for the DHCPv6 server.



In order for dynamic reconfiguration to work, you also have to enable it on the server!

SNMP ID:

2.70.3.2.1.8

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List****Possible values:**

Yes

No

Default:

No

2.70.3.2.1.9 Request-Domain-List

With this setting you specify whether a client should call up the list of the available domain names from the DHCP server using the appropriate interface.

SNMP ID:

2.70.3.2.1.9

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Interface-List****Possible values:**

Yes

No

Default:

Yes

2.70.3.2.2 User class identifier

This assigns the device a unique user class ID.

A user class identifier is used to identify the type or category of client to the server. For example, the user class identifier can be used to identify all clients of people in the accounting department, or all printers at a specific location.

SNMP ID:

2.70.3.2.2

Telnet path:**Setup > IPv6 > DHCPv6 > Client > User-Class-Identifier****Possible values:**

Maximum 253 characters

Default:

Blank

2.70.3.2.3 Vendor class identifier

This assigns the device a unique vendor class ID.

The vendor-class-identifier is used to identify the manufacturer of the hardware running the DHCP client.

SNMP ID:

2.70.3.2.3

Telnet path:**Setup > IPv6 > DHCPv6 > Client > Vendor-Class-Identifier****Possible values:**

Maximum 253 characters

Default:

Manufacturer name

2.70.3.2.4 Vendor class number

Determines the enterprise number that the device manufacturer used to register with the Internet Assigned Numbers Authority (IANA).

SNMP ID:

2.70.3.2.4

Telnet path:**Setup > IPv6 > DHCPv6 > Client****Possible values:**

Maximum 10 characters

Default:

2356

2.70.3.3 Relay agent

This menu contains the DHCP relay agent settings for IPv6.

SNMP ID:

2.70.3.3

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent****2.70.3.3.1 Interface list**

This table determines the behavior of the DHCPv6 relay agent.

SNMP ID:

2.70.3.3.1

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent > Interface-List****2.70.3.3.1.1 Interface name**

Define the name of the interface on which the relay agent receives requests from DHCPv6 clients, e. g. "INTRANET".

SNMP ID:

2.70.3.3.1.1

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent > Interface-List > Interface-Name****Possible values:**

Selection from the list of LAN interfaces defined in the device; max. 16 characters

Default:

Blank

2.70.3.3.1.2 Relay agent operating

With this option you define if and how the device enables the relay agent.

SNMP ID:

2.70.3.3.1.2

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent > Interface-List > Relay-Agent-Operating****Possible values:****Yes:** Relay agent is enabled. This option is the default setting.**No:** Relay agent is not enabled.**Default:**

Yes

2.70.3.3.1.3 Interface address

Specify the relay agent's own IPv6 address at the interface that is configured under Interface Name. This IPv6 address is used as a sender address in DHCP messages that are forwarded. This sender address enables DHCPv6 clients to uniquely identify a relay agent. An explicit specification of the interface address is necessary because an IPv6 host can have multiple IPv6 addresses for each interface.

SNMP ID:

2.70.3.3.1.3

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent > Interface-List > Interface-Address****Possible values:**

Maximum 39 characters

Default:

Blank

2.70.3.3.1.4 Destination address

Define the IPv6 address of the (destination) DHCPv6 server which the relay agent is to forward DHCP requests to. The address can be either a unicast or link-local multicast address. When using a link-local multicast address, you must

specify the destination interface where the DHCPv6 server is to be reached. All DHCPv6 servers and relay agents are available at the link-local multicast address ff02::1:2.

SNMP ID:

2.70.3.3.1.4

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent > Interface-List > Dest-Address****Possible values:**

Maximum 39 characters

Default:

ff02::1:2

2.70.3.3.1.5 Destination interface

Here you specify the destination interface where the parent DHCPv6 server or the next relay agent is to be reached. This information is essential if a link-local multicast address is configured under the destination address, as link local-multicast addresses are only valid at that respective link.

SNMP ID:

2.70.3.3.1.5

Telnet path:**Setup > IPv6 > DHCPv6 > Relay-Agent > Interface-List > Dest-Interface****Possible values:**

Maximum 39 characters

Default:

Blank

2.70.4 Network

Here you can adjust further IPv6 network settings for each logical interface supported by your device.

SNMP ID:

2.70.4

Telnet path:**Setup > IPv6 > Network****2.70.4.1 Addresses**

This table is used to manage the IPv6 addresses.

SNMP ID:

2.70.4.1

Telnet path:**Setup > IPv6 > Network > Addresses**

2.70.4.1.1 Interface name

Give a name to the interface that you want to assign the IPv6 network.

SNMP ID:

2.70.4.1.1

Telnet path:

Setup > IPv6 > Network > Addresses > Interface-Name

Possible values:

Max. 16 characters

Default:

Blank

2.70.4.1.2 IPv6 address prefix length

Specify an IPv6 address including the prefix length for this interface.

 The default prefix length is 64 bits ("/64"). If possible do not use IPv6 addresses with longer prefixes, as many IPv6 mechanisms in the device are designed for a maximum length of 64 bits.

A possible address is, for example, "2001:db8::1/64". An interface can have multiple IPv6 addresses:

- A "global unicast address", e. g. "2001:db8::1/64",
- A "unique local address", e. g. "fd00::1/64".

"Link local addresses" are fixed and not configurable.

SNMP ID:

2.70.4.1.2

Telnet path:

Setup > IPv6 > Network > Addresses > IPv6-Address-Prefixlength

Possible values:

Max. 43 characters

Default:

Blank

2.70.4.1.3 Address type

Determine the type of IPv6 address.

Using the address type **EUI-64** causes IPv6 addresses to be formed according to the IEEE standard "EUI-64". The MAC address of the interface thus forms a uniquely identifiable part of the IPv6 address. The correct input format for an IPv6 address including the prefix length as per EUI-64 would be: "2001:db8:1::/64".

 "EUI-64" ignores any value set as "interface identifier" in the corresponding IPv6 address and replaces it with an "interface identifier" as per "EUI-64".

 The prefix length for "EUI-64" must be "/64".

SNMP ID:

2.70.4.1.3

Telnet path:**Setup > IPv6 > Network > Addresses > Address-Type****Possible values:**

Unicast

Anycast

EUI-64

Default:

Unicast

2.70.4.1.4 Name

Enter a descriptive name for this combination of IPv6 address and prefix.



Entering a name is optional.

SNMP ID:

2.70.4.1.4

Telnet path:**Setup > IPv6 > Network > Addresses > Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.4.1.5 Comment

Enter a descriptive comment for this entry.



Entering a comment is optional.

SNMP ID:

2.70.4.1.5

Telnet path:**Setup > IPv6 > Network > Addresses > Comment****Possible values:**

Max. 64 characters

Default:

Blank

2.70.4.2 Parameter

This table is used to manage the IPv6 parameters.

SNMP ID:

2.70.4.2

Telnet path:

Setup > IPv6 > Network > Parameter

2.70.4.2.1 Interface name

Give a name to the interface for which the IPv6 parameters are to be configured.

SNMP ID:

2.70.4.2.1

Telnet path:

Setup > IPv6 > Network > Parameter > Interface-Name

Possible values:

Max. 16 characters

Default:

Blank

2.70.4.2.2 IPv6 gateway

Specify the IPv6 gateway to be used by this interface.



This parameter overrides gateway information that the device may receive via router advertisements, for example.

SNMP ID:

2.70.4.2.2

Telnet path:

Setup > IPv6 > Network > Parameter > IPv6-Gateway

Possible values:

- Global unicast address, e.g. 2001:db8::1
- Link-local address to which you add to the corresponding interface (%<INTERFACE>), e.g. fe80::1%INTERNET

Default:

::

2.70.4.2.3 Primary DNS

Specify the primary IPv6 DNS server to be used by this interface.

SNMP ID:

2.70.4.2.3

Telnet path:

Setup > IPv6 > Network > Parameter > Primary-DNS

Possible values:

IPv6 address with max. 39 characters

Default:

::

2.70.4.2.4 Secondary DNS

Specify the secondary IPv6 DNS server to be used by this interface.

SNMP ID:

2.70.4.2.4

Telnet path:

Setup > IPv6 > Network > Parameter > Secondary-DNS

Possible values:

IPv6 address with max. 39 characters

Default:

::

2.70.5 Firewall

This menu contains the settings for the firewall.

SNMP ID:

2.70.5

Telnet path:

Setup > IPv6 > Firewall

2.70.5.1 Operating

Enables or disables the firewall.



This item enables the firewall globally. The firewall is only active if you enable it here. If you disable the firewall here and at the same time enable it for individual interfaces, it remains disabled for all interfaces.

SNMP ID:

2.70.5.1

Telnet path:

Setup > IPv6 > Firewall > Operating

Possible values:

Yes

No

Default:

Yes

2.70.5.2 Forwarding rules

This table contains the rules that the firewall will apply for forwarding data.

SNMP ID:

2.70.5.2

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****2.70.5.2.1 Name**

Defines the name for the forwarding rule.

SNMP ID:

2.70.5.2.1

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

Maximum 36 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.2.2 Flags

These options determine how the firewall handles the rule. The options have the following meanings:

- **Deactivated:** The rule is disabled. The firewall skips this rule.
- **Linked:** After processing the rule, the firewall looks for additional rules which come in question.
- **Stateless:** This rule does not take the statuses of the TCP sessions into account.

You can select several options at the same time.

SNMP ID:

2.70.5.2.2

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

Deactivated

Linked

Stateless

Default:

No selection

2.70.5.2.3 Priority

This information determines the priority with which the firewall applies the rule. A higher value determines a higher priority.

SNMP ID:

2.70.5.2.3

Telnet path:

Setup > IPv6 > Firewall > Forwarding-Rules

Possible values:

Max. 4 characters from 1234567890

Default:

0

2.70.5.2.4 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag makes it possible to separate the rules valid for this network.

SNMP ID:

2.70.5.2.4

Telnet path:

Setup > IPv6 > Firewall > Forwarding-Rules

Possible values:

Max. 5 characters from 1234567890

Default:

0

2.70.5.2.5 Action

Specifies the action that the firewall performs if the rule condition is true. There are certain standard actions already specified in the table **Setup IPv > IPv6 > Firewall > Actions**. In addition, you can also define your own actions.

You can enter multiple actions, separated by commas.

SNMP ID:

2.70.5.2.5

Telnet path:

Setup > IPv6 > Firewall > Forwarding-Rules

Possible values:

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@{ }~!\$%&'()*+,-/;:<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

REJECT

2.70.5.2.7 Services

This information determines for which services the firewall applies this rule. There are certain services already specified in the table **Setup > IPv6 > Firewall > Actions**. In addition, you can also define your own services.

You can enter multiple services separated by commas.

SNMP ID:

2.70.5.2.7

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[~!\$%&'()+-./:;<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

ANY

2.70.5.2.8 Source stations

This information determines for which source stations the firewall applies this rule. There are certain stations already specified in the table **Setup > IPv6 > Firewall > Stations**. In addition, you can also define your own stations.

You can enter multiple stations separated by commas.

SNMP ID:

2.70.5.2.8

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[~!\$%&'()+-./:;<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

ANYHOST

2.70.5.2.9 Destination stations

This information determines, for which destination stations the firewall applies this rule. There are certain stations already specified in the table **Setup > IPv6 > Firewall > Stations**. In addition, you can also define your own stations.

You can enter multiple stations separated by commas.

SNMP ID:

2.70.5.2.9

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[~!\$%&'()+-./:;<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

ANYHOST

2.70.5.2.10 Comment

Enter a descriptive comment for this entry.

SNMP ID:

2.70.5.2.10

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

Maximum 64 characters from:

```
#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[]~!$%&'()+,-./:;<=>?[\\]^_0123456789abcdefghijklmnopqrstuvwxyz`
```

Default:

Blank

2.70.5.2.11 Src-Tag

The source tag (the expected interface- or routing tag) is used to identify the ARF context from which a packet was received. This can be used to restrict firewall rules to certain ARF contexts.

SNMP ID:

+

Telnet path:**Setup > IPv6 > Firewall > Forwarding-Rules****Possible values:**

0 to 65535

Comment

- 65535: The firewall rule is applied if the expected interface- or routing tag is 0.
- 1-65534: The firewall rule is applied if the expected interface- or routing tag is 1...65534.
- 0: Wildcard. The firewall rule is applied to all ARF contexts (the expected interface- or routing tag is 0...65535).

Default:

0

2.70.5.3 Actions list

In this table, you can group actions. Define the actions you previously under **Setup > IPv6 > Firewall > Actions**.



You can not delete an action in this list if the firewall is used in a forwarding or inbound rule.

SNMP ID:

2.70.5.3

Telnet path:**Setup > IPv6 > Firewall > Action-List****2.70.5.3.1 Name**

Specifies the name of a group of actions.

SNMP ID:

2.70.5.3.1

Telnet path:**Setup > IPv6 > Firewall > Action-List****Possible values:**

Maximum 36 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.3.2 Description

Contains the list of actions that are grouped together under this group name.

Separate the individual entries with a comma.

SNMP ID:

2.70.5.3.2

Telnet path:**Setup > IPv6 > Firewall > Action-List****Possible values:**

Maximum 252 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,./:;<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

Blank

2.70.5.5 Station listYou can group stations in this table. Define the actions previously under **Setup > IPv6 > Firewall > Stations**.

You can not delete a station in this list if the firewall is used in a forwarding or inbound rule.

SNMP ID:

2.70.5.5

Telnet path:**Setup > IPv6 > Firewall > Stations-List**

2.70.5.5.1 Name

Specifies the name of a group of stations.

SNMP ID:

2.70.5.5.1

Telnet path:

Setup > IPv6 > Firewall > Stations-List

Possible values:

Maximum 36 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,/:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.5.2 Description

Contains the list of stations that are grouped together under this group name.

Separate the individual entries with a comma.

SNMP ID:

2.70.5.5.2

Telnet path:

Setup > IPv6 > Firewall > Stations-List

Possible values:

Maximum 252 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,/:;<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

Blank

2.70.5.6 Service list

You can group services in this table. Define the services previously under **Setup > IPv6 > Firewall > Services**.

 You can not delete a service in this list if the firewall is used in a forwarding or inbound rule.

SNMP ID:

2.70.5.6

Telnet path:

Setup > IPv6 > Firewall > Service-List

2.70.5.6.1 Name

Specifies the name of a group of services.

SNMP ID:

2.70.5.6.1

Telnet path:**Setup > IPv6 > Firewall > Service-List****Possible values:**

Maximum 36 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,/:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.6.2 Description

Contains the list of services that are grouped together under this group name.

Separate the individual entries with a comma.

SNMP ID:

2.70.5.6.2

Telnet path:**Setup > IPv6 > Firewall > Service-List****Possible values:**

Maximum 252 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,/:;<=>?[\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

Blank

2.70.5.7 Actions

The firewall can perform the forwarding and inbound rule actions for the actions contained in this table.

You can combine multiple actions under **Setup > IPv6 > Firewall > Actions-list**.**SNMP ID:**

2.70.5.7

Telnet path:**Setup > IPv6 > Firewall > Actions****2.70.5.7.1 Name**

Specifies the name of the action.

SNMP ID:

2.70.5.7.1

Telnet path:**Setup > IPv6 > Firewall > Actions****Possible values:**

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,/:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.7.2 Limit

When this limit is exceeded, the firewall applies the filter rule.

SNMP ID:

2.70.5.7.2

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Max. 10 characters from 0123456789

Special values:

0: The rule will come into force immediately.

Default:

0

2.70.5.7.3 Unit

Determines the unit for the limits.

SNMP ID:

2.70.5.7.3

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

kBit

kByte

Packets

Sessions

Bandwidth (%)

Default:

Packets

2.70.5.7.4 Time

Determines the measurement period that the firewall applies to the limit.

SNMP ID:

2.70.5.7.4

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Second
Minute
Hour
Absolute

Default:

Absolute

2.70.5.7.5 Context

Determines the context that the firewall applies to the limit. Possible values are:

- **Session:** The limit only applies to the data traffic for the current session.
- **Station:** The limit only applies to the data traffic for the current station.
- **Global:** All sessions to which this rule applies use the same limit counter.

SNMP ID:

2.70.5.7.5

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Session
Station
Global

Default:

Session

2.70.5.7.6 Flags

Determines the properties of the limits of the action. Possible values are:

- **Reset:** If the limit is exceeded, the action resets the counter.
- **Shared:** All rules to which this limit applies use the same limit counter.

SNMP ID:

2.70.5.7.6

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Reset
Shared

Default:

Blank

2.70.5.7.7 Action

Determines the action the firewall performs when the limit is reached.

The following options are possible:

- **Reject:** The firewall rejects the data packet and sends an appropriate notification to the sender.
- **Drop:** The firewall discards the data packet without notification.
- **Accept:** The firewall accepts the data packet.

SNMP ID:

2.70.5.7.7

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Reject

Drop

Accept

Default:

.

2.70.5.7.11 DiffServ

Determines the priority of the data packets (differentiated services, DiffServ), with which the firewall should transfer the data packets.



Further information about DiffServ CodePoints is available in the Reference Manual under the section "QoS".

SNMP ID:

2.70.5.7.11

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

BE

EF

CS0 to CS7

AF11 to AF43

No

Value

Special values:

Value: You can enter the DSCP decimal value directly in the **DSCP value** field.

Default:

No

2.70.5.7.12 DSCP value

Determines the value for the Differentiated Services Code Point (DSCP).

If you selected the "Value" option in the **DiffServ** field, enter a value here.



Further information about DiffServ CodePoints is available in the Reference Manual under the section "QoS".

SNMP ID:

2.70.5.7.12

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Max. 2 characters from 1234567890

Default:

0

2.70.5.7.13 Conditions

Determines which conditions must be met in order for the action to be performed. Define the conditions under **Setup > IPv6 > Firewall > Conditions**.

SNMP ID:

2.70.5.7.13

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.7.14 Trigger actions

Determines which trigger actions the firewall should start in addition to filtering the data packets. Define the trigger actions under **Setup > IPv6 > Firewall > Trigger-actions**.

SNMP ID:

2.70.5.7.14

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.9 Stations

The firewall can perform the forwarding and inbound rule actions for inbound connections from the source stations listed in this table.

You can combine multiple stations under **Setup > IPv6 > Firewall > Station-list**.

SNMP ID:

2.70.5.9

Telnet path:

Setup > IPv6 > Firewall > Stations

2.70.5.9.1 Name

Specifies the name of the station.

SNMP ID:

2.70.5.9.1

Telnet path:

Setup > IPv6 > Firewall > Stations

Possible values:

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.9.2 Type

Determines the station type.

SNMP ID:

2.70.5.9.2

Telnet path:

Setup > IPv6 > Firewall > Stations

Possible values:

Local network

Remote peer

Prefix

Identifier

IP address

Named host

Default:

Local network

2.70.5.9.3 Local network

If you selected the appropriate option in the **Type** field, you enter the name of the local network here.

SNMP ID:

2.70.5.9.3

Telnet path:

Setup > IPv6 > Firewall > Stations

Possible values:

Max. 16 characters from: #ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.9.6 Remote peer/local host

If you selected the appropriate option in the **Type** field, you enter the name of the remote peer or local host here.

SNMP ID:

2.70.5.9.6

Telnet path:

Setup > IPv6 > Firewall > Stations

Possible values:

Maximum 64 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.9.7 Address/Prefix

If you selected the appropriate option in the **Type** field, enter the IP address or prefix of the station here.

SNMP ID:

2.70.5.9.7

Telnet path:

Setup > IPv6 > Firewall > Stations

Possible values:

Max. 43 characters from ABCDEFabcdef0123456789:

Default:

Blank

2.70.5.10 Services

The firewall can perform the forwarding and inbound rule actions for the connection protocols of the services listed in this table.

You can combine multiple services under **Setup > IPv6 > Firewall > Service-list**.

SNMP ID:

2.70.5.10

Telnet path:**Setup > IPv6 > Firewall > Services****2.70.5.10.1 Name**

Specifies the name of the service.

SNMP ID:

2.70.5.10.1

Telnet path:**Setup > IPv6 > Firewall > Services****Possible values:**

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,-./:;<=>?[\\]^_0123456789

Default:

Blank

2.70.5.10.2 Protocol

Specifies the protocol of the service.

SNMP ID:

2.70.5.10.2

Telnet path:**Setup > IPv6 > Firewall > Services****Possible values:**

TCP+UDP

TCP

UDP

Default:

TCP+UDP

2.70.5.10.3 Ports

Specifies the port for the service. Separate multiple ports with a comma.

Lists with the official protocol and port numbers are available in the Internet at www.iana.org.**SNMP ID:**

2.70.5.10.3

Telnet path:**Setup > IPv6 > Firewall > Services**

Possible values:

Max. 64 characters from 0123456789,

Default:

Blank

2.70.5.10.4 Source ports

Determines whether the specified ports are source ports.



In certain scenarios, it may be useful to specify a source port. This is unusual. Selecting "No" is recommended.

SNMP ID:

2.70.5.10.4

Telnet path:

Setup > IPv6 > Firewall > Stations

Possible values:

No

Yes

Default:

No

2.70.5.11 Protocol

The firewall can perform the forwarding and inbound rule actions for the protocols listed in this table.

SNMP ID:

2.70.5.11

Telnet path:

Setup > IPv6 > Firewall > Protocols

2.70.5.11.1 Name

Specifies the name of the protocol.

SNMP ID:

2.70.5.11.1

Telnet path:

Setup > IPv6 > Firewall > Protocols

Possible values:

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\\]^_0123456789

Default:

Blank

2.70.5.11.2 Protocol

Specifies the protocol number.

 Lists with the official protocol and port numbers are available in the Internet at www.iana.org.

SNMP ID:

2.70.5.11.2

Telnet path:

Setup > IPv6 > Firewall > Protocols

Possible values:

Max. 3 characters from 0123456789

Default:

Blank

2.70.5.12 Conditions

The firewall can perform the forwarding and inbound rule actions for the conditions listed in this table.

SNMP ID:

2.70.5.12

Telnet path:

Setup > IPv6 > Firewall > Conditions

2.70.5.12.1 Name

Specifies the name of the condition.

SNMP ID:

2.70.5.12.1

Telnet path:

Setup > IPv6 > Firewall > Conditions

Possible values:

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,./:;<=>?[\\]^_0123456789

Default:

Blank

2.70.5.12 Conditions

Specifies the conditions which must be met.

SNMP ID:

2.70.5.12.2

Telnet path:

Setup > IPv6 > Firewall > Conditions

Possible values:

Not connected
Default route
Backup connection
VPN route
Transmitted
Received

Default:

Blank

2.70.5.12.3 Transport direction

Determines whether the transport direction refers to the logical connection or the physical data transmission over the respective interface.

SNMP ID:

2.70.5.12.3

Telnet path:

Setup > IPv6 > Firewall > Conditions

Possible values:

Physical
Logical

Default:

Physical

2.70.5.12.4 DiffServ

Determines the priority that the data packets (differentiated services, DiffServ) have to have, so that the condition is met.

 Further information about DiffServ CodePoints is available in the Reference Manual under the section "QoS".

SNMP ID:

2.70.5.7.11

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

BE
EF
CS0 to CS7, CSx
AF11 to AF43, AF1x, AF2x, AF3x, AF4x, AFx1, AFx2, AFx3, AFxx
No

Value

Special values:

CSx: Extends the range to all class selectors.

AF1x, AF2x, AF3x, AF4x, AFx1, AFx2, AFx3, AFxx: Extends the range to the corresponding assured-forwarding classes (e.g., AF1x takes the classes AF11, AF12, AF13 into account)

Value: You can enter the DSCP decimal value directly in the **DSCP value** field.

Default:

Ignore

2.70.5.12.5 DSCP value

Determines the value for the Differentiated Services Code Point (DSCP).

If you selected the "Value" option in the **DiffServ** field, enter a value here.

 Further information about DiffServ CodePoints is available in the Reference Manual under the section "QoS".

SNMP ID:

2.70.5.12.5

Telnet path:

Setup > IPv6 > Firewall > Actions

Possible values:

Max. 2 characters from 1234567890

Default:

0

2.70.5.13 Trigger actions

This table contains a list of the trigger actions, which the firewall actions can start.

SNMP ID:

2.70.5.13

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

2.70.5.13.1 Name

Specifies the name of the trigger action.

SNMP ID:

2.70.5.13.1

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

Possible values:

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,-./:;<=>?[\\]^_0123456789

Default:

Blank

2.70.5.13.2 Notifications

Determines whether and how a notification should be sent.



If you want to receive e-mail notifications, you must enter an e-mail address in **Setup > IP-Router > Firewall > Admin-Email**.

SNMP ID:

2.70.5.13.2

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

Possible values:

SNMP

SYSLOG

E-mail

Default:

Blank

2.70.5.13.3 Disconnect

Determines whether the firewall disconnects the connection to the remote station if the filter condition is true.

SNMP ID:

2.70.5.13.3

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

Possible values:

No

Yes

Default:

No

2.70.5.13.4 Block source

Determines whether the firewall disconnects the source if the filter condition is true. The firewall registers the blocked IP address, the lockout period, as well as the underlying rule in the **Host-lock-list** under **Status > IPv6 > Firewall**.

SNMP ID:

2.70.5.13.4

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

Possible values:

No

Yes

Default:

No

2.70.5.13.5 Lockout period

Specifies how many minutes the firewall blocks the source.

SNMP ID:

2.70.5.13.5

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

Possible values:

Max. 8 characters from 0123456789

Special values:

0: Disables the lock because, in practice, the lockout period expires after 0 minutes.

Default:

0

2.70.5.13.6 Close destination

Specifies whether the firewall disconnects the source if the filter condition is true. The firewall registers the blocked destination IP address, the protocol, the destination port, the lockout period, as well as the underlying rule in the **Port-block-list** under **Status > IPv6 > Firewall**.

SNMP ID:

2.70.5.13.6

Telnet path:

Setup > IPv6 > Firewall > Trigger-Actions

Possible values:

No

Yes

Default:

No

2.70.5.13.7 Closing time

Determines, for how many seconds the firewall closes the destination.

SNMP ID:

2.70.5.13.7

Telnet path:**Setup > IPv6 > Firewall > Trigger-Actions****Possible values:**

Max. 8 characters from 0123456789

Special values:

0: Disables the lock because, in practice, the lockout period expires after 0 minutes.

Default:

0

2.70.5.14 ICMP service

This table contains a list of ICMP-service.

 Since ICMPv6 has central importance for numerous IPv6 features, basic ICMPv6 rules are already configured by default. You can not delete these rules.

SNMP ID:

2.70.5.14

Telnet path:**Setup > IPv6 > Firewall > ICMP-Services****2.70.5.14.1 Name**

Specifies the name of the ICMP service.

SNMP ID:

2.70.5.14.1

Telnet path:**Setup > IPv6 > Firewall > ICMP-Services****Possible values:**

Maximum 32 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()+,./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.14.2 Type

Specifies the type of the ICMP service.

 Lists with the official ICMP types and port codes are available in the Internet under www.iana.org.

SNMP ID:

2.70.5.14.2

Telnet path:**Setup > IPv6 > Firewall > ICMP-Services****Possible values:**

Max. 3 characters from 0123456789

Default:

0

2.70.5.14.3 Code

Specifies the codes of the ICMP service.

Lists with the official ICMP types and port codes are available in the Internet under www.iana.org.**SNMP ID:**

2.70.5.14.2

Telnet path:**Setup > IPv6 > Firewall > ICMP-Services****Possible values:**

Max. 3 characters from 0123456789

Default:

0

2.70.5.15 Inbound rules

This table contains the rules that the firewall will apply to inbound connections.

By default, there are already some rules for the most important cases.

SNMP ID:

2.70.5.15

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****2.70.5.15.1 Name**

Specifies the name of the inbound rule.

SNMP ID:

2.70.5.15.1

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Maximum 36 characters from: ABCDEFGHIJKLMNOPQRSTUVWXYZ@{}~!\$%&'()*+,-./:;<=>?[\]^_0123456789

Default:

Blank

2.70.5.15.2 Active

This option enables the inbound rule.

SNMP ID:

2.70.5.15.2

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Yes

No

Default:

Yes

2.70.5.15.3 Priority

This information determines the priority with which the firewall applies the rule. A higher value determines a higher priority.

SNMP ID:

2.70.5.15.3

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Max. 4 characters from 1234567890

Default:

0

2.70.5.15.5 Action

Specifies the action that the firewall performs if the rule condition is true. There are certain standard actions already specified in the table **Setup IPv > IPv6 > Firewall > Actions**. In addition, you can also define your own actions.

SNMP ID:

2.70.5.15.5

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[]~!\$%&'()+-./:;<=>?[\\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

REJECT

2.70.5.15.7 Services

This information determines for which services the firewall applies this rule. There are certain services already specified in the table **Setup > IPv6 > Firewall > Actions**. In addition, you can also define your own services.

SNMP ID:

2.70.5.15.7

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[]~!\$%&'()+,-./:;<=>?[\\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

ANY

2.70.5.15.8 Source stations

This information determines for which source stations the firewall applies this rule. There are certain stations already specified in the table **Setup > IPv6 > Firewall > Stations**. In addition, you can also define your own stations.

SNMP ID:

2.70.5.15.8

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[]~!\$%&'()+,-./:;<=>?[\\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

ANYHOST

2.70.5.15.10 Comment

Enter a descriptive comment for this entry.

SNMP ID:

2.70.5.15.10

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

Maximum 64 characters from:

#ABCDEFGHIJKLMNOPQRSTUVWXYZ@[]~!\$%&'()+,-./:;<=>?[\\]^_0123456789abcdefghijklmnopqrstuvwxyz`

Default:

Blank

2.70.5.15.11 Src-Tag

The source tag (the expected interface- or routing tag) is used to identify the ARF context from which a packet was received. This can be used to restrict firewall rules to certain ARF contexts.

SNMP ID:

2.70.5.15.11

Telnet path:**Setup > IPv6 > Firewall > Inbound-Rules****Possible values:**

0 to 65535

Comment

- 65535: The firewall rule is applied if the expected interface- or routing tag is 0.
- 1-65534: The firewall rule is applied if the expected interface- or routing tag is 1...65534.
- 0: Wildcard. The firewall rule is applied to all ARF contexts (the expected interface- or routing tag is 0...65535).

Default:

0

2.70.5.20 Allow route options

With this setting you specify whether the IPv6 firewall should allow or refuse routing options. The refusal of routing options always initiates a message about an IDS event. This action is independent of the settings in the IDS itself.

SNMP ID:

2.70.5.20

Telnet path:**Setup > IPv6 > Firewall****Possible values:**

No

Yes

Default:

No

2.70.5.21 Destination-Cache-Limit

This setting limits the number of "unanswered" destination cache entries. This number represents the number of destination addresses that do not respond during the *destination cache timeout*; once this number is exceeded, the firewall blocks any further **new** destination addresses for this interface. With the default setting (see below), this can happen if too many users on the LAN send requests to unreachable servers on the Internet.

Entering 0 as the limit globally disables the destination cache check for all interfaces. To disable the check for a particular interface, switch off the firewall on that interface. With the default setting (LAN: Firewall off // WAN: Firewall on) the device does not check the traffic of users within the LAN.

 The default value is set high enough to avoid triggering the IDS during normal operation.

SNMP ID:

2.70.5.21

Telnet path:**Setup > IPv6 > Firewall****Possible values:**

0 to 99999

Default:

300

2.70.6 LAN interfaces

This table contains the settings for the LAN interfaces.

SNMP ID:

2.70.6

Telnet path:**Setup > IPv6 > LAN-Interfaces**

2.70.6.1 Interface name

Enter a name for the logical IPv6 interface that is defined by the physical interface (interface assignment) and the VLAN ID.

SNMP ID:

2.70.6.1

Telnet path:**Setup > IPv6 > LAN-Interfaces > Interface-Name****Possible values:**

Max. 16 characters

Default:

Blank

2.70.6.2 Interface ID

Select the physical interface to be combined with the VLAN ID to form the logical IPv6 interface.

SNMP ID:

2.70.6.2

Telnet path:**Setup > IPv6 > LAN-Interfaces > Interface-ID****Possible values:**

All physically available interfaces on the device

Default:

LAN-1

2.70.6.3 VLAN ID

Select the VLAN ID to be combined with the physical interface to form the logical IPv6 interface.



If you enter an invalid VLAN ID here, no communication will take place.

SNMP ID:

2.70.6.3

Telnet path:**Setup > IPv6 > LAN-Interfaces > VLAN-ID****Possible values:**

0 to 4096

Max. 4 numbers

Default:

0

2.70.6.4 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules.

SNMP ID:

2.70.6.4

Telnet path:**Setup > IPv6 > LAN-Interfaces > Rtg-Tag****Possible values:**

Max. 5 characters in the range 0 – 65535

Default:

0

2.70.6.5 Autoconf

Enable or disable "stateless address autoconfiguration" for this interface.



If the device sends router advertisements from this interface, it does not generate any IPv6 addresses even with auto-configuration enabled.

SNMP ID:

2.70.6.5

Telnet path:**Setup > IPv6 > LAN-Interfaces > Autoconf**

Possible values:

Yes

No

Default:

Yes

2.70.6.6 Accept RA

Enables or disables the processing of received router advertisement messages.



With processing disabled, the device ignores any prefix, DNS and router information received via router advertisements.

SNMP ID:

2.70.6.6

Telnet path:**Setup > IPv6 > LAN-Interfaces > Accept-RA****Possible values:**

Yes

No

Default:

Yes

2.70.6.7 Interface status

Enables or disables this interface.

SNMP ID:

2.70.6.7

Telnet path:**Setup > IPv6 > LAN-Interfaces > Interface-Status****Possible values:**

Up

Down

Default:

Up

2.70.6.8 Forwarding

Enables or disables the forwarding of data packets to other interfaces.



With forwarding disabled, no router advertisements are transmitted from this interface.

SNMP ID:

270.6.8

Telnet path:**Setup > IPv6 > LAN-Interfaces > Forwarding****Possible values:**

Yes

No

Default:

Yes

2.70.6.9 MTU

Specify the applicable MTU for this interface.

SNMP ID:

2.70.6.9

Telnet path:**Setup > IPv6 > LAN-Interfaces > MTU****Possible values:**

Max. 4 numbers in the range 0 – 9999

Default:

1500

2.70.6.10 Firewall

If the global firewall is enabled for IPv6 interfaces, you can disable the firewall for an individual interface here. To enable the firewall globally for all interfaces, select **IPv6 firewall/QoS enabled** in the menu **Firewall/QoS > General** .



If you disable the global firewall, the firewall of an individual interface is also disabled. This applies even if you have enabled this option.

SNMP ID:

2.70.6.10

Telnet path:**Setup > IPv6 > LAN-Interfaces > Firewall****Possible values:**

Yes

No

Default:

No

2.70.6.11 Comment

Enter a descriptive comment for this entry.

 Entering a comment is optional.

SNMP ID:

2.70.6.11

Telnet path:**Setup > IPv6 > LAN-Interfaces > Comment****Possible values:**

Max. 64 characters

Default:

Blank

2.70.6.12 DaD-Attempts

Before the device can use an IPv6 address on an interface, it uses 'Duplicate Address Detection (DAD)' to check to see whether the IPv6 address already exists on the local network. In this way the device avoids address conflicts on the network.

This option specifies the number of times that the device attempts to find duplicate IPv6 addresses on the network.

SNMP ID:

2.70.6.12

Telnet path:**Setup > IPv6 > LAN-Interfaces > DaD-Attempts****Possible values:**

0 to 9

Default:

1

2.70.7 WAN interfaces

This table contains the settings for the LAN interfaces.

SNMP ID:

2.70.7

Telnet path:**Setup > IPv6 > WAN-Interfaces**

2.70.7.1 Interface name

Specify the name of the WAN remote peer here. Use the name as specified at the remote site.

SNMP ID:

2.70.7.1

Telnet path:**Setup > IPv6 > WAN-Interfaces > Interface-Name**

Possible values:

Max. 16 characters

Default:

Blank

2.70.7.2 Routing tag

The interface tag that you enter here is a value that uniquely identifies the network. All packets received by this device on this network will be internally marked with this tag. The interface tag enables the routes which are valid for this network to be separated even without explicit firewall rules.

SNMP ID:

2.70.7.2

Telnet path:**Setup > IPv6 > WAN-Interfaces > Rtg-Tag****Possible values:**

Max. 5 characters in the range 0 – 65534

Default:

0

2.70.7.3 Autoconf

Enable or disable "stateless address autoconfiguration" for this interface.



If the device sends router advertisements from this interface, it does not generate any addresses even with auto-configuration enabled.

SNMP ID:

2.70.7.3

Telnet path:**Setup > IPv6 > WAN-Interfaces > Autoconf****Possible values:**

Yes

No

Default:

Yes

2.70.7.4 Accept RA

Enables or disables the processing of received router advertisement messages.



With processing disabled, the device ignores any prefix, DNS and router information received via router advertisements.

SNMP ID:

2.70.6.6

Telnet path:**Setup > IPv6 > WAN-Interfaces > Accept-RA****Possible values:**

Yes

No

Default:

Yes

2.70.7.5 Interface status

Enables or disables this interface.

SNMP ID:

2.70.7.5

Telnet path:**Setup > IPv6 > WAN-Interfaces > Interface-Status****Possible values:**

Up

Down

Default:

Up

2.70.7.6 Forwarding

Enables or disables the forwarding of data packets to other interfaces.

SNMP ID:

2.70.7.6

Telnet path:**Setup > IPv6 > WAN-Interfaces > Forwarding****Possible values:**

Yes

No

Default:

Yes

2.70.7.7 Firewall

Enables the firewall for this interface.

 If you disable the global firewall, the firewall of an individual interface is also disabled. This applies even if you have enabled this option.

SNMP ID:

2.70.7.7

Telnet path:**Setup > IPv6 > WAN-Interfaces > Firewall****Possible values:**

Yes

No

Default:

Yes

2.70.7.8 Comment

Enter a descriptive comment for this entry.

 Entering a comment is optional.

SNMP ID:

2.70.7.8

Telnet path:**Setup > IPv6 > WAN-Interfaces > Comment****Possible values:**

Max. 64 characters

Default:

Blank

2.70.7.9 DaD attempts

Before the device can use an IPv6 address on an interface, it uses 'Duplicate Address Detection (DAD)' to check to see whether the IPv6 address already exists on the local network. In this way the device avoids address conflicts on the network.

This option specifies the number of times that the device attempts to find duplicate IPv6 addresses on the network.

SNMP ID:

2.70.7.9

Telnet path:**Setup > IPv6 > WAN-Interfaces > DaD-Attempts****Possible values:**

Max. 1 number

Default:

1

2.70.7.10 PD mode

For cellular networks with IPv6 support, the support of DHCPv6 prefix delegation is only expected to be provided with 3GPP Release 10. So for cellular networks earlier than Release 10, the only way to assign just one /64 prefix to a terminal device is, for example, by using router advertisements. In the case of smartphones or laptops, this method allows IPv6 support to be implemented relatively simply. However, each IPv6 router needs at least one additional prefix that it can propagate to clients on the LAN.

IPv6 prefix delegation from the WWAN into the LAN makes it possible for clients to use the /64 prefix, as assigned on the WAN cellular network side, to be used on the LAN. This makes it possible to operate a router in an IPv6 cellular network without DHCPv6 prefix delegation and neighbor discovery proxy (ND proxy). The router announces the assigned /64 prefix by router advertisement on the LAN, rather than adding it at the WAN interface. Clients can then generate an address from this prefix and use it for IPv6 communication.

This option allows you to set the way in which the router performs the prefix delegation:

- DHCPv6: Prefix delegation via DHCPv6
- Router advertisement: Prefix delegation via router advertisement, in which case the DHCPv6 client is not activated.

SNMP ID:

2.70.7.10

Telnet path:**Setup > IPv6 > WAN-Interfaces****Possible values:**

DHCPv6

Router advertisement

Default:

DHCPv6

2.70.10 Operating

Switches the IPv6 stack on or off, globally. With the IPv6 stack deactivated, the device does not perform any IPv6-related functions.

SNMP ID:

2.70.10

Telnet path:**Setup > IPv6 > Operating****Possible values:**

Yes

No

Default:

No

2.70.11 Forwarding

If forwarding is turned off, the device transmits no data packets between IPv6 interfaces.

 Forwarding is essential if you wish to operate the device as a router.

SNMP ID:

2.70.11

Telnet path:**Setup > IPv6 > Forwarding****Possible values:**

Yes

No

Default:

Yes

2.70.12 Router

These are the router settings.

SNMP ID:

2.70.12

Telnet path:**Setup > IPv6 > Router**

2.70.12.1 Routing table

The table contains the entries to be used for routing packets with IPv6 addresses.

SNMP ID:

2.70.12.1

Telnet path:**Setup > IPv6 > Router > Routing-Table**

2.70.12.1.1 Prefix

This prefix denotes the network range from which the current remote site, e.g. 2001:db8::/32, is to receive data

SNMP ID:

2.70.12.1.1

Telnet path:**Setup > IPv6 > Router > Routing-Table > Prefix****Possible values:**

Max. 43 characters

Default:

Blank

2.70.12.1.2 Routing tag

Specify the routing tag for this route. This route is active only for packets with the same tag. The data packets receive the routing tag either from the firewall or depending on the LAN or WAN interface used.

 Routing tags are only necessary if used in combination with routing tags as set by firewall rules or as set at an interface.

SNMP ID:

2.70.12.1.2

Telnet path:**Setup > IPv6 > Router > Routing-Table > Routing-Tag****Possible values:**

Max. 5 characters

Default:

Blank

2.70.12.1.3 Peer or IPv6

This is where you specify the remote site for this route. Enter one of the following options:

- An interface name
- An IPv6 address (e.g. 2001:db8::1)
- An interface supplemented with a link-local address (e.g. fe80::1%INTERNET)

 The device stores the remote sites for IPv6 routing as (*WAN interfaces*).

SNMP ID:

2.70.12.1.3

Telnet path:**Setup > IPv6 > Router > Routing-Table > Peer-or-IPv6****Possible values:**

Max. 56 characters

Default:

Blank

2.70.12.1.4 Comment

Enter a descriptive comment for this entry.

 Entering a comment is optional.

SNMP ID:

2.70.12.1.4

Telnet path:**Setup > IPv6 > Router > Routing-Table > Comment**

Possible values:

Max. 64 characters

Default:

Blank

2.70.12.2 Destination cache timeout

The 'destination cache timeout' specifies how long the device remembers the path to a destination address when no packets are sent to it.

This value also influences the length of time the device takes to change the settings of the firewall: It accepts state changes after at least half of the 'destination cache timeout' time, on average after one quarter of the timeout. Thus with the default setting of 30 seconds, changes to the firewall come into effect on average after 7.5 seconds, but no later than after 15 seconds.

SNMP ID:

2.70.12.2

Telnet path:**Setup > IPv6 > Router > Dest.-Cache-Timeout****Possible values:**

Max. 3 characters

Default:

30 seconds

2.70.13 ICMPv6

This menu contains the settings for ICMPv6.

SNMP ID:

2.70.13

Telnet path:**Setup > IPv6****2.70.13.1 Interface-Name**

Specify the name of the interface for which you want to configure ICMPv6. These may be LAN interfaces or WAN interfaces (remote stations), such as "INTRANET" or "INTERNET".

SNMP ID:

2.70.13.1

Telnet path:**Setup > IPv6 > ICMPv6****Possible values:**

Selection from the list of LAN/WAN interfaces defined in the device; max. 16 characters

Default:

2.70.13.2 Error-Bandwidth

With this setting you define the bandwidth (in kbps) which is available to the ICMPv6 protocol for sending error messages. Reduce this value in order to reduce the network load due to ICMPv6 messages.

SNMP ID:

2.70.13.2

Telnet path:

Setup > IPv6 > ICMPv6

Possible values:

0 to 99999

Default:

1000

2.70.13.3 Redirects

You enable or disable ICMP redirects with this setting. ICMP IPv6 neighbor redirect messages make it possible for the device to inform its hosts about a destination address by using a more direct path (e.g., the shorter one, measured by the number of hops).

SNMP ID:

2.70.13.3

Telnet path:

Setup > IPv6 > ICMPv6

Possible values:

Activating the

Deactivating an

Default:

Activating the

2.71 IEEE802.11u

The tables and parameters in this menu are used to make all settings for connections according to IEEE 802.11u and Hotspot 2.0.

SNMP ID:

2.71

Telnet path:

Setup

2.71.1 ANQP profiles

Using this table you manage the profile lists for IEEE802.11u or ANQP. IEEE802.11u profiles give you the ability to group certain ANQP elements and to independently assign them to logical WLAN interfaces in the table **Setup > Interfaces > WLAN > IEEE802.11u** under **IEEE802.11u-Profile**. These elements include, for example, information about your OIs, domains, roaming partners and their authentication methods. Some of the elements are located in other profile lists.

SNMP ID:

2.71.1

Telnet path:**Setup > IEEE802.11u**

2.71.1.1 Name

Assign a name for the IEEE802.11 profile here. You specify this name later in the table **Setup > Interfaces > WLAN > IEEE802.11u** under **IEEE802.11u-Profile**.

SNMP ID:

2.71.1.1

Telnet path:**Setup > IEEE802.11u > ANQP-Profiles****Possible values:**

String, max. 32 characters

Default:

2.71.1.2 Include in beacon OUI

Organizationally Unique Identifier, abbreviated as OUI, simplified as OI. As the hotspot operator, you enter the OI of the roaming partner with whom you have agreed a contract. If you are the hotspot operator as well as the service provider, enter the OI of your roaming consortium or your own OI. A roaming consortium consists of a group of service providers which have entered into mutual agreements regarding roaming. In order to get an OI, this type of consortium – as well as an individual service provider – must register with IEEE.

It is possible to specify up to 3 parallel OIs, in case you, as the operator, have roaming agreements with several partners. Multiple OIs can be provided in a comma-separated list, such as 00105E, 00017D, 00501A.



This device transmits the specified OI(s) in its beacons. If a device should transmit more than 3 OIs, these can be configured under **Additional-OUI**. However, additional OIs are not transferred to a station until after the GAS request. They are not immediately visible to the stations!

SNMP ID:

2.71.1.2

Telnet path:**Setup > IEEE802.11u > ANQP-Profiles****Possible values:**

OI, max. 65 characters. Multiple OIs can be provided in a comma-separated list.

Default:

2.71.1.3 Additional OUI

Enter the OI(s) that the device also sends to a station after a GAS request. Multiple OIs can be provided in a comma-separated list, such as 00105E, 00017D, 00501A.

SNMP ID:

2.71.1.3

Telnet path:

Setup > IEEE802.11u > ANQP-Profiles

Possible values:

OI, max. 65 characters. Multiple OIs can be provided in a comma-separated list.

Default:

2.71.1.4 Domain list

Enter one or more domains that are available to you as a hotspot operator. Multiple domain names are separated by a comma separated list, such as `providerX.org`, `provx-mobile.com`, `wifi.mnc410.provX.com`. For subdomains it is sufficient to specify only the highest qualified domain name. If a user configured a home provider on his device, e.g., `providerX.org`, this domain is also assigned to access points with the domain name `wi-fi.providerX.org`. When searching for suitable hotspots, a station always prefers a hotspot from his home provider in order to avoid possible roaming costs.

SNMP ID:

2.71.1.4

Telnet path:

Setup > IEEE802.11u > ANQP-Profiles

Possible values:

String, max. 65 characters Multiple domains can be provided in a comma-separated list.

Default:

2.71.1.5 NAI realm list

Enter a valid NAI realm profile in this field.

SNMP ID:

2.71.1.5

Telnet path:

Setup > IEEE802.11u > ANQP-Profiles

Possible values:

Name from table **Setup > IEEE802.11u > NAI-Realms**, max. 65 characters

Default:

2.71.1.6 Cellular list

Enter a valid cellular network profile in this field.

SNMP ID:

2.71.1.6

Telnet path:

Setup > IEEE802.11u > ANQP-Profiles

Possible values:

Name from table **Setup > IEEE802.11u > Cellular-Network-Information-List**, max. 65 characters

Default:

2.71.1.7 Network authentication type list

Enter one or more valid authentication parameters in this field.

SNMP ID:

2.71.1.7

Telnet path:

Setup > IEEE802.11u > ANQP-Profiles

Possible values:

Name from table **Setup > IEEE802.11u > Network-Authentication-Type**, max. 65 characters Multiple names can be provided in a comma-separated list.

Default:

2.71.3 Venue name

In this table, enter general information about the location of the access point.

In the event of a manual search, additional details on the location information help a user to select the correct hotspot. If more than one operator (e.g., multiple cafés) in a single hotspot zone uses the same SSID, the user can clearly identify the appropriate location using the venue information.

SNMP ID:

2.71.3

Telnet path:

Setup > IEEE802.11u

2.71.3.1 Name

Enter a name for the list entry in the table, such as a language pair description or an index number.

SNMP ID:

2.71.3.1

Telnet path:

Setup > IEEE802.11u > Venue-Name

Possible values:

String, max. 32 characters

Default:

Blank

2.71.3.2 Venue name

Enter a short description of the location of your device for the selected language.

SNMP ID:

2.71.3.2

Telnet path:

Setup > IEEE802.11u > Venue-Name

Possible values:

String, max. 252 characters

Default:

Blank

2.71.3.3 Language

Select the language in which you store information about the location.

SNMP ID:

2.71.3.3

Telnet path:

Setup > IEEE802.11u > Venue-Name

Possible values:

None

English

Deutsch

Chinese

Spanish

French

Italian

Russian

Dutch

Turkish

Portuguese

Polish

Czech

Arabian

Default:

None

2.71.4 Cellular network information list

Using this table, you manage the profile lists for the cellular networks. With these lists you have the ability to group certain ANQP elements. These include the network and country codes of the hotspot operator and its roaming partners. Based on the information stored here, stations with SIM or USIM cards use this list to determine if the hotspot operator belongs to their cellular network company or has a roaming agreement with their cellular network company.

In the setup menu you assign this list to an ANQP profile using this table **ANQP-Profiles**.

SNMP ID:

2.71.4

Telnet path:

Setup > IEEE802.11u

2.71.4.1 Name

Assign a name for the cellular network profile, such as an abbreviation of the network operator in combination with the cellular network standard used. You specify this name later in the table **Setup > IEEE802.11u > IEEE802.11u** under **Cellular-List**.

SNMP ID:

2.71.4.1

Telnet path:

Setup > IEEE802.11u > Cellular-Network-Information-List

Possible values:

String, max. 32 characters

Default:

2.71.4.2 Country code

Enter the Mobile Country Code (MCC) of the hotspot operator or its roaming partners, consisting of 2 or 3 characters, e.g., 262 for Germany.

SNMP ID:

2.71.4.2

Telnet path:

Setup > IEEE802.11u > Cellular-Network-Information-List

Possible values:

String, max. 3 characters

Default:

2.71.4.3 Network code

Enter the Mobile Network Code (MNC) of the hotspot operator or its roaming partners, consisting of 2 or 3 characters.

SNMP ID:

2.71.4.3

Telnet path:

Setup > IEEE802.11u > Cellular-Network-Information-List

Possible values:

String, max. 3 characters

Default:

2.71.5 Network authentication type

Using this table, you manage addresses to which the device forwards stations for an additional authentication step after the station has been successfully authenticated by the hotspot operator or any of its roaming partners. Only one forwarding entry is allowed for each authentication type.

SNMP ID:

2.71.5

Telnet path:

Setup > IEEE802.11u

2.71.5.1 Network authentication type

Choose the context from the list, which applies before forwarding.

SNMP ID:

2.71.5.1

Telnet path:

Setup > IEEE802.11u > Network-Authentication-Type

Possible values:

- **Accept-Terms-Cond:** An additional authentication step is set up that requires the user to accept the terms of use.
- **Online-Enrollment:** An additional authentication step is set up that requires the user to register online first.
- **Http-Redirection:** An additional authentication step is set up to which the user is forwarded via HTTP.
- **DNS-Redirection:** An additional authentication step is set up to which the user is forwarded via DNS.

Default:

Accept-Terms-Cond

2.71.5.2 Redirect URL

Enter the address to which the device forwards stations for additional authentication.

SNMP ID:

2.71.5.2

Telnet path:

Setup > IEEE802.11u > Network-Authentication-Type

Possible values:

URL, max. 65 characters

Default:

2.71.5.3 Name

Assign a name for the table entry, e.g., `Accept Terms and Conditions`.

SNMP ID:

2.71.5.3

Telnet path:

Setup > IEEE802.11u > Network-Authentication-Type

Possible values:

String, max. 32 characters

Default:

2.71.6 ANQP general

The general settings for ANQP are made in this menu.

SNMP ID:

2.71.6

Telnet path:

Setup > IEEE802.11u

2.71.6.1 Venue group

The venue group describes the environment where you set up the access point. You define them globally for all languages. The possible values, which are set by the venue group code, are specified in the 802.11u standard.

SNMP ID:

2.71.6.1

Telnet path:

Setup > IEEE802.11u > ANQP-General

Possible values:

- `Unspecified`: Unspecified
- `Assembly`: Assembly
- `Business`: Business

- Educational: Educational:
- Factory-and-Industry: Factory and industry
- Institutional: Institutional
- Mercantile: Commerce
- Residential: Residence hall
- Storage: Warehouse
- Utility-and-Miscellaneous: Utility and miscellaneous
- Vehicular: Vehicle
- Outdoor: Outdoor

Default:

Unspecified

2.71.6.2 Venue type

Using the location type code (venue type), you have the option to specify details for the location group. These values are also specified by the standard. The possible type codes can be found in the following table.

SNMP ID:

2.71.6.2

Telnet path:**Setup > IEEE802.11u > ANQP-General****Possible values:****Table 13: Overview of possible values for venue groups and types**

Venue group	Code = Venue type code
Unspecified	
Assembly	<ul style="list-style-type: none"> ■ 0 = unspecified assembly ■ 1 = stage ■ 2 = stadium ■ 3 = passenger terminal (e.g., airport, bus station, ferry terminal, train station) ■ 4 = amphitheater ■ 5 = amusement park ■ 6 = place of worship ■ 7 = convention center ■ 8 = library ■ 9 = museum ■ 10 = restaurant ■ 11 = theater ■ 12 = bar ■ 13 = café ■ 14 = zoo, aquarium ■ 15 = emergency control center
Business	<ul style="list-style-type: none"> ■ 0 = unspecified business ■ 1 = doctor's office ■ 2 = bank ■ 3 = fire station ■ 4 = police station ■ 6 = post office

Venue group	Code = Venue type code
	<ul style="list-style-type: none"> ■ 7 = office ■ 8 = research facility ■ 9 = law firm
Educational:	<ul style="list-style-type: none"> ■ 0 = unspecified education ■ 1 = primary school ■ 2 = secondary school ■ 3 = college
Factory and industry	<ul style="list-style-type: none"> ■ 0 = unspecified factory and industry ■ 1 = factory
Institutional	<ul style="list-style-type: none"> ■ 0 = unspecified institution ■ 1 = hospital ■ 2 = long-term care facility (e.g., nursing home, hospice) ■ 3 = rehabilitation clinic ■ 4 = organizational association ■ 5 = prison
Commerce	<ul style="list-style-type: none"> ■ 0 = unspecified commerce ■ 1 = retail store ■ 2 = food store ■ 3 = auto repair shop ■ 4 = shopping center ■ 5 = gas station
Halls of residence	<ul style="list-style-type: none"> ■ 0 = unspecified residence hall ■ 1 = private residence ■ 2 = hotel or motel ■ 3 = student housing ■ 4 = guesthouse
Warehouse	<ul style="list-style-type: none"> ■ 0 = unspecified warehouse
Utility and miscellaneous	<ul style="list-style-type: none"> ■ 0 = unspecified service and miscellaneous
Vehicular	<ul style="list-style-type: none"> ■ 0 = unspecified vehicle ■ 1 = passenger or transport vehicles ■ 2 = aircraft ■ 3 = bus ■ 4 = ferry ■ 5 = ship or boat ■ 6 = train ■ 7 = motorcycle
Outdoor	<ul style="list-style-type: none"> ■ 0 = unspecified outdoor ■ 1 = municipal Wi-Fi network (wireless mesh network) ■ 2 = city park ■ 3 = rest area ■ 4 = traffic control ■ 5 = bus stop ■ 6 = kiosk

Default:

0

2.71.6.5 IPv4 address type

Using this entry you inform an IEEE802.11u-capable station whether the address it receives after successful authentication on the operator's Hotspot is of type IPv4.

SNMP ID:

2.71.6.5

Telnet path:**Setup > IEEE802.11u > ANQP-General****Possible values:****Not-Available**

IPv4 address type is not available.

Public-Addr-Available

Public IPv4 address is available.

Port-Restr-Addr-Avail

Port-restricted IPv4 address is available.

Single-Nat-Priv-Addr-Avail

Private, single NAT-masked IPv4 address is available.

Double-Nat-Priv-Addr-Avail

Private, double NAT-masked IPv4 address is available.

Port-Restr-Single-Nat-Addr-Avail

Port-restricted IPv4 address and single NAT-masked IPv4 address is available.

Port-Restr-Double-Nat-Addr-Avail

Port-restricted IPv4 address and double NAT-masked IPv4 address is available.

Availability-not-known

The availability of an IPv4 address type is unknown.

Default:

Single-Nat-Priv-Addr-Avail

2.71.6.6 IPv6 address type

Using this entry you inform an IEEE802.11u-capable station whether the address it receives after successful authentication on the operator's Hotspot is of type IPv6.

SNMP ID:

2.71.6.6

Telnet path:**Setup > IEEE802.11u > ANQP-General****Possible values:****Not-Available**

IPv6 address type is not available.

Available

IPv6 address type is available.

Availability-not-known

The availability of an IPv6 address type is unknown.

Default:

Not-Available

2.71.7 Hotspot2.0

The general settings for Hotspot 2.0 are made in this menu.

SNMP ID:

2.71.7

Telnet path:

Setup > IEEE802.11u

2.71.7.1 Operator list

Using this table you manage the plain text name of the hotspot operator. An entry in this table offers you the ability to send a user-friendly operator name to the stations, which they can then display instead of the realms. However, whether they actually do that depends on their implementation.

SNMP ID:

2.71.7.1

Telnet path:

Setup > IEEE802.11u > Hotspot2.0

2.71.7.1.1 Name

Assign a name for the entry, such as an index number or combination of operator-name and language.

SNMP ID:

2.71.7.1.1

Telnet path:

Setup > IEEE802.11u > Hotspot2.0 > Operator-List

Possible values:

String, max. 32 characters

Default:

2.71.7.1.2 Operator name

Enter the plain text name of the hotspot operator.

SNMP ID:

2.71.7.1.2

Telnet path:**Setup > IEEE802.11u > Hotspot2.0 > Operator-List****Possible values:**

String, max. 252 characters

Default:

Blank

2.71.7.1.4 Language

Select a language for the hotspot operator from the list.

SNMP ID:

2.71.7.1.4

Telnet path:**Setup > IEEE802.11u > Hotspot2.0 > Operator-List****Possible values:**

None
English
Deutsch
Chinese
Spanish
French
Italian
Russian
Dutch
Turkish
Portuguese
Polish
Czech
Arabian

Default:

None

2.71.7.2 Connection capability

This table contains a fixed list of connection capabilities. Possible status values for each of these services are "closed" (-C), "Open" (-O) or "unknown" (-U):

SNMP ID:

2.71.7.2

Telnet path:

Setup > IEEE802.11u > Hotspot2.0

2.71.7.2.4 Name

This entry displays the name of the connection capability that you referenced as a comma-separated list in the table **Hotspot2.0-Profiles** in the input field **Connection-Capabilities** (SNMP ID 2.71.7.9.3).

SNMP ID:

2.71.7.2.4

Telnet path:

Setup > IEEE802.11u > Hotspot2.0 > Connection-Capability

2.71.7.4 Link status

Using this entry, you specify the connectivity status of your device to the Internet.

SNMP ID:

2.71.7.4

Telnet path:

Setup > IEEE802.11u > Hotspot2.0

Possible values:

- **Auto**: The device determines the status value for this parameter automatically
- **Link-Up**: The connection to the Internet is established.
- **Link-Down**: The connection to the Internet is interrupted.
- **Link-Test**: The connection to the Internet is being established or is being checked.

Default:

Auto

2.71.7.7 Downlink speed

Using this entry, you enter the nominal value for the maximum receiving bandwidth (downlink) that is available to a client logged in to your hotspot. The bandwidth itself can be defined using the Public Spot module.

SNMP ID:

2.71.7.7

Telnet path:

Setup > IEEE802.11u > Hotspot2.0

Possible values:

0 to 4294967295, in Kbit/s

Default:

0

2.71.7.8 Uplink speed

Using this entry you can enter the nominal value for the maximum transmission bandwidth (uplink) that is available to a client logged in to your hotspot. The bandwidth itself can be defined using the Public Spot module.

SNMP ID:

2.71.7.8

Telnet path:**Setup > IEEE802.11u > Hotspot2.0****Possible values:**

0 to 4294967295, in kbps

Default:

0

2.71.7.9 Hotspot2.0-Profiles

Using this table you manage the profile lists for the Hotspot 2.0. Hotspot 2.0 profiles allow you to group certain ANQP elements (from the Hotspot 2.0 specification) and to independently assign logical WLAN interfaces in the table **Setup > Interfaces > WLAN > IEEE802.11u** under **HS20-Profile**. These include, for example, the operator-friendly name, the connection capabilities, operating class and WAN metrics. Some of the elements are located in other profile lists.

SNMP ID:

2.71.7.9

Telnet path:**Setup > IEEE802.11u > Hotspot2.0**

2.71.7.9.1 Name

Assign a name for the Hotspot 2.0 profile here. You specify this name later in the table **Setup > Interfaces > WLAN > IEEE802.11u** under **HS20-Profile**.

SNMP ID:

2.71.7.9.1

Telnet path:**Setup > IEEE802.11u > Hotspot2.0 > Hotspot2.0****Possible values:**

String, max. 32 characters

Default:

2.71.7.9.2 Operator name

Enter a valid profile for hotspot operators in this field.

SNMP ID:

2.71.7.9.2

Telnet path:

Setup > IEEE802.11u > Hotspot2.0 > Hotspot2.0

Possible values:

Name from table **Setup > IEEE802.11u > Hotspot2.0 > Operator-List**, max. 65 characters

Default:**2.71.7.9.3 Connection capabilities**

Enter one or more valid entries for the connection capabilities in this field. Before joining a network, stations use the information stored in this list to determine whether your hotspot even allows the required services (e.g., Internet access, SSH, VPN). For this reason, the fewest possible entries should be entered with the status "unknown".

SNMP ID:

2.71.7.9.3

Telnet path:

Setup > IEEE802.11u > Hotspot2.0 > Hotspot2.0

Possible values:

Name from table **Setup > IEEE802.11u > Hotspot2.0 > Connectivity-Capability**, max. 252 characters
Multiple names can be provided in a comma-separated list.

Default:**2.71.7.9.4 Operating class**

Enter the code for the global operating class of the access point. Using the operating class, you inform a station on which frequency bands and channels your access point is available. Example:

- 81: Operation at 2.4 GHz with channels 1-13
- 11.6: Operation at 40 MHz with channels 36 and 44

Please refer to the IEEE standard 802.11-2012, Appendix E, Table E-4, for the operating class that corresponds to your device: Global operating classes, available at standards.ieee.org.

SNMP ID:

2.71.7.9.4

Telnet path:

Setup > IEEE802.11u > Hotspot2.0 > Hotspot2.0

Possible values:

Operating class code, max. 32 characters

Default:**2.71.8 Authentication parameter**

This table contains a set list of possible authentication parameters for the NAI realms, as referenced by a comma-separated list in the table **NAI realms** in the input field **Auth parameter**.

Table 14: Overview of possible authentication parameters

Parameters	Sub-parameters	Comment
NonEAPAuth.		Identifies the protocol that the realm requires for phase 2 authentication:
	PAP	Password Authentication Protocol
	CHAP	Challenge Handshake Authentication Protocol, original CHAP implementation, specified in RFC 1994
	MSCHAP	Implementation of Microsoft CHAP V1, specified in RFC 2433
	MSCHAPV2	Implementation of Microsoft CHAP V2, specified in RFC 2759
Credentials.		Describes the type of authentication that the realm accepts:
	SIM	SIM card
	USIM	USIM card
	NFCSecure	NFC chip
	HWToken*	Hardware token
	SoftToken*	Software token
	Certificate	Digital certificate
	UserPass	Username and password
	None	No credentials required
TunnelEAPCredentials.*		
	SIM*	SIM card
	USIM*	USIM card
	NFCSecure*	NFC chip
	HWToken*	Hardware token
	SoftToken*	Software token
	Certificate*	Digital certificate
	UserPass*	Username and password
Anonymous*	Anonymous login	

*) The specific parameter or sub-parameter is reserved for future uses within the framework of Passpoint™ certification, but currently is not in use.

SNMP ID:

2.71.8

Telnet path:**Setup > IEEE802.11u****2.71.8.1 Name**

This entry displays the name of the authentication parameters that you referenced as a comma-separated list in the table **NAI-Realms** in the input field **Auth-Parameter** (SNMP ID 2.71.9.4).

SNMP ID:

2.71.8.1

Telnet path:**Setup > IEEE802.11u > Auth-Parameter**

2.71.9 NAI realms

Using this table you manage the profile lists for the NAI realms. With these lists you have the ability to group certain ANQP elements. These include the realms of the hotspot operator and its roaming partners, as well as the associated authentication methods and parameters. Stations use the information stored in this list to determine whether they have the hotspot operator or one of its roaming partners have valid credentials.

In the setup menu you assign this list to an ANQP profile using the table **ANQP-Profiles**.

SNMP ID:

2.71.9

Telnet path:**Setup > IEEE802.11u**

2.71.9.1 Name

Assign a name for the NAI realm profile, such as the name of the service provider or service to which the NAI realm belongs. You specify this name later in the table **Setup > IEEE802.11u > IEEE802.11u** under **NAI-Realm-List**.

SNMP ID:

2.71.9.1

Telnet path:**Setup > IEEE802.11u > NAI-Realms****Possible values:**

String, max. 32 characters

Default:

2.71.9.2 NAI realm

Enter the realm for the Wi-Fi network. The identification of the NAI realm consists of the username and a domain, which can be extended using regular expressions. The syntax for an NAI realm is defined in IETF RFC 2486 and, in the simplest case, is <username>@<realm>, for `user746@providerX.org`, and therefore the corresponding realm is `providerX.org`.

SNMP ID:

2.71.9.2

Telnet path:**Setup > IEEE802.11u > NAI-Realms****Possible values:**

String, max. 32 characters

Default:

2.71.9.3 EAP method

Select a language for the NAI realm from the list. EAP stands for the authentication profile (Extensible Authentication Protocol), followed by the corresponding authentication procedure

SNMP ID:

2.71.9.3

Telnet path:

Setup > IEEE802.11u > NAI-Realms

Possible values:

- **None:** Select this setting when the relevant NAI realm does not require authentication.
- **EAP-TLS:** Authentication using Transport Layer Security (TLS). Select this setting when authentication via the relevant NAI realm is performed by a digital certificate installed by the user.
- **EAP-SIM:** Authentication via the Subscriber Identity Module (SIM). Select this setting when authentication via the relevant NAI realm is performed by the GSM Subscriber Identity Module (SIM card) of the station.
- **EAP-TTLS:** Authentication via Tunneled Transport Layer Security (TTLS). Select this setting when authentication via the relevant NAI real is performed using a username and password. For security reasons, the connection is tunneled for this method.
- **EAP-AKA:** Authentication using Authentication and Key Agreement (AKA). Select this setting when authentication via the relevant NAI realm is performed by the UMTS Subscriber Identity Module (USIM card) of the station.

Default:

None

2.71.9.4 Authentication parameter

In this field, enter the appropriate authentication parameters for the EAP method using a comma-separated list, e.g., for EAP-TTLS `NonEAPAuth.MSCHAPV2,Credential.UserPass` or for EAP-TLS `Credentials.Certificate`.

SNMP ID:

2.71.9.4

Telnet path:

Setup > IEEE802.11u > NAI-Realms

Possible values:

Name from table **Auth.-parameter**, max. 65 characters. Multiple names are separated by commas.

Default:

2.83 SMS

This menu contains the settings for the SMS module that handles the sending and receiving of text messages (SMS).

SNMP ID:

2.83

Telnet path:**Setup**

2.83.1 SMSC address

This parameter allows you to configure an alternative number for the "short message service center" (SMSC).

By default, the device uses the phone number stored in the USIM card, which you can view by calling the status value **SMSC number** (*SNMP ID 1.83.5*). The SMS messages can be sent to a specific SMSC if you specify a different phone number.

SNMP ID:

2.83.1

Telnet path:**Setup > SMS****Possible values:**

Valid SMSC phone number, max. 31 characters

Default:

2.83.2 Inbox size

This parameter lets you set the maximum number of text messages stored in the device inbox. If the preset number is exceeded, the oldest message will be deleted. In this case there is **no** SYSLOG entry.

SNMP ID:

2.83.2

Telnet path:**Setup > SMS****Possible values:**

0 to 999999

Special values:

0: This value disables the limit, i.e. an unlimited number of messages will be stored.

Default:

100

2.83.3 Outbox size

This parameter lets you set the maximum number of text messages stored in the device outbox. If the preset number is exceeded, the oldest message will be deleted. In this case there is **no** SYSLOG entry.

SNMP ID:

2.83.3

Telnet path:**Setup > SMS**

Possible values:

0 to 999999

Special values:

0: This value disables the limit, i.e. an unlimited number of messages will be stored.

Default:

100

2.83.4 Outbox preservation

This parameter defines what the device does with sent text messages.

SNMP ID:

2.83.4

Telnet path:**Setup > SMS****Possible values:**

- **None:** Sent messages are not saved.
- **All:** Sent messages are saved permanently.

Default:

All

2.83.5 Mail-Forward-Addr.

This parameter sets an optional e-mail address, to which the device will forward any incoming text messages.



E-mail routing will only work if a valid SMTP account is configured in the device.

SNMP ID:

2.83.5

Telnet path:**Setup > SMS****Possible values:**

Any valid e-mail address, max. 31 characters

Default:

2.83.8 Syslog

This parameter specifies if and how the arrival of text messages is logged to the SYSLOG.

SNMP ID:

2.83.8

Telnet path:**Setup > SMS**

Possible values:

- **No:** Incoming text messages are not logged to SYSLOG.
- **SenderOnly:** The arrival of a text message is recorded to the SYSLOG together with the sender's phone number.
- **Full:** The arrival of a text message is recorded to the SYSLOG together with the sender's phone number and the message in full.

Default:

No

2.200 SIP ALG

Configure the settings for the SIP ALG here.

SNMP ID:

2.200

Telnet path:**Setup**

2.200.1 Operating

This setting determines whether the SIP ALG is enabled.

SNMP ID:

2.200.1

Telnet path:**Setup > SIP-ALG****Possible values:**

Yes

No

Default:

No

2.200.2 Firewall-Override

This parameter determines whether the firewall applies reject rules to SIP packets or whether the packets are always forwarded by the SIP-ALG.

SNMP ID:

2.200.2

Telnet path:**Setup > SIP-ALG**

Possible values:**No**

The firewall applies reject rules to SIP packets.

Yes

The firewall does not apply reject rules to SIP packets. Data packets are always forwarded by the SIP-ALG.

Default:

Yes

3 Firmware

This menu contains the actions and settings options for managing the device firmware.

Telnet path: /Firmware

3.1 Version table

This table contains information about the firmware version and serial number of the device.

Telnet path: /Firmware/Version-Table

3.1.1 Interface

The interface referred to by the entry.

Telnet path: /Firmware/Version-Table/Ifc

3.1.2 Module

Full description of the device type.

Telnet path: /Firmware/Version-Table/Module

3.1.3 Version

The firmware version currently active in the device, along with the release date.

Telnet path: /Firmware/Version-Table/Version

3.1.4 Serial number

The device serial number.

Telnet path: /Firmware/Version-Table/Serial-Number

3.2 Table Firmsafe

For each of the two firmware versions stored in the device, this table contains information on the memory space number (1 or 2), the status (active or inactive), the firmware version number, the date, the size, and the index (sequential number).

Telnet path: /Firmware/Table-Firmsafe

3.2.1 Position

Position in memory space of the current entry.

Telnet path: /Firmware/Table-Firmsafe/Position

3.2.2 Status

Status of the current entry.

Possible values:

- Inactive: This firmware is in a wait state and can be activated.
- Active: This firmware is currently in use in the device.
- Loader: This entry is not a firmware version but a loader with offering supporting functions.

Telnet path: /Firmware/Table-Firmsafe/Status

3.2.3 Version

Version descriptor of the firmware for the current entry.

Telnet path: /Firmware/Table-Firmsafe/Version

3.2.4 Date

Release date of the firmware for the current entry.

Telnet path: /Firmware/Table-Firmsafe/Date

3.2.5 Size

Size of the firmware for the current entry.

Telnet path: /Firmware/Table-Firmsafe/Size

3.2.6 Index

Index for the current entry.

Telnet path: /Firmware/Table-Firmsafe/Index

3.3 Firmsafe mode

Only one of the two firmware versions stored in the device can be active at any time. When new firmware is uploaded, the currently inactive firmware version will be overwritten. The firmsafe mode lets you decide which firmware is to be activated after the upload.

Possible values:

- Immediate: This option allows you to upload the new firmware and activate it immediately. The following situations can arise:

The new firmware is uploaded successfully and it then becomes active as desired. Everything is OK.

After uploading the firmware the device no longer responds. If an error occurred during the upload, the device will automatically activate the previous firmware and will restart.

- Login: To respond to the problems of a faulty upload, there is a second option to upload and immediately activate the firmware.

In contrast to the first variant, the device then waits for firmsafe timeout while waiting for a successful login via telnet, a terminal program or WEBconfig. Only after this login is the firmware activated.

If the device stops responding or it is not possible to login, then the old firmware is activated automatically and the device starts again.

3 Firmware

- **Manually:** The third option allows you set a time period in which you can test the new firmware. The device starts with the new firmware and waits for the set time period for the uploaded firmware to be activated manually, in which case it will be activated permanently. Under LANconfig you activate the new firmware with Device > Firmware management > Release tested firmware, under telnet under 'Firmware/Firmsafe-Table' with the command 'set # active', where # is the position of the firmware in the firmsafe table. Under WEBconfig you will find the firmsafe table under Firmware in the Expert configuration.

Default:

- Immediate

It is only possible to upload a second firmware if the device has sufficient memory available for two complete firmware versions. Up-to-date firmware versions (with additional software options, if applicable) may take up more than half of the available memory in older hardware models. In this case these device uses the asymmetric Firmsafe.

Telnet path: /Firmware/Firmsafe-Mode

3.4 Firmsafe timeout

The time in seconds for testing new firmware.

Possible values:

- 0 to 99999 seconds.

Default:

- 300 seconds

Telnet path: /Firmware/Timeout-Firmsafe

3.7 Feature word

Displays the feature bits that provide information on the options activated in the device.

Telnet path: /Firmware/Feature-Word

4 Other

This menu contains additional functions from the LCOS menu tree.

Telnet path: Other

4.1 Manual dialing

This menu contains the actions for manual connection establishment.

Telnet path: /Other/Manual-Dialing

4.1.1 Connect

This action prompts a connection to be established to a remote site.

For the action parameter you can enter the name of the corresponding remote site.

Telnet path: /Other/Manual-Dialing/Connect

4.1.2 Disconnect

This action causes a connection to a remote site to be disconnected.

For the action parameter you can enter the name of the corresponding remote site.

Telnet path: /Other/Manual-Dialing/Disconnect

4.1.4 Test call

This action test the connection establishment to a remote site.

For the action parameter you can enter the name of the corresponding remote site.

Telnet path: /Other/Manual-Dialing/Testcall

4.2 System boot

This action is used to manually reboot the device.

Telnet path: /Other/Boot-System

4.5 Cold boot

This action is used to reboot the device.

Telnet path: /Other/Cold-Boot

4.6 Voice Call Manager

This menu contains the actions for the Voice Call Manager.

Telnet path: /Other/Voice-Call-Manager

4.6.1 Lines

This menu contains the actions for the Voice Call Manager's lines.

Telnet path: /Other/Voice-Call-Manager/Lines

4.6.1.1 Unregister

This action allows you to select a line used by the Voice Call Manager that is to be unregistered.

For the action parameter you can enter the name of the corresponding line.

Telnet path: /Other/Voice-Call-Manager/Lines/Unregister

4.6.1.2 Register

This action allows you to select a line used by the Voice Call Manager that is to be registered.

For the action parameter you can enter the name of the corresponding line.

Telnet path: /Other/Voice-Call-Manager/Lines/Register

4.6.2 Groups

This menu contains the actions for the Voice Call Manager's groups.

Telnet path: /Other/Voice-Call-Manager/Groups

4.6.2.1 Show

This action allows you to display a group used by the Voice Call Manager.

For the action parameter you can enter the name of the corresponding group.

Telnet path: /Other/Voice-Call-Manager/Groups/Show