



LANCOM 1790-4G Quick Reference Guide

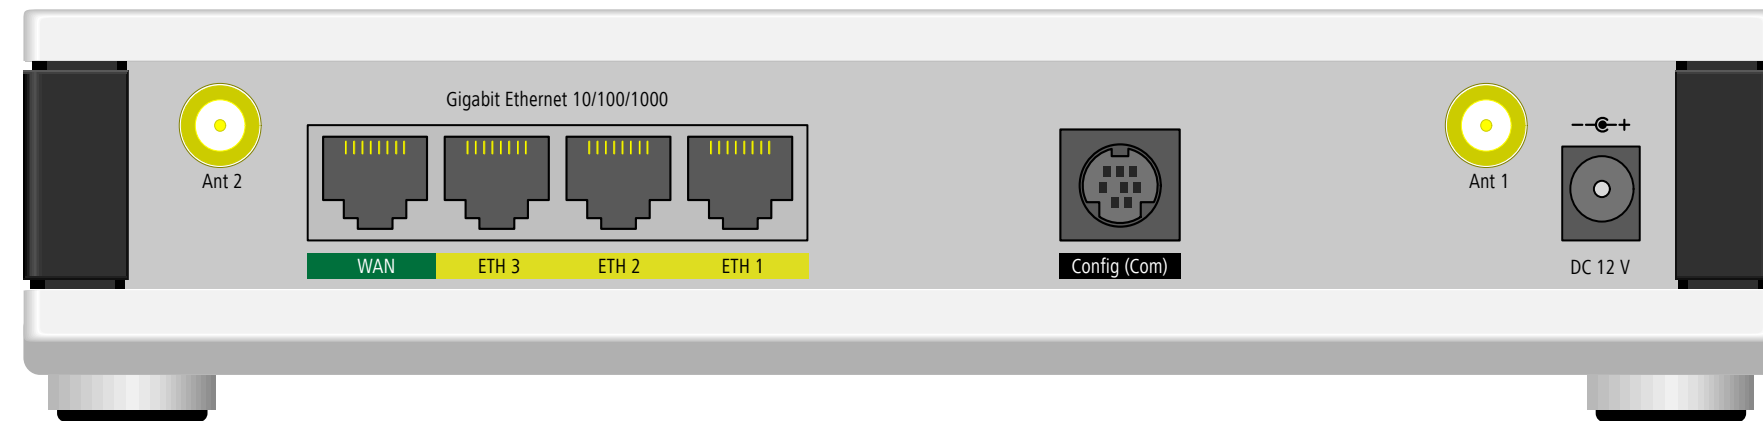



① ② ③ ④ ① ⑤

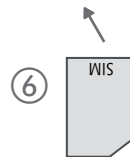

- ① **LTE / 4G antennas**
Connect the two supplied cellular antennas to the connectors Ant 1 and Ant 2.
- ② **WAN interface**
Connect the WAN interface to your WAN modem using the enclosed ethernet cable with the dark green connectors.
- ③ **Ethernet interfaces**
Use the cable with the green-colored connectors to connect one of the interfaces ETH 1 to ETH 3 to your PC or a LAN switch.
- ④ **Configuration interface**
Configuring the device via the serial interface requires a serial configuration cable (available as an accessory).



- ⑤ **Power**
After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.
- ⑥ **SIM card slot (bottom side of the device)**
Release the SIM-card holder and lever it upwards. Slide the SIM card into the guide slot of the SIM-card holder. Press the holder down until it clicks into place.

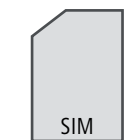


Please observe the following when setting up the device

- > Do not rest any objects on top of the device
- > For devices to be operated on the desktop, please attach the adhesive rubber footpads

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!
Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

- > In case of wall mounting, use the drilling template as supplied
- > Keep the ventilation slots on the side of the device clear of obstruction
- > Rack installation with the optional LANCOM Rack Mount (separately available)

MOUNTING AND CONNECTING THE DEVICE

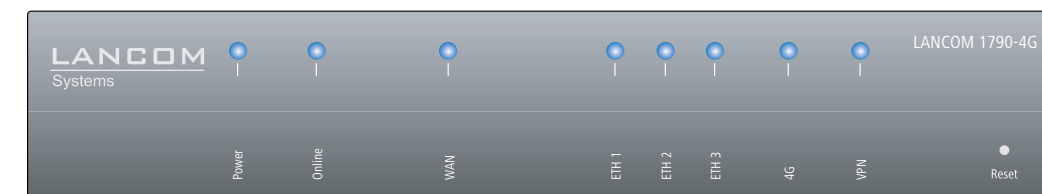

① ② ③ ④ ⑤ ⑥ ⑥

① Power	
Off	Device switched off
Green, permanently*	Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible
Red / green, blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Red, blinking	Hardware error
Red, blinking slowly	Time or charge limit reached/error message occurred
1x green inverse blinking*	Connection to the LMC active, pairing OK, device not claimed
2x green inverse blinking*	Pairing error, resp. LMC activation code not available
3x green inverse blinking*	LMC not accessible, resp. communication error

② Online	
Off	WAN connection inactive
Green, permanently	WAN connection active
Red, permanently	WAN connection error

③ WAN	
Off	Interface deactivated
Orange, blinking	Synchronization with the modem
Orange, permanently	Synchronization with the modem successful
Green, permanently	WAN connection established
Green, flickering	WAN data transmission
Red / orange, blinking	Hardware error, ext. modem

④ ETH	
Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Green, flickering	Data transmission

⑤ 4G	
Off	Cellular interface disabled
Green, permanently	Connection to cellular network active
Green, flickering	Cellular data transfer
Orange, permanently	Logon to cellular network successful
Orange, blinking	Logging on to cellular network
Red, permanently	Hardware error/module unavailable
Red / green, blinking	SIM card error (PIN)
Red / orange, blinking	Uploading module firmware

⑥ VPN	
Off	VPN connection inactive
Green, permanently	VPN connection active
Green, flashing	VPN connecting

⑥ Reset	
Reset button	Operated e.g. with a paper clip > short press: Restart the device > long press: Reset the device

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

Hardware	
Power supply	12 V DC, external power adapter (230 V); bayonet connector to secure against disconnection
Power consumption	Max. ca. 9 W
Environment	Temperature range 0–40 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	1 quiet fan

Interfaces	
4G: Ant 1, Ant 2	Two SMA connectors for the supplied dipole rod antennas (LTE, UMTS), compatible LANCOM AirLancer antennas for 4G or 3G, or from other manufacturers. Please respect the restrictions which apply in your country when setting up an antenna system (in particular the antenna gain and transmission power).
WAN	10 / 100 / 1000 Mbps Gigabit Ethernet
ETH	3 individual 10 / 100 / 1000 Mbps Gigabit Ethernet ports; ex-factory operation as switch. The ports can be electrically disabled in the LCOS configuration and support energy saving functionality as per IEEE 802.3az.
Config (Com) / V.24	Serial configuration interface/COM-port (8-pin mini-DIN); 9,600 - 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.

WAN protocols	
Ethernet	PPPoE, PPPoA, IPoA, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN

Declaration of Conformity
Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this radio equipment is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.lancom-systems.com/ce/

Package content	
Documentation	Quick Reference Guide (DE/EN); Installation Guide (DE/EN)
Cable	1 Ethernet cable, 3 m (kiwi colored connectors)
Antennas	2 LTE / 4G antennas
Power adapter	External power adapter, NEST 12 V / 2 A DC/S, barrel connector 2.1 / 5.5 mm bayonet, LANCOM item no. 111303 (not for WW devices)

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.