

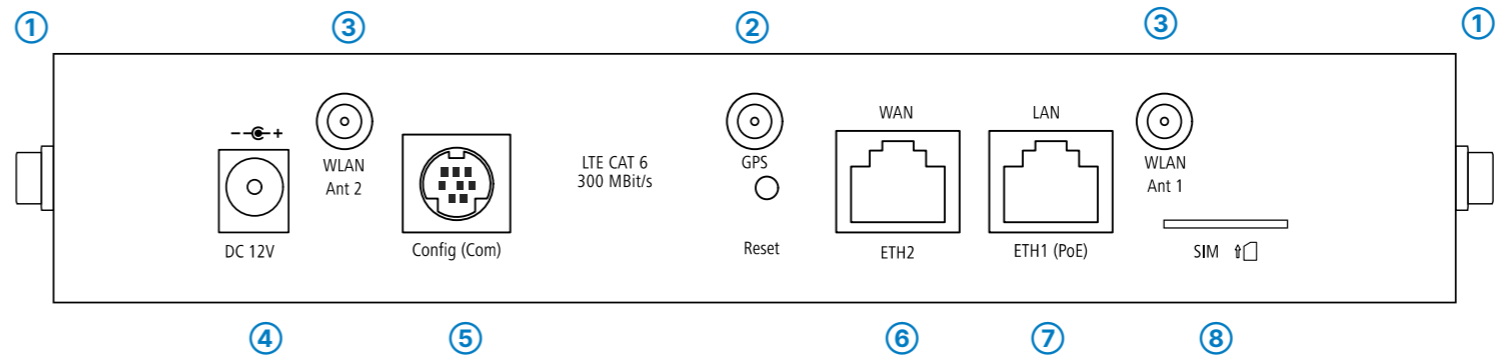


Hardware Quick Reference


LANCOM 1780EW-4G+

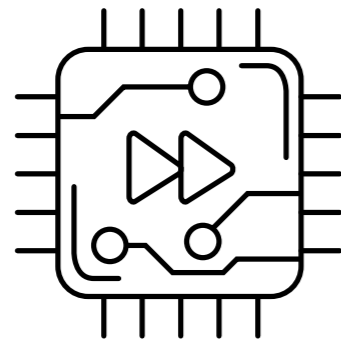

- 1 LTE / 4G antennas**
Connect the two supplied cellular antennas to the connectors located at the device's sides.
- 2 GPS antenna (optional)**
Connect the GPS antenna (free of charge) to the connector GPS (see included voucher).
- 3 WLAN antennas**
Screw the two supplied WLAN antennas onto the connectors WLAN Ant 1 and WLAN Ant 2. The desired MIMO behaviour can be configured under > Physical WLAN Settings > Radio > Antenna grouping
- 4 Power**
When connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.

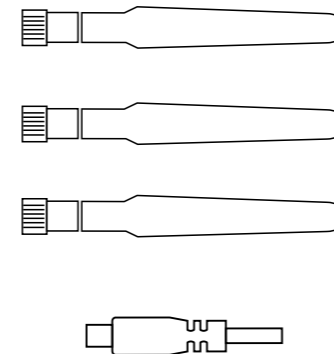

- 5 Serial interface**
Configuring the device via the serial interface requires a serial configuration cable (available as an accessory).
- 6 WAN interface**
Use the cable with the green-colored connectors to connect the interface ETH2 to your WAN modem.
- 7 Ethernet interface**
Use the cable with the kiwi-colored connectors to connect the interface ETH1 (PoE) to your PC or a LAN switch.
- 8 Optional: SIM card**
Slide the SIM card into the slot using the marker to ensure that the card is the right way round. Ensure that the SIM card clicks into place on insertion. To remove the card from the device again, press the card lightly into the device. Let go to release the SIM card from the slot.

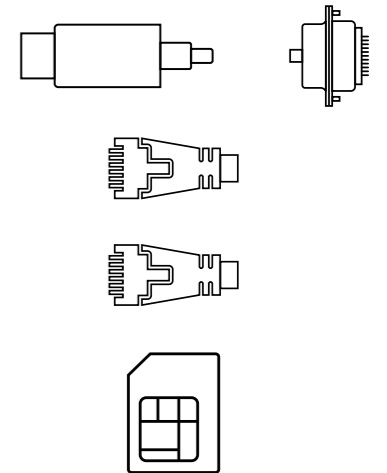

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

The power plug of the device must be freely accessible.

Please note that support for third-party accessories is not provided.



Please observe the following when setting up the device



- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device
- Keep all ventilation slots on the side of the device clear of obstruction
- In case of wall mounting, use the drilling template as supplied
- Rack installation with the optional LANCOM [Rack Mount](#) / [Rack Mount Plus](#)
- In the case of separately purchased antennas, ensure that the permissible transmission power of the system is not exceeded. The operator of the system is responsible for compliance with the limits.



LED description & technical details

Hardware Quick Reference

LANCOM 1780EW-4G+

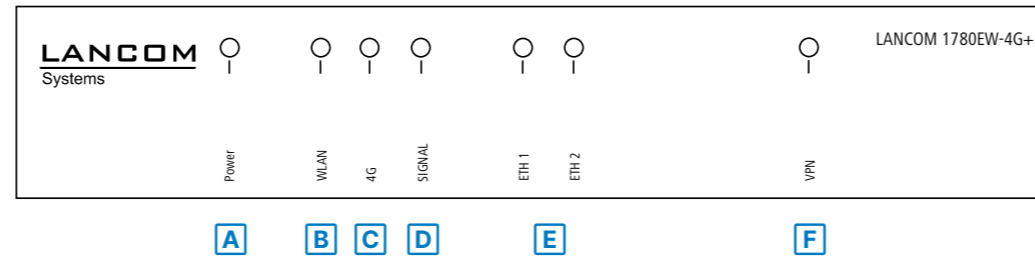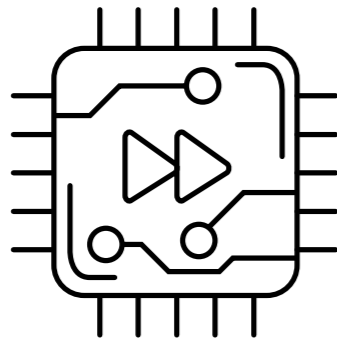

A Power	
Off	Device switched off
Green, permanently	Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible
Green / orange, blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
1x green inverse blinking*	Connection to the LMC active, pairing OK, device not claimed
2x green inverse blinking*	Pairing error, resp. LMC activation code not available
3x green inverse blinking*	LMC not accessible, resp. communication error

B WLAN	
Off	No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons.
Green, permanently	At least one Wi-Fi network is defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons.
Green, inverse flashing	Number of flashes = number of connected Wi-Fi stations and P2P wireless connections, followed by a pause (default). Alternatively the frequency of the flashing can indicate signal strength over the defined P2P link or the signal strength between the access point and the device operating in client mode.
Green, blinking	DFS scanning or other scan procedure
Red, blinking	Hardware error in Wi-Fi module

C 4G	
Off	Cellular interface disabled
Green, permanently	Connection to cellular network active
Green, flickering	Cellular data transmission
Orange, permanently	Logon to cellular network successful
Orange, blinking	Logging on to cellular network
Red, permanently	Hardware error/module unavailable
Red / green, blinking	SIM card error (PIN)
Red / orange, blinking	Uploading module firmware

D SIGNAL	
Off	No cellular reception
Green, permanently	Good signal strength, greater than or equal to -70 dB
Orange, permanently	Medium signal strength, field strength between -86 dB and -71 dB
Orange, blinking	Low signal strength, field strength less than -87 dB

E ETH	
Off	No networking device attached
Green, permanently	Connection to network device operational, no data traffic
Green, flickering	Data transmission

F VPN	
Off	VPN connection inactive
Green, permanently	VPN connection active
Green, blinking	Establishing VPN connections

Hardware	
Power supply	12 V DC, external power adapter For an overview of the power supplies compatible with your device, see www.lancom-systems.com/kb/power-supplies .
Power consumption	Approx. 13 W via external power adapter (value refers to the overall power for the router and power adapter); about 14 W via PoE (IEEE 802.3at)
Environment	Temperature range 0–35 °C; humidity 0–95 %, non-condensing. Temperature range 0–40 °C when mounted vertically on a LANCOM wall mount with cables running to the side.
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 × 45 × 140 mm (W x H x D)
Number of fans	None; fanless design, no rotating parts, high MTBF

Interfaces	
WAN, LAN	10 / 100 / 1000 Base-TX, autosensing, auto node hub
Serial Interface	Serial configuration interface / COM port (8-pin Mini-DIN): 9,600–115,000 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.
WLAN: Ant 1, Ant 2	Two reverse SMA connectors for external LANCOM AirLancer antennas or for antennas from other vendors**
4G: Ant 1, Ant 2	Two SMA connectors for the supplied dipole rod antennas (LTE, UMTS), compatible LANCOM AirLancer Extender antennas for 4G or 3G, or from other manufacturers**
GPS	SMA jack for connecting an optionally available GPS antenna

WAN protocols	
Ethernet	PPPoE, Multi-PPPoE, GRE, EoGRE, PPTP (PAC or PNS), L2TPv2 (LAC or LNS) and IPoE (with or without DHCP), RIP-1, RIP-2, VLAN, IPv6 over PPP (IPv6 and IPv4 / IPv6 Dual Stack Session), IP(v6) oE (Autoconfiguration, DHCPv6 or static)

Data transmission in cellular networks	
Supported standards	UMTS, HSxPA, HSPA+, LTE, LTE Advanced
Supported cellular network bands	Band 1 (2100 MHz), band 2 (1900 MHz), band 3 (1800 MHz), band 4 (2100 MHz), band 5 (800 MHz), band 7 (2600 MHz), band 8 (900 MHz), band 12 (700 MHz), band 13 (700 MHz), band 20 (800 MHz), band 25 (1900 MHz), band 26 (800 MHz), band 29 (700 MHz), band 30 (2300 MHz), band 41 (2500 MHz)
Max. transmission power	+23 dBm
GPS	Positioning with the additional GPS antenna (optional)

Package content	
Cables	2 Ethernet cables, 3 m (LAN: kiwi-colored connectors; WAN: green connectors)
Antennas	Two 3dBi dipole dualband antennas; two LTE / 4G antennas for LTE / UMTS
Power adapter	External power adapter

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/53/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc



LANCOM
SYSTEMS



Cloud-ready