

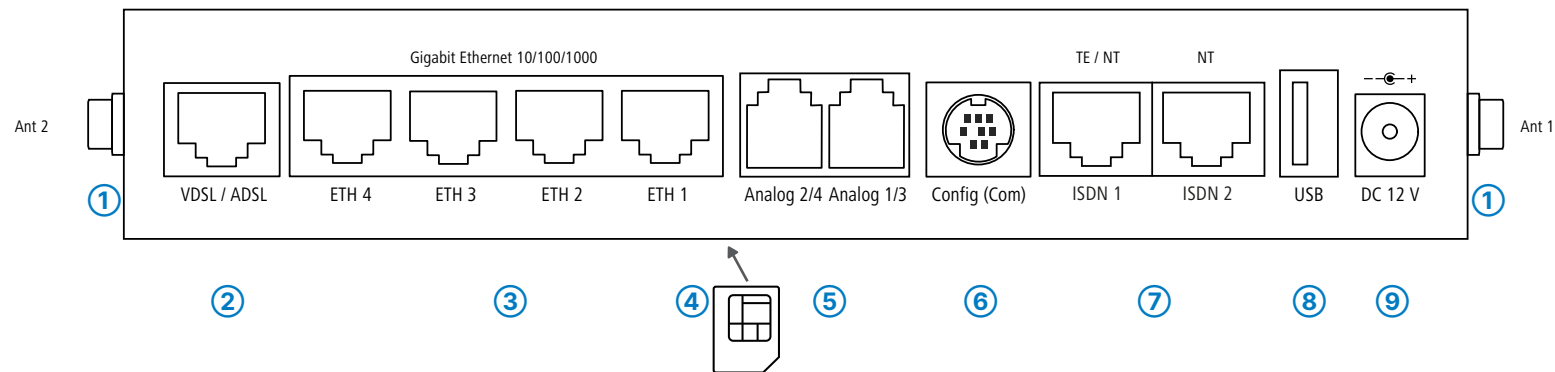


Hardware Quick Reference

LANCOM 1793VA-4G+

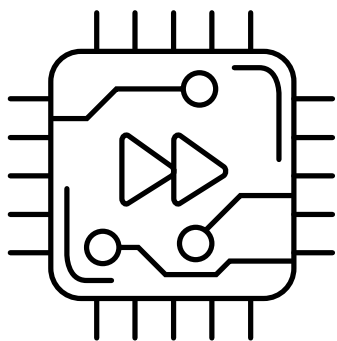


- ① **LTE / 4G antennas**
Connect the two supplied cellular antennas to the connectors Ant 1 and Ant 2.
- ② **VDSL / ADSL interface**
Use the supplied DSL cable for the IP-based line to connect the VDSL interface and the provider's telephone socket. For more information, please contact your Internet service provider.
- ③ **Ethernet interfaces**
Use an Ethernet cable to connect one of the interfaces ETH 1 to ETH 4 to your PC or a LAN switch.
- ④ **SIM card slot (device bottom)**
Release the SIM-card holder and lever it upwards. Slide the SIM card into the guide slot of the SIM-card holder. Press the holder down until it clicks into place.
- ⑤ **Analog interfaces**
Connect analog terminal devices to the analog interfaces either directly via RJ11, or with the help of the enclosed TAE adapters. Further adapters are optionally available.

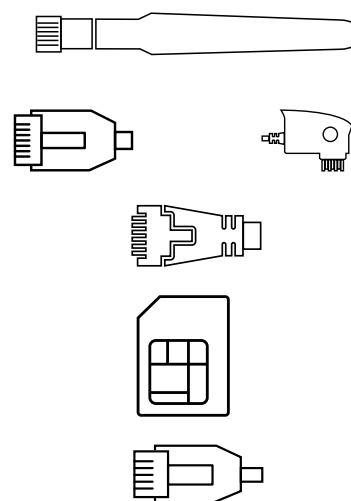

- ⑥ **Configuration interface**
Use a serial configuration cable to connect the serial interface (COM) to the serial interface of the device you want to use for configuring / monitoring (separately available).
- ⑦ **ISDN interfaces**
ISDN 1: Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS.

ISDN 2: Internal (NT) ISDN bus.

A 100-Ohm resistor for line termination is switchable in LCOS.
- ⑧ **USB interface**
You can use the USB interface to connect a USB printer or a USB memory stick.
- ⑨ **Power**
After connecting the cable to the device, turn the bayonet connector 90° clockwise until it clicks into place. Use only the supplied power adapter.

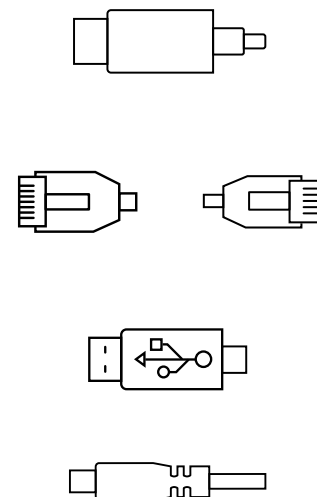

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

The power plug of the device must be freely accessible.

Please note that support for third-party accessories is not provided.





Please observe the following when setting up the device

- When setting up on the table, use the enclosed self-adhesive rubber pads, if applicable.
- Do not rest any objects on top of the device and do not stack multiple devices.
- Keep all ventilation slots of the device clear of obstruction.
- Rack installation with the optional LANCOM [Rack Mount](#) / [Rack Mount Plus](#) (separately available)

Hardware Quick Reference

LANCOM 1793VA-4G+

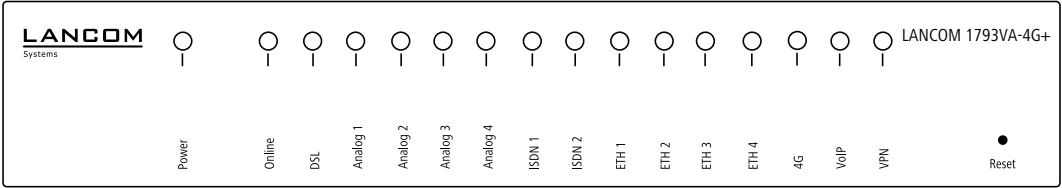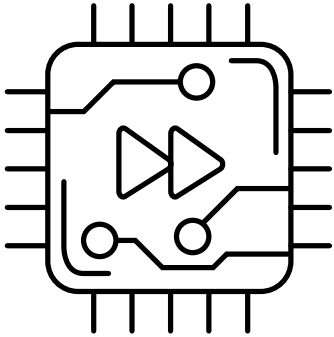

A Power		E ISDN	
Off	Device switched off	Green, permanently	D-channel active
Green, permanently*	Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible	Green, flickering	ISDN data transfer
Red / green blinking	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.	Red, flickering	ISDN transfer error
Red blinking	Charge or time limit reached	Red / orange, blinking	ISDN hardware error
B Online		F ETH	
Off	WAN connection inactive	Off	No networking device attached
Green, blinking	WAN connection is established (e.g. PPP negotiation)	Green, permanently	Connection to network device operational, no data traffic
Green, permanently	WAN connection active	Green, flickering	Data transmission
Red, permanently	WAN connection error	G 4G	
C DSL		Off	Cellular interface disabled
Off	Interface deactivated	Green, permanently	Connection to cellular network active
Green, permanently	DSL connection active	Green, flickering	Cellular data transfer
Green, flickering	DSL data transfer	Orange, permanently	Logon to cellular network successful
Red, flickering	DSL transfer error	Orange, blinking	Logging on to cellular network
Red / orange, blinking	DSL hardware error	Red, permanently	Hardware error/module unavailable
Orange, blinking	DSL training	Red / green, blinking	SIM card error (PIN)
Orange, permanently	DSL sync	Red / orange, blinking	Uploading module firmware
Green, blinking	DSL connecting	H VoIP	
D Analog		Off	No SIP accounts defined or VCM is off
Green, permanently	Interface activated	Green, permanently	All defined and active SIP accounts (outgoing) were successfully registered
Orange, blinking	Incoming call	Red, permanently	Not all defined and active SIP accounts were registered (possibly still in process)
Green, blinking	Connection active	Red or green, inverse flashing	Number of currently used lines (connecting or connected)
		I VPN	
Off		Off	VPN connection inactive
Green, permanently		Green, permanently	VPN connection active
Green, flashing		Green, flashing	VPN connecting
		J Reset	
Reset button	Operated e.g. with a paper clip short press: Restart the device long press: Reset the device		

Hardware	
Power supply	12 V DC, external power adapter For an overview of the power supplies compatible with your device, see www.lancom-systems.com/kb/power-supplies .
Power consumption	Max. ca. 18 W
Environment	Temperature range 0–40 °C; humidity 0–95 %; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	1 quiet fan

Interfaces	
WAN: VDSL2	VDSL2 as per ITU G.993.2; profiles 8a, 8b, 8c, 8d, 12a, 12b, 17a, 35b VDSL Supervectoring as per ITU G.993.2 (Annex Q) VDSL2 vectoring as per ITU G.993.5 (G.Vector) Compatible to VDSL2 from Deutsche Telekom Compatible to U-R2 from Deutsche Telekom (1TR112) ADSL2+ over ISDN as per ITU G.992.5 Annex B/J with DPBO, ITU G.992.3, and ITU G.992.1 ADSL2+ over POTS as per ITU G.992.5 Annex A/M with DPBO, ITU G.992.3, and ITU.G.992.1 Supports just one virtual connection at a time in ATM (VPI-VCI pair)
ETH	4 individual ports, 10 / 100 / 1000 Mbps Gigabit Ethernet, by default set to switch mode. Up to 3 ports can be operated as additional WAN ports. Ethernet ports can be electrically disabled in the LCOS configuration.
4G: Ant 1 / 2	Two SMA connectors for the supplied dipole rod antennas (LTE, UMTS), compatible LANCOM AirLancer antennas for 4G or 3G, or from other manufacturers. Please respect the restrictions which apply in your country when setting up an antenna system (in particular antenna gain and transmission power).
USB	USB 2.0 hi-speed host port for connecting USB printers (USB print server), serial devices (COM-port server) or USB drives (FAT file system)
ISDN 1 / 2	ISDN 1: Internal (NT) or external (TE) ISDN bus. This feature is controlled by LCOS. According to the settings, connect an ISDN cable either to the NTBA or the ISDN terminal device. ISDN 2: Internal (NT) ISDN bus. Use an ISDN cable to connect the ISDN device to the ISDN interface.
Analog 1 / 2 / 3 / 4	Use the cables of your analog devices to connect them with the analog interfaces. If necessary use the adapters from the LANCOM Analog Adapter Set.
Config (Com) / V.24	Serial configuration interface/COM-port (8-pin mini-DIN): 9,600 - 115,200 baud, suitable for optional connection of analog/GPRS modems. Supports internal COM-port server and provides transparent asynchronous serial-data transfer via TCP.

Package content	
Manual	Quick Reference Guide (DE/EN); Installation Guide (DE/EN)
Cable	1 DSL cable for an IP-based line, 4.25 m
Adapters	2 TAE adapters (RJ11 - TAE)
Antennas	2 LTE / 4G antennas
Power adapter	External power adapter

*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

This product contains separate open-source software components which are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS) is available on the device's WEBconfig interface under "Extras > License information". If the respective license demands, the source files for the corresponding software components will be made available on a download server upon request.

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuersele, declares that this device is in compliance with Directives 2014/30/EU, 2014/53/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: www.lancom-systems.com/doc

