

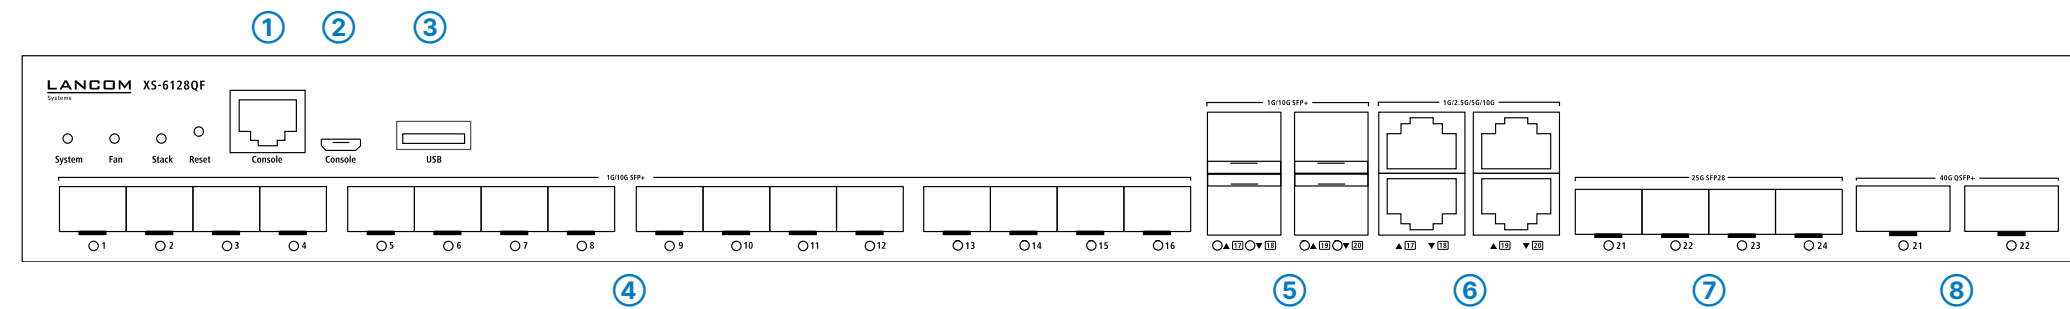


# Hardware Quick Reference

## LANCOM XS-6128QF

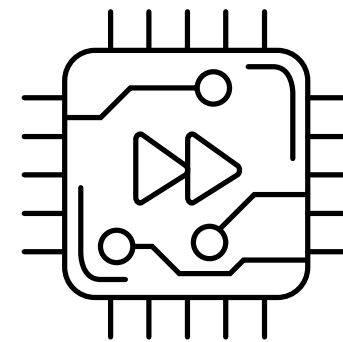

- 1 Configuration interfaces RJ-45 & micro USB (Console)**  
Connect the configuration interface ① via the included serial configuration cable to the serial interface of the device you want to use for configuring / monitoring the switch. Alternatively use the interface ② with a suitable micro USB cable.
- 2 USB interface**  
Connect a USB stick to the USB interface to store general configuration scripts or debug data. You can also use this interface to upload a new firmware.
- 3 SFP+ interfaces 1G / 10G**  
Insert suitable LANCOM SFP modules into the SFP+ interfaces 1 to 12. Choose cables which are compatible with the SFP modules and connect them as described in the SFP modules mounting instructions [www.lancom-systems.com/SFP-module-MI](http://www.lancom-systems.com/SFP-module-MI).
- 4 SFP+ interfaces 1G / 10G (combo ports)**  
Insert suitable LANCOM SFP modules into the SFP+ interfaces 13 to 14. Choose cables which are compatible with the SFP modules and connect them as described in the SFP modules mounting instructions [www.lancom-systems.com/SFP-module-MI](http://www.lancom-systems.com/SFP-module-MI).
- 5 TP Ethernet interfaces 1G / 2.5G / 5G / 10G (combo ports)**  
Connect the interfaces 13 to 14 via Ethernet cables to your PC or a LAN switch.
- 6 SFP28 interfaces 10G / 25G (Flex ports)**  
Insert suitable LANCOM SFP28 or 10G SFP+ modules into the SFP28 interfaces 21 to 24. Choose cables which are compatible with the SFP28 / 10G SFP+ modules and connect them as described in the SFP modules mounting instructions [www.lancom-systems.com/SFP-module-MI](http://www.lancom-systems.com/SFP-module-MI).
- 7 QSFP+ interfaces 40G (Flex ports)**  
Plug suitable LANCOM QSFP+ modules into the QSFP+ interfaces 21 to 22. Select cables suitable for the QSFP+ modules and connect them as described in the SFP modules mounting instructions [www.lancom-systems.com/SFP-module-MI](http://www.lancom-systems.com/SFP-module-MI).

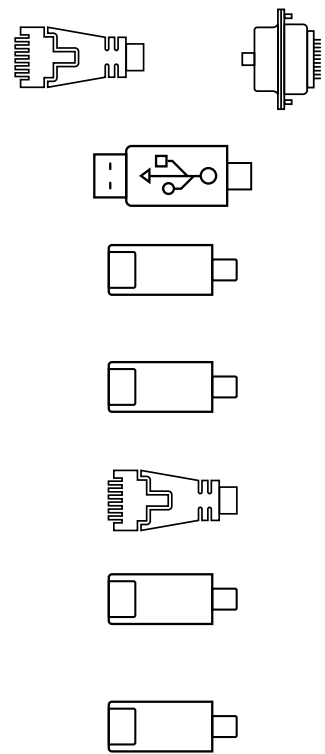

### Rear panel:

**SFP-DD interfaces 25G / 50G**  
Insert LANCOM SFP-DD-DAC50 stacking cables into the SFP-DD interfaces 25 to 28. For decentralized stacking scenarios (stack-member switches are distributed over spatially separated locations) the use of LANCOM SFP28 modules is recommended.

### 2 slots for fan modules


To remove a fan module in case of defect, loosen the two knurled screws of the module and remove the module from the plug-in unit. To install a new fan module, push it into the corresponding slot. Fasten the module to the switch housing with the knurled screws. Please note that a defective fan should be replaced within 48h.

### Power supply module with mains connection socket (rear panel).

Supply the device with power via the power supply socket of the power supply module. Use the supplied power cord or a country-specific LANCOM power cord. To remove the power supply module, disconnect the module from the power supply and then pull the plug out of the module. While pressing the release lever ⑫ to the left, you can pull the module out of the device by the handle ⑪.

### Additional slot for power supply module with mains connection socket (rear panel).

To install an additional power supply module, remove the corresponding module bay cover by loosening both associated screws and push the power supply module in as far as it will go until the release lever ⑫ audibly engages. Check by pulling the handle ⑪ that the module cannot be removed from the bay without the release lever ⑫ being pressed to the left.

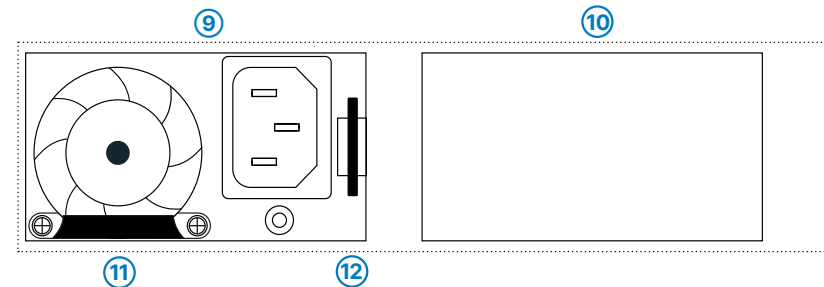

Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!

Operate the device only with a professionally installed power supply at a nearby power socket that is freely accessible at all times.

The power plug of the device must be freely accessible.


Please note that support for third-party accessories (SFP and DAC) is not provided.



### Please observe the following when setting up the device

- Do not rest any objects on top of the device and do not stack multiple devices.
- Keep the ventilation slots of the device clear of obstruction.
- Mount the device with the enclosed rack mounting system in a free 19" slot of an appropriate server rack. Both slide-in rails are attached as shown in the accompanying installation instructions [www.lancom-systems.com/slide-in-MI](http://www.lancom-systems.com/slide-in-MI).

## Mounting & connecting

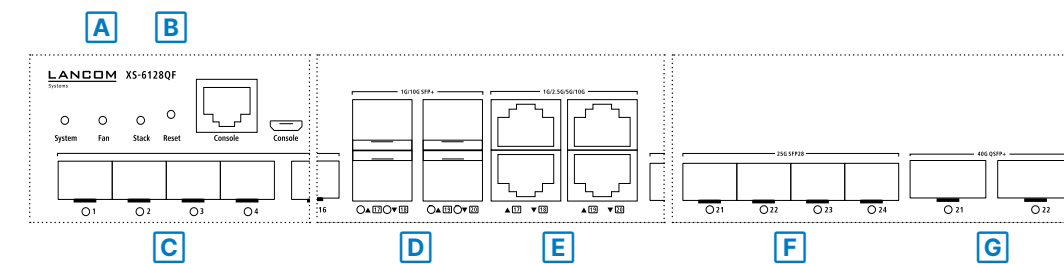

### A System / Fan / Stack

System: green	Device operational
System: red	System error, please check syslog / error log
Fan: red	Fan error
Stack: off	No connection
Stack: green	As master device: port activated and connected to slave device
Stack: orange	As slave device: port activated and connected to master device

### B Reset button

~5 sec. pressed	Device restart
Pressed until all port LEDs glow	Configuration reset and device restart

### C SFP+ ports 1G / 10 G

Off	Port inactive or disabled
Green	Link 10 Gbps
Green, blinking	Data transfer, link 10 Gbps
Orange	Link 1 Gbps
Orange, blinking	Data transfer, link 1 Gbps

### D SFP+ ports 1G / 10G (combo ports)

Off	Port inactive or disabled
Green	Link 10 Gbps
Green, blinking	Data transfer, link 10 Gbps
Orange	Link 1 Gbps
Orange, blinking	Data transfer, link 1 Gbps

### E TP Ethernet ports 1G / 2.5G / 5G / 10G (combo ports)

Off	Port inactive oder disabled
Green left / right	Link 10 Gbps / 1 Gbps
Green, blinking left / right	Data transfer, link 10 Gbps / 1 Gbps
Orange left / right	Link 2.5 / 5 Gbps
Orange, blinking left / right	Data transfer, link 2.5 / 5 Gbps
Orange, blinking left / right	Link 100 Mbps

### F SFP28 ports 1G / 10G / 25G (Flex ports)

Off	Port inactive or disabled
Green	Link 25 / 10 Gbps
Green, blinking	Data transfer, link 25 / 10 Gbps
Orange	Link 1 Gbps
Orange,blinking	Data transfer, link 1 Gbps

### G QSFP+ ports 40G (Flex ports)


Off	Port inactive or disabled
Green	Link 40 Gbps
Green, blinking	Data transfer, link 40 Gbps

### H SFP-DD stacking ports 25G (SFP28) / 50G

Off	Port inactive or disabled
Green	Link 50 Gbps
Green, blinking	Data transfer, link 50 Gbps
Orange	Link 25 / 10 Gbps
Orange,blinking	Data transfer, link 25 / 10 Gbps

### I Power supply unit LED

Off	No primary voltage supply
Green	Secondary voltage supply OK
Orange	Critical power supply event that causes a shutdown: → OCP → OVP → fan failure In case of parallel primary voltage supply by second power supply unit: → power cable disconnected or power failure
Orange, blinking	Power supply warning event in which the power supply continues to operate: → high temperature → high power → high current consumption → slow fan

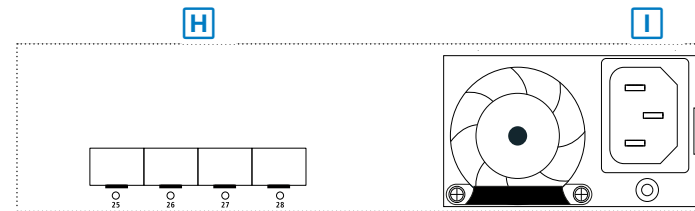

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/30/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)